

#### Contents

Page	Section	Title
5	1.	Introduction
6	1.1.	Features of the MSP 34x5G Family and Differences to MSPD
6	1.2.	MSP 34x5G Version List
7	1.3.	MSP 34x5G Versions and their Application Fields
8	2.	Functional Description
9	2.1.	Architecture of the MSP 34x5G Family
9	2.2.	Sound IF Processing
9	2.2.1.	Analog Sound IF Input
9	2.2.2.	Demodulator: Standards and Features
10	2.2.3.	Preprocessing of Demodulator Signals
10	2.2.4.	Automatic Sound Select
10	2.2.5.	Manual Mode
12 12	2.3. 2.4.	Preprocessing for SCART and I <sup>2</sup> S Input Signals Source Selection and Output Channel Matrix
12	2.4. 2.5.	Audio Baseband Processing
12	2.5.	Automatic Volume Correction (AVC)
12	2.5.1.	Loudspeaker Outputs
12	2.5.3.	Quasi-Peak Detector
13	2.6.	SCART Signal Routing
13	2.6.1.	SCART DSP In and SCART Out Select
13	2.6.2.	Stand-by Mode
13	2.7.	l <sup>2</sup> S Bus Interface
14	2.8.	ADR Bus Interface
14	2.9.	Digital Control I/O Pins and Status Change Indication
14	2.10.	Clock PLL Oscillator and Crystal Specifications
15	3.	Control Interface
15	3.1.	I <sup>2</sup> C Bus Interface
15	3.1.1.	Internal Hardware Error Handling
16	3.1.2.	Description of CONTROL Register
16	3.1.3.	Protocol Description
17	3.1.4.	Proposals for General MSP 34x5G I <sup>2</sup> C Telegrams
17	3.1.4.1.	Symbols
17	3.1.4.2.	Write Telegrams
17	3.1.4.3.	Read Telegrams
17	3.1.4.4.	Examples
17	3.2.	Start-Up Sequence: Power-Up and I <sup>2</sup> C-Controlling
17	3.3.	MSP 34x5G Programming Interface
17	3.3.1.	User Registers Overview
20	3.3.2.	Description of User Registers
21	3.3.2.1.	STANDARD SELECT Register
21	3.3.2.2.	Refresh of STANDARD SELECT Register
21	3.3.2.3.	STANDARD RESULT Register
23	3.3.2.4.	Write Registers on I <sup>2</sup> C Subaddress 10 <sub>hex</sub>
25	3.3.2.5.	Read Registers on I <sup>2</sup> C Subaddress 11 <sub>hex</sub>
26	3.3.2.6.	Write Registers on I <sup>2</sup> C Subaddress 12 <sub>hex</sub>

#### Contents, continued

Page	Section	Title
36	3.3.2.7.	Read Registers on I <sup>2</sup> C Subaddress 13 <sub>hex</sub>
37	3.4.	Programming Tips
37	3.5.	Examples of Minimum Initialization Codes
37	3.5.1.	B/G-FM (A2 or NICAM)
37	3.5.2.	BTSC-Stereo
37	3.5.3.	BTSC-SAP with SAP at Loudspeaker Channel
38	3.5.4.	FM-Stereo Radio
38	3.5.5.	Automatic Standard Detection
38	3.5.6.	Software Flow for Interrupt driven STATUS Check
40	4.	Specifications
40	4.1.	Outline Dimensions
42	4.2.	Pin Connections and Short Descriptions
45	4.3.	Pin Description
47	4.4.	Pin Configurations
51	4.5.	Pin Circuits
53	4.6.	Electrical Characteristics
53	4.6.1.	Absolute Maximum Ratings
54	4.6.2.	Recommended Operating Conditions
54	4.6.2.1.	General Recommended Operating Conditions
54	4.6.2.2.	Analog Input and Output Recommendations
55	4.6.2.3.	Recommendations for Analog Sound IF Input Signal
56	4.6.2.4.	Crystal Recommendations
58	4.6.3.	Characteristics
58	4.6.3.1.	General Characteristics
59	4.6.3.2.	Digital Inputs, Digital Outputs
60	4.6.3.3.	Reset Input and Power-Up
61	4.6.3.4.	I <sup>2</sup> C Bus Characteristics
62	4.6.3.5.	I <sup>2</sup> S-Bus Characteristics
64	4.6.3.6.	Analog Baseband Inputs and Outputs, AGNDC
65	4.6.3.7.	Sound IF Input
65	4.6.3.8.	Power Supply Rejection
66	4.6.3.9.	Analog Performance
69	4.6.3.10.	Sound Standard Dependent Characteristics
73	5.	Appendix A: Overview of TV Sound Standards
73	5.1.	NICAM 728
74	5.2.	A2 Systems
75	5.3.	BTSC-Sound System
75	5.4.	Japanese FM Stereo System (EIA-J)
76	5.5.	FM Satellite Sound
76	5.6.	FM-Stereo Radio
77	6.	Appendix B: Manual/Compatibility Mode
77	6.1.	Demodulator Write and Read Registers for Manual/Compatibility Mode
78	6.2.	DSP Write and Read Registers for Manual/Compatibility Mode
79	6.3.	Manual/Compatibility Mode: Description of Demodulator Write Registers
79	6.3.1.	Automatic Switching between NICAM and Analog Sound

#### Contents, continued

Page	Section	Title
79	6.3.1.1.	Function in Automatic Sound Select Mode
79	6.3.1.2.	Function in Manual Mode
81	6.3.2.	A2 Threshold
81	6.3.3.	Carrier-Mute Threshold
82	6.3.4.	Register AD_CV
83	6.3.5.	Register MODE_REG
85	6.3.6.	FIR-Parameter, Registers FIR1 and FIR2
85	6.3.7.	DCO-Registers
87	6.4.	Manual/Compatibility Mode: Description of Demodulator Read Registers
87	6.4.1.	NICAM Mode Control/Additional Data Bits Register
87	6.4.2.	Additional Data Bits Register
87	6.4.3.	CIB Bits Register
88	6.4.4.	NICAM Error Rate Register
88	6.4.5.	PLL_CAPS Readback Register
88	6.4.6.	AGC_GAIN Readback Register
88	6.4.7.	Automatic Search Function for FM-Carrier Detection in Satellite Mode
89	6.5.	Manual/Compatibility Mode: Description of DSP Write Registers
89	6.5.1.	Additional Channel Matrix Modes
89	6.5.2.	Volume Modes of SCART1 Output
89	6.5.3.	FM Fixed Deemphasis
89	6.5.4.	FM Adaptive Deemphasis
89	6.5.5.	NICAM Deemphasis
90	6.5.6.	Identification Mode for A2 Stereo Systems
90	6.5.7.	FM DC Notch
90	6.6.	Manual/Compatibility Mode: Description of DSP Read Registers
90	6.6.1.	Stereo Detection Register for A2 Stereo Systems
90	6.6.2.	DC Level Register
91	6.7.	Demodulator Source Channels in Manual Mode
91	6.7.1.	Terrestric Sound Standards
91	6.7.2.	SAT Sound Standards
91	6.8.	Exclusions of Audio Baseband Features
91	6.9.	Compatibility Restrictions to MSP 34x5D
93	7.	Appendix D: Application Information
93	7.1.	Phase Relationship of Analog Outputs
94	7.2.	Application Circuit
96	8.	Appendix E: MSP 34x5G Version History
96	9.	Data Sheet History

#### License Notice:

"Dolby Pro Logic" is a trademark of Dolby Laboratories.

Supply of this implementation of Dolby Technology does not convey a license nor imply a right under any patent, or any other industrial or intellectual property right of Dolby Laboratories, to use this implementation in any finished end-user or ready-to-use final product. Companies planning to use this implementation in products must obtain a license from Dolby Laboratories Licensing Corporation before designing such products.

#### **Multistandard Sound Processor Family**

Release Note: Revision bars indicate significant changes to the previous edition. The hardware and software description in this document is valid for the MSP 34x5G version B8 and following versions.

#### 1. Introduction

The MSP 34x5G family of single-chip Multistandard Sound Processors covers the sound processing of all analog TV standards worldwide, as well as the NICAM digital sound standards. The full TV sound processing, starting with analog sound IF signal-in, down to processed analog AF-out, is performed in a single chip. Figure 1–1 shows a simplified functional block diagram of the MSP 34x5G.

These TV sound processing ICs include versions for processing the multichannel television sound (MTS) signal conforming to the standard recommended by the Broadcast Television Systems Committee (BTSC). The DBX noise reduction, or alternatively, Micronas Noise Reduction (MNR) is performed alignment free.

Other processed standards are the Japanese FM-FM multiplex standard (EIA-J) and the FM-Stereo-Radio standard.

Current ICs have to perform adjustment procedures in order to achieve good stereo separation for BTSC and

EIA-J. The MSP 34x5G has optimum stereo performance without any adjustments.

All MSP 34xxG versions are pin compatible to the MSP 34xxD. Only minor modifications are necessary to adapt a MSP 34xxD controlling software to the MSP 34xxG. The MSP 34x5G further simplifies controlling software. Standard selection requires a single I<sup>2</sup>C transmission only.

**Note:** The MSP 34x5G version has reduced control registers and less functional pins. The remaining registers are software-compatible to the MSP 34x0G. The pinning is compatible to the MSP 34x0G.

The MSP 34x5G has built-in automatic functions: The IC is able to detect the actual sound standard automatically (Automatic Standard Detection). Furthermore, pilot levels and identification signals can be evaluated internally with subsequent switching between mono/ stereo/bilingual; no  $I^2C$  interaction is necessary (Automatic Sound Selection).

The MSP 34x5G can handle very high FM deviations even in conjunction with NICAM processing. This is especially important for the introduction of NICAM in China.

The ICs are produced in submicron CMOS technology. The MSP 34x5G is available in the following packages: PSDIP64, PSDIP52, PMQFP44, PLQFP64, and PQFP80.

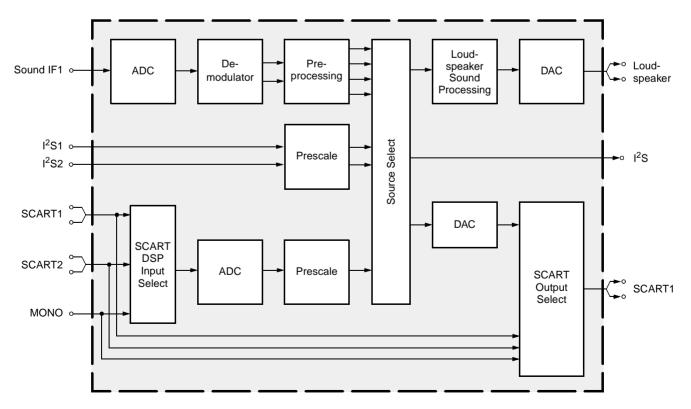


Fig. 1-1: Simplified functional block diagram of MSP 34x5G

#### 1.1. Features of the MSP 34x5G Family and Differences to MSPD

Feature (New features not available for MSPD are shaded gray.)	3405	3415	3425	3445	3455	346
Standard Selection with single I <sup>2</sup> C transmission	Х	Х	Х	Х	Х	Х
Automatic Standard Detection of terrestrial TV standards	Х	Х	Х	Х	Х	Х
Automatic Sound Selection (mono/stereo/bilingual), new registers MODUS, STATUS	Х	Х	Х	Х	Х	Х
Automatic Carrier Mute function	Х	Х	Х	Х	Х	Х
Interrupt output programmable (indicating status change)	Х	Х	Х	Х	Х	Х
Loudspeaker channel with volume, balance, bass, treble, loudness	Х	Х	Х	Х	Х	Х
AVC: Automatic Volume Correction	Х	Х	Х	Х	Х	Х
Spatial effect for loudspeaker channel	Х	Х	Х	Х	Х	Х
Two Stereo SCART (line) inputs, one Mono input; one Stereo SCART outputs	Х	Х	Х	Х	Х	х
Complete SCART in/out switching matrix	Х	Х	Х	Х	Х	Х
Two I <sup>2</sup> S inputs; one I <sup>2</sup> S output	Х	Х	Х	Х	Х	Х
All analog Mono sound carriers including AM-SECAM L	Х	Х	Х	Х	Х	Х
All analog FM-Stereo A2 and satellite standards	Х	Х			Х	
All NICAM standards		Х			Х	
Simultaneous demodulation of (very) high-deviation FM-Mono and NICAM		Х			Х	
Adaptive deemphasis for satellite (Wegener-Panda, acc. to ASTRA specification)	Х	Х			Х	Х
ASTRA Digital Radio (ADR) together with DRP 3510A	Х	Х			Х	
Demodulation of the BTSC multiplex signal and the SAP channel			Х	Х	Х	
Alignment free digital DBX noise reduction for BTSC Stereo and SAP				Х	Х	
Alignment free digital Micronas Noise Reduction (MNR) for BTSC Stereo and SAP			Х			
BTSC stereo separation (MSP 3425/45G also EIA-J) significantly better than spec.			Х	х	Х	
SAP and stereo detection for BTSC system			Х	Х	Х	
Korean FM-Stereo A2 standard	Х	х	х	х	Х	
Alignment-free Japanese standard EIA-J			Х	Х	Х	
Demodulation of the FM-Radio multiplex signal			Х	х	x	

#### 1.2. MSP 34x5G Version List

Version	Status	Description
MSP 3405G	available	FM Stereo (A2) Version
MSP 3415G	available	NICAM and FM Stereo (A2) Version
MSP 3425G	available	NTSC Version (A2 Korea, BTSC with Micronas Noise Reduction (MNR), Japanese EIA-J system)
MSP 3445G	available	NTSC Version (A2 Korea, BTSC with DBX noise reduction, Japanese EIA-J system)
MSP 3455G	available	Global Stereo Version (all sound standards)
MSP 3465G	available	Global Mono Version (all sound standards)


#### 1.3. MSP 34x5G Versions and their Application Fields

Table 1–1 provides an overview of TV sound standards that can be processed by the MSP 34x5G family. In addition, the MSP 34x5G is able to handle the FM-Radio standard. With the MSP 34x5G, a complete

multimedia receiver covering all TV sound standards together with terrestrial/cable and satellite radio sound can be built; even ASTRA Digital Radio can be processed (with a DRP 3510A coprocessor).

Table 1–1: TV Stereo Sound Standards covered by the MSP 34x5G IC Family (details see Appendix A)

	ISP V	ersio	on	TV- System	Position of Sound Sound Carrier /MHz Modulation		Color System	Broadcast e.g. in:
3405				B/G	5.5/5.7421875	FM-Stereo (A2)	PAL	Germany
				D/G	5.5/5.85	FM-Mono/NICAM	PAL	Scandinavia, Spain
				L	6.5/5.85	AM-Mono/NICAM	SECAM-L	France
				I	6.0/6.552	FM-Mono/NICAM	PAL	UK, Hong Kong
					6.5/6.2578125	FM-Stereo (A2, D/K1)	SECAM-East	Slovak. Rep.
3405		3415		D/K	6.5/6.7421875	FM-Stereo (A2, D/K2)	PAL	currently no broadcast
		ň	2	D/K	6.5/5.7421875	FM-Stereo (A2, D/K3)	SECAM-East	Poland
			3455		6.5/5.85	FM-Mono/NICAM (D/K, NICAM)	PAL	China, Hungary
3405				6.5           7.02/7.2           7.38/7.56           etc.		FM-Mono FM-Stereo ASTRA Digital Radio (ADR) with DRP 3510A	PAL	Europe Sat. ASTRA
					4.5/4.724212	FM-Stereo (A2)	NTSC	Korea
	3445			M/N	4.5	FM-FM (EIA-J)	NTSC	Japan
	3425,				4.5 BTSC-Stereo + SAP		NTSC, PAL	USA, Argentina
	3			FM-Radio	10.7	FM-Stereo Radio		USA, Europe
3465         All standards as above, but Mono demodulation only.								

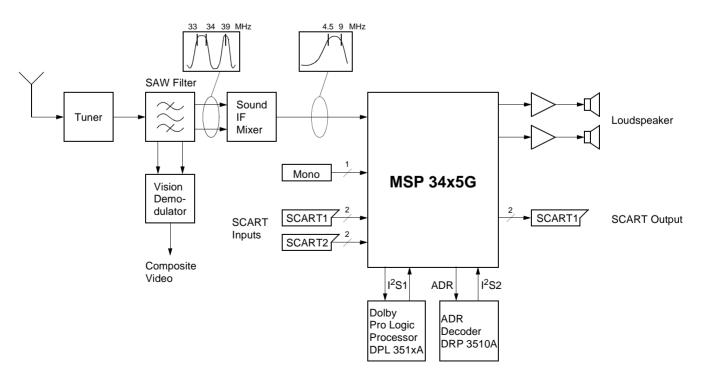

**Fig. 1–2:** Typical MSP 34x5G application



# N **Functional Description**

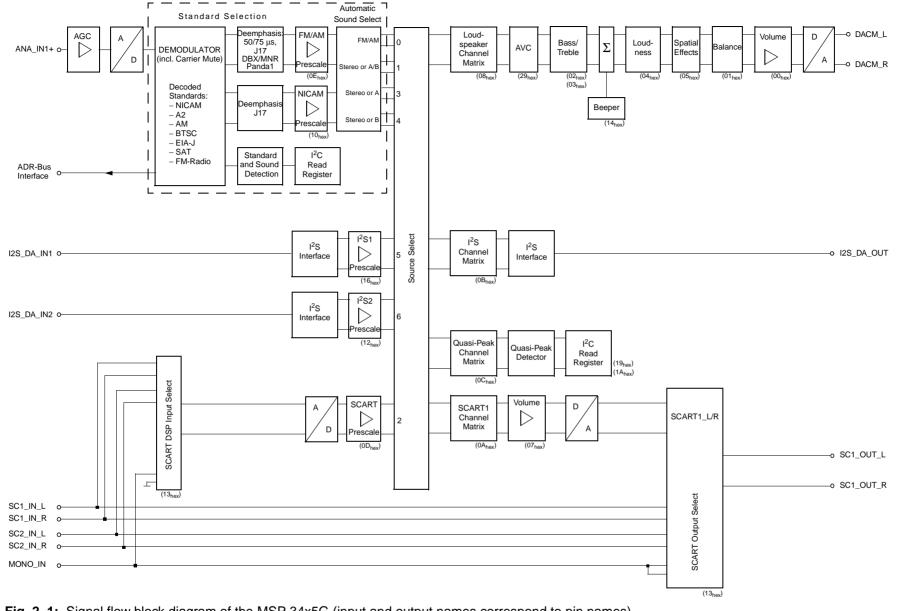


Fig. 2–1: Signal flow block diagram of the MSP 34x5G (input and output names correspond to pin names).

#### 2.1. Architecture of the MSP 34x5G Family

Fig. 2–1 on page 8 shows a simplified block diagram of the IC. The block diagram contains all features of the MSP 3455G. Other members of the MSP 34x5G family do not have the complete set of features: The demodulator handles only a subset of the standards presented in the demodulator block; NICAM processing is only possible in the MSP 3415G and MSP 3455G (see dashed block in Fig. 2–1).

#### 2.2. Sound IF Processing

#### 2.2.1. Analog Sound IF Input

The input pins ANA\_IN1+ and ANA\_IN- offer the possibility to connect sound IF (SIF) sources to the MSP 34x5G. The analog-to-digital conversion of the sound IF signal is done by an A/D-converter. An analog automatic gain circuit (AGC) allows a wide range of input levels. The high-pass filter formed by the coupling capacitor at pin ANA\_IN1+ (see Section 7. "Appendix D: Application Information" on page 93) is sufficient in most cases to suppress video components. Some combinations of SAW filters and sound IF mixer ICs, however, show large picture components on their outputs. In this case, further filtering is recommended.

#### 2.2.2. Demodulator: Standards and Features

The MSP 34x5G is able to demodulate all TV sound standards worldwide including the digital NICAM system. Depending on the MSP 34x5G version, the following demodulation modes can be performed:

**A2-Systems:** Detection and demodulation of two separate FM carriers (FM1 and FM2), demodulation and evaluation of the identification signal of carrier FM2.

**NICAM-Systems:** Demodulation and decoding of the NICAM carrier, detection and demodulation of the analog (FM or AM) carrier. For D/K-NICAM, the FM carrier may have a maximum deviation of 384 kHz.

**Very high deviation FM-Mono:** Detection and robust demodulation of one FM carrier with a maximum deviation of 540 kHz.

**BTSC-Stereo:** Detection and FM demodulation of the aural carrier resulting in the MTS/MPX signal. Detection and evaluation of the pilot carrier, AM demodulation of the (L-R)-carrier and detection of the SAP subcarrier. Processing of the DBX noise reduction or Micronas Noise Reduction (MNR).

**BTSC-Mono + SAP:** Detection and FM demodulation of the aural carrier resulting in the MTS/MPX signal. Detection and evaluation of the pilot carrier, detection and FM demodulation of the SAP-subcarrier. Processing of the DBX noise reduction or Micronas Noise Reduction (MNR).

**Japan Stereo:** Detection and FM demodulation of the aural carrier resulting in the MPX signal. Demodulation and evaluation of the identification signal and FM demodulation of the (L-R)-carrier.

**FM-Satellite Sound:** Demodulation of one or two FM carriers. Processing of high-deviation mono or narrow bandwidth mono, stereo, or bilingual satellite sound according to the ASTRA specification.

**FM-Stereo-Radio:** Detection and FM demodulation of the aural carrier resulting in the MPX signal. Detection and evaluation of the pilot carrier and AM demodulation of the (L-R)-carrier.

The demodulator blocks of all MSP 34x5G versions have identical user interfaces. Even completely different systems like the BTSC and NICAM systems are controlled the same way. Standards are selected by means of MSP Standard Codes. Automatic processes handle standard detection and identification without controller interaction. The key features of the MSP 34x5G demodulator blocks are

**Standard Selection:** The controlling of the demodulator is minimized: All parameters, such as tuning frequencies or filter bandwidth, are adjusted automatically by transmitting one single value to the STANDARD SELECT register. For all standards, specific MSP standard codes are defined.

Automatic Standard Detection: If the TV sound standard is unknown, the MSP 34x5G can automatically detect the actual standard, switch to that standard, and respond the actual MSP standard code.

Automatic Carrier Mute: To prevent noise effects or FM identification problems in the absence of an FM carrier, the MSP 34x5G offers a configurable carrier mute feature, which is activated automatically if the TV sound standard is selected by means of the STAN-DARD SELECT register. If no FM carrier is detected at one of the two MSP demodulator channels, the corresponding demodulator output is muted. This is indicated in the STATUS register.

#### 2.2.3. Preprocessing of Demodulator Signals

The NICAM signals must be processed by a deemphasis filter and adjusted in level. The analog demodulated signals must be processed by a deemphasis filter, adjusted in level, and dematrixed. The correct deemphasis filters are already selected by setting the standard in the STANDARD SELECT register. The level adjustment has to be done by means of the FM/ AM and NICAM prescale registers. The necessary dematrix function depends on the selected sound standard and the actual broadcasted sound mode (mono, stereo, or bilingual). It can be manually set by the FM Matrix Mode register or automatically by the Automatic Sound Selection.

#### 2.2.4. Automatic Sound Select

In the Automatic Sound Select mode, the dematrix function is automatically selected based on the identification information in the STATUS register. No  $I^2C$  interaction is necessary when the broadcasted sound mode changes (e.g. from mono to stereo).

The demodulator supports the identification check by switching between mono-compatible standards (standards that have the same FM-Mono carrier) automatically and non-audible. If B/G-FM or B/G-NICAM is selected, the MSP will switch between these standards. The same action is performed for the standards: D/K1-FM, D/K2-FM, D/K3-FM and D/K-NICAM. Switching is only done in the absence of any stereo or bilingual identification. If identification is found, the MSP keeps the detected standard.

In case of high bit-error rates, the MSP 34x5G automatically falls back from digital NICAM sound to analog FM or AM mono.

Table 2–1 summarizes all actions that take place when Automatic Sound Select is switched on.

To provide more flexibility, the Automatic Sound Select block prepares four different source channels of demodulated sound (Fig. 2–2). By choosing one of the four demodulator channels, the preferred sound mode can be selected for each of the output channels (loudspeaker, headphone, etc.). This is done by means of the Source Select registers.


The following source channels of demodulated sound are defined:

- "FM/AM" channel: Analog mono sound, stereo if available. In case of NICAM, analog mono only (FM or AM mono).
- "Stereo or A/B" channel: Analog or digital mono sound, stereo if available. In case of bilingual broadcast, it contains both languages A (left) and B (right).

- "Stereo or A" channel: Analog or digital mono sound, stereo if available. In case of bilingual broadcast, it contains language A (on left and right).
- "Stereo or B" channel: Analog or digital mono sound, stereo if available. In case of bilingual broadcast, it contains language B (on left and right).

Fig. 2–2 and Table 2–2 show the source channel assignment of the demodulated signals in case of Automatic Sound Select mode for all sound standards.


**Note:** The analog primary input channel contains the signal of the mono FM/AM carrier or the L+R signal of the MPX carrier. The secondary input channel contains the signal of the 2nd FM carrier, the L-R signal of the MPX carrier, or the SAP signal.

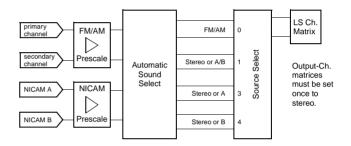

**Fig. 2–2:** Source channel assignment of demodulated signals in Automatic Sound Select Mode

#### 2.2.5. Manual Mode

Fig. 2–3 shows the source channel assignment of demodulated signals in case of manual mode. If manual mode is required, more information can be found in Section 6.7. "Demodulator Source Channels in Manual Mode" on page 91.

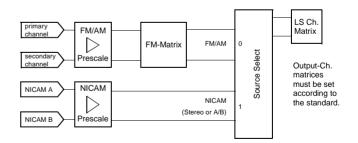

 


Table 2-1: Performed actions of the Automatic Sound	Selection
---	-----------

Selected TV Sound Standard	Performed Actions
B/G-FM, D/K-FM, M-Korea, and M-Japan	Evaluation of the identification signal and automatic switching to mono, stereo, or bilingual. Preparing four demodulator source channels according to Table 2–2.
B/G-NICAM, L-NICAM, I-NICAM, D/K-NICAM	Evaluation of NICAM-C-bits and automatic switching to mono, stereo, or bilingual. Preparing four demodulator source channels according to Table 2–2.
	In case of bad or no NICAM reception, the MSP switches automatically to FM/AM mono and switches back to NICAM if possible. A hysteresis prevents periodical switching.
B/G-FM, B/G-NICAM or D/K1-FM, D/K2-FM, D/K3-FM, and D/K-NICAM	Automatic searching for stereo/bilingual-identification in case of mono transmission. Automatic and non- audible changes between Dual-FM and FM-NICAM standards while listening to the basic FM-mono sound carrier. Example: If starting with B/G-FM-Stereo, there will be a periodical alternation to B/G-NICAM in the absence of FM-Stereo/Bilingual or NICAM-identification. Once an identification is detected, the MSP keeps the corresponding standard.
BTSC-STEREO, FM Radio	Evaluation of the pilot signal and automatic switching to mono or stereo. Preparing four demodulator source channels according to Table 2–2. Detection of the SAP carrier.
M-BTSC-SAP	In the absence of SAP, the MSP switches to BTSC-stereo if available. If SAP is detected, the MSP switches automatically to SAP (see Table 2–2).

#### Table 2-2: Sound modes for the demodulator source channels with Automatic Sound Select

			Source Channels in Automatic Sound Select Mode				
Broadcasted Sound Standard	Selected MSP Standard Code <sup>3)</sup>	Broadcasted Sound Mode	FM/AM (source select: 0)	Stereo or A/B (source select: 1)	Stereo or A (source select: 3)	Stereo or B (source select: 4	
M-Korea	02 03, 08 <sup>1)</sup>	MONO	Mono	Mono	Mono	Mono	
B/G-FM D/K-FM	04, 05, 07, 0B <sup>1)</sup>	STEREO	Stereo	Stereo	Stereo	Stereo	
M-Japan	30	BILINGUAL: Languages A and B	Right = B	Left = A Right = B	A	В	
B/G-NICAM L-NICAM	08, 03 <sup>2)</sup> 09	NICAM not available or error rate too high	analog Mono	analog Mono	analog Mono	analog Mono	
I-NICAM D/K-NICAM	0A 0B, 04 <sup>2)</sup> , 05 <sup>2)</sup> 0C, 0D	MONO	analog Mono	NICAM Mono	NICAM Mono	NICAM Mono	
D/K-NICAM (with high		STEREO	analog Mono	NICAM Stereo	NICAM Stereo	NICAM Stereo	
deviation FM)		BILINGUAL: Languages A and B	analog Mono	Left = NICAM A Right = NICAM B	NICAM A	NICAM B	
	20, 21	MONO	Mono	Mono	Mono	Mono	
		STEREO	Stereo	Stereo	Stereo	Stereo	
	20	MONO + SAP	Mono	Mono	Mono	Mono	
BTSC		STEREO + SAP	Stereo	Stereo	Stereo	Stereo	
	21	MONO + SAP	Left = Mono Right = SAP	Left = Mono Right = SAP	Mono	SAP	
		STEREO + SAP	Left = Mono Right = SAP	Left = Mono Right = SAP	Mono	SAP	
FM Radio	40	MONO	Mono	Mono	Mono	Mono	
		STEREO	Stereo	Stereo	Stereo	Stereo	

<sup>1)</sup> The Automatic Sound Select process will automatically switch to the mono compatible analog standard.
 <sup>2)</sup> The Automatic Sound Select process will automatically switch to the mono compatible digital standard.
 <sup>3)</sup> The MSP Standard Codes are defined in Table 3–7 on page 20.

## 2.3. Preprocessing for SCART and I<sup>2</sup>S Input Signals

The SCART and  $I^2S$  inputs need only be adjusted in level by means of the SCART and  $I^2S$  prescale registers.

#### 2.4. Source Selection and Output Channel Matrix

The Source Selector makes it possible to distribute all source signals (one of the demodulator source channels or SCART) to the desired output channels (loudspeaker, etc.). All input and output signals can be processed simultaneously. Each source channel is identified by a unique source address.

For each output channel, the sound mode can be set to sound A, sound B, stereo, or mono by means of the output channel matrix.

If Automatic Sound Select is on, the output channel matrix can stay fixed to stereo (transparent) for demodulated signals.

#### 2.5. Audio Baseband Processing

#### 2.5.1. Automatic Volume Correction (AVC)

Different sound sources (e.g. terrestrial channels, SAT channels, or SCART) fairly often do not have the same volume level. Advertisements during movies usually have a higher volume level than the movie itself. This results in annoying volume changes. The AVC solves this problem by equalizing the volume level.

To prevent clipping, the AVC's gain decreases quickly in dynamic boost conditions. To suppress oscillation effects, the gain increases rather slowly for low level inputs. The decay time is programmable by means of the AVC register (see page 30).

For input signals ranging from -24 dBr to 0 dBr, the AVC maintains a fixed output level of -18 dBr. Fig. 2-4 shows the AVC output level versus its input level. For prescale and volume registers set to 0 dB, a level of 0 dBr corresponds to full scale input/output. This is

- SCART input/output 0 dBr = 2.0 V<sub>rms</sub>
- Loudspeaker output 0 dBr = 1.4 V<sub>rms</sub>

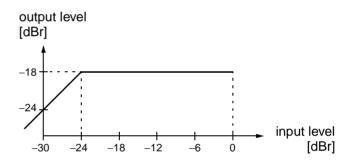


Fig. 2-4: Simplified AVC characteristics

#### 2.5.2. Loudspeaker Outputs

The following baseband features are implemented in the loudspeaker output channels: bass/treble, loudness, balance, and volume. A square wave beeper can be added to the loudspeaker channel.

#### 2.5.3. Quasi-Peak Detector

The quasi-peak readout register can be used to read out the quasi-peak level of any input source. The feature is based on following filter time constants:

attack time: 1.3 ms decay time: 37 ms

#### 2.6. SCART Signal Routing

#### 2.6.1. SCART DSP In and SCART Out Select

The SCART DSP Input Select and SCART Output Select blocks include full matrix switching facilities. To design a TV set with two pairs of SCART-inputs and one pair of SCART-outputs, no external switching hardware is required. The switches are controlled by the ACB user register (see page 34).

#### 2.6.2. Stand-by Mode

If the MSP 34x5G is switched off by first pulling STANDBYQ low and then (after >1  $\mu$ s delay) switching off DVSUP and AVSUP, but keeping AHVSUP ('**Stand-by'-mode**), the SCART switches maintain their position and function. This allows the copying from selected SCART-inputs to SCART-outputs in the TV set's stand-by mode.

In case of power on or starting from stand-by (switching on the DVSUP and AVSUP, RESETQ going high 2 ms later), all internal registers except the ACB register (page 34) are reset to the default configuration (see Table 3–5 on page 18). The reset position of the ACB register becomes active after the first  $I^2C$  transmission into the Baseband Processing part. By transmitting the ACB register first, the reset state can be redefined.

#### 2.7. I<sup>2</sup>S Bus Interface

The MSP 34x5G has a synchronous master/slave input/output interface running on 32 kHz.

The interface accepts two formats:

- 1. I<sup>2</sup>S\_WS changes at the word boundary
- 2. I<sup>2</sup>S\_WS changes one I<sup>2</sup>S-clock period before the word boundaries.

All I<sup>2</sup>S options are set by means of the MODUS and the I2S\_CONFIG registers.

The I<sup>2</sup>S bus interface consists of five pins:

- I2S\_DA\_IN1,I2S\_DA\_IN2: I<sup>2</sup>S serial data input: 16, 18....32 bits per sample
- I2S\_DA\_OUT: I<sup>2</sup>S serial data output: 16, 18...32 bits per sample
- I2S\_CL: I<sup>2</sup>S serial clock
- I2S\_WS: I<sup>2</sup>S word strobe signal defines the left and right sample

If the MSP 34x5G serves as the master on the  $I^2S$  interface, the clock and word strobe lines are driven by the IC. In this mode, only 16 or 32 bits per sample can be selected. In slave mode, these lines are input to the IC and the MSP clock is synchronized to 576 times the I2S\_WS rate (32 kHz). NICAM operation is not possible in slave mode.

An  $I^2S$  timing diagram is shown in Fig. 4–28 on page 63.

#### 2.8. ADR Bus Interface

For the ASTRA Digital Radio System (ADR), the MSP 3405G, MSP 3415G, and MSP 3455G performs preprocessing such as carrier selection and filtering. Via the 3-line ADR-bus, the resulting signals are transferred to the DRP 3510A coprocessor, where the source decoding is performed. To be prepared for an upgrade to ADR with an additional DRP board, the following lines of MSP 34x5G should be provided on a feature connector:

- I2S\_DA\_IN1 or I2S\_DA\_IN2
- I2S\_DA\_OUT
- I2S\_WS
- I2S\_CL
- ADR\_CL, ADR\_WS, ADR\_DA

For more details, please refer to the DRP 3510A data sheet.

# 2.9. Digital Control I/O Pins and Status Change Indication

The static level of the digital input/output pins  $D_CTR_I/O_0/1$  is switchable between HIGH and LOW via the I<sup>2</sup>C-bus by means of the ACB register (see page 34). This enables the controlling of external hardware switches or other devices via I<sup>2</sup>C-bus.

The digital input/output pins can be set to high impedance by means of the MODUS register (see page 23). In this mode, the pins can be used as input. The current state can be read out of the STATUS register (see page 25).

Optionally, the pin D\_CTR\_I/O\_1 can be used as an interrupt request signal to the controller, indicating any changes in the read register STATUS. This makes polling unnecessary; I<sup>2</sup>C-bus interactions are reduced to a minimum (see STATUS register on page 25 and MODUS register on page 23).

#### 2.10. Clock PLL Oscillator and Crystal Specifications

The MSP 34x5G derives all internal system clocks from the 18.432 MHz oscillator. In NICAM or in  $I^2$ S-Slave mode, the clock is phase-locked to the corresponding source. Therefore, it is not possible to use NICAM and  $I^2$ S-Slave mode at the same time.

For proper performance, the MSP clock oscillator requires a 18.432-MHz crystal. Note, that for the phase-locked mode (NICAM, I<sup>2</sup>S slave), crystals with tighter tolerance are required.

#### 3. Control Interface

#### 3.1. I<sup>2</sup>C Bus Interface

The MSP 34x5G is controlled via the  $\mathsf{I}^2\mathsf{C}$  bus slave interface.

The IC is selected by transmitting one of the MSP 34x5G device addresses. In order to allow up to three MSP ICs to be connected to a single bus, an address select pin (ADR\_SEL) has been implemented. With ADR\_SEL pulled to high, low, or left open, the MSP 34x5G responds to different device addresses. A device address pair is defined as a write address and a read address (see Table 3–1).

**Writing** is done by sending the write device address, followed by the subaddress byte, two address bytes, and two data bytes.

**Reading** is done by sending the write device address, followed by the subaddress byte and two address bytes. Without sending a stop condition, reading of the addressed data is completed by sending the device read address and reading two bytes of data.

Refer to Section 3.1.3. for the  $I^2C$  bus protocol and to Section 3.4. "Programming Tips" on page 37 for proposals of MSP 34x5G  $I^2C$  telegrams. See Table 3–2 for a list of available subaddresses.

Besides the possibility of hardware reset, the MSP can also be reset by means of the RESET bit in the CON-TROL register by the controller via  $I^2C$  bus.

Due to the architecture of the MSP 34x5G, the IC cannot react immediately to an  $I^2C$  request. The typical

 Table 3–1: I<sup>2</sup>C Bus Device Addresses

response time is about 0.3 ms. If the MSP cannot accept another byte of data (e.g. while servicing an internal interrupt), it holds the clock line  $I2C_CL$  low to force the transmitter into a wait state. The  $I^2C$  Bus Master must read back the clock line to detect when the MSP is ready to receive the next  $I^2C$  transmission. The positions within a transmission where this may happen are indicated by 'Wait' in Section 3.1.3. The maximum wait period of the MSP during normal operation mode is less than 1 ms.

#### 3.1.1. Internal Hardware Error Handling

In case of any hardware problems (e.g. interruption of the power supply of the MSP), the MSP's wait period is extended to 1.8 ms. After this time period elapses, the MSP releases data and clock lines.

#### Indication and solving the error status:

To indicate the error status, the remaining acknowledge bits of the actual  $I^2C$ -protocol will be left high. Additionally, bit[14] of CONTROL is set to one. The MSP can then be reset via the  $I^2C$  bus by transmitting the RESET condition to CONTROL.

#### Indication of reset:

Any reset, even caused by an unstable reset line etc., is indicated in bit[15] of CONTROL.

A general timing diagram of the  $I^2C$  bus is shown in Fig. 4–27 on page 61.

ADR_SEL	Low (connected to DVSS)		High (connected to DVSUP)		Left Open	
Mode	Write	Read	Write	Read	Write	Read
MSP device address	80 <sub>hex</sub>	81 <sub>hex</sub>	84 <sub>hex</sub>	85 <sub>hex</sub>	88 <sub>hex</sub>	89 <sub>hex</sub>

 Table 3–2:
 I<sup>2</sup>C Bus Subaddresses

Name	Binary Value	Hex Value	Mode	Function
CONTROL	0000 0000	00	Read/Write	Write: Software reset of MSP (see Table 3–3) Read: Hardware error status of MSP
WR_DEM	0001 0000	10	Write	write address demodulator
RD_DEM	0001 0001	11	Write	read address demodulator
WR_DSP	0001 0010	12	Write	write address DSP
RD_DSP	0001 0011	13	Write	read address DSP

#### 3.1.2. Description of CONTROL Register

Table 3-3: CONTROL	as a Write Register
--------------------	---------------------

Name	Subaddress	Bit[15] (MSB)	Bits[14:0]
CONTROL	00 <sub>hex</sub>	1 : RESET 0 : normal	0

#### Table 3-4: CONTROL as a Read Register

Name	Subaddress	Bit[15] (MSB)	Bit[14]	Bits[13:0]					
CONTROL	00 <sub>hex</sub>	RESET status after last reading of CONTROL: 0 : no reset occured 1 : reset occured	Internal hardware status: 0 : no error occured 1 : internal error occured	not of interest					
Reading of CONTROL will reset the bits[15,14] of CONTROL. After Power-on, bit[15] of CONTROL will be set; it must be read once to be reset.									

#### **3.1.3. Protocol Description**

#### Write to DSP or Demodulator

s	write	Wait	ACK	sub-addr	ACK	addr-byte	ACK	addr-byte	ACK	data-byte	ACK	data-byte	ACK	Р
	device					high		low		high		low		
	address													

#### Read from DSP or Demodulator

s	write	Wait	ACK	sub-addr	ACK	addr-byte	ACK	addr-byte	ACK	S	read	Wait	ACK	data-byte-	ACK	data-byte	NAK	Р
	device					high		low			device			high		low		
	address										address							

#### Write to Control Register

s	write	Wait	ACK	sub-addr	ACK	data-hvte	ACK	data-hvte	ACK	Р	
U	device	wan	//0//		/ 10/1	high	//0//	low	//0//		
	address					Ū					

#### Read from Control Register

s	write	Wait	ACK	00hex	ACK	s	read	Wait	ACK	data-byte-	ACK	data-byte	NAK	Р
	device address						device address			high		low		

#### **Note:** $S = I^2C$ -Bus Start Condition from master

 $P = I^2C$ -Bus Stop Condition from master

- ACK = Acknowledge-Bit: LOW on I2C\_DA from slave (= MSP, light gray) or master (= controller, dark gray)
- NAK = Not Acknowledge-Bit: HIGH on I2C\_DA from master (dark gray) to indicate 'End of Read' or from MSP indicating internal error state

Wait =  $I^2C$ -Clock line is held low, while the MSP is processing the  $I^2C$  command. This waiting time is max. 1 ms

 


Fig. 3–1: I<sup>2</sup>C bus protocol (MSB first; data must be stable while clock is high)

# 3.1.4. Proposals for General MSP 34x5G I<sup>2</sup>C Telegrams

#### 3.1.4.1. Symbols

daw	write device address (80 <sub>hex</sub> , 84 <sub>hex</sub> or 88 <sub>hex</sub> )
dar	read device address (81 <sub>hex</sub> , 85 <sub>hex</sub> or 89 <sub>hex</sub> )
<	Start Condition
>	Stop Condition
aa	Address Byte
dd	Data Byte

#### 3.1.4.2. Write Telegrams

<daw< th=""><th>00</th><th>d0</th><th>00:</th><th>&gt;</th><th></th><th>write to CONTROL register</th></daw<>	00	d0	00:	>		write to CONTROL register
<daw< td=""><td>10</td><td>aa</td><td>aa</td><td>dd</td><td>dd&gt;</td><td>write data into demodulator</td></daw<>	10	aa	aa	dd	dd>	write data into demodulator
<daw< td=""><td>12</td><td>aa</td><td>aa</td><td>dd</td><td>dd&gt;</td><td>write data into DSP</td></daw<>	12	aa	aa	dd	dd>	write data into DSP

#### 3.1.4.3. Read Telegrams

<daw< th=""><th>00</th><th><da< th=""><th>ar d</th><th>ld dd:</th><th>&gt;</th><th></th><th>read data from CONTROL register</th></da<></th></daw<>	00	<da< th=""><th>ar d</th><th>ld dd:</th><th>&gt;</th><th></th><th>read data from CONTROL register</th></da<>	ar d	ld dd:	>		read data from CONTROL register
<daw< td=""><td>11</td><td>aa</td><td>aa</td><td><dar< td=""><td>dd</td><td>dd&gt;</td><td>read data from demodulator</td></dar<></td></daw<>	11	aa	aa	<dar< td=""><td>dd</td><td>dd&gt;</td><td>read data from demodulator</td></dar<>	dd	dd>	read data from demodulator
<daw< td=""><td>13</td><td>aa</td><td>aa</td><td><dar< td=""><td>dd</td><td>dd&gt;</td><td>read data from DSP</td></dar<></td></daw<>	13	aa	aa	<dar< td=""><td>dd</td><td>dd&gt;</td><td>read data from DSP</td></dar<>	dd	dd>	read data from DSP

#### 3.1.4.4. Examples

<80	00	80	00;	>		RESET MSP statically
<80	00	00	00>	>		Clear RESET
<80	10	00	20	00 03>		Set demodulator to stand. 03 <sub>hex</sub>
<80	11	02	00	<81 dd	dd>	Read STATUS
<80	12	00	08	01 20>		Set loudspeaker channel
						source to NICAM and
						Matrix to STEREO

More examples of typical application protocols are listed in Section 3.4. "Programming Tips" on page 37.

#### 3.2. Start-Up Sequence: Power-Up and I<sup>2</sup>C-Controlling

After POWER-ON or RESET (see Fig. 4–26), the IC is in an inactive state. All registers are in the Reset position (see Table 3–5 and Table 3–6), the analog outputs are muted. The controller has to initialize all registers for which a non-default setting is necessary.

#### 3.3. MSP 34x5G Programming Interface

#### 3.3.1. User Registers Overview

The MSP 34x5G is controlled by means of user registers. The complete list of all user registers are given in Table 3–5 and Table 3–6. The registers are partitioned into the Demodulator section (Subaddress  $10_{hex}$  for writing,  $11_{hex}$  for reading) and the Baseband Processing sections (Subaddress  $12_{hex}$  for writing,  $13_{hex}$  for reading).

Write and read registers are 16 bit wide, whereby the MSB is denoted bit[15]. Transmissions via  $I^2C$  bus have to take place in 16-bit words (two byte transfers, with the most significant byte transferred first). All write registers, except the demodulator write registers are readable.

Unused parts of the 16-bit write registers must be zero. Addresses not given in this table must not be accessed.

For reasons of software compatibility to the MSP 34xxD, a Manual/Compatibility Mode is available. More read and write registers together with a detailed description can be found in "Appendix B: Manual/Compatibility Mode" on page 77.

#### Table 3–5: List of MSP 34x5G Write Registers

Write Register	Address (hex)	Bits	Description and Adjustable Range	Reset	See Page
I <sup>2</sup> C Sub-Address = 10 <sub>hex</sub> ; Registers a	re not reada	ble			
STANDARD SELECT	00 20	[15:0]	Initial Programming of the Demodulator	00 00	21
MODUS	00 30	[15:0]	Demodulator, Automatic and I <sup>2</sup> S options	00 00	23
I <sup>2</sup> S CONFIGURATION	00 40	[15:0]	Configuration of I <sup>2</sup> S options	00 00	24
I <sup>2</sup> C Sub-Address = 12 <sub>hex</sub> ; Registers a	re <i>all</i> readal	ole by usi	ng I <sup>2</sup> C Sub-Address = 13 <sub>hex</sub>		1
Volume loudspeaker channel	00 00	[15:8]	[+12 dB –114 dB, MUTE]	MUTE	29
Volume / Mode loudspeaker channel		[7:0]	1/8 dB Steps, Reduce Volume / Tone Control / Compromise / Dynamic	00 <sub>hex</sub>	
Balance loudspeaker channel [L/R]	00 01	[15:8]	[0100 / 100 % and 100 /0100 %] [-1270 / 0 and 0 / -1270 dB]	100 %/100 %	30
Balance mode loudspeaker		[7:0]	[Linear /logarithmic mode]	linear mode	
Bass loudspeaker channel	00 02	[15:8]	[+20 dB12 dB]	0 dB	31
Treble loudspeaker channel	00 03	[15:8]	[+15 dB12 dB]	0 dB	31
Loudness loudspeaker channel	00 04	[15:8]	[0 dB +17 dB]	0 dB	32
Loudness filter characteristic		[7:0]	[NORMAL, SUPER_BASS]	NORMAL	
Spatial effect strength loudspeaker ch.	00 05	[15:8]	[-100 %OFF+100 %]	OFF	33
Spatial effect mode/customize		[7:0]	[SBE, SBE+PSE]	SBE+PSE	
Volume SCART1 output channel	00 07	[15:8]	[+12 dB –114 dB, MUTE]	MUTE	34
Loudspeaker source select	00 08	[15:8]	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM	28
Loudspeaker channel matrix		[7:0]	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA	28
SCART1 source select	00 0A	[15:8]	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM	28
SCART1 channel matrix		[7:0]	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA	28
I <sup>2</sup> S source select	00 0B	[15:8]	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM	28
I <sup>2</sup> S channel matrix		[7:0]	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA	28
Quasi-peak detector source select	00 0C	[15:8]	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM	28
Quasi-peak detector matrix		[7:0]	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA	28
Prescale SCART input	00 0D	[15:8]	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	00 <sub>hex</sub>	27
Prescale FM/AM	00 0E	[15:8]	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	00 <sub>hex</sub>	26
FM matrix		[7:0]	[NO_MAT, GSTERERO, KSTEREO]	NO_MAT	27
Prescale NICAM	00 10	[15:8]	[00 <sub>hex</sub> 7F <sub>hex</sub> ] (MSP 3410G, MSP 3450G only)	00 <sub>hex</sub>	27
Prescale I <sup>2</sup> S2	00 12	[15:8]	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	10 <sub>hex</sub>	27
ACB : SCART Switches a. D_CTR_I/O	00 13	[15:0]	Bits[15:0]	00 <sub>hex</sub>	34
Beeper	00 14	[15:0]	[00 <sub>hex</sub> 7F <sub>hex</sub> ]/[00 <sub>hex</sub> 7F <sub>hex</sub> ]	0/0	35
Prescale I <sup>2</sup> S1	00 16	[15:8]	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	10 <sub>hex</sub>	27
Automatic Volume Correction	00 29	[15:8]	[off, on, decay time]	off	30

#### Table 3–6: List of MSP 34x5G Read Registers

Read Register	Address (hex)	Bits	Description and Adjustable Range	See Page
I <sup>2</sup> C Sub-Address = 11 <sub>hex</sub> ; Registers a	re not writal	ble		
STANDARD RESULT	00 7E	[15:0]	Result of Automatic Standard Detection (see Table 3–8) (MSP 3415G, MSP 3440G, MSP 3455G only)	25
STATUS	02 00	[15:0]	Monitoring of internal settings e.g. Stereo, Mono, Mute etc.	25
I <sup>2</sup> C Sub-Address = 13 <sub>hex</sub> ; Registers a	re <i>not</i> writab	ole	•	
Quasi-peak readout left	00 19	[15:0]	[00 <sub>hex</sub> 7FFF <sub>hex</sub> ] 16 bit two's complement	36
Quasi-peak readout right	00 1A	[15:0]	[00 <sub>hex</sub> 7FFF <sub>hex</sub> ] 16 bit two's complement	36
MSP hardware version code	00 1E	[15:8]	[00 <sub>hex</sub> FF <sub>hex</sub> ]	36
MSP major revision code		[7:0]	[00 <sub>hex</sub> FF <sub>hex</sub> ]	36
MSP product code	00 1F	[15:8]	[00 <sub>hex</sub> FF <sub>hex</sub> ]	36
MSP ROM version code		[7:0]	[00 <sub>hex</sub> FF <sub>hex</sub> ]	36

#### 3.3.2. Description of User Registers

#### Table 3-7: Standard Codes for STANDARD SELECT register

MSP Standard Code (Data in hex)	TV Sound Standard	Sound Carrier Frequencies in MHz	MSP 34x5G Version
	Automatic Standard Det	ection	
00 01	Starts Automatic Standard Detection and sets detected standard		all
	Standard Selection	<u>ו</u>	
00 02	M-Dual FM-Stereo	4.5/4.724212	3405, -15, -25, -45, -55
00 03	B/G-Dual FM-Stereo <sup>1)</sup>	5.5/5.7421875	3405, -15, -55
00 04	D/K1-Dual FM-Stereo <sup>2)</sup>	6.5/6.2578125	
00 05	D/K2-Dual FM-Stereo <sup>2)</sup>	6.5/6.7421875	
00 06	D/K -FM-Mono with HDEV3 <sup>3)</sup> , not detectable by Automatic Standard Detection, for China HDEV3 <sup>3)</sup> SAT-Mono (i.e. Eutelsat, s. Table 6–18)	6.5	
00 07	D/K3-Dual FM-Stereo	6.5/5.7421875	_
00 08	B/G-NICAM-FM <sup>1)</sup>	5.5/5.85	3415, -55
00 09	L-NICAM-AM	6.5/5.85	
00 0A	I-NICAM-FM	6.0/6.552	_
00 0B	D/K-NICAM-FM <sup>2)</sup>	6.5/5.85	
00 0C	D/K-NICAM-FM with HDEV2 <sup>4)</sup> , not detectable by Automatic Standard Detection, for China	6.5/5.85	
00 0D	D/K-NICAM-FM with HDEV3 <sup>3)</sup> , not detectable by Automatic Standard Detection, for China	6.5/5.85	
00 20	BTSC-Stereo	4.5	3425, -45, -55
00 21	BTSC-Mono + SAP		
00 30	M-EIA-J Japan Stereo	4.5	3425, -45, -55
00 40	FM-Stereo Radio with 75 $\mu$ s Deemphasis	10.7	3425, -45, -55
00 50	SAT-Mono (see Table 6–18)	6.5	3405, -15, -55
00 51	SAT-Stereo (see Table 6–18)	7.02/7.20	
00 60	SAT ADR (Astra Digital Radio)	6.12	

 $^{1)}$  In case of Automatic Sound Select, the B/G-codes  $3_{hex}$  and  $8_{hex}$  are equivalent.  $^{2)}$  In case of Automatic Sound Select, the D/K-codes  $4_{hex}$ ,  $5_{hex}$ ,  $7_{hex}$ , and  $B_{hex}$  are equivalent.  $^{3)}$  HDEV3: Max. FM deviation must not exceed 540 kHz  $^{4)}$  HDEV2: Max. FM deviation must not exceed 360 kHz

#### 3.3.2.1. STANDARD SELECT Register

The TV sound standard of the MSP 34x5G demodulator is determined by the STANDARD SELECT register. There are two ways to use the STANDARD SELECT register:

- Setting up the demodulator for a TV sound standard by sending the corresponding standard code with a single I<sup>2</sup>C bus transmission.
- Starting the Automatic Standard Detection for terrestrial TV standards. This is the most comfortable way to set up the demodulator (not for MSP 3435G). Within 0.5 s the detection and setup of the actual TV sound standard is performed. The detected standard can be read out of the STANDARD RESULT register by the control processor. This feature is recommended for the primary setup of a TV set. Outputs should be muted during Automatic Standard Detection.

The Standard Codes are listed in Table 3–7.

Selecting a TV sound standard via the STANDARD SELECT register initializes the demodulator. This includes: AGC-settings and carrier mute, tuning frequencies, FIR-filter settings, demodulation mode (FM, AM, NICAM), deemphasis and identification mode.

TV stereo sound standards that are unavailable for a specific MSP version are processed in analog mono sound of the standard. In that case, stereo or bilingual processing will not be possible.

For a complete setup of the TV sound processing from analog IF input to the source selection, the transmissions as shown in Section 3.5. are necessary.

For reasons of software compatibility to the MSP 34xxD, a Manual/Compatibility mode is available. A detailed description of this mode can be found on page 77.

#### 3.3.2.2. Refresh of STANDARD SELECT Register

A general refresh of the STANDARD SELECT register is not allowed. However, the following method enables watching the MSP 34x5G "alive" status and detection of accidental resets (only versions B6 and later):

- After Power-on, bit[15] of CONTROL will be set; it must be read once to enable the reset-detection feature.
- Reading of the CONTROL register and checking the reset indicator bit[15].
- If bit[15] is "0", any refresh of the STANDARD SELECT register is not allowed.
- If bit[15] is "1", indicating a reset, a refresh of the STANDARD SELECT register and all other MSPG registers is required.

#### 3.3.2.3. STANDARD RESULT Register

If Automatic Standard Detection is selected in the STANDARD SELECT register, status and result of the Automatic Standard Detection process can be read out of the STANDARD RESULT register. The possible results are based on the mentioned Standard Code and are listed in Table 3–8.

In cases where no sound standard has been detected (no standard present, too much noise, strong interferers, etc.) the STANDARD RESULT register contains  $00\ 00_{hex}$ . In that case, the controller has to start further actions (for example set the standard according to a preference list or by manual input).

As long as the STANDARD RESULT register contains a value greater than 07  $FF_{hex}$ , the Automatic Standard Detection is still active. During this period, the MODUS and STANDARD SELECT register must not be written. The STATUS register will be updated when the Automatic Standard Detection has finished.

If a present sound standard is unavailable for a specific MSP-version, it detects and switches to the analog mono sound of this standard.

#### Example:

The MSPs 3425G and 3445G will detect a B/G-NICAM signal as standard 3 and will switch to the analog FM-Mono sound.

 Table 3–8: Results of the Automatic Standard

 Detection

Broadcasted Sound Standard	STANDARD RESULT Register Read 007E <sub>hex</sub>
Automatic Standard Detection could not find a sound standard	0000 <sub>hex</sub>
B/G-FM	0003 <sub>hex</sub>
B/G-NICAM	0008 <sub>hex</sub>
I	000A <sub>hex</sub>
FM-Radio	0040 <sub>hex</sub>
M-Korea	0002 <sub>hex</sub> (if MODUS[14,13]=00)
M-Japan M-BTSC	0020 <sub>hex</sub> (if MODUS[14,13]=01)
	0030 <sub>hex</sub> (if MODUS[14,13]=10)
L-AM D/K1	0009 <sub>hex</sub> (if MODUS[12]=0)
D/K1 D/K2 D/K3	0004 <sub>hex</sub> (if MODUS[12]=1)
L-NICAM D/K-NICAM	0009 <sub>hex</sub> (if MODUS[12]=0)
	000B <sub>hex</sub> (if MODUS[12]=1)
Automatic Standard Detection still active	>07FF <sub>hex</sub>

## 3.3.2.4. Write Registers on I<sup>2</sup>C Subaddress 10<sub>hex</sub>

Register Address	Function			Name
00 20 <sub>hex</sub>	STANDARD SELECTION Register			STANDARD_SEL
	Defines T			
	bit[15:0]	00 01 <sub>hex</sub> 00 02 <sub>hex</sub>	start Automatic Standard Detection MSP Standard Codes (see Table 3–7)	
		 00 60 <sub>hex</sub>		
00 30 <sub>hex</sub>	MODUS F	Register		MODUS
	Preferenc			
	bit[15]	0	undefined, must be 0	
	bit[14:13]	0 1 2 3	detected 4.5 MHz carrier is interpreted as: <sup>1)</sup> standard M (Korea) standard M (BTSC) standard M (Japan) chroma carrier (M/N standards are ignored)	
	bit[12]	0 1	detected 6.5 MHz carrier is interpreted as: <sup>1)</sup> standard L (SECAM) standard D/K1, D/K2, D/K3, or D/K NICAM	
	General M			
	bit[11:8]	0	undefined, must be 0	
	bit[7]	0/1	active/tristate state of audio clock output pin AUD_CL_OUT	
	bit[6]	0 1	I <sup>2</sup> S word strobe alignment WS changes at data word boundary WS changes one clock cycle in advance	
	bit[5]	0/1	master/slave mode of I <sup>2</sup> S interface (must be set to 0 (= Master) in case of NICAM mode)	
	bit[4]	0/1	active/tristate state of I <sup>2</sup> S output pins	
	bit[3]	0	state of digital output pins D_CTR_I/O_0 and _1 active: D_CTR_I/O_0 and _1 are output pins (can be set by means of the ACB register. see also: MODUS[1])	
		1	tristate: D_CTR_I/O_0 and _1 are input pins (level can be read out of STATUS[4,3])	
	bit[2]	0	undefined, must be 0	
	bit[1]	0/1	disable/enable STATUS change indication by means of the digital I/O pin D_CTR_I/O_1 Necessary condition: MODUS[3] = 0 (active)	
	bit[0]	0/1 off/on:	Automatic Sound Select	

Register Address	Function	l		Name	
00 40 <sub>hex</sub>	I <sup>2</sup> S CONF	I <sup>2</sup> S CONFIGURATION Register			
	bit[15:1]	0	not used, must be set to "0"		
	bit[0]	0	I2S_CL frequency and I <sup>2</sup> S data sample length for master mode 2 x 16 bit (1.024 MHz)		
		1	2 x 32 bit (2.048 MHz))		

## 3.3.2.5. Read Registers on I<sup>2</sup>C Subaddress 11<sub>hex</sub>

Table 3–10: Read Registers on I <sup>2</sup> C Subaddress 11 <sub>he</sub>	x
--	---

Register Address	Function	ı		Name		
00 7E <sub>hex</sub>	STANDA	STANDARD_RES				
	Readbac					
	bit[15:0]	00 00 <sub>hex</sub>	Automatic Standard Detection could not find a sound standard			
		00 02 <sub>hex</sub>	MSP Standard Codes (see Table 3–8)			
		 00 40 <sub>hex</sub> >07 FF <sub>hex</sub> /	Automatic Standard Detection still active			
02 00 <sub>hex</sub>	STATUS	Register		STATUS		
	Contains all user relevant internal information about the status of the MSP					
	bit[15:10]	l	undefined			
	bit[8]	0/1	"1" indicates bilingual sound mode or SAP present (internally evaluated from received analog or digital iden- tification signals)			
	bit[7]	0/1	"1" indicates independent mono sound (only for NICAM)			
	bit[6]	0/1	mono/stereo indication (internally evaluated from received analog or digital iden- tification signals)			
	bit[5,9]	00 01 10 11	analog sound standard (FM or AM) active this pattern will not occur digital sound (NICAM) available bad reception condition of digital sound (NICAM) due to: a. high error rate b. unimplemented sound code c. data transmission only			
	bit[4]	0/1	low/high level of digital I/O pin D_CTR_I/O_1			
	bit[3]	0/1	low/high level of digital I/O pin D_CTR_I/O_0			
	bit[2]	0 1	detected secondary carrier (2nd A2 or SAP sub-carrier) no secondary carrier detected			
	bit[1]	0 1	detected primary carrier (Mono or MPX carrier) no primary carrier detected			
	bit[0]		undefined			
	change ir	n the STATI	ndication is activated by means of MODUS[1]: Each JS register sets the digital I/O pin D_CTR_I/O_1 to high TATUS register resets D_CTR_I/O_1.			

## 3.3.2.6. Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>

Register Address	Function	1		Name			
PREPROC	REPROCESSING						
00 0E <sub>hex</sub>	FM/AM P	Prescale		PRE_FM			
	bit[15:8]	00 <sub>hex</sub>  7F <sub>hex</sub>	Defines the input prescale gain for the demodulated FM or AM signal				
		00 <sub>hex</sub>	off (RESET condition)				
			xcept satellite FM and AM-mode, the combinations of pres- deviation listed below lead to internal full scale.				
	FM mode	9					
	bit[15:8]	7F <sub>hex</sub> 48 <sub>hex</sub> 30 <sub>hex</sub> 24 <sub>hex</sub> 18 <sub>hex</sub> 13 <sub>hex</sub>	28 kHz FM deviation 50 kHz FM deviation 75 kHz FM deviation 100 kHz FM deviation 150 kHz FM deviation 180 kHz FM deviation (limit)				
	FM high o	deviation n	node (HDEV2, MSP Standard Code = C <sub>hex</sub> )				
	bit[15:8]	30 <sub>hex</sub> 14 <sub>hex</sub>	150 kHz FM deviation 360 kHz FM deviation (limit)				
	FM very l	high deviat	ion mode (HDEV3, MSP Standard Code = 6 and D <sub>hex</sub> )				
	bit[15:8]	20 <sub>hex</sub> 1A <sub>hex</sub>	450 kHz FM deviation 540 kHz FM deviation (limit)				
	Satellite I	FM with ad	laptive deemphasis				
	bit[15:8]	10 <sub>hex</sub>	recommendation				
	AM mode	e (MSP Sta	andard Code = 9)				
	bit[15:8]	7C <sub>hex</sub>	recommendation for SIF input levels from 0.1 $\rm V_{pp}$ to 0.8 $\rm V_{pp}$				
			(Due to the AGC being switched on, the AM-output level remains stable and independent of the actual SIF-level in the mentioned input range)				

Register Address	Function	Name
(continued)	FM Matrix Modes	FM_MATRIX
00 0E <sub>hex</sub>	Defines the dematrix function for the demodulated FM signal	
	bit[7:0] 00 <sub>hex</sub> no matrix (used for bilingual and unmatrixed stereo sound) 01 <sub>hex</sub> 02 <sub>hex</sub> German stereo (Standard B/G) 02 <sub>hex</sub> 03 <sub>hex</sub> Korean stereo (also used for BTSC, EIA-J and FM Radio) 03 <sub>hex</sub> sound A mono (left and right channel contain the mono sound of the FM/AM mono carrier) 04 <sub>hex</sub> sound B mono	
	In case of <b>Automatic Sound Select = on</b> , the FM Matrix Mode is set automati- cally. Writing to the FM/AM prescale register (00 0E <sub>hex</sub> high part) is still allowed. In order not to disturb the automatic process, the low part of any I <sup>2</sup> C transmis- sion to this register is ignored. Therefore, any FM-Matrix readback values may differ from data written previously.	
	In case of <b>Automatic Sound Select = off</b> , the FM Matrix Mode must be set as shown in Table 6–17 of Appendix B.	
	To enable a <b>Forced Mono Mode</b> for all analog stereo systems by overriding the internal pilot or identification evaluation, the following steps must be transmitted:	
	<ol> <li>MODUS with bit[0] = 0 (Automatic Sound Select off)</li> <li>FM Presc./Matrix with FM Matrix = Sound A Mono (SAP: Sound B Mono)</li> <li>Select FM/AM source channel, with channel matrix set to "Stereo" (transparent)</li> </ol>	
00 10 <sub>hex</sub>	NICAM Prescale	PRE_NICAM
	Defines the input prescale value for the digital NICAM signal	
	bit[15:8] 00 <sub>hex</sub> 7F <sub>hex</sub> prescale gain	
	examples: 00 <sub>hex</sub> off 20 <sub>hex</sub> 0 dB gain 5A <sub>hex</sub> 9 dB gain (recommendation) 7F <sub>hex</sub> +12 dB gain (maximum gain)	
00 16 <sub>hex</sub>	I2S1 Prescale	PRE_I2S1
00 12 <sub>hex</sub>	I2S2 Prescale	PRE_I2S2
	Defines the input prescale value for digital I <sup>2</sup> S input signals	
	bit[15:8] 00 <sub>hex</sub> 7F <sub>hex</sub> prescale gain examples: 00 <sub>hex</sub> off 10 <sub>hex</sub> 0 dB gain (recommendation, RESET condition) 7F <sub>hex</sub> +18 dB gain (maximum gain)	
00 0D <sub>hex</sub>	SCART Input Prescale	PRE_SCART
	Defines the input prescale value for the analog SCART input signal	
	bit[15:8] 00 <sub>hex</sub> 7F <sub>hex</sub> prescale gain examples: 00 <sub>hex</sub> off (RESET condition)	
	$\begin{array}{llllllllllllllllllllllllllllllllllll$	

Register Address	Function	I		Name
SOURCE	SELECT AN	ND OUTPL	JT CHANNEL MATRIX	
00 08 <sub>hex</sub> 00 0A <sub>hex</sub> 00 0B <sub>hex</sub> 00 0C <sub>hex</sub>	Source fo	or: Loudspe SCART1 I <sup>2</sup> S Outp Quasi-P	SRC_MAIN SRC_SCART1 SRC_I2S SRC_QPEAK	
	bit[15:8]	0	"FM/AM": demodulated FM or AM mono signal	
		1	"Stereo or A/B": demodulator Stereo or A/B signal (in manual mode, this source is identical to the NICAM source in the MSP 3410D)	
		3	"Stereo or A": demodulator Stereo Sound or Language A (only defined for Automatic Sound Select)	
		4	"Stereo or B": demodulator Stereo Sound or Language B (only defined for Automatic Sound Select)	
		2	SCART input	
		5	I <sup>2</sup> S1 input	
		6	I <sup>2</sup> S2 input	
	For demo	dulator so	urces, see Table 2–2.	
00 08 <sub>hex</sub> 00 0A <sub>hex</sub> 00 0B <sub>hex</sub> 00 0C <sub>hex</sub>	Matrix M	Loudspe SCART1 I <sup>2</sup> S Outp	eaker Output DA Output out eak Detector	MAT_MAIN MAT_SCART1 MAT_I2S MAT_QPEAK
	bit[7:0]	00 <sub>hex</sub> 10 <sub>hex</sub> 20 <sub>hex</sub> 30 <sub>hex</sub> special n	Sound A Mono (or Left Mono) (RESET condition) Sound B Mono (or Right Mono) Stereo (transparent mode) Mono (sum of left and right inputs divided by 2) nodes are available (see Section 6.5.1. on page 89)	
	In Autom according put chanr			

Register Address	Functior	Name		
LOUDSPE	AKER PRO	OCESSING		
00 00 <sub>hex</sub>	Volume	Loudspeak	ker	VOL_MAIN
	bit[15:8]	volume ta 7F <sub>hex</sub> 7E <sub>hex</sub>  74 <sub>hex</sub> 73 <sub>hex</sub> 72 <sub>hex</sub>		
		 02 <sub>hex</sub> 01 <sub>hex</sub> 00 <sub>hex</sub> FF <sub>hex</sub>	–113 dB –114 dB Mute (RESET condition) Fast Mute (needs about 75 ms until the signal is com- pletely ramped down)	
	bit[7:5]	higher res 0 1	solution volume table +0 dB +0.125 dB increase in addition to the volume table	
		 7	+0.875 dB increase in addition to the volume table	
	bit[4]	0	must be set to 0	
	bit[3:0]	clipping r 0 1 2 3	node reduce volume reduce tone control compromise dynamic	
	With larg ping.	e scale inp	ut signals, positive volume settings may lead to signal clip-	
	digital an tion by di audible D	d an analog gital volum OC plops. To	Idspeaker and headphone volume function is divided into a g section. With Fast Mute, volume is reduced to mute posi- e only. Analog volume is not changed. This reduces any o turn volume on again, the volume step that has been used is activated must be transmitted.	
	prevent s nal volum	evere clipp ne is autom	is set to " <b>reduce volume</b> ", the following rule is used: To ing effects with bass, treble, or equalizer boosts, the inter- atically limited to a level where, in combination with either alizer setting, the amplification does not exceed 12 dB.	
	reduced	if amplificat	is " <b>reduce tone control</b> ", the bass or treble value is ion exceeds 12 dB. If the equalizer is switched on, the gain duced, where amplification together with volume exceeds	
	reduced on, the g	half and hal	is " <b>compromise</b> ", the bass or treble value and volume are If if amplification exceeds 12 dB. If the equalizer is switched bands is reduced half and half, where amplification e exceeds 12 dB.	
			is " <b>dynamic</b> ", volume is reduced automatically if the signal acceed –2 dBFS within the IC.	

I

Register Address	Function			Name
00 29 <sub>hex</sub>	Automati			
	bit[15:12]	00 <sub>hex</sub> 08 <sub>hex</sub>	AVC off (and reset internal variables) AVC on	AVC
	bit[11:8]	08 <sub>hex</sub> 04 <sub>hex</sub> 02 <sub>hex</sub> 01 <sub>hex</sub>	8 sec decay time 4 sec decay time (recommended) 2 sec decay time 20 ms decay time (should be used for approx. 100 ms after channel change)	AVC_DECAY
		PANORA	not be used in any Dolby Prologic mode (with DPL35xx), MA or 3D-PANORAMA mode, when only the loudspeaker	
00 01 <sub>hex</sub>	Balance I	Loudspea	ker Channel	BAL_MAIN
	bit[15:8]	Linear Mo 7F <sub>hex</sub> 7E <sub>hex</sub>	ode Left muted, Right 100% Left 0.8%, Right 100%	
		01 <sub>hex</sub> 00 <sub>hex</sub> FF <sub>hex</sub>	Left 99.2%, Right 100% Left 100%, Right 100% Left 100%, Right 99.2%	
		 82 <sub>hex</sub> 81 <sub>hex</sub>	Left 100%, Right 0.8% Left 100%, Right muted	
	bit[15:8]	Logarithn 7F <sub>hex</sub> 7E <sub>hex</sub>	nic Mode Left –127 dB, Right 0 dB Left –126 dB, Right 0 dB	
		01 <sub>hex</sub> 00 <sub>hex</sub> FF <sub>hex</sub>	Left –1 dB, Right 0 dB Left 0 dB, Right 0 dB Left 0 dB, Right –1 dB	
		81 <sub>hex</sub> 80 <sub>hex</sub>	Left 0 dB, Right –127 dB Left 0 dB, Right –128 dB	
	bit[7:0]	Balance I 00 <sub>hex</sub> 01 <sub>hex</sub>	Mode linear logarithmic	
	Positive b channel; unaffected			

Register Address	Function	Name
00 02 <sub>hex</sub>	Bass Loudspeaker Channel	BASS_MAIN
	bit[15:8] extended range 7F <sub>hex</sub> +20 dB 78 <sub>hex</sub> +18 dB 70 <sub>hex</sub> +16 dB 68 <sub>hex</sub> +14 dB	
	normal range 60 <sub>hex</sub> +12 dB 58 <sub>hex</sub> +11 dB	
	$\begin{array}{ll} & & \\ 08_{hex} & +1 \text{ dB} \\ 00_{hex} & 0 \text{ dB} \\ F8_{hex} & -1 \text{ dB} \end{array}$	
	A8 <sub>hex</sub> –11 dB A0 <sub>hex</sub> –12 dB	
	Higher resolution is possible: An LSB step in the normal range results in a gain step of about 1/8 dB, in the extended range about 1/4 dB.	
	With positive bass settings, internal clipping may occur even with overall volume less than 0 dB. This will lead to a clipped output signal. Therefore, it is not recommended to set bass to a value that, in conjunction with volume, would result in an overall positive gain.	
00 03 <sub>hex</sub>	Treble Loudspeaker Channel	TREB_MAIN
	bit[15:8] 78 <sub>hex</sub> +15 dB 70 <sub>hex</sub> +14 dB	
	$\begin{array}{ccc} & & & \\ & & & & \\ & & & \\ & & & & \\ & & & \\ & & & & \\ & & & & \\ & & & & \\ & &$	
	$ \begin{array}{rcl} \text{A8}_{\text{hex}} & -11 \text{ dB} \\ \text{A0}_{\text{hex}} & -12 \text{ dB} \end{array} $	
	Higher resolution is possible: An LSB step results in a gain step of about 1/8 dB.	
	With positive treble settings, internal clipping may occur even with overall vol- ume less than 0 dB. This will lead to a clipped output signal. Therefore, it is not recommended to set treble to a value that, in conjunction with volume, would result in an overall positive gain.	

Register Address	Function	Name LOUD_MAIN	
00 04 <sub>hex</sub>	Loudness L		
ou o mex	bit[15:8] Lo 44 40 02 01 00 02 01 00 02 01 00 02 01 00 02 01 00 02 01 00 02 01 00 00 02 01 00 00 00 00 00 00 00 00 00 00 00 00	budness Gain $4_{hex}$ +17 dB $b_{hex}$ +16 dB $4_{hex}$ +1 dB $3_{hex}$ +0.75 dB $2_{hex}$ +0.5 dB $1_{hex}$ +0.25 dB $b_{hex}$ 0 dB budness Mode $b_{hex}$ normal (constant volume at 1kHz) $4_{hex}$ Super Bass (constant volume at 2kHz) ution of Loudness Gain is possible: An LSB step results in a gain	

Register Address	Function			Name	
00 05 <sub>hex</sub>	Spatial E	SPAT_MAIN			
	bit[15:8]	Effect Str 7F <sub>hex</sub> 3F <sub>hex</sub>	ength Enlargement 100% Enlargement 50%		
		01 <sub>hex</sub> 00 <sub>hex</sub> FF <sub>hex</sub>	Enlargement 1.5% Effect off reduction 1.5%		
		CO <sub>hex</sub> 80 <sub>hex</sub>	reduction 50% reduction 100%		
	bit[7:4]	Spatial Et 0 <sub>hex</sub> 2 <sub>hex</sub>	ffect Mode Stereo Basewidth Enlargement (SBE) and Pseudo Stereo Effect (PSE). (Mode A) Stereo Basewidth Enlargement (SBE) only. (Mode B)		
	bit[3:0]	Spatial Et O <sub>hex</sub> 2 <sub>hex</sub> 4 <sub>hex</sub> 6 <sub>hex</sub> 8 <sub>hex</sub>	ffect High-Pass Gain max high-pass gain 2/3 high-pass gain 1/3 high-pass gain min high-pass gain automatic		
	There are	e several sp	patial effect modes available:		
	In Mode A (low byte = 00 <sub>hex</sub> ), the spatial effect depends on the source mode. If the incoming signal is mono, Pseudo Stereo Effect is active; for stereo signals, Pseudo Stereo Effect and Stereo Basewidth Enlargement is effective. The strength of the effect is controllable by the upper byte. A negative value reduces the stereo image. A strong spatial effect is recommended for small TV sets where loudspeaker spacing is rather close. For large screen TV sets, a more moderate spatial effect is recommended.				
			reo Basewidth Enlargement is effective. For mono input sig- ereo Effect has to be switched on.		
	response value of ( function fe only signa quency re	. With the I D <sub>hex</sub> yields or L or R c als but a lo	hing that all spatial effects affect amplitude and phase lower 4 bits, the frequency response can be customized. A a flat response for center signals ( $L = R$ ) but a high-pass only signals. A value of $6_{hex}$ has a flat response for L or R bw-pass function for center signals. By using $8_{hex}$ , the fre- automatically adapted to the sound material by choosing an ain.		

Register Address	Function			Name
SCART O	JTPUT CH	ANNEL		
00 07 <sub>hex</sub>	Volume S	SCART1 Ou	utput Channel	VOL_SCART1
	bit[15:8]	volume ta 7F <sub>hex</sub> 7E <sub>hex</sub>  74 <sub>hex</sub> 73 <sub>hex</sub> 72 <sub>hex</sub>	ble with 1 dB step size +12 dB (maximum volume) +11 dB +1 dB 0 dB -1 dB	
		02 <sub>hex</sub> 01 <sub>hex</sub> 00 <sub>hex</sub>	–113 dB –114 dB Mute (RESET condition)	
	bit[7:5]	higher res 0 1 	solution volume table +0 dB +0.125 dB increase in addition to the volume table	
		7	+0.875 dB increase in addition to the volume table	
	bit[4:0]	01 <sub>hex</sub>	this must be 01 <sub>hex</sub>	
SCART SV	VITCHES A	ND DIGITA	AL I/O PINS	1
00 13 <sub>hex</sub>	ACB Reg	ACB_REG		
	Defines the level of the digital output pins and the position of the SCART switches			
	bit[15]	0/1	low/high of digital output pin D_CTR_I/O_1 (MODUS[3]=0)	
	bit[14]	0/1	low/high of digital output pin D_CTR_I/O_0 (MODUS[3]=0)	
	bit[13:5]		the channel matrix mode for the corresponding output channels) SCART2 to DSP input	
	bit[13:5]	xx00xxx0x xx01xxx0 xx10xxx0 xx11xxx0 xx01xxx1	Output Select undefined (RESET position) x SCART2 input to SCART1 output x MONO input to SCART1 output x SCART1 DA to SCART1 output x SCART1 input to SCART1 output x mute SCART1 output	
	on the co	ontrol bus to	becomes active at the time of the first write transmission the audio processing part. By writing to the ACB register e can be redefined.	

Register Address	Function	Name
BEEPER		
00 14 <sub>hex</sub>	Beeper Volume and Frequency	BEEPER
	bit[15:8] Beeper Volume 00 <sub>hex</sub> off 7F <sub>hex</sub> maximum volume	
	bit[7:0] Beeper Frequency 01 <sub>hex</sub> 16 Hz (lowest) 40 <sub>hex</sub> 1 kHz FF <sub>hex</sub> 4 kHz	

## 3.3.2.7. Read Registers on I<sup>2</sup>C Subaddress 13<sub>hex</sub>

Table 3–12: Read Registers on I<sup>2</sup>C Subaddress 13<sub>hex</sub>

Register Address	Function	I		Name
QUASI-PE	AK DETEC	TOR REA	DOUT	
00 19 <sub>hex</sub> 00 1A <sub>hex</sub>	Quasi-Pe Quasi-Pe	QPEAK_L QPEAK_R		
	bit[15:0]			
MSP 34x5	G VERSION	I READOL	JT REGISTERS	
00 1E <sub>hex</sub>	MSP Har	MSP_HARD		
	bit[15:8]	02 <sub>hex</sub>	MSP 34x5G - <u>B</u> 8	
	A change may have tical to the			
	MSP Maj	MSP_REVISION		
	bit[7:0]	07 <sub>hex</sub>	MSP 34x5 <u>G</u> - B8	
	The majo	r revision o	code of the MSP 34x5G is 7.	
00 1F <sub>hex</sub>	MSP Product Code			MSP_PRODUCT
	bit[15:8]	0F <sub>hex</sub> 19 <sub>hex</sub> 2D <sub>hex</sub> 37 <sub>hex</sub> 41 <sub>hex</sub>	MSP 34 <u>15</u> G - B8 MSP 34 <u>25</u> G - B8 MSP 34 <u>45</u> G - B8 MSP 34 <u>55</u> G - B8 MSP 34 <u>65</u> G - B8	
	By means which TV			
	MSP RO	MSP_ROM		
	bit[7:0]	44 <sub>hex</sub> 45 <sub>hex</sub> 46 <sub>hex</sub> 48 <sub>hex</sub>	MSP 34x5G - A <u>4</u> MSP 34x5G - B <u>5</u> MSP 34x5G - B <u>6</u> MSP 34x5G - B <u>8</u>	
	A change in the ROM version code defines internal software optimizations, that may have influence on the chip's behavior, e.g. new features may have been included. While a software change is intended to create no compatibility problems, customers that want to use the new functions can identify new MSP 34x5G versions according to this number.			
			ty problems with MSP 3410B and MSP 34x0D, an offset of e ROM version code of the chip's imprint.	

#### 3.4. Programming Tips

This section describes the preferred method for initializing the MSP 34x5G. The initialization is grouped into four sections:

- SCART Signal Path (analog signal path)
- Demodulator
- SCART and I<sup>2</sup>S Inputs
- Output Channels

See Fig. 2–1 on page 8 for a complete signal flow.

#### **SCART Signal Path**

1. Select analog input for the SCART baseband processing (SCART DSP Input Select) by means of the ACB register.

 Select the source for each analog SCART output (SCART Output Select) by means of the ACB register.

#### Demodulator

For a complete setup of the TV sound processing from analog IF input to the source selection, the following steps must be performed:

1. Set MODUS register to the preferred mode and Sound IF input.

- 2. Set preferred prescale (FM and NICAM) values.
- 3. Write STANDARD SELECT register.
- 4. If Automatic Sound Select is not active: Choose FM matrix repeatedly according to the sound mode indicated in the STATUS register.

#### SCART and I<sup>2</sup>S Inputs

- 1. Set preferred prescale for SCART.
- Set preferred prescale for I<sup>2</sup>S inputs (set to 0 dB after RESET).

#### **Output Channels**

1. Select the source channel and matrix for each output channel.

- 2. Set audio baseband processing.
- 3. Select volume for each output channel.

#### 3.5. Examples of Minimum Initialization Codes

Initialization of the MSP 34x5G according to these listings reproduces sound of the selected standard on the loudspeaker output. All numbers are hexadecimal. The examples have the following structure:

- 1. Perform an  $I^2C$  controlled reset of the IC.
- 2. Write MODUS register (with Automatic Sound Select).
- 3. Set Source Selection for loudspeaker channel (with matrix set to STEREO).
- 4. Set Prescale (FM and/or NICAM and dummy FM matrix).
- 5. Write STANDARD SELECT register.
- 6. Set Volume loudspeaker channel to 0 dB.

#### 3.5.1. B/G-FM (A2 or NICAM)

			•	•
<80	00	80 00>	>	// Softreset
<80	00	00 00>	>	
<80	10	00 30	20 03>	// MODUS-Register: Automatic = on
<80	12	00 08	03 20>	// Source Sel. = (St or A) & Ch. Matr. = St
<80	12	00 0E	24 03>	// FM/AM-Prescale = 24 <sub>hex</sub> , FM-Matrix = MONO/SOUNDA
<80	12	00 10	5A 00>	// NICAM-Prescale = 5A <sub>hex</sub>
<80	10	00 20 or	00 03>	// Standard Select: A2 B/G or NICAM B/G
<80	10	00 20	00 08>	
<80	12	00 00	73 00>	// Loudspeaker Volume 0 dB

#### 3.5.2. BTSC-Stereo

<80 00 80 00>	// Softreset
<80 00 00 00>	
<80 10 00 30 20 03>	// MODUS-Register: Automatic = on
<80 12 00 08 03 20>	// Source Sel. = (St or A) & Ch. Matr. = St
<80 12 00 0E 24 03>	// FM/AM-Prescale = 24 <sub>hex</sub> , FM-Matrix = Sound A Mono
<80 10 00 20 00 20>	// Standard Select: BTSC-STEREO
<80 12 00 00 73 00>	// Loudspeaker Volume 0 dB

#### 3.5.3. BTSC-SAP with SAP at Loudspeaker Channel

<80 00 80 00>	// Softreset
<80 00 00 00>	
<80 10 00 30 20 03>	// MODUS-Register: Automatic = on
<80 12 00 08 03 20>	// Source Sel. = (St or A) & Ch. Matr. = St
<80 12 00 0E 24 03>	// FM/AM-Prescale = 24 <sub>hex</sub> , FM-Matrix = Sound A Mono
<80 10 00 20 00 21>	// Standard Select: BTSC-SAP
<80 12 00 00 73 00>	// Loudspeaker Volume 0 dB

#### 3.5.4. FM-Stereo Radio

<80 00 80 00>	// Softreset
<80 00 00 00>	
<80 10 00 30 20 03>	// MODUS-Register: Automatic = on
<80 12 00 08 03 20>	// Source Sel. = (St or A) & Ch. Matr. = St
<80 12 00 0E 24 03>	// FM/AM-Prescale = 24 <sub>hex</sub> , FM-Matrix = Sound A Mono
<80 10 00 20 00 40>	// Standard Select: FM-STEREO-RADIO
<80 12 00 00 73 00>	// Loudspeaker Volume 0 dB

#### 3.5.5. Automatic Standard Detection

A detailed software flow diagram is shown in Fig. 3–2 on page 39.

<80	00	80 00;	>	// Softreset
<80	00	00 00:	>	
<80	10	00 30	20 03>	// MODUS-Register: Automatic = on
<80	12	00 08	03 20>	// Source Sel. = (St or A) & Ch. Matr. = St
<80	12	00 0E	24 03>	// FM/AM-Prescale = 24 <sub>hex</sub> , FM-Matrix = Sound A Mono
<80	12	00 10	5A 00>	// NICAM-Prescale = 5A <sub>hex</sub>
<80	10	00 20	00 01>	// Standard Select: Automatic Standard Detection
// Wa	ait ti	II STAN	IDARD RE	ESULT contains a value $\leq$ 07FF
// IF	STA	NDAR	D RESUL	T contains 0000
				// do some error handling
// EL	SE			

<80 12 00 00 73 00> // Loudspeaker Volume 0 dB

#### 3.5.6. Software Flow for Interrupt driven STATUS Check

A detailed software flow diagram is shown in Fig. 3–2 on page 39.

If the D\_CTR\_I/O\_1 pin of the MSP 34x5G is connected to an interrupt input pin of the controller, the following interrupt handler can be applied to be automatically called with each status change of the MSP 34x5G. The interrupt handler may adjust the TV display according to the new status information.

Interrupt Handler:

<80 11 02 00 <81 dd dd> // Read STATUS

// adjust TV-display with given status information

// Return from Interrupt



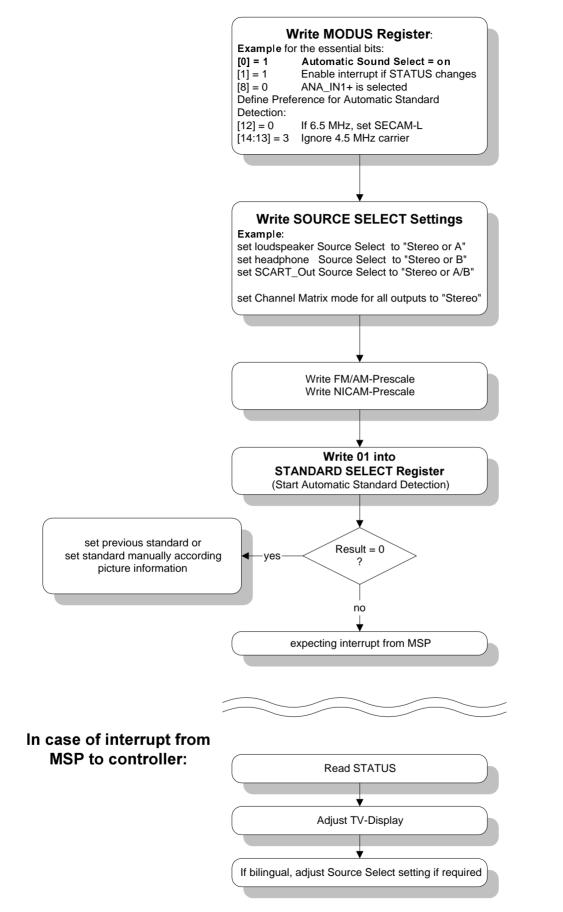



Fig. 3–2: Software flow diagram for a minimum demodulator setup for a European multistandard set applying the Automatic Sound Select feature

#### 4. Specifications

# 4.1. Outline Dimensions

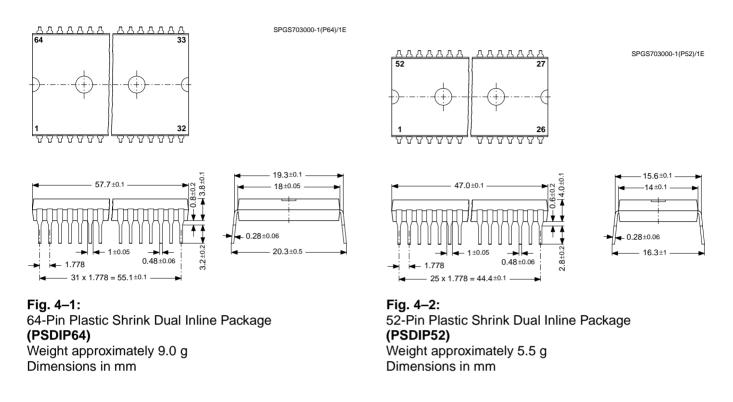


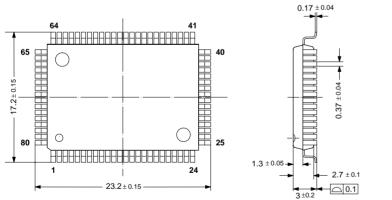

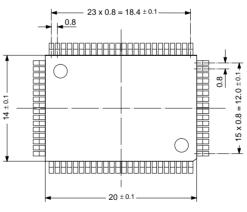


SPGS705000-3(P80)/1E

Fig. 4–3: 80-Pin Plastic Quad Flat Pack Package (PQFP80) Weight approximately 1.6 g Dimensions in mm

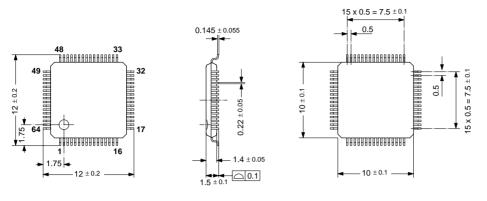

D0025/3E

Fig. 4–4: 64-Pin Plastic Low-Profile Quad Flat Pack (PLQFP64) Weight approximately 0.35 g Dimensions in mm

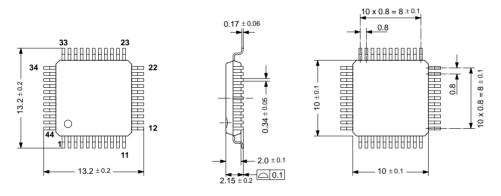

SPGS706000-5(P44)/1E

Fig. 4–5: 44-Pin Plastic Metric Quad Flat Pack (PMQFP44) Weight approximately 0.4 g Dimensions in mm

#### 4.2. Pin Connections and Short Descriptions

NC = not connected; leave vacant LV = if not used, leave vacant DVSS: if not used, connect to DVSS X = obligatory; connect as described in circuit diagram AHVSS: connect to AHVSS

				Pin Name	Туре	Connection	Short Description	
PQFP 80-pin	PLQFP 64-pin	PMQFP 44-pin	PSDIP 64-pin	PSDIP 52-pin			(if not used)	
1	64	- 8 -		NC		LV	Not connected	
2	1	12	9	7	I2C_CL	IN/OUT	Х	l <sup>2</sup> C clock
3	2	12         3         7           13         10         8		I2C_DA	IN/OUT	Х	l <sup>2</sup> C data	
4	3	14	11	9	I2S_CL		LV	l <sup>2</sup> S clock
5	4	15	12	10	I2S_WS		LV	I <sup>2</sup> S word strobe
6	5	16	13	11	I2S_DA_OUT		LV	I <sup>2</sup> S data output
7	6	17	14	12	I2S_DA_IN1		LV	I <sup>2</sup> S1 data input
8	7	_	15	13	ADR_DA		LV	ADR data output
9	8	_	16	14	ADR_WS		LV	ADR word strobe
10	9	18	17	15	ADR_CL		LV	ADR clock
11	_	_	_	_	DVSUP		Х	Digital power supply +5 V
12	_	_	_	_	DVSUP		Х	Digital power supply +5 V
13	10	19	18	16	DVSUP		Х	Digital power supply +5 V
14	_	20	_	_	DVSS		Х	Digital ground
15	_	_	_	_	DVSS		Х	Digital ground
16	11	_	19	17	DVSS		Х	Digital ground
17	12	21	20	18	I2S_DA_IN2		LV	I <sup>2</sup> S2-data input
18	13	_	21	19	NC		LV	Not connected
19	14	_	22	_	NC		LV	Not connected
20	15	_	23	_	NC		LV	Not connected
21	16	22	24	20	RESETQ	IN	Х	Power-on-reset
22	-	_	_	_	NC		LV	Not connected
23	-	_	_	_	NC		LV	Not connected
24	17	23	25	21	NC		LV	Not connected
25	18	24	26	22	NC		LV	Not connected
26	19	25	27	23	VREF2		Х	Reference ground 2 high-voltage part

Pin No. PQFP   PLQFP   PMQFP   PSDIP   PSDIP		Pin Name Type	Туре	Connection	Short Description			
PQFP 80-pin	PLQFP 64-pin	PMQFP 44-pin	PSDIP 64-pin	PSDIP 52-pin			(if not used)	
27	20	26	28	24	DACM_R	OUT	LV	Loudspeaker out, right
28	21	27	29	25	DACM_L	OUT	LV	Loudspeaker out, left
29	22	_	30	-	NC		LV	Not connected
30	23	_	31	26	NC		LV	Not connected
31	24	_	32	-	NC		LV	Not connected
32	_	_	_	_	NC		LV	Not connected
33	25	-	33	27	NC		LV	Not connected
34	26	28	34	28	NC		LV	Not connected
35	27	29	35	29	VREF1		X	Reference ground 1 high-voltage part
36	28	30	36	30	SC1_OUT_R	OUT LV	LV	SCART 1 output, right
37	29	31	37	31	SC1_OUT_L	OUT LV LV		SCART 1 output, left
38	30	32	38	32	NC			Not connected
39	31	33	39	33	AHVSUP		X	Analog power supply 8.0 V
40	32	34	40	34	CAPL_M		Х	Volume capacitor MAIN
41	_	_	_	_	NC		LV	Not connected
42	_	_	_	_	NC		LV	Not connected
43	_	_	_	_	AHVSS		Х	Analog ground
44	33	35	41	35	AHVSS		Х	Analog ground
45	34	36	42	36	AGNDC		X	Analog reference voltage high-voltage part
46	_	_	_	_	NC		LV	Not connected
47	35	_	43	_	NC		LV	Not connected
48	36	-	44	-	NC		LV	Not connected
49	37	_	45	_	NC		LV	Not connected
50	38	-	46	37	NC		LV	Not connected
51	39	-	47	38	NC		LV	Not connected
52	40	-	48	-	NC		AHVSS	Analog Shield Ground
53	41	37	49	39	SC2_IN_L	IN	LV	SCART 2 input, left
54	42	38	50	40	SC2_IN_R	IN	LV	SCART 2 input, right
55	43	39	51	-	ASG		AHVSS	Analog Shield Ground
56	44	40	52	41	SC1_IN_L	IN	LV	SCART 1 input, left

		Pin No.			Pin Name	Туре	Connection	Short Description
PQFP 80-pin	PLQFP 64-pin	PMQFP 44-pin	PSDIP 64-pin	PSDIP 52-pin			(if not used)	
57	45	41	53	42	SC1_IN_R	IN	LV	SCART 1 input, right
58	46	42	54	43	VREFTOP		Х	Reference voltage IF A/D converter
59	-	_	_	-	NC		LV	Not connected
60	47	43	55	44	MONO_IN	IN	LV	Mono input
61	_	_	_	_	AVSS		Х	Analog ground
62	48	44	56	45	AVSS		Х	Analog ground
63	_	_	_	_	NC		LV	Not connected
64	_	_	_	_	NC		LV	Not connected
65	-	_	_	-	AVSUP		х	Analog power supply +5 V
66	49	1	57	46	AVSUP		Х	Analog power supply +5 V
67	50	2	58	47	ANA_IN1+	IN	LV	IF input 1
68	51	3	59	48	ANA_IN-	IN	LV	IF common
69	52	_	60	49	NC		LV	Not connected
70	53	4	61	50	TESTEN	IN	Х	Test pin
71	54	5	62	51	XTAL_IN	IN	Х	Crystal oscillator
72	55	6	63	52	XTAL_OUT	OUT	Х	Crystal oscillator
73	56	7	64	1	ТР		LV	Test pin
74	57	_	1	2	NC		LV	Not connected
75	58	_	2	-	NC		LV	Not connected
76	59	_	3	-	NC		LV	Not connected
77	60	8	4	3	D_CTR_I/O_1	IN/OUT	LV	D_CTR_I/O_1
78	61	9	5	4	D_CTR_I/O_0	IN/OUT	LV	D_CTR_I/O_0
79	62	10	6	5	ADR_SEL	IN	х	I <sup>2</sup> C Bus address select
80	63	11	7	6	STANDBYQ	IN	Х	Standby (low-active)

#### 4.3. Pin Description

Pin numbers refer to the PQFP80 package

Pin 1, **NC** – Pin not connected

Pin 2,  $I2C_CL - I^2C$  Clock Input/Output (Fig. 4–18) Via this pin the  $I^2C$  bus clock signal has to be supplied. The signal can be pulled down by the MSP in case of wait conditions.

Pin 3,  $I2C_DA - I^2C$  Data Input/Output (Fig. 4–18) Via this pin the  $I^2C$  bus data is written to or read from the MSP.

Pin 4, **I2S\_CL** –  $I^2S$  Clock Input/Output (Fig. 4–19) Clock line for the  $I^2S$  bus. In master mode, this line is driven by the MSP; in slave mode, an external  $I^2S$ clock has to be supplied.

Pin 5, **I2S\_WS** – I<sup>2</sup>S Word Strobe Input/Output (Fig. 4–19) Word strobe line for the I<sup>2</sup>S bus. In master mode, this line is driven by the MSP; in slave mode, an external I<sup>2</sup>S word strobe has to be supplied.

Pin 6, I2S\_DA\_OUT – I<sup>2</sup>S Data Output (Fig. 4–23) Output of digital serial sound data of the MSP on the I<sup>2</sup>S bus.

Pin 7, **I2S\_DA\_IN1** –  $I^2S$  Data Input 1 (Fig. 4–17) First input of digital serial sound data to the MSP via the  $I^2S$  bus.

Pin 8, **ADR\_DA** – ADR Bus Data Output (Fig. 4–23) Output of digital serial data to the DRP 3510A via the ADR bus.

Pin 9, **ADR\_WS** – ADR Bus Word Strobe Output (Fig. 4–23) Word strobe output for the ADR bus.

Pin 10, **ADR\_CL** – ADR Bus Clock Output (Fig. 4–23) Clock line for the ADR bus.

Pins 11, 12, 13, **DVSUP**\* – Digital Supply Voltage Power supply for the digital circuitry of the MSP. Must be connected to a +5-V power supply.

Pins 14, 15, 16, **DVSS\*** – Digital Ground Ground connection for the digital circuitry of the MSP

Pin 17,  $I2S_DA_IN2 - I^2S$  Data Input 2 (Fig. 4–17) Second input of digital serial sound data to the MSP via the  $I^2S$  bus.

Pins 18, 19, 20, **NC** – Pins not connected

Pin 21, **RESETQ** – Reset Input (Fig. 4–11) In the steady state, high level is required. A low level resets the MSP 34x0G. Pins 22, 23, 24, 25, NC – Pins not connected

#### Pin 26, VREF2 – Reference Ground 2

Reference analog ground. This pin must be connected separately to ground (AHVSS). VREF2 serves as a clean ground and should be used as the reference for analog connections to the loudspeaker and headphone outputs.

Pins 27, 28, **DACM\_R/L** – Loudspeaker Outputs (Fig. 4–21)

Output of the loudspeaker signal. A 1nF capacitor to AHVSS must be connected to these pins. The DC offset on these pins depends on the selected loudspeaker volume.

Pins 29, 30, 31, 32, 33, 34, NC - Pins not connected

Pin 35, **VREF1** – Reference Ground 1

Reference analog ground. This pin must be connected separately to ground (AHVSS). VREF1 serves as a clean ground and should be used as the reference for analog connections to the SCART outputs.

# Pins 36, 37, **SC1\_OUT\_R/L** – SCART1 Outputs (Fig. 4–22)

Output of the SCART1 signal. Connections to these pins must use a 100 ohm series resistor and are intended to be AC coupled.

Pin 38, NC – Pin not connected

Pin 39, **AHVSUP\*** – Analog Power Supply High Voltage Power is supplied via this pin for the analog circuitry of the MSP (except IF input). This pin must be connected to the +8V supply.

Pin 40, **CAPLM** – Volume Capacitor Loudspeakers (Fig. 4–24)

A 10 $\mu$ F capacitor to AHVSUP must be connected to this pin. It serves as smoothing filter for loudspeaker volume changes in order to suppress audible plops. The value of the capacitor can be lowered to 1 $\mu$ F if faster response is required. The area encircled by the trace lines should be minimized, keep traces as short as possible. This input is sensitive for magnetic induction.

Pins 41, 42, **NC** – Pins not connected.

Pins 43, 44, **AHVSS**\* – Ground for Analog Power Supply High Voltage

Ground connection for the analog circuitry of the MSP (except IF input).

Pins 45, **AGNDC** – Internal Analog Reference Voltage This pin serves as the internal ground connection for the analog circuitry (except IF input). It must be connected to the VREF pins with a 3.3  $\mu$ F and a 100 nF capacitor in parallel. This pins shows a DC level of typically 3.73 V.

Pin 46, 47, 48, 49, 50, 51 **NC** – Pins not connected.

Pin 52, ASG - Analog Shield Ground

Analog ground (AHVSS) should be connected to this pin to reduce cross coupling between SCART inputs.

Pins 53, 54, **SC2\_IN\_L/R** – SCART2 Inputs (Fig. 4–14) The analog input signal for SCART2 is fed to this pin. Analog input connection must be AC coupled.

Pin 55, **ASG** – Analog Shield Ground Analog ground (AHVSS) should be connected to this pin to reduce cross coupling between SCART inputs.

Pins 56, 57, **SC1\_IN\_L/R** – SCART1 Inputs (Fig. 4–14) The analog input signal for SCART1 is fed to this pin. Analog input connection must be AC coupled.

Pin 58, **VREFTOP** – Reference Voltage IF AD Converter (Fig. 4–15)

Via this pin, the reference voltage for the IF AD converter is decoupled. It must be connected to AVSS pins with a  $10\mu$ F and a 100nF capacitor in parallel. Traces must be kept short.

Pin 59, NC - Pin not connected

Pin 60, **MONO\_IN** – Mono Input (Fig. 4–14) The analog mono input signal is fed to this pin. Analog input connection must be AC coupled.

Pins 61, 62, **AVSS**\* – Ground for Analog Power Supply Voltage

Ground connection for the analog IF input circuitry of the MSP.

Pins 63, 64, **NC** – Pins not connected

Pins 65, 66, **AVSUP**\* – Analog Power Supply Voltage Power is supplied via this pin for the analog IF input circuitry of the MSP. This pin must be connected to the +5 V supply.

Pin 67, **ANA\_IN1+** – IF Input 1 (Fig. 4–15) The analog sound if signal is supplied to this pin. Inputs must be AC coupled. This pin is designed as symmetrical input: ANA\_IN1+ is internally connected to one input of a symmetrical op amp, ANA\_IN– to the other.

Pin 68, **ANA\_IN**- – IF Common (Fig. 4–15) This pin serves as a common reference for ANA\_IN1/ 2+ inputs.

Pin 69, NC - Pin not connected

Pin 70, **TESTEN** – Test Enable Pin (Fig. 4–12) This pin enables factory test modes. For normal operation it must be connected to ground. Pins71, 72, **XTAL\_IN, XTAL\_OUT** – Crystal Input and Output Pins (Fig. 4–20)

These pins are connected to an 18.432 MHz crystal oscillator which is digitally tuned by integrated shunt capacitances. An external clock can be fed into XTAL\_IN. The audio clock output signal AUD\_CL\_OUT is derived form the oscillator. External capacitors at each crystal pin to ground (AVSS) are required. It should be verified by layout, that no supply current for the digital circuitry is flowing through the ground connection point.

Pin 73, **TP** – Test pin

Pins 74, 75, 76, NC - Pins not connected

Pins 77, 78, **D\_CTR\_I/O\_1/0** – Digital Control Input/ Output Pins (Fig. 4–19)

General purpose input/output pins. Pin D\_CTR\_I/O\_1 can be used as an interrupt request pin to the controller.

# Pin 79, **ADR\_SEL** – I<sup>2</sup>C Bus Address Select

(Fig. 4–16)

By means of this pin, one of 3 device addresses for the MSP can be selected. The pin can be connected to ground ( $I^{2}C$  device addresses  $80/81_{hex}$ ), to +5V supply ( $84/85_{hex}$ ) or left open ( $88/89_{hex}$ ).

#### Pin 80, STANDBYQ - Standby

In normal operation, this pin must be high. If the MSP 34x5G is switched off by first pulling STANDBYQ low and then (after >1 $\mu$ s delay) switching off DVSUP and AVSUP, but keeping AHVSUP (**'Standby'-mode**), the SCART switches maintain their position and function.

#### \* Application Note:

All ground pins should be connected to one low-resistive ground plane. All supply pins should be connected separately with short and low-resistive lines to the power supply. Decoupling capacitors from DVSUP to DVSS, AVSUP to AVSS, and AHVSUP to AHVSS are recommended as closely as possible to these pins. Decoupling of DVSUP and DVSS is most important. We recommend using more than one capacitor. By choosing different values, the frequency range of active decoupling can be extended. In our application boards we use: 220 pF, 470 pF, 1.5 nF, and 10  $\mu$ F. The capacitor with the lowest value should be placed nearest to the DVSUP and DVSS pins.

The ASG pins should be connected as closely as possible to the MSP ground. If they are lead with the SCART-inputs as shielding lines, they should not be connected to ground at the SCART connector.

# 4.4. Pin Configurations

		<u> </u>	
NC	1	64 ] TP	
NC	2	63 XTAL_OUT	
NC	3	62 XTAL_IN	D_C
D_CTR_I/O_1	4	61 ] TESTEN	D_C
D_CTR_I/O_0	5	60 🛛 NC	ļ
ADR_SEL	6	59 🛛 ANA_IN-	ST
STANDBYQ	7	58 🛛 ANA_IN1+	
NC	8	57 AVSUP	
I2C_CL	9	56 🛛 AVSS	
I2C_DA	10		
I2S_CL	11	54 VREFTOP	12S_
I2S_WS	12	53 SC1_IN_R	125
I2S_DA_OUT	13	52 SC1_IN_L	
I2S_DA_IN1	14 <b>(</b>	51 🛛 ASG	
ADR_DA	<sup>15</sup> <b>X</b>	50 SC2_IN_R	
ADR_WS	<sup>16</sup> <b>7</b>	49 SC2_IN_L	
ADR_CL	14 15 16 17 18	48 ] NC	
DVSUP	<sup>18</sup> S	47 ] NC	125
DVSS	19 <b>Σ</b>	46 🛛 NC	
I2S_DA_IN2	20	45 ] NC	
NC	21	44 ] NC	
NC	22	43 ] NC	
NC	23	42 AGNDC	
RESETQ	24	41 AHVSS	
NC	25	40 CAPL_M	
NC		39 AHVSUP	
VREF2	27	38 ] NC	
DACM_R	28	37 SC1_OUT_L	Fig
DACM_L	29	36 SC1_OUT_R	
NC		35 VREF1	
NC [		34 ] NC	
NC E	32	33 ] NC	

				_
TP 🛛	1	$\bigcirc$	52	XTAL_OUT
NC	2		51	XTAL_IN
D_CTR_I/O_1	3		50	TESTEN
D_CTR_I/O_0	4		49	NC
ADR_SEL	5		48	ANA_IN-
STANDBYQ	6		47	ANA_IN1+
I2C_CL	7		46	AVSUP
I2C_DA	8		45	AVSS
I2S_CL	9		44	MONO_IN
I2S_WS	10		43	VREFTOP
I2S_DA_OUT	11	G	42	SC1_IN_R
I2S_DA_IN1	12	Χ5	41	SC1_IN_L
ADR_DA	13	2	40	SC2_IN_R
ADR_WS	14	۵.	39	SC2_IN_L
ADR_CL	15	ิ	38	NC
DVSUP	16	Σ	37	NC
DVSS	17		36	AGNDC
I2S_DA_IN2	18		35	AHVSS
NC	19		34	
RESETQ	20		33	AHVSUP
NC	21		32	NC
NC	22		31	SC1_OUT_L
VERF2			30	SC1_OUT_R
DACM_R			29	VREF1
DACM_L	25		28	NC
NC	26		27	NC

Fig. 4-7: PSDIP52 package

Fig. 4-6: PSDIP64 package

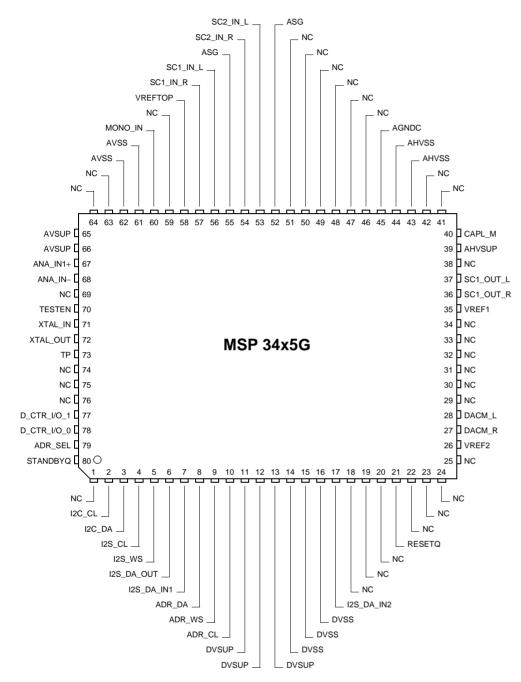


Fig. 4-8: PQFP80 package

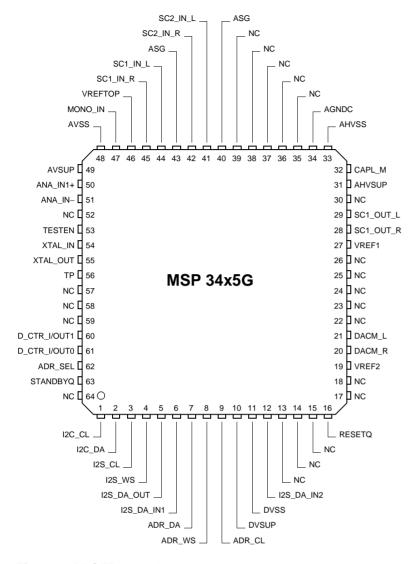


Fig. 4–9: PLQFP64 package

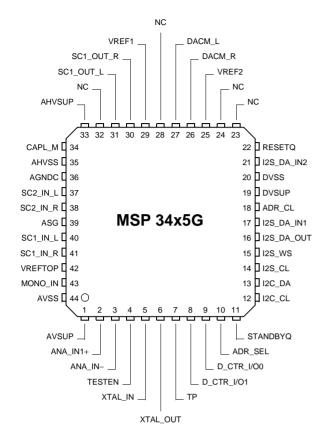
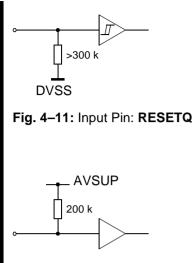


Fig. 4–10: PMQFP44 package

#### 4.5. Pin Circuits



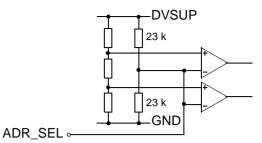


Fig. 4–16: Input Pin: ADR\_SEL

 


Fig. 4–17: Input Pins: I2S\_DA\_IN1/2, STANDBYQ

 


Fig. 4–12: Input Pin TESTEN

Fig. 4–13: Input Pin MONO\_IN

Fig. 4–14: Input Pins: SC2-1\_IN\_L/R

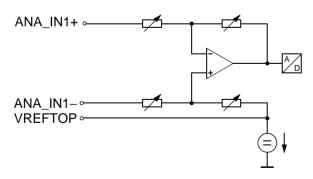


Fig. 4–15: Input Pins: VREFTOP, ANA\_IN1+, ANA\_IN-



 


Fig. 4-18: Input/Output Pins: I2C\_CL, I2C\_DA

 

 

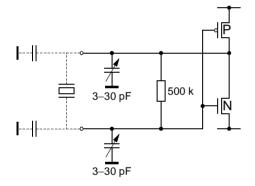


Fig. 4–20: Input/Output Pins XTAL\_IN, XTAL\_OUT

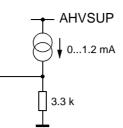


Fig. 4-21: Output Pins: DACM\_R/L

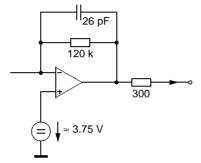


Fig. 4-22: Output Pins: SC\_1\_OUT\_R/L

 


Fig. 4–23: Output Pins: I2S\_DA\_OUT, ADR\_DA, ADR\_WS, ADR\_CL



Fig. 4-24: Capacitor Pin: CAPL\_M

 


Fig. 4–25: Pin: AGNDC

#### 4.6. Electrical Characteristics

#### 4.6.1. Absolute Maximum Ratings

Symbol	Parameter	Pin Name	Min.	Max.	Unit
T <sub>A</sub>	Ambient Operating Temperature	_	0	70	°C
Τ <sub>S</sub>	Storage Temperature	_	-40	125	°C
V <sub>SUP1</sub>	First Supply Voltage	AHVSUP	-0.3	9.0	V
V <sub>SUP2</sub>	Second Supply Voltage	DVSUP	-0.3	6.0	V
V <sub>SUP3</sub>	Third Supply Voltage	AVSUP	-0.3	6.0	V
dV <sub>SUP23</sub>	Voltage between AVSUP and DVSUP	AVSUP, DVSUP	-0.5	0.5	V
P <sub>TOT</sub>	Package Power Dissipation PSDIP64 PSDIP52 PQFP80 PLQFP64 PMQFP44	AHVSUP, DVSUP, AVSUP		1300 1200 1000 960 960	mW mW mW mW
V <sub>Idig</sub>	Input Voltage, all Digital Inputs		-0.3	V <sub>SUP2</sub> +0.3	V
I <sub>ldig</sub>	Input Current, all Digital Pins	_	-20	+20	mA <sup>1)</sup>
V <sub>lana</sub>	Input Voltage, all Analog Inputs	SCn_IN_s, <sup>2)</sup> MONO_IN	-0.3	V <sub>SUP1</sub> +0.3	V
I <sub>lana</sub>	Input Current, all Analog Inputs	SCn_IN_s, <sup>2)</sup> MONO_IN	-5	+5	mA <sup>1)</sup>
I <sub>Oana</sub>	Output Current, all SCART Outputs	SC1_OUT_s <sup>2)</sup>	3), 4)	3), 4)	
I <sub>Oana</sub>	Output Current, all Analog Outputs except SCART Outputs	DACM_s <sup>2)</sup>	3)	3)	
I <sub>Cana</sub>	Output Current, other pins connected to capacitors	CAPL_M, AGNDC	3)	3)	

positive value means current flowing into the circuit
 "n" means "1" or "2", "s" means "L" or "R"
 The definition of "R"

<sup>3)</sup> The Analog Outputs are short-circuit proof with respect to First Supply Voltage and Ground.

<sup>4)</sup> Total chip power dissipation must not exceed absolute maximum rating.

Stresses beyond those listed in the "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only. Functional operation of the device at these or any other conditions beyond those indicated in the "Recommended Operating Conditions/Characteristics" of this specification is not implied. Exposure to absolute maximum ratings conditions for extended periods may affect device reliability.

# 4.6.2. Recommended Operating Conditions

at  $T_A = 0$  to 70 °C

# 4.6.2.1. General Recommended Operating Conditions

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
V <sub>SUP1</sub>	First Supply Voltage (AHVSUP = 8 V)	AHVSUP	7.6	8.0	8.7	V
	First Supply Voltage (AHVSUP = 5V)		4.75	5.0	5.25	V
V <sub>SUP2</sub>	Second Supply Voltage	DVSUP	4.75	5.0	5.25	V
V <sub>SUP3</sub>	Third Supply Voltage	AVSUP	4.75	5.0	5.25	V
t <sub>STBYQ1</sub>	STANDBYQ Setup Time before Turn-off of Second Supply Voltage	STANDBYQ, DVSUP	1			μs

### 4.6.2.2. Analog Input and Output Recommendations

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
C <sub>AGNDC</sub>	AGNDC-Filter-Capacitor	AGNDC	-20%	3.3		μF
	Ceramic Capacitor in Parallel		-20%	100		nF
C <sub>inSC</sub>	DC-Decoupling Capacitor in front of SCART Inputs	SCn_IN_s <sup>1)</sup>	-20%	330		nF
V <sub>inSC</sub>	SCART Input Level				2.0	V <sub>RMS</sub>
V <sub>inMONO</sub>	Input Level, Mono Input	MONO_IN			2.0	V <sub>RMS</sub>
R <sub>LSC</sub>	SCART Load Resistance	SC1_OUT_s <sup>1)</sup>	10			kΩ
C <sub>LSC</sub>	SCART Load Capacitance				6.0	nF
C <sub>VMA</sub>	Main Volume Capacitor	CAPL_M		10		μF
C <sub>FMA</sub>	Main Filter Capacitor	DACM_s <sup>1)</sup>	-10%	1	+10%	nF
<sup>1)</sup> "n" means	"1" or "2", "s" means "L" or "R"					

# 4.6.2.3. Recommendations for Analog Sound IF Input Signal

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
C <sub>VREFTOP</sub>	VREFTOP-Filter-Capacitor	VREFTOP	-20%	10		μF
	Ceramic Capacitor in Parallel		-20%	100		nF
F <sub>IF_FMTV</sub>	Analog Input Frequency Range for TV applications	ANA_IN1+, ANA_IN–	0		9	MHz
F <sub>IF_FMRADIO</sub>	Analog Input Frequency for FM-Radio Applications			10.7		MHz
V <sub>IF_FM</sub>	Analog Input Range FM/NICAM		0.1	0.8	3	V <sub>pp</sub>
V <sub>IF_AM</sub>	Analog Input Range AM/NICAM		0.1	0.45	0.8	V <sub>pp</sub>
R <sub>FMNI</sub>	Ratio: NICAM Carrier/FM Carrier (unmodulated carriers) BG: I:		-20 -23	-7 -10	0 0	dB dB
R <sub>AMNI</sub>	Ratio: NICAM Carrier/AM Carrier (unmodulated carriers)		-25	-11	0	dB
R <sub>FM</sub>	Ratio: FM-Main/FM-Sub Satellite			7		dB
R <sub>FM1/FM2</sub>	Ratio: FM1/FM2 German FM-System			7		dB
R <sub>FC</sub>	Ratio: Main FM Carrier/ Color Carrier		15	-	-	dB
R <sub>FV</sub>	Ratio: Main FM Carrier/ Luma Components		15	-	-	dB
PR <sub>IF</sub>	Passband Ripple		-	_	±2	dB
SUP <sub>HF</sub>	Suppression of Spectrum above 9.0 MHz (not for FM Radio)		15		-	dB
FM <sub>MAX</sub>	Maximum FM-Deviation (approx.) normal mode HDEV2: high deviation mode HDEV3: very high deviation mode				±180 ±360 ±540	kHz kHz kHz

#### 4.6.2.4. Crystal Recommendations

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
General Crys	tal Recommendations					
f <sub>P</sub>	Crystal Parallel Resonance Fre- quency at 12 pF Load Capacitance			18.432		MHz
R <sub>R</sub>	Crystal Series Resistance			8	25	Ω
C <sub>0</sub>	Crystal Shunt (Parallel) Capacitance			6.2	7.0	pF
CL	External Load Capacitance <sup>1)</sup>	XTAL_IN, XTAL_OUT	PSDIP approx. 1.5 P(L,M)QFPapprox. 3.3			pF pF
Crystal Reco	mmendations for Master-Slave Appl	ications (MSP-clock	must perfo	rm synchror	nization to I <sup>2</sup>	S clock)
f <sub>TOL</sub>	Accuracy of Adjustment		-20		+20	ppm
D <sub>TEM</sub>	Frequency Variation versus Temperature		-20		+20	ppm
C <sub>1</sub>	Motional (Dynamic) Capacitance		19	24		fF
f <sub>CL</sub>	Required Open Loop Clock Frequency (T <sub>amb</sub> = 25 °C)		18.431		18.433	MHz

<sup>1)</sup> External capacitors at each crystal pin to ground are required. They are necessary to tune the open-loop frequency of the internal PLL and to stabilize the frequency in closed-loop operation. Due to different layouts, <u>the accurate capacitor value should be determined with the customer PCB</u>. The suggested values (1.5...3.3 pF) are figures based on experience and should serve as "start value".

To adjust the capacitor value, reset the MSP and transfer only the following  $I^2C$ -protocol: <80 10 00 20 00 60>.

Measure the frequency at pin ADR\_CL. Measurement at XTAL\_IN/OUT pins is not possible. Change the capacitor value until the frequency matches 18.432/3 = 6.144 MHz as closely as possible. The higher the capacity, the lower the resulting clock frequency.

**Note:** To minimize adjustment tolerances for all MSP-generations, it is strongly recommended to use the socalled MSP-XTAL-REF ICs (available in all packages) for the capacitor adjustment. Since all MSP-XTAL-REF ICs do have an AUD\_CL\_OUT-pin with the 18.432 MHz signal, this pin should be used for the capacitor adjustment instead of the ADR\_CL-pin. After the reset, no I<sup>2</sup>C-protocol should be transmitted. The AUD\_CL\_OUT-signal is available at the following pins:

PLCC68	PSDIP64	PSDIP52	PQFP80	PLQFP64	PMQFP44 <sup>2)</sup>
pin 18	pin 1	pin 2	pin 74	pin 57	pin 8

<sup>2)</sup> For the MSP-XTAL-REF IC, the PMQFP44 pin functionality of the D\_CTR\_I/O1-pin has been changed to the Audio\_Clock\_Out signal. If D\_CTR\_I/O1 is used in the customer application, this pin must be left open for the adjustment procedure.

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit					
Crystal Re	Crystal Recommendations for FM / NICAM Applications (No MSP-clock synchronization to I <sup>2</sup> S clock possible)										
f <sub>TOL</sub>	Accuracy of Adjustment		-30		+30	ppm					
D <sub>TEM</sub>	Frequency Variation versus Temperature		-30		+30	ppm					
C <sub>1</sub>	Motional (Dynamic) Capacitance		15			fF					
f <sub>CL</sub>	Required Open Loop Clock Frequency (T <sub>amb</sub> = 25 °C)		18.4305		18.4335	MHz					
Crystal Re	commendations for all analog FM/AM	Applications (No	MSP-clock synd	chronizatior	n to I <sup>2</sup> S clock	possible)					
f <sub>TOL</sub>	Accuracy of Adjustment		-100		+100	ppm					
D <sub>TEM</sub>	Frequency Variation versus Temperature		-50		+50	ppm					
f <sub>CL</sub>	Required Open Loop Clock Frequency (T <sub>amb</sub> = 25 °C)		18.429		18.435	MHz					
Amplitude	Recommendation for Operation with	External Clock I	nput (C <sub>load</sub> af	ter reset t	yp. 22 pF)						
V <sub>XCA</sub>	External Clock Amplitude	XTAL_IN	0.7			V <sub>pp</sub>					

#### 4.6.3. Characteristics

at T<sub>A</sub> = 0 to 70 °C, f<sub>CLOCK</sub> = 18.432 MHz, V<sub>SUP1</sub> = 7.6 to 8.7 V, V<sub>SUP2</sub> = 4.75 to 5.25 V for min./max. values at T<sub>A</sub> = 60 °C, f<sub>CLOCK</sub> = 18.432 MHz, V<sub>SUP1</sub> = 8 V, V<sub>SUP2</sub> = 5 V for typical values, T<sub>J</sub> = Junction Temperature MAIN (M) = Loudspeaker Channel

#### 4.6.3.1. General Characteristics

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
Supply							
I <sub>SUP1A</sub>	First Supply Current (active) (AHVSUP = 8 V)	AHVSUP		17 11	25 16	mA mA	Vol. Main and Aux = 0 dB Vol. Main and Aux = -30dB
	First Supply Current (active) (AHVSUP = 5 V)			11 8	17 11	mA mA	Vol. Main and Aux = 0 dB Vol. Main and Aux = -30 dB
I <sub>SUP2A</sub>	Second Supply Current (active)	DVSUP		55	70	mA	
I <sub>SUP3A</sub>	Third Supply Current (active)	AVSUP		30	38	mA	
I <sub>SUP1S</sub>	First Supply Current (AHVSUP = 8 V)	AHVSUP		5.6	7.7	mA	STANDBYQ = low
	First Supply Current (AHVSUP = 5 V)			3.7	5.1	mA	
Clock							
f <sub>CLOCK</sub>	Clock Input Frequency	XTAL_IN		18.432		MHz	
D <sub>CLOCK</sub>	Clock High to Low Ratio		45		55	%	
t <sub>JITTER</sub>	Clock Jitter (verification not provided in production test)				50	ps	
V <sub>xtalDC</sub>	DC-Voltage Oscillator	1		2.5		V	
t <sub>Startup</sub>	Oscillator Startup Time at VDD Slew-rate of 1 V/1 µs	XTAL_IN, XTAL_OUT		0.4	2	ms	

# 4.6.3.2. Digital Inputs, Digital Outputs

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
Digital Input	Levels						
V <sub>DIGIL</sub>	Digital Input Low Voltage	STANDBYQ D_CTR_I/O_0/1			0.2	V <sub>SUP2</sub>	
V <sub>DIGIH</sub>	Digital Input High Voltage		0.5			V <sub>SUP2</sub>	
Z <sub>DIGI</sub>	Input Impedance	-			5	pF	
I <sub>DLEAK</sub>	Digital Input Leakage Current		-1		1	μΑ	0 V < U <sub>INPUT</sub> < DVSUP D_CTR_I/O_0/1: tri-state
V <sub>DIGIL</sub>	Digital Input Low Voltage	ADR_SEL			0.2	V <sub>SUP2</sub>	
V <sub>DIGIH</sub>	Digital Input High Voltage	-	0.8			V <sub>SUP2</sub>	
I <sub>ADRSEL</sub>	Input Current Address Select Pin		-500	-220		μΑ	U <sub>ADR_SEL</sub> = DVSS
				220	500	μΑ	U <sub>ADR_SEL</sub> = DVSUP
Z <sub>TESTEN</sub>	Input Capacitance	TESTEN			5	pF	
I <sub>TESTEN</sub>	Input Low Current	-	-60			μΑ	U <sub>TESTEN</sub> = AVSS
Digital Outpu	ut Levels						
V <sub>DCTROL</sub>	Digital Output Low Voltage	D_CTR_I/O_0			0.4	V	IDDCTR = 1 mA
V <sub>DCTROH</sub>	Digital Output High Voltage	D_CTR_I/O_1	V <sub>SUP2</sub> -0.3			V	IDDCTR = -1 mA

#### 4.6.3.3. Reset Input and Power-Up

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions		
RESETQ Inpu	RESETQ Input Levels								
V <sub>RHL</sub>	Reset High-Low Transition Voltage	RESETQ	0.3		0.4	V <sub>SUP2</sub>			
V <sub>RLH</sub>	Reset Low-High Transition Voltage		0.45		0.55	V <sub>SUP2</sub>			
Z <sub>RES</sub>	Input Capacitance				5	pF			
I <sub>RES</sub>	Input High Current				20	μΑ	U <sub>RESETQ</sub> = DVSUP		

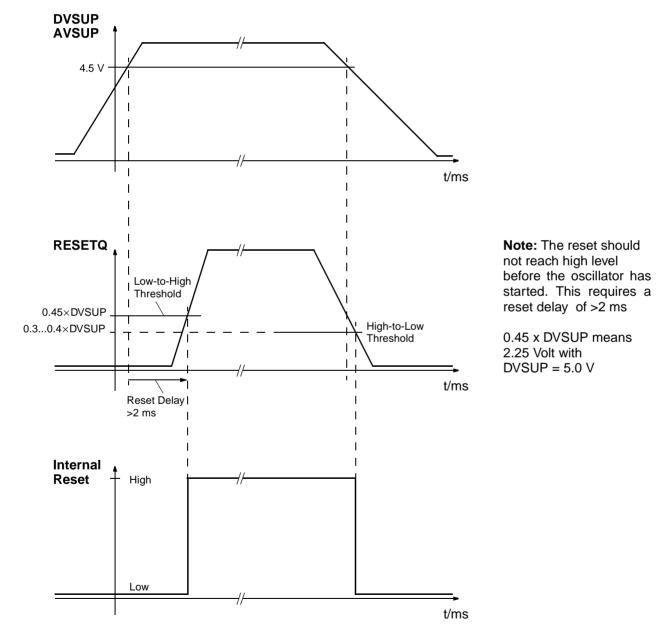


Fig. 4–26: Power-up sequence

# 4.6.3.4. I<sup>2</sup>C Bus Characteristics

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
V <sub>I2CIL</sub>	I <sup>2</sup> C-Bus Input Low Voltage	I2C_CL, I2C_DA			0.3	V <sub>SUP2</sub>	
V <sub>I2CIH</sub>	I <sup>2</sup> C-Bus Input High Voltage	IZC_DA	0.6			V <sub>SUP2</sub>	
t <sub>I2C1</sub>	I <sup>2</sup> C Start Condition Setup Time		120			ns	
t <sub>I2C2</sub>	I <sup>2</sup> C Stop Condition Setup Time		120			ns	
t <sub>I2C5</sub>	I <sup>2</sup> C-Data Setup Time before Rising Edge of Clock		55			ns	
t <sub>I2C6</sub>	l <sup>2</sup> C-Data Hold Time after Falling Edge of Clock	-	55			ns	
t <sub>I2C3</sub>	I <sup>2</sup> C-Clock Low Pulse Time	I2C_CL	500			ns	
t <sub>I2C4</sub>	I <sup>2</sup> C-Clock High Pulse Time		500			ns	
f <sub>I2C</sub>	I <sup>2</sup> C-BUS Frequency				1.0	MHz	
V <sub>I2COL</sub>	I <sup>2</sup> C-Data Output Low Voltage	I2C_CL,			0.4	V	I <sub>I2COL</sub> = 3 mA
I <sub>I2COH</sub>	l <sup>2</sup> C-Data Output High Leakage Current	I2C_DA			1.0	μΑ	V <sub>I2COH</sub> = 5 V
t <sub>I2COL1</sub>	l <sup>2</sup> C-Data Output Hold Time after Falling Edge of Clock		15			ns	
t <sub>I2COL2</sub>	I <sup>2</sup> C-Data Output Setup Time before Rising Edge of Clock		100			ns	f <sub>I2C</sub> = 1 MHz


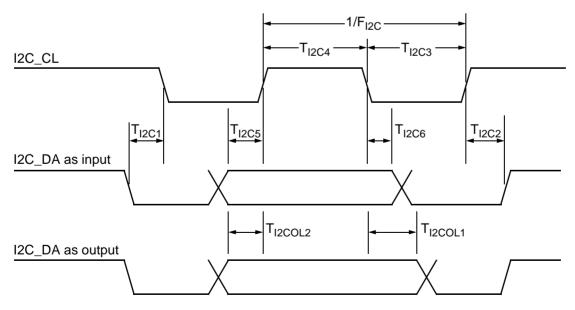



Fig. 4–27: I<sup>2</sup>C bus timing diagram

# 4.6.3.5. I<sup>2</sup>S-Bus Characteristics

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
V <sub>I2SIL</sub>	Input Low Voltage	I2S_CL			0.2	V <sub>SUP2</sub>	
V <sub>I2SIH</sub>	Input High Voltage	I2S_WS I2S_DA_IN1/2	0.5			V <sub>SUP2</sub>	
Z <sub>I2SI</sub>	Input Impedance				5	pF	
I <sub>LEAKI2S</sub>	Input Leakage Current		-1		1	μA	0 V < U <sub>INPUT</sub> < DVSUP
V <sub>I2SOL</sub>	I <sup>2</sup> S Output Low Voltage	I2S_CL			0.4	V	I <sub>I2SOL</sub> = 1 mA
V <sub>I2SOH</sub>	I <sup>2</sup> S Output High Voltage	I2S_WS I2S_DA_OUT	V <sub>SUP2</sub> - 0.3			V	$I_{12SOH} = -1 \text{ mA}$
f <sub>I2SOWS</sub>	I <sup>2</sup> S-Word Strobe Output Frequency	I2S_WS		32.0		kHz	
f <sub>I2SOCL</sub>	I <sup>2</sup> S-Clock Output Frequency	I2S_CL		1.024 2.048		MHz MHz	I2S_CONFIG[0] = 0 I2S_CONFIG[0] = 1
R <sub>I2S10/I2S20</sub>	I <sup>2</sup> S-Clock Output High/Low-Ratio		0.9	1.0	1.1		
t <sub>s_I2S</sub>	I <sup>2</sup> S Input Setup Time before Rising Edge of Clock	I2S_CL I2S_DA_IN1/2	12			ns	for details see Fig. 4–28 "I <sup>2</sup> S timing diagram"
t <sub>h_I2S</sub>	I <sup>2</sup> S Input Hold Time after Rising Edge of Clock		40			ns	
t <sub>d_I2S</sub>	I <sup>2</sup> S Output Delay Time after Falling Edge of Clock	I2S_CL I2S_WS I2S_DA_OUT			28	ns	C <sub>L</sub> = 30 pF
f <sub>I2SWS</sub>	I <sup>2</sup> S-Word Strobe Input Frequency	I2S_WS		32.0		kHz	
f <sub>I2SCL</sub>	I <sup>2</sup> S-Clock Input Frequency	I2S_CL		1.024		MHz	
R <sub>I2SCL</sub>	I <sup>2</sup> S-Clock Input High/Low Ratio		0.9		1.1		



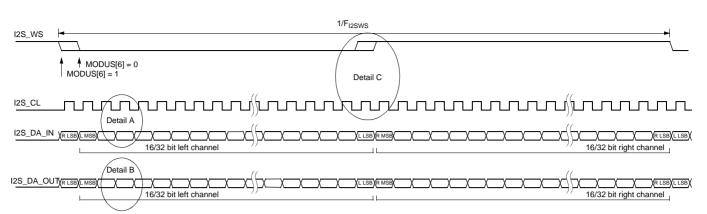

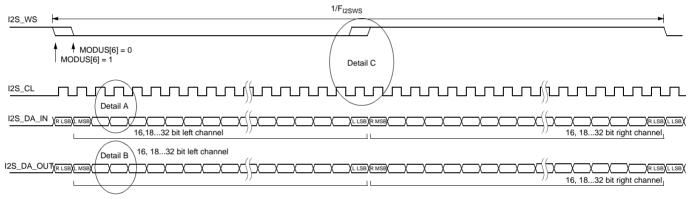

Data: MSB first, I<sup>2</sup>S slave


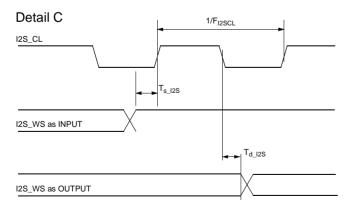


Fig. 4–28: I<sup>2</sup>S timing diagram

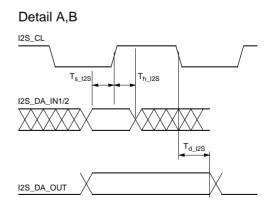

# 4.6.3.6. Analog Baseband Inputs and Outputs, AGNDC

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
Analog Gro	und						
V <sub>AGNDC0</sub>	AGNDC Open Circuit Voltage (AHVSUP = 8 V)	AGNDC		3.77		V	$R_{load} \ge 10 M\Omega$
	AGNDC Open Circuit Voltage (AHVSUP = 5 V)			2.51		V	
R <sub>outAGN</sub>	AGNDC Output Resistance (AHVSUP = 8 V)		70	125	180	kΩ	$3 \text{ V} \leq \text{V}_{\text{AGNDC}} \leq 4 \text{ V}$
	AGNDC Output Resistance (AHVSUP = 5 V)		47	83	120	kΩ	
Analog Inpu	ut Resistance						
R <sub>inSC</sub>	SCART Input Resistance from $T_A = 0$ to 70 °C	SCn_IN_s <sup>1)</sup>	25	40	58	kΩ	f <sub>signal</sub> = 1 kHz, I = 0.05 mA
R <sub>inMONO</sub>	MONO Input Resistance from $T_A = 0$ to 70 °C	MONO_IN	15	24	35	kΩ	f <sub>signal</sub> = 1 kHz, I = 0.1 mA
Audio Anal	og-to-Digital-Converter						
V <sub>AICL</sub>	Analog Input Clipping Level for Analog-to-Digital- Conversion (AHVSUP = 8 V)	SCn_IN_s, <sup>1)</sup> MONO_IN	2.00		2.25	V <sub>RMS</sub>	f <sub>signal</sub> = 1 kHz
	Analog Input Clipping Level for Analog-to-Digital- Conversion (AHVSUP = 5 V)		1.13		1.51	V <sub>RMS</sub>	
SCART Out	put				•	•	<u>.</u>
R <sub>outSC</sub>	SCART Output Resistance	SCn_OUT_s <sup>1)</sup>	200 200	330	460 500	Ω Ω	$f_{signal} = 1 \text{ kHz}, I = 0.1 \text{ mA}$ $T_j = 27 \text{ °C}$ $T_A = 0 \text{ to } 70 \text{ °C}$
dV <sub>OUTSC</sub>	Deviation of DC-Level at SCART Output from AGNDC Voltage		-70		+70	mV	
A <sub>SCtoSC</sub>	Gain from Analog Input to SCART Output	SCn_IN_s, <sup>1)</sup> MONO_IN	-1.0		+0.5	dB	f <sub>signal</sub> = 1 kHz
f <sub>rSCtoSC</sub>	Frequency Response from Analog Input to SCART Output	$\stackrel{\rightarrow}{\text{SCn}_OUT_s^{1)}}$	-0.5		+0.5	dB	with resp. to 1 kHz Bandwidth: 0 to 20000 Hz
V <sub>outSC</sub>	Signal Level at SCART Output (AHVSUP = 8 V)	SCn_OUT_s <sup>1)</sup>	1.8	1.9	2.0	V <sub>RMS</sub>	f <sub>signal</sub> = 1 kHz Volume 0 dB Full Scale input from I <sup>2</sup> S
	Signal Level at SCART Output (AHVSUP = 5V)		1.17	1.27	1.37	V <sub>RMS</sub>	
<sup>1)</sup> "n" mean	s "1"or "2"; "s" means "L" or "R"						

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
Main Outpu	ıt						
R <sub>outMA</sub>	Main Output Resistance	DACM_s <sup>1)</sup>	2.1 2.1	3.3	4.6 5.0	kΩ kΩ	$ \begin{array}{l} f_{signal} = 1 \text{ kHz}, \text{ I} = 0.1 \text{ mA} \\ T_{j} = 27 \ ^{\circ}\text{C} \\ T_{A} = 0 \text{ to } 70 \ ^{\circ}\text{C} \end{array} $
VoutDCMA	DC-Level at Main-Output (AHVSUP = 8 V)		1.80	2.04 61	2.28	V mV	Volume 0 dB Volume –30 dB
	DC-Level at Main-Output (AHVSUP = 5 V)		1.12	1.36 40	1.60	V mV	Volume 0 dB Volume –30 dB
V <sub>outMA</sub>	Signal Level at Main-Output (AHVSUP = 8 V)		1.23	1.37	1.51	V <sub>RMS</sub>	f <sub>signal</sub> = 1 kHz Volume 0 dB
	Signal Level at Main-Output (AHVSUP = 5 V)		0.76	0.90	1.04	V <sub>RMS</sub>	<ul> <li>Full scale input from I<sup>2</sup>S</li> </ul>
<sup>1)</sup> "s" mean	s "L" or "R"				•	-	•

# 4.6.3.7. Sound IF Input

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
R <sub>IFIN</sub>	Input Impedance	ANA_IN1+, ANA_IN–	1.5 6.8	2 9.1	2.5 11.4	kΩ kΩ	Gain AGC = 20 dB Gain AGC = 3 dB
DC <sub>VREFTOP</sub>	DC Voltage at VREFTOP	VREFTOP	2.4	2.65	2.75	V	
DC <sub>ANA_IN</sub>	DC Voltage on IF Inputs	ANA_IN1+, ANA_IN–	1.3	1.5	1.7	V	
XTALK <sub>IF</sub>	Crosstalk Attenuation	ANA_IN1+, ANA_IN-	40			dB	
BWIF	3 dB Bandwidth		10			MHz	f <sub>signal</sub> = 1 MHz Input Level = −2 dBr
AGC	AGC Step Width			0.85		dB	

# 4.6.3.8. Power Supply Rejection

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions				
PSRR: Reject	PSRR: Rejection of Noise on AHVSUP at 1 kHz										
PSRR	AGNDC	AGNDC		80		dB					
	From Analog Input to I <sup>2</sup> S Output	MONO_IN, SCn_IN_s <sup>1)</sup>		70		dB					
	From Analog Input to SCART Output	MONO_IN, SCn_IN_s <sup>1)</sup> SCn_OUT_s <sup>1)</sup>		70		dB					
	From I <sup>2</sup> S Input to SCART Output	SCn_OUT_s <sup>1)</sup>		60		dB					
	From I <sup>2</sup> S Input to MAIN or AUX Output	DACM_s <sup>1)</sup>		80		dB					
<sup>1)</sup> "n" means	"1" or "2"; "s" means "L" or "R"										

# 4.6.3.9. Analog Performance

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
Specification	ons for AHVSUP = 8 V	·			-		
SNR	Signal-to-Noise Ratio						
	from Analog Input to I <sup>2</sup> S Output	MONO_IN, SCn_IN_s <sup>1)</sup>	85	88		dB	Input Level = $-20 \text{ dB}$ with resp. to V <sub>AICL</sub> , f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from Analog Input to SCART Output	$\begin{array}{c} \text{MONO_IN,}\\ \text{SCn_IN_s}^1)\\ \\ \text{SCn_OUT_s}^1) \end{array}$	93	96		dB	Input Level = -20 dB, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz20 kHz
	from I <sup>2</sup> S Input to SCART Output	SCn_OUT_s <sup>1)</sup>	85	88		dB	Input Level = -20 dB, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from I <sup>2</sup> S Input to Main Output for Analog Volume at 0 dB for Analog Volume at –30 dB	DACM_s <sup>1)</sup>	85 78	88 83		dB dB	Input Level = -20 dB, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
THD	Total Harmonic Distortion						
	from Analog Input to I <sup>2</sup> S Output	MONO_IN, SCn_IN_s <sup>1)</sup>		0.01	0.03	%	Input Level = $-3 \text{ dBr with}$ resp. to V <sub>AICL</sub> , f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from Analog Input to SCART Output	$\begin{array}{c} \text{MONO_IN,}\\ \text{SCn_IN_s}\\ \\ \text{SCn_OUT\_s^{1)}} \end{array}$		0.01	0.03	%	Input Level = $-3 \text{ dBr}$ , f <sub>sig</sub> = 1 kHz, unweighted 20 Hz20 kHz
	from I <sup>2</sup> S Input to SCART Output	SCn_OUT_s <sup>1)</sup>		0.01	0.03	%	Input Level = $-3 \text{ dBr}$ , f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from I <sup>2</sup> S Input to Main Output	DACM_s <sup>1)</sup>		0.01	0.03	%	Input Level = $-3 \text{ dBr}$ , f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
Specification	s for AHVSUP = 5 V						
SNR	Signal-to-Noise Ratio						
	from Analog Input to I <sup>2</sup> S Output	MONO_IN SCn_IN_s <sup>1</sup> )	82	85		dB	Input Level = $-20 \text{ dB}$ with resp. to V <sub>AICL</sub> , f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from Analog Input to SCART Output	$\begin{array}{c} \text{MONO_IN,}\\ \text{SCn_IN_s}^1)\\ \rightarrow\\ \text{SCn_OUT_s}^1) \end{array}$	90	93		dB	Input Level = -20 dB, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz20 kHz
	from I <sup>2</sup> S Input to SCART Output	SCn_OUT_s <sup>1)</sup>	82	85		dB	Input Level = -20 dB, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from I <sup>2</sup> S Input to Main Output for Analog Volume at 0 dB for Analog Volume at –30 dB	DACM_s <sup>1)</sup>	82 75	85 80		dB dB	Input Level = -20 dB, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
THD	Total Harmonic Distortion						
	from Analog Input to I <sup>2</sup> S Output	MONO_IN, SCn_IN_s <sup>1)</sup>		0.03	0.1	%	Input Level = $-3 \text{ dBr}$ with resp. to V <sub>AICL</sub> , f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from Analog Input to SCART Output	$\begin{array}{c} \text{MONO_IN,} \\ \text{SCn_IN_s} \\  \\ \text{SCn_OUT_s}^{1)} \end{array}$			0.1	%	Input Level = -3 dBr, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz20 kHz
	from I <sup>2</sup> S Input to SCART Output	SCn_OUT_s <sup>1)</sup>			0.1	%	Input Level = -3 dBr, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from I <sup>2</sup> S Input to Main Output	DACM_s <sup>1)</sup>			0.1	%	Input Level = -3 dBr, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
<sup>1)</sup> "n" means	"1" or "2"; "s" means "L" or "R"						

# MSP 34x5G

Symbol	Parameter P	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
CROSSTALK	Specifications for AHVSUP = 8 V and	5 V					
XTALK	Crosstalk Attenuation						Input Level = $-3 \text{ dB}$ , f <sub>sig</sub> = 1 kHz, unused analog inputs connected to ground by Z < 1 k $\Omega$
	between left and right channel within SCART Input/Output pair (L $\rightarrow$ R, R $\rightarrow$ L)						unweighted 20 Hz20 kHz
	$\text{SCn}\_\text{IN}^{1)} \rightarrow \text{SC1}\_\text{OUT}$		80			dB	
	SC1_IN or SC2_IN $\rightarrow I^2S$ Output		80			dB	
	SC3_IN $\rightarrow$ I <sup>2</sup> S Output		80			dB	
	$I^2S \;Input \to SC1\_OUT$		80			dB	
	between left and right channel within Main or AUX Output pair						unweighted 20 Hz16 kHz
	$I^2S$ Input $\rightarrow$ DACM		75			dB	
	between SCART Input/Output pairs D = disturbing program O = observed program						(unweighted 20 Hz20 kHz same signal source on left
	D: MONO/SCn_IN <sup>1</sup> ) $\rightarrow$ SC1_OUT O: MONO/SCn_IN <sup>1</sup> ) $\rightarrow$ SC1_OUT		100			dB	and right disturbing channel, effect on each observed output channel
	D: MONO/SCn_IN <sup>1)</sup> $\rightarrow$ SC1_OUT or unsel. O: MONO/SCn_IN <sup>1)</sup> $\rightarrow$ I <sup>2</sup> S Output		95			dB	
	D: MONO/SCn_IN <sup>1)</sup> $\rightarrow$ SC1_OUT O: I <sup>2</sup> S Input $\rightarrow$ SC1_OUT		100			dB	
	D: MONO/SCn_IN <sup>1)</sup> $\rightarrow$ unselected O: I <sup>2</sup> S Input $\rightarrow$ SC1_OUT		100			dB	
	Crosstalk between Main and AUX Outp $I^2S \text{ Input} \rightarrow \text{DACM}$	out pairs	90			dB	(unweighted 20 Hz16 kHz) same signal source on left and right disturbing channel, effect on each observed output channel
XTALK	Crosstalk from Main or AUX Output to a and vice versa	SCART Output					(unweighted 20 Hz20 kHz) same signal source on left
	D = disturbing program O = observed program						and right disturbing channel, effect on each observed output channel
	D: MONO/SCn_IN/DSP <sup>1)</sup> $\rightarrow$ SC1_OUT O: I <sup>2</sup> S Input $\rightarrow$ DACM	-	80			dB	SCART output load resistance 10 k $\Omega$
	D: MONO/SCn_IN/DSP <sup>1)</sup> $\rightarrow$ SC1_OUT O: I <sup>2</sup> S Input $\rightarrow$ DACM	-	85			dB	SCART output load resistance 30 k $\Omega$
	D: I <sup>2</sup> S Input $\rightarrow$ DACM O: MONO/SCn_IN <sup>1)</sup> $\rightarrow$ SC1_OUT		95			dB	
	D: $I^2S$ Input $\rightarrow$ DACM O: $I^2S$ Input $\rightarrow$ SC1_OUT		95			dB	
<sup>1)</sup> "n" means	"1" or "2"; "s" means "L" or "R"						

# 4.6.3.10. Sound Standard Dependent Characteristics

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
NICAM Chara	cteristics (MSP Standard Code = 8)						
dV <sub>NICAMOUT</sub>	Tolerance of Output Voltage of NICAM Baseband Signal	DACM_s, SC1_OUT_s <sup>1)</sup>	-1.5		+1.5	dB	2.12 kHz, Modulator input level = 0 dBref
S/N <sub>NICAM</sub>	S/N of NICAM Baseband Signal		72			dB	NICAM: -6 dB, 1 kHz, RMS unweighted 0 to 15 kHz, Vol = 9 dB NIC_Presc = 7F <sub>hex</sub> Output level 1 V <sub>RMS</sub> at DACM_s
THD <sub>NICAM</sub>	Total Harmonic Distortion + Noise of NICAM Baseband Signal				0.1	%	2.12 kHz, Modulator input level = 0 dBref
BER <sub>NICAM</sub>	NICAM: Bit Error Rate				1	10 <sup>-7</sup>	FM+NICAM, norm conditions
fR <sub>NICAM</sub>	NICAM Frequency Response, 2015000 Hz		-1.0		+1.0	dB	Modulator input level = -12 dB dBref; RMS
XTALK <sub>NICAM</sub>	NICAM Crosstalk Attenuation (Dual)		80			dB	
SEP <sub>NICAM</sub>	NICAM Channel Separation (Stereo)		80			dB	
FM Character	istics (MSP Standard Code = 3)						
dV <sub>FMOUT</sub>	Tolerance of Output Voltage of FM Demodulated Signal	DACM_s, SC1_OUT_s <sup>1)</sup>	-1.5		+1.5	dB	1 FM-carrier, 50 μs, 1 kHz, 40 kHz deviation; RMS
S/N <sub>FM</sub>	S/N of FM Demodulated Signal		73			dB	1 FM-carrier 5.5 MHz, 50 μs, 1 kHz, 40 kHz deviation;
THD <sub>FM</sub>	Total Harmonic Distortion + Noise of FM Demodulated Signal				0.1	%	RMS, unweighted 0 to 15 kHz (for S/N); full input range, FM-Pres- cale = $46_{hex}$ , Vol = 0 dB $\rightarrow$ Output Level 1 V <sub>RMS</sub> at DACM_s
fR <sub>FM</sub>	FM Frequency Responses, 2015000 Hz		-1.0		+1.0	dB	1 FM-carrier 5.5 MHz, 50 μs, Modulator input level = -14.6 dBref; RMS
XTALK <sub>FM</sub>	FM Crosstalk Attenuation (Dual)		80			dB	2 FM-carriers 5.5/5.74 MHz, 50 μs, 1 kHz, 40 kHz deviation; Bandpass 1 kHz
SEP <sub>FM</sub>	FM Channel Separation (Stereo)		50			dB	2 FM-carriers 5.5/5.74 MHz, 50 μs, 1 kHz, 40 kHz deviation; RMS
AM Character	ristics (MSP Standard Code = 9)		•		•		·
S/N <sub>AM(1)</sub>	S/N of AM Demodulated Signal measurement condition: RMS/Flat	DACM_s, SC1_OUT_s <sup>1)</sup>	55			dB	SIF level: 0.1–0.8 V <sub>pp</sub> AM-carrier 54% at 6.5 MHz
S/N <sub>AM(2)</sub>	S/N of AM Demodulated Signal measurement condition: QP/CCIR		45			dB	Vol = 0 dB, FM/AM prescaler set for output = 0.5 V <sub>RMS</sub> at Loudspeaker out;
THD <sub>AM</sub>	Total Harmonic Distortion + Noise of AM Demodulated Signal				0.6	%	Standard Code = 09 <sub>hex</sub> no video/chroma components
fR <sub>AM</sub>	AM Frequency Response 5012000 Hz		-2.5		+1.0	dB	
1) "s" means "	'L" or "R"			•	•		•

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions						
BTSC Chara	cteristics (MSP Standard Code = 20	h <sub>ex</sub> , 21 <sub>hex</sub> )											
S/N <sub>BTSC</sub>	S/N of BTSC Stereo Signal	DACM_s,	68			dB	1 kHz L or R or SAP, 100%						
	S/N of BTSC-SAP Signal	SC1_OUT_s <sup>1)</sup>	57			dB	modulation, 75 µs deempha- sis, RMS unweighted 0 to 15 kHz						
THD <sub>BTSC</sub>	THD+N of BTSC Stereo Signal	7			0.1	%	1 kHz L or R or SAP, 100%						
	THD+N of BTSC SAP Signal				0.5	%	75 μs EIM <sup>2)</sup> , DBX NR or MNR, RMS unweighted 0 to 15 kHz						
fR <sub>DBX</sub>	Frequency Response of BTSC Stereo, 50 Hz12 kHz		-1.0		1.0	dB	L or R or SAP, 1%66% EIM <sup>2)</sup> , DBX NR						
	Frequency Response of BTSC- SAP, 50 Hz9 kHz							-	-1.0		1.0	dB	
fR <sub>MNR</sub>	Frequency Response of BTSC Stereo, 50 Hz12 kHz		-2.0		2.0	dB	L or R 5%66% EIM <sup>2)</sup> , MNR						
	Frequency Response of BTSC- SAP, 50 Hz9 kHz		-2.0		2.0	dB	SAP, white noise, 10% Modu- lation, MNR						
XTALK <sub>BTSC</sub>	$Stereo \to SAP$	7	76			dB	1 kHz L or R or SAP, 100%						
	$SAP \to Stereo$		80			dB	modulation, 75 μs deempha- sis, Bandpass 1 kHz						
SEP <sub>DBX</sub>	Stereo Separation DBX NR 50 Hz10 kHz 50 Hz12 kHz		35 30			dB dB	L or R 1%66% EIM <sup>2)</sup> , DBX NR						
SEP <sub>MNR</sub>	Stereo Separation MNR		30			dB	L = 300 Hz, R = 3.1 kHz 14% Modulation, MNR						
FM <sub>pil</sub>	Pilot deviation threshold	ANA_IN1+					4.5 MHz carrier modulated						
	Stereo off $\rightarrow$ on		3.2		3.5	kHz	with f <sub>h</sub> = 15.734 kHz SIF level = 100 mV <sub>pp</sub>						
	Stereo on $\rightarrow$ off		1.2		1.5	kHz	indication: STATUS Bit[6]						
f <sub>Pilot</sub>	Pilot Frequency Range		15.563		15.843	kHz	standard BTSC stereo signal, sound carrier only						

"s" means "L" or "R"
 EIM refers to 75-μs Equivalent Input Modulation. It is defined as the audio-signal level which results in a stated percentage modulation, when the DBX encoding process is replaced by a 75-μs preemphasis network.

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions			
BTSC Characteristics (MSP Standard Code = 20 <sub>hex</sub> , 21 <sub>hex</sub> ) with a minimum IF input signal level of 70 mVpp (measured without any video/chroma signal components)										
S/N <sub>BTSC</sub>	S/N of BTSC Stereo Signal S/N of BTSC-SAP Signal	DACM_s, SC1_OUT_s <sup>1)</sup>	64 55			dB dB	1 kHz L or R or SAP, 100% modulation, 75 μs deempha- sis, RMS unweighted 0 to 15 kHz			
THD <sub>BTSC</sub>	THD+N of BTSC Stereo Signal THD+N of BTSC SAP Signal				0.15 0.8	% %	1 kHz L or R or SAP, 100% 75 µs EIM <sup>2)</sup> , DBX NR or MNR, RMS unweighted 0 to 15 kHz			
fR <sub>DBX</sub>	Frequency Response of BTSC Stereo, 50 Hz12 kHz		-1.0		1.0	dB	L or R or SAP, 1%66% EIM <sup>2)</sup> , DBX NR			
	Frequency Response of BTSC- SAP, 50 Hz9 kHz		-1.0		1.0	dB				
fR <sub>MNR</sub>	Frequency Response of BTSC Stereo, 50 Hz12 kHz		-2.0		2.0	dB	L or R 5%66% EIM <sup>2)</sup> , MNR			
	Frequency Response of BTSC- SAP, 50 Hz9 kHz		-2.0		2.0	dB	SAP, white noise, 10% Modu- lation, MNR			
XTALK <sub>BTSC</sub>	Stereo $\rightarrow$ SAP SAP $\rightarrow$ Stereo		75 75			dB dB	1 kHz L or R or SAP, 100% modulation, 75 μs deempha- sis, Bandpass 1 kHz			
SEP <sub>DBX</sub>	Stereo Separation DBX NR 50 Hz10 kHz 50 Hz12 kHz		35 30			dB dB	L or R 1%66% EIM <sup>2)</sup> , DBX NR			
SEP <sub>MNR</sub>	Stereo Separation MNR		30			dB	L = 300 Hz, R = 3.1 kHz 14% Modulation, MNR			

"s" means "L" or "R"
 EIM refers to 75-μs Equivalent Input Modulation. It is defined as the audio-signal level which results in a stated percentage modulation, when the DBX encoding process is replaced by a 75-μs preemphasis network.

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
EIA-J Chara	cteristics (MSP Standard Code = 30 <sub>h</sub>	ex)					
S/N <sub>EIAJ</sub>	S/N of EIA-J Stereo Signal S/N of EIA-J Sub-Channel	DACM_s, SC1_OUT_s <sup>1)</sup>	60 60			dB dB	1 kHz L or R, 100% modulation, 75 μs deemphasis,
THD <sub>EIAJ</sub>	THD+N of EIA-J Stereo Signal THD+N of EIA-J Sub-Channel				0.2 0.3	% %	RMS unweighted 0 to 15 kHz
fR <sub>EIAJ</sub>	Frequency Response of EIA-J Stereo, 50 Hz12 kHz		-1.0		1.0	dB	100% modulation, 75 μs deemphasis
	Frequency Response of EIA-J Sub-Channel, 50 Hz12 kHz		-1.0		1.0	dB	
XTALK <sub>EIAJ</sub>	$\begin{array}{l} \text{Main} \rightarrow \text{SUB} \\ \text{Sub} \rightarrow \text{MAIN} \end{array}$		66 80			dB dB	1 kHz L or R, 100% modulation, 75 μs deemphasis, Bandpass 1 kHz
SEP <sub>EIAJ</sub>	Stereo Separation 50 Hz5 kHz 50 Hz10 kHz		35 28			dB dB	EIA-J Stereo Signal, L or R 100% modulation
FM-Radio Cl	naracteristics (MSP Standard Code =	40 <sub>hex</sub> )					
S/N <sub>UKW</sub>	S/N of FM-Radio Stereo Signal	DACM_s, SC1 OUT s <sup>1)</sup>	68			dB	1 kHz L or R, 100% modulation, 75 μs
THD <sub>UKW</sub>	THD+N of FM-Radio Stereo Signal	001_001_3			0.1	%	deemphasis, RMS unweighted 0 to 15 kHz
fR <sub>UKW</sub>	Frequency Response of FM-Radio Stereo 50 Hz15 kHz		-1.0		+1.0	dB	L or R, 1%100% modulation, 75 μs deemphasis
SEP <sub>UKW</sub>	Stereo Separation 50 Hz15 kHz		45			dB	1
f <sub>Pilot</sub>	Pilot Frequency Range	ANA_IN1+	18.844		19.125	kHz	standard FM radio stereo signal

#### 5. Appendix A: Overview of TV Sound Standards

#### 5.1. NICAM 728

#### Table 5-1: Summary of NICAM 728 sound modulation parameters

Specification	1	B/G	L		D/K			
Carrier frequency of digital sound	6.552 MHz	5.85 MHz	5.85 MHz		5.85 MHz			
Transmission rate			728 kbit/s					
Type of modulation	Di	fferentially encoded	quadrature ph	ase shift keyin	g (DQPSK)			
Spectrum shaping Roll-off factor		by means of Roll-off filters						
	1.0	0.4	0.4		0.4			
Carrier frequency of analog sound component	6.0 MHz FM mono	5.5 MHz FM mono	6.5 MHz terrestrial	AM mono cable	6.5 MHz FM mono			
Power ratio between vision carrier and analog sound carrier	10 dB	13 dB	10 dB	16 dB	13 dB			
Power ratio between analog and modulated	10 dB	7 dB	17 dB	11 dB	China/ Hungary	Poland		
digital sound carrier					12 dB	7 dB		

#### Table 5-2: Summary of NICAM 728 sound coding characteristics

Characteristics	Values
Audio sampling frequency	32 kHz
Number of channels	2
Initial resolution	14 bit/sample
Companding characteristics	near instantaneous, with compression to 10 bits/sample in 32-samples (1 ms) blocks
Coding for compressed samples	2's complement
Preemphasis	CCITT Recommendation J.17 (6.5 dB attenuation at 800 Hz)
Audio overload level	+12 dBm measured at the unity gain frequency of the preemphasis network (2 kHz)

#### 5.2. A2 Systems

Table 5–3: Key parameters for A2 Systems of Standards B/G, D/K, and M

Characteristics	So	ound Carrier	FM1	Sound Carrier FM2		
TV-Sound Standard	B/G	D/K	М	B/G	D/K	м
Carrier frequency in MHz	5.5	6.5	4.5	5.7421875	6.2578125 6.7421875 5.7421875	4.724212
Vision/sound power difference		13 dB			20 dB	
Sound bandwidth			40 Hz to	o 15 kHz		
Preemphasis	50	μs	75 μs	50	μs	75 μs
Frequency deviation (nom/max)	±27/±50 kHz		±17/±25 kHz	±27/±50 kHz		±15/±25 kHz
Transmission Modes						
Mono transmission		mono		mono		
Stereo transmission	(L+	R)/2	(L+R)/2	R		(L–R)/2
Dual sound transmission		language A			language B	
Identification of Transmission Mode						
Pilot carrier frequency				54.68	75 kHz	55.0699 kHz
Max. deviation portion	±2.5 kHz					
Type of modulation / modulation depth				AM / 50%		
Modulation frequency	mono: unmodula stereo: 117.5 Hz dual: 274.1 Hz			149.9 Hz 276.0 Hz		

#### 5.3. BTSC-Sound System

	Aural	BTSC-MPX-Components					
	Carrier	(L+R)	Pilot	(L–R)	SAP	Prof. Ch.	
Carrier frequency (f <sub>hNTSC</sub> = 15.734 kHz) (f <sub>hPAL</sub> = 15.625 kHz)	4.5 MHz	Baseband	f <sub>h</sub>	2 f <sub>h</sub>	5 f <sub>h</sub>	6.5 f <sub>h</sub>	
Sound bandwidth in kHz		0.05 - 15		0.05 - 15	0.05 - 12	0.05 - 3.4	
Preemphasis		75 μs		DBX	DBX	150 μs	
Max. deviation to Aural Carrier	73 kHz (total)	25 kHz <sup>1)</sup>	5 kHz	50 kHz <sup>1)</sup>	15 kHz	3 kHz	
Max. Freq. Deviation of Subcarrier Modulation Type				AM	10 kHz FM	3 kHz FM	
<sup>1)</sup> Sum does not exceed 50 kHz due to interleaving effects							

#### 5.4. Japanese FM Stereo System (EIA-J)

Table 5-5: Key parameters for Japanese FM-Stereo Sound System EIA-J

	Aural Carrier				
	FM	(L+R)	(L–R)	Identification	
Carrier frequency (f <sub>h</sub> = 15.734 kHz)	4.5 MHz	Baseband	2 f <sub>h</sub>	3.5 f <sub>h</sub>	
Sound bandwidth		0.05 - 15 kHz	0.05 - 15 kHz	_	
Preemphasis		75 μs	75 μs	none	
Max. deviation portion to Aural Carrier	47 kHz	25 kHz	20 kHz	2 kHz	
Max. Freq. Deviation of Subcarrier Modulation Type			10 kHz FM	60% AM	
Transmitter-sided delay		20 µs	0 μs	0 μs	
Mono transmission		L+R	_	unmodulated	
Stereo transmission	]	L+R	L–R	982.5 Hz	
Bilingual transmission	]	Language A	Language B	922.5 Hz	

#### 5.5. FM Satellite Sound

Carrier Frequency	Maximum FM Deviation	Sound Mode	Bandwidth	Deemphasis
6.5 MHz	85 kHz	Mono	15 kHz	50 µs
7.02/7.20 MHz	50 kHz	Mono/Stereo/Bilingual	15 kHz	adaptive
7.38/7.56 MHz	50 kHz	Mono/Stereo/Bilingual	15 kHz	adaptive
7.74/7.92 MHz	50 kHz	Mono/Stereo/Bilingual	15 kHz	adaptive

#### 5.6. FM-Stereo Radio

	Aural Carrier	FM-Radio-MPX-Components					
	Carrier	(L+R)	Pilot	(L–R)	RDS/ARI		
Carrier frequency (f <sub>p</sub> = 19 kHz)	10.7 MHz	Baseband	f <sub>p</sub>	2 f <sub>p</sub>	3 f <sub>h</sub>		
Sound bandwidth in kHz		0.05 - 15		0.05 - 15			
Preemphasis: – USA – Europe		75 μs 50 μs		75 μs 50 μs			
Max. deviation to Aural Carrier	75 kHz (100%)	90% <sup>1)</sup>	10%	90% <sup>1)</sup>	5%		
<sup>1)</sup> Sum does not exceed 90% due to interleaving effects.							

#### 6. Appendix B: Manual/Compatibility Mode

To adapt the modes of the STANDARD SELECT register to individual requirements and for reasons of **compatibility to the MSP 34x5D**, the MSP 34x5G offers an Manual/Compatibility Mode, which provides sophisticated programming of the MSP 34x5G.

Using the STANDARD SELECT register generally provides a more economic way to program the MSP 34x5G and will result in optimal behavior. **Therefore, it is not recommend to use the Manual/Compatibility mode.** In those cases, where the MSP 34x5D is to be substituted by the MSP 34x5G, the tips given in Section 6.9. on page 91 have to be obeyed by the controller software.

#### 6.1. Demodulator Write and Read Registers for Manual/Compatibility Mode

Demodulator Write Registers	Address (hex)	MSP- Version	Description	Reset Mode	Page
AUTO_FM/AM	00 21	3415, 3455	1. MODUS[0]=1 (Automatic Sound Select): Switching Level threshold of Automatic Switching between NICAM and FM/AM in case of bad NICAM reception	00 00	79
			<b>2. MODUS[0]=0 (Manual Mode):</b> Activation and configuration of Automatic Switching between NICAM and FM/AM in case of bad NICAM reception		
A2_Threshold	00 22	all	A2 Stereo Identification Threshold	00 19 <sub>hex</sub>	81
CM_Threshold	00 24	all	Carrier-Mute Threshold	00 2A <sub>hex</sub>	81
AD_CV	00 BB	all	SIF-input selection, configuration of AGC, and Carrier-Mute Function	00 00	82
MODE_REG	00 83	3415, 3455	Controlling of MSP-Demodulator and Interface options. As soon as this register is applied, the MSP 34x5G works in the <b>MSP 34x5D compatibility mode.</b>	00 00	83
			<b>Warning: In this mode, BTSC, EIA-J, and FM-Radio are disabled.</b> Only MSP 34x5D features are available; the use of MODUS and STATUS register is not allowed.		
			The MSP 34x5G is reset to the normal mode by first programming the MODUS register followed by transmitting a valid standard code to the STANDARD SELECTION register.		
FIR1 FIR2	00 01 00 05		FIR1-filter coefficients channel 1 (6 $\cdot$ 8 bit) FIR2-filter coefficients channel 2 (6 $\cdot$ 8 bit), + 3 $\cdot$ 8 bit offset (total 72 bit)	00 00	85
DCO1_LO DCO1_HI	00 93 00 9B		Increment channel 1 Low Part Increment channel 1 High Part	00 00	85
DCO2_LO DCO2_HI	00 A3 00 AB		Increment channel 2 Low Part Increment channel 2 High Part		

Table 6–1: Demodulator Write Registers; Subaddress: 10<sub>hex</sub>; these registers are not readable!

Demodulator Read Registers	Address (hex)	MSP- Version	Description	Page
C_AD_BITS	00 23	3415,	NICAM-Sync bit, NICAM-C-Bits, and three LSBs of additional data bits	87
ADD_BITS	00 38	3455	NICAM: bit [10:3] of additional data bits	87
CIB_BITS	00 3E		NICAM: CIB1 and CIB2 control bits	87
ERROR_RATE	00 57		NICAM error rate, updated with 182 ms	88
PLL_CAPS	02 1F		Not for customer use.	88
AGC_GAIN	02 1E		Not for customer use.	88

#### Table 6–2: Demodulator Read Registers; Subaddress: 11<sub>hex</sub>; these registers are not writable!

## 6.2. DSP Write and Read Registers for Manual/Compatibility Mode

Write Register	Address (hex)	Bits	Operational Modes and Adjustable Range	Reset Mode	Page
Volume SCART1 channel: Ctrl. mode	00 07	[7:0]	[Linear mode / logarithmic mode]	00 <sub>hex</sub>	89
FM Fixed Deemphasis	00 0F	[15:8]	[50 μs, 75 μs, J17, OFF]	50 µs	89
FM Adaptive Deemphasis		[7:0]	[OFF, WP1]	OFF	89
Identification Mode	00 15	[7:0]	[B/G, M]	B/G	90
FM DC Notch	00 17	[7:0]	[ON, OFF]	ON	90

#### Table 6-4: DSP Read Registers; Subaddress: 13<sub>hex</sub>, all registers are not writable


Additional Read Registers	Address (hex)	Bits	Output Range		Page
Stereo detection register for A2 Stereo Systems	00 18	[15:8]	[80 <sub>hex</sub> 7F <sub>hex</sub> ]	8 bit two's complement	90
DC level readout FM1/Ch2-L	00 1B	[15:0]	[8000 <sub>hex</sub> 7FFF <sub>hex</sub> ]	16 bit two's complement	90
DC level readout FM2/Ch1-R	00 1C	[15:0]	[8000 <sub>hex</sub> 7FFF <sub>hex</sub> ]	16 bit two's complement	90

 
#### 6.3. Manual/Compatibility Mode: Description of Demodulator Write Registers

## 6.3.1. Automatic Switching between NICAM and Analog Sound

In case of bad NICAM reception or loss of the NICAM-carrier, the MSP 34x5G offers an Automatic Switching (fall back) to the analog sound (FM/AM-mono), without the necessity for the controller of reading and evaluating any parameters. If a proper NICAM signal returns, switching back to this source is performed automatically as well. The feature evaluates the NICAM ERROR\_RATE and switches, if necessary, all output channels which are assigned to the NICAM-source, to the analog source, and vice versa.

An appropriate hysteresis algorithm avoids oscillating effects (see Fig. 6–1). STATUS[9] and C\_AD\_BITS[11] (Addr: 0023 hex) provide information about the actual NICAM-FM/AM-status.

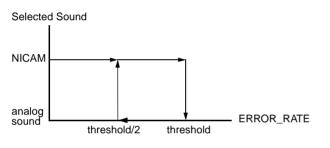



#### 6.3.1.1. Function in Automatic Sound Select Mode

The Automatic Sound Select feature (MODUS[0]=1) includes the procedure mentioned above. By default, the internal ERROR\_RATE threshold is set to 700<sub>dec</sub>. i.e.:

- NICAM  $\rightarrow$  analog Sound if ERROR\_RATE > 700

- analog Sound  $\rightarrow$  NICAM if ERROR\_RATE < 700/2

The ERROR\_RATE value of 700 corresponds to a BER of approximately  $5.46*10^{-3}$  /s.

Individual configuration of the threshold can be done using Table 6–5. However, the internal setting used by the standard selection is recommended.

The optimum NICAM sound can be assigned to the MSP output channels by selecting one of the "Stereo or A/B", "Stereo or A", or "Stereo or B" source channels

#### 6.3.1.2. Function in Manual Mode

If the manual mode (MODUS[0]=0) is required, the activation and configuration of the Automatic Switching feature has to be done as described in Table 6–6. Note, that the channel matrix of the corresponding output-channels must be set according to the NICAM-mode and need not to be changed in the FM/ AM-fallback case.

#### Example:

Required threshold = 500: bits[10:1] = 00 1111 1010

<b>Table 6–5:</b> Coding of Automatic NICAM/Analog Sound Switching;	
Automatic Sound Select is on (MODUS[0] = 1)	

Mode	Description	AUTO_FM [11:0] Addr. = 00 21 <sub>hex</sub>	ERROR_RATE- Threshold/dec	Source Select: Input at NICAM Path <sup>1)</sup>		
1 Default	Automatic Switching with internal threshold	bit[11:0] = 0	700	NICAM or FM/AM, depending on ERROR_RATE		
2	Automatic Switching with external threshold (Customizing of Automatic Sound Select)	bit[11] = 0 bit[10:1] = 251000 = threshold/2 bit[0] = 1	set by customer; recommended range: 502000			
3	3 Forced Analog Mono bit[11] = 1 bit[10:1] = ignored bit[0] = 1 always FM/AM					
<sup>1)</sup> The NICAM path may be assigned to "Stereo or A/B", "Stereo or A", or "Stereo or B" source channels (see Table 2–1 on page 11).						

# Table 6–6: Coding of Automatic NICAM/Analog Sound Switching; Automatic Sound Select is off (MODUS[0] = 0)

Mode	Description	AUTO_FM [11:0] Addr. = 00 21 <sub>hex</sub>	ERROR_RATE- Threshold/dec	Source Select: Input at NICAM Path
0 reset status	Forced NICAM (Automatic Switching disabled)	bit[11] = 0 bit[10:1] = 0 bit[0] = 0	none	always NICAM; Mute in case of no NICAM available
1	Automatic Switching with <b>internal</b> threshold (Default, if Automatic Sound Select is on)	bit[11] = 0 bit[10:1] = 0 bit[0] = 1	700	NICAM or FM/AM, depending on ERROR_RATE
2	Automatic Switching with external threshold (Customizing of Automatic Sound Select)	bit[11] = 0 bit[10:1] = 251000 = threshold/2 bit[0] = 1	set by customer; recommended range: 502000	
3	Forced Analog Mono (Automatic Switching disabled)	bit[11] = 1 bit[10:1] = 0 bit[0] = 1	none	always FM/AM

#### 6.3.2. A2 Threshold

The threshold between Stereo/Bilingual and Mono Identification for the A2 Standard has been made programmable according to the user's preferences. An internal hysteresis ensures robustness and stability.

### Table 6–7: Write Register on I<sup>2</sup>C Subaddress 10<sub>hex</sub> : A2 Threshold

Regi Addr		Function	l		Name
THR	ESHOLDS				
00 22	2 <sub>hex</sub> (write)			egister all A2 and EIA_J standards for Stereo and Bilingual	A2_THRESH
		bit[15:0] recomme	 0190 <sub>hex</sub>  00A0 <sub>hex</sub>	force Mono Identification default setting after reset minimum Threshold for stable detection e : 00A0 <sub>hex</sub> 03C0 <sub>hex</sub>	

#### 6.3.3. Carrier-Mute Threshold

The Carrier-Mute threshold has been made programmable according to the user's preferences. An internal hysteresis ensures stable behavior.

Table 6-8: Write Register	on I <sup>2</sup> C Subaddress 10 <sub>hex</sub>	: Carrier-Mute Threshold

Register Address	Function	Name
THRESHOLDS		
00 24 <sub>hex</sub> (write)	Carrier-Mute THRESHOLD Register         Defines threshold for the carrier mute feature         bit[15:0]       0000 <sub>hex</sub> Carrier-Mute always ON (both channels muted)            002A <sub>hex</sub> default setting after reset            07FF <sub>hex</sub> Carrier-Mute always OFF         (both channels forced on)         recommended range : 0014 <sub>hex</sub> 0050 <sub>hex</sub>	CM_THRESH

#### 6.3.4. Register AD\_CV

The use of this register is no longer recommended. Use it only in cases where compatibility to the MSP 34x5D is required. Using the STANDARD SELECTION register together with the MODUS register provides a more economic way to program the MSP 34x5G

#### Table 6-9: AD\_CV Register; reset status: all bits are "0"

	AD_CV (00 BB <sub>hex</sub> )	Automatic setting by STANDARD SELECT Register		
Bit	Function	Settings	2-8, 0A-51 <sub>hex</sub>	9
[0]	not used	must be set to 0	0	0
[1:6]	Reference level in case of Automatic Gain Control = on (see Table 6–10). Constant gain factor when Automatic Gain Control = off (see Table 6–11).		101000	100011
[7]	Determination of Automatic Gain or Constant Gain	0 = constant gain 1 = automatic gain	1	1
[8]	Selection of Sound IF source (identical to MODUS[8])	0 = ANA_IN1+	Х	х
[9]	MSP-Carrier-Mute Feature	0 = off: no mute 1 = on: mute as de- scribed in Section 2.2.2.	1	1
[10:15]	not used	must be set to 0	0	0
X: not affect	ted while choosing the TV sound standard by me	ans of the STANDARD SELE	CT Register	•

**Note:** This register is initialized during STANDARD SELECTION and is automatically updated when Automatic Sound Select (MODUS[0]=1) is on.

#### Table 6–10: Reference values for active AGC (AD\_CV[7] = 1)

Application	Input Signal Contains	AD_CV [6:1] Ref. Value	AD_CV [6:1] in decimal	Range of Input Signal at pin ANA_IN1+		
Terrestrial TV						
<ul> <li>Dual Carrier FM</li> </ul>	2 FM Carriers	101000	40	$0.10 - 3 V_{pp}^{1)}$		
– NICAM/FM	1 FM and 1 NICAM Carrier	101000	40	$0.10 - 3 V_{pp}^{(1)}$		
– NICAM/AM	1 AM and 1 NICAM Carrier	100011	35	0.10 – 1.4 V <sub>pp</sub> (recommended: 0.10 – 0.8 V <sub>pp</sub> )		
<ul> <li>NICAM only</li> </ul>	- NICAM only 1 NICAM Carrier only 010100 20 0.05 - 1.0 V <sub>pp</sub>					
SAT	1 or more FM Carriers	100011	35	0.10 – 3 V <sub>pp</sub> <sup>1)</sup>		
ADR	ADR FM and ADR carriers see DRP 3510A data sheet					
<sup>1)</sup> For signals above 1.4 Vpp, the minimum gain of 3 dB is switched, and overflow of the A/D converter may result. Due to the						

<sup>1</sup> For signals above 1.4 Vpp, the minimum gain of 3 dB is switched, and overflow of the A/D converter may result. Due to the robustness of the internal processing, the IC works up to and even more than 3 Vpp, if norm conditions of FM/NICAM or FM1/FM2 ratio are supposed. In this overflow case, a loss of FM-S/N-ratio of about 10 dB may appear.

Step	AD_CV [6:1] Constant Gain	Gain	Input Level at pin ANA_IN1+ and ANA_IN2+
0	000000	3.00 dB	maximum input level: 3 V <sub>pp</sub> (FM) or 1 V <sub>pp</sub> (NICAM) <sup>1)</sup>
1	000001	3.85 dB	
2	000010	4.70 dB	
3	000011	5.55 dB	
4	000100	6.40 dB	
5	000101	7.25 dB	
6	000110	8.10 dB	
7	000111	8.95 dB	
8	001000	9.80 dB	
9	001001	10.65 dB	
10	001010	11.50 dB	
11	001011	12.35 dB	
12	001100	13.20 dB	
13	001101	14.05 dB	
14	001110	14.90 dB	
15	001111	15.75 dB	
16	010000	16.60 dB	
17	010001	17.45 dB	
18	010010	18.30 dB	
19	010011	19.15 dB	
20	010100	20.00 dB	maximum input level: 0.14 V <sub>pp</sub>

#### Table 6-11: AD\_CV parameters for constant input gain (AD\_CV[7]=0)

#### 6.3.5. Register MODE\_REG

**Note:** The use of this register is no longer recommended. It should be used only in cases where software compatibility to the MSP 34x5D is required. Using the STANDARD SELECTION register together with the MODUS register provides a more economic way to program the MSP 34x5G.

As soon as this register is applied, the MSP 34x5G works in the **MSP 34x5D Manual/Compatibility Mode**. In this mode, **BTSC, EIA-J, and FM-Radio are disabled**. Only MSP 34x5D features are available; the use of MODUS and STATUS register is not allowed. The MSP 34x5G is reset to the normal mode by first programming the MODUS register, followed by transmitting a valid standard code to the STANDARD SELECTION register.

The register 'MODE\_REG' contains the control bits determining the operation mode of the MSP 34x5G in the MSP 34x5D Manual/Compatibility Mode; Table 6–12 explains all bit positions.

## Table 6–12: Control word 'MODE\_REG'; reset status: all bits are "0"

		MODE_REG 00 83 <sub>hex</sub>		Automa STAND/	tic setting b ARD SELEC	y T Register
Bit	Function	Comment	Definition	2 - 5	8,A,B	9
[0]	not used		0 : must be used	0	0	0
[1]	DCTR_TRI	Digital control out 0/1 tri-state	0 : active 1 : tri-state	х	X	X
[2]	I <sup>2</sup> S_TRI	I <sup>2</sup> S outputs tri-state (I2S_CL, I2S_WS, I2S_DA_OUT)	0 : active 1 : tri-state	x	Х	X
[3]	I <sup>2</sup> S Mode <sup>1)</sup>	Master/Slave mode of the I <sup>2</sup> S bus	0 : Master 1 : Slave	х	Х	Х
[4]	I <sup>2</sup> S_WS Mode	WS due to the Sony or Philips-Format	0 : Sony 1 : Philips	х	Х	Х
[5]	not used		1 : recommended	Х	х	Х
[6]	NICAM <sup>1)</sup>	Mode of MSP-Ch1	0 : FM 1 : Nicam	0	1	1
[7]	not used		0 : must be used	0	0	0
[8]	FM AM	Mode of MSP-Ch2	0 : FM 1 : AM	0	0	1
[9]	HDEV	High Deviation Mode (channel matrix must be sound A)	0 : normal 1 : high deviation mode	0	0	0
[11:10]	not used		0 : must be used	0	0	0
[12]	MSP-Ch1 Gain	see also Table 6–14	0 : Gain = 6 dB 1 : Gain = 0 dB	0	0	0
[13]	FIR1-Filter Coeff. Set	see also Table 6–14	0 : use FIR1 1 : use FIR2	1	0	0
[14]	ADR	Mode of MSP-Ch1/ ADR-Interface	0 : normal mode/tri-state 1 : ADR-mode/active	0	0	0
[15]	AM-Gain	Gain for AM Demodulation	0 : 0 dB (default. of MSPB) 1 : 12 dB (recommended)	1	1	1
<sup>1)</sup> NICAM and I <sup>2</sup> S-Master mode are not allowed simultaneously					fected by ARD SELEC	T register

Table 6–13:         Loading sequence for FIR-coefficients
---

FIR1 00 01 <sub>hex</sub> (MSP-Ch1: NICAM/FM2)							
No.	Symbol Name	Bits	Value				
1	NICAM/FM2_Coeff. (5)	8					
2	NICAM/FM2_Coeff. (4)	8					
3	NICAM/FM2_Coeff. (3)	8	see Table 6–14				
4	NICAM/FM2_Coeff. (2)	8					
5	NICAM/FM2_Coeff. (1)	8					
6	NICAM/FM2_Coeff. (0)	8					
FIR2	00 05 <sub>hex</sub> (MSP-Ch2: F	M1/AM)					
No.	Symbol Name	Bits	Value				
1	IMREG1	8	04 <sub>hex</sub>				
2	IMREG1 / IMREG2	8	40 <sub>hex</sub>				
3	IMREG2	8	00 <sub>hex</sub>				
4	FM/AM_Coef (5)	8					
5	FM/AM_Coef (4)	8					
6	FM/AM_Coef (3)	8	see Table 6–14				
7	FM/AM_Coef (2)	8					
8	FM/AM_Coef (1)	8					
9	FM/AM_Coef (0)	8					

#### 6.3.6. FIR-Parameter, Registers FIR1 and FIR2

**Note:** The use of this register is no longer recommended. Use it only in cases where software compatibility to the MSP 34x5D is required. Using the STAN-DARD SELECTION register together with the MODUS register provides a more economic way to program the MSP 34x5G.

Data shaping and/or FM/AM bandwidth limitation is performed by a pair of linear phase Finite Impulse Response filters (FIR-filter). The filter coefficients are programmable and either are configured automatically by the STANDARD SELECT register or written manually by the control processor via the control bus. Two not necessarily different sets of coefficients are required: one for MSP-Ch1 (NICAM or FM2) and one for MSP-Ch2 (FM1 = FM-mono). In Table 6–14 several coefficient sets are proposed.

To load the FIR-filters, the following data values are to be transferred **8 bits at a time embedded LSB-bound in a 16-bit word**.

The loading sequences must be obeyed. To change a coefficient set, the complete block FIR1 or FIR2 must be transmitted.

**Note:** For compatibility with MSP 3415B, IMREG1 and IMREG2 have to be transmitted. The value for IMREG1 and IMREG2 is 004. Due to the partitioning to 8-bit units, the values  $04_{hex}$ ,  $40_{hex}$ , and  $00_{hex}$  arise.

#### 6.3.7. DCO-Registers

**Note:** The use of this register is no longer recommended. It should be used only in cases where software compatibility to the MSP 34x5D is required. Using the STANDARD SELECTION register together with the MODUS register provides a more economic way to program the MSP 34x5G.

When selecting a TV-sound standard by means of the STANDARD SELECT register, all frequency tuning is performed automatically.

IF manual setting of the tuning frequency is required, a set of 24-bit registers determining the mixing frequencies of the quadrature mixers can be written manually into the IC. In Table 6–15, some examples of DCO registers are listed. It is necessary to divide them up into low part and high part. The formula for the calculation of the registers for any chosen IF-Frequency is as follows:

$$INCR_{dec} = int(f/fs \cdot 2^{24})$$

with: int = integer function

f = IF-frequency in MHz

 $f_{S}$  = sampling frequency (18.432 MHz)

Conversion of INCR into hex-format and separation of the 12-bit low and high parts lead to the required register values (DCO1\_HI or \_LO for MSP-Ch1, DCO2\_HI or LO for MSP-Ch2).

	Terrestrial TV Standards								<b>FM - Satellite</b> FIR filter corresponds to a band-pass with a band- width of B = 130 to 500 kHz				f <sub>c</sub> frequency		
	B/G-, NICA		I NICA		L NICA		B/G-, D/K-, M-Dual FM	130 kHz	180 kHz	200 kHz	280 kHz	380 kHz	500 kHz	Auto- search	
Coef(i)	FIR1	FIR2	FIR1	FIR2	FIR1	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2	
0	-2	3	2	3	-2	-4	3	73	9	3	-8	-1	-1	-1	
1	-8	18	4	18	-8	-12	18	53	18	18	-8	-9	-1	-1	
2	-10	27	-6	27	-10	-9	27	64	28	27	4	-16	-8	-8	
3	10	48	-4	48	10	23	48	119	47	48	36	5	2	2	
4	50	66	40	66	50	79	66	101	55	66	78	65	59	59	
5	86	72	94	72	86	126	72	127	64	72	107	123	126	126	
Mode- REG[12]	(	)	(	)	(	)	0	1	1	1	1	1	1	0	
Mode- REG[13]	(	)	(	)	(	)	1	1	1	1	1	1	1	0	

Table 6–15: DCO registers for the MSP 34x5G; reset status: DCO\_HI/LO = "0000"

	DCO1_LO 00 93 <sub>hex</sub> , DCO1_HI 00 9B <sub>hex</sub> ; DCO2_LO 00 A3 <sub>hex</sub> , DCO2_HI 00 AB <sub>hex</sub>							
Freq. MHz	DCO_HI/hex	DCO_LO/hex	Freq. MHz	DCO_HI/hex	DCO_LO/hex			
4.5	03E8	000						
5.04 5.5 5.58 5.7421875	0460 04C6 04D8 04FC	0000 038E 0000 00AA	5.76 5.85 5.94	0500 0514 0528	0000 0000 0000			
6.0 6.2 6.5 6.552	0535 0561 05A4 05B0	0555 0C71 071C 0000	6.6 6.65 6.8	05BA 05C5 05E7	0AAA 0C71 01C7			
7.02	0618	0000	7.2	0640	0000			
7.38	0668	0000	7.56	0690	0000			

#### 6.4. Manual/Compatibility Mode: Description of Demodulator Read Registers

**Note:** The use of these register is no longer recommended. It should be used only in cases where software compatibility to the MSP 34x5D is required. Using the STANDARD SELECTION register together with the STATUS register provides a more economic way to program the MSP 34x5G and to retrieve information from the IC.

All registers except C\_AD\_BITs are 8 bit wide. They can be read out of the RAM of the MSP 34x5G if the MSP 34x5D compatibility mode is required.

All transmissions take place in 16-bit words. The valid 8-bit data are the 8 LSBs of the received data word.

If the Automatic Sound Select feature is not used, the NICAM or FM-identification parameters must be read and evaluated by the controller in order to enable appropriate switching of the channel select matrix of the baseband processing part. The FM-identification registers are described in Section 6.6.1. To handle the NICAM-sound and to observe the NICAM-quality, at least the registers C\_AD\_BITS and ERROR\_RATE must be read and evaluated by the controller. Additional data bits and CIB bits, if supplied by the NICAM transmitter, can be obtained by reading the registers ADD\_BITS and CIB\_BITS.

#### 6.4.1. NICAM Mode Control/Additional Data Bits Register

NICAM operation mode control bits and A[2:0] of the additional data bits.

Format:

MSE	3	C_AD_BITS 00 23 <sub>hex</sub> LSB							
11		7	6	5	4	3	2	1	0
Auto _FM		A[2]	A[1]	A[0]	C4	C3	C2	C1	S

**Important:** "S" = bit[0] indicates correct NICAM-synchronization (S = 1). If S = 0, the MSP 3415/3455G has not yet synchronized correctly to frame and sequence, or has lost synchronization. The remaining read registers are therefore not valid. The MSP mutes the NICAM output automatically and tries to synchronize again as long as MODE\_REG[6] is set.

The operation mode is coded by C4-C1 as shown in Table 6–16.

 Table 6–16: NICAM operation modes as defined by

 the EBU NICAM 728 specification

C4	C3	C2	C1	Operation Mode		
0	0	0	0	Stereo sound (NICAMA/B), independent mono sound (FM1)		
0	0	0	1	Two independent mono signals (NICAMA, FM1)		
0	0	1	0	Three independent mono channels (NICAMA, NICAMB, FM1)		
0	0	1	1	Data transmission only; no audio		
1	0	0	0	Stereo sound (NICAMA/B), FM1 carries same channel		
1	0	0	1	One mono signal (NICAMA). FM1 carries same channel as NICAMA		
1	0	1	0	Two independent mono channels (NICAMA, NICAMB). FM1 carries same channel as NICAMA		
1	0	1	1	Data transmission only; no audio		
x	1	x	x	Unimplemented sound coding option (not yet defined by EBU NICAM 728 specification)		
0: N	AUTO_FM: monitor bit for the AUTO_FM Status: 0: NICAM source is NICAM 1: NICAM source is FM					

**Note:** It is no longer necessary to read out and evaluate the C\_AD\_BITS. All evaluation is performed in the MSP and indicated in the STATUS register.

#### 6.4.2. Additional Data Bits Register

Contains the remaining 8 of the 11 additional data bits. The additional data bits are not yet defined by the NICAM 728 system.

Format:

MSB		ADD_BITS 00 38 <sub>hex</sub> LSB								
7	6	5	4	3	2	1	0			
A[10]	A[9]	A[8]	A[7]	A[6]	A[5]	A[4]	A[3]			

#### 6.4.3. CIB Bits Register

Cib bits 1 and 2 (see NICAM 728 specifications).

Format:

MSB		CIB_BITS 00 3E <sub>hex</sub> LSB								
7	6	5	4	3	2	1	0			
x	x	х	х	x	х	CIB1	CIB2			

#### 6.4.4. NICAM Error Rate Register

ERROR_RATE	00 57 <sub>hex</sub>
Error free	0000 <sub>hex</sub>
maximum error rate	07FF <sub>hex</sub>

Average error rate of the NICAM reception in a time interval of 182 ms, which should be close to 0. The initial and maximum value of ERROR\_RATE is 2047. This value is also active if the NICAM bit of MODE\_REG is not set. Since the value is achieved by filtering, a certain transition time (approx. 0.5 sec) is unavoidable. Acceptable audio may have error rates up to a value of 700 int. Individual evaluation of this value by the controller and an appropriate threshold may define the fallback mode from NICAM to FM/ AM-mono in case of poor NICAM reception.

The bit error rate per second (BER) can be calculated by means of the following formula:

BER= ERROR\_RATE \* 12.3\*10<sup>-6</sup> /s

#### 6.4.5. PLL\_CAPS Readback Register

It is possible to read out the actual setting of the PLL\_CAPS. In standard applications, this register is not of interest for the customer.

PLL_CAPS	02 1F <sub>hex</sub> L
minimum frequency	1111 1111 FF <sub>hex</sub>
nominal frequency	0101 0110 56 <sub>hex</sub> RESET
maximum frequency	0000 0000 00 <sub>hex</sub>
PLL_CAPS	02 1F <sub>hex</sub> H
PLL open	xxxx xxx0
PLL closed	xxxx xxx1

#### 6.4.6. AGC\_GAIN Readback Register

It is possible to read out the actual setting of AGC\_GAIN in Automatic Gain Mode. In standard applications, this register is not of interest for the customer

AGC_GAIN	02 1E <sub>hex</sub>
max. amplification (20 dB)	0001 0100 14 <sub>hex</sub>
min. amplification (3 dB)	0000 0000 00 <sub>hex</sub>

#### 6.4.7. Automatic Search Function for FM-Carrier Detection in Satellite Mode

The AM demodulation ability of the MSP 3415G and MSP 3455G offers the possibility to calculate the "field strength" of the momentarily selected FM carrier, which can be read out by the controller. In SAT receivers, this feature can be used to make automatic FM carrier search possible.

For this, the MSP has to be switched to AM-mode (MODE\_REG[8]), FM-Prescale must be set to  $7F_{hex}$ = +127<sub>dec</sub>, and the FM DC notch (see Section 6.5.7.) must be switched off. The sound-IF frequency range must now be "scanned" in the MSP-channel 2 by means of the programmable quadrature mixer with an appropriate incremental frequency (i.e. 10 kHz). After each incrementation, a field strength value is available at the quasi-peak detector output (quasi-peak detector source must be set to FM), which must be examined for relative maxima by the controller. This results in either continuing search or switching the MSP back to FM demodulation mode.

During the search process, the FIR2 must be loaded with the coefficient set "AUTOSEARCH", which enables small bandwidth, resulting in appropriate field strength characteristics. The absolute field strength value (can be read out of "quasi peak detector output FM1") also gives information on whether a main FM carrier or a subcarrier was detected; and as a practical consequence, the FM bandwidth (FIR1/2) and the deemphasis (50 µs or adaptive) can be switched accordingly.

Due to the fact that a constant demodulation frequency offset of a few kHz, leads to a DC level in the demodulated signal, further fine tuning of the found carrier can be achieved by evaluating the "DC Level Readout FM1". Therefore, the FM DC Notch must be switched on, and the demodulator part must be switched back to FM-demodulation mode.

For a detailed description of the automatic search function, please refer to the corresponding MSP Windows software.

#### 6.5. Manual/Compatibility Mode: Description of DSP Write Registers

#### 6.5.1. Additional Channel Matrix Modes

Loudspeaker Matrix	00 08 <sub>hex</sub>	L
SCART1 Matrix	00 0A <sub>hex</sub>	L
I <sup>2</sup> S Matrix	00 0B <sub>hex</sub>	L
Quasi-Peak Detector Matrix	00 0C <sub>hex</sub>	L
SUM/DIFF	0100 0000	40 <sub>hex</sub>
AB_XCHANGE	0101 0000	50 <sub>hex</sub>
PHASE_CHANGE_B	0110 0000	60 <sub>hex</sub>
PHASE_CHANGE_A	0111 0000	70 <sub>hex</sub>
A_ONLY	1000 0000	80 <sub>hex</sub>
B_ONLY	1001 0000	90 <sub>hex</sub>

This table shows more modes for the channel matrix registers.

The sum/difference mode can be used together with the quasi-peak detector to determine the sound material mode. If the difference signal on channel B (right) is near to zero, and the sum signal on channel A (left) is high, the incoming audio signal is mono. If there is a significant level on the difference signal, the incoming audio is stereo.

#### 6.5.2. Volume Modes of SCART1 Output

Volume Mode SCART1	00 07 <sub>hex</sub>	[3:0]	
linear	0000 RESET	0 <sub>hex</sub>	
logarithmic	0001	1 <sub>hex</sub>	

Linear Mode				
Volume SCART1	00 07 <sub>hex</sub> H			
OFF	0000 0000 RESET	00 <sub>hex</sub>		
0 dB gain (digital full scale (FS) to 2 V <sub>RMS</sub> output)	0100 0000	40 <sub>hex</sub>		
+6 dB gain (–6 dBFS to 2 V <sub>RMS</sub> output)	0111 1111	7F <sub>hex</sub>		

#### 6.5.3. FM Fixed Deemphasis

FM Deemphasis	00 0F <sub>hex</sub>	Н	
50 μs	0000 0000 RESET	00 <sub>hex</sub>	
75 μs	0000 0001	01 <sub>hex</sub>	
J17	0000 0100	04 <sub>hex</sub>	
OFF	0011 1111	3F <sub>hex</sub>	

**Note:** This register is initialized during STANDARD SELECTION and is automatically updated when Automatic Sound Select (MODUS[0]=1) is on.

#### 6.5.4. FM Adaptive Deemphasis

FM Adaptive Deemphasis WP1	00 0F <sub>hex</sub>	L
OFF	0000 0000 RESET	00 <sub>hex</sub>
WP1	0011 1111	3F <sub>hex</sub>

**Note:** This register is initialized during STANDARD SELECTION and is automatically updated when Automatic Sound Select (MODUS[0]=1) is on.

#### 6.5.5. NICAM Deemphasis

A J17 Deemphasis is always applied to the NICAM signal. It is not switchable.

#### 6.5.6. Identification Mode for A2 Stereo Systems

Identification Mode	00 15 <sub>hex</sub>	L	
Standard B/G (German Stereo)	0000 0000 RESET	00 <sub>hex</sub>	
Standard M (Korean Stereo)	0000 0001	01 <sub>hex</sub>	
Reset of Ident-Filter	0011 1111	3F <sub>hex</sub>	

To shorten the response time of the identification algorithm after a program change between two FM-Stereo capable programs, the reset of the ident-filter can be applied.

Sequence:

- 1. Program change
- 2. Reset ident-filter
- 3. Set identification mode back to standard B/G or M
- 4. Wait approx. 500 ms
- 5. Read stereo detection register

**Note:** This register is initialized during STANDARD SELECTION and is automatically updated when Automatic Sound Select (MODUS[0]=1) is on.

#### 6.5.7. FM DC Notch

The DC compensation filter (FM DC Notch) for FM input can be switched off. This is used to speed up the automatic search function (see Section 6.4.7.). In normal FM-mode, the FM DC Notch should be switched on.

FM DC Notch	00 17 <sub>hex</sub>	L
ON	0000 0000 Reset	00 <sub>hex</sub>
OFF	0011 1111	3F <sub>hex</sub>

#### 6.6. Manual/Compatibility Mode: Description of DSP Read Registers

All readable registers are 16-bit wide. Transmissions via I<sup>2</sup>C bus have to take place in 16-bit words. Some of the defined 16-bit words are divided into low and high byte, thus holding two different control entities.

These registers are not writable.

#### 6.6.1. Stereo Detection Register for A2 Stereo Systems

Stereo Detection Register	00 18 <sub>hex</sub> H
Stereo Mode	Reading (two's complement)
MONO	near zero
STEREO	positive value (ideal reception: 7F <sub>hex</sub> )
BILINGUAL	negative value (ideal reception: 80 <sub>hex)</sub>

**Note:** It is no longer necessary to read out and evaluate the A2 identification level. All evaluation is performed in the MSP and indicated in the STATUS register.

#### 6.6.2. DC Level Register

DC Level Readout FM1 (MSP-Ch2)	00 1B <sub>hex</sub>	H+L
DC Level Readout FM2 (MSP-Ch1)	00 1C <sub>hex</sub>	H+L
DC Level	[8000 <sub>hex</sub> 7FFF <sub>hex</sub> ] values are 16 bit two's complement	

The DC level register measures the DC component of the incoming FM signals (FM1 and FM2). This can be used for seek functions in satellite receivers and for IF FM frequencies fine tuning. A too low demodulation frequency (DCO) results in a positive DC-Level and vice versa. For further processing, the DC content of the demodulated FM signals is suppressed. The time constant  $\tau$ , defining the transition time of the DC Level Register, is approximately 28 ms.

#### 6.7. Demodulator Source Channels in Manual Mode

#### 6.7.1. Terrestric Sound Standards

Table 6–17 shows the source channel assignment of the demodulated signals in case of manual mode for all terrestric sound standards. See Table 2–2 for the assignment in the Automatic Sound Select mode. In manual mode for terrestric sound standards, only two demodulator sources are defined.

#### 6.7.2. SAT Sound Standards

Table 6–18 shows the source channel assignment of the demodulated signals for SAT sound standards.

#### 6.8. Exclusions of Audio Baseband Features

In general, all functions can be switched independently. Two exceptions exist:

- 1. NICAM cannot be processed simultaneously with the FM2 channel.
- 2. FM adaptive deemphasis cannot be processed simultaneously with FM-identification.

#### 6.9. Compatibility Restrictions to MSP 34x5D

The MSP 34x5G is fully hardware compatible to the MSP 34x5D. However, to substitute a MSP 34x5D by the corresponding MSP 34x5G, the controller software has to be adapted slightly:

- 1. The register FM-Matrix (00  $0E_{hex}$  low part) must be changed from "no matrix ( $00_{hex}$ )" to "sound A mono ( $03_{hex}$ )" during mono transmission of all TV-sound standards (see also Table 6–17).
- 2. With the MSP 34x5G, the STANDARD SELECTION initializes the FM-deemphasis, which is not the case for the MSP 34x5D. So, if STANDARD SELECTION is applied, this I<sup>2</sup>C instruction can be omitted.

#### Table 6–17: Manual Sound Select Mode for Terrestric Sound Standards

				Source Channels of	Sound Select Block				
Broadcasted Sound Standard	nd Standard Sound Mode		FM Matrix	<b>FM/AM</b> (use 0 for channel select)	Stereo or A/B (use 1 for channel select)				
B/G-FM	03	MONO	Sound A Mono	Mono	Mono				
D/K-FM M-Korea M-Japan	04, 05 02 30	STEREO	German Stereo Korean Stereo	Stereo	Stereo				
		BILINGUAL, Languages A and B	No Matrix	Left = A Right = B	Left = A Right = B				
B/G-NICAM L-NICAM I-NICAM D/K-NICAM	NICAM 09 or N NICAM 0A too h	NICAM not available or NICAM error rate too high	Sound A Mono <sup>1)</sup>	analog Mono	no sound with AUTO_FM: analog Mono				
D/K-NICAM (with high	0C 0D	MONO	Sound A Mono <sup>1)</sup>	analog Mono	NICAM Mono				
deviation FM)		STEREO	Sound A Mono <sup>1)</sup>	nd A Mono <sup>1)</sup> analog Mono	NICAM Stereo				
		BILINGUAL, Languages A and B	Sound A Mono <sup>1)</sup>	analog Mono	Left = NICAM A Right = NICAM B				
		MONO	Sound A Mono	Mono	Mono				
	20	STEREO	Korean Stereo	Stereo	Stereo				
	20	MONO + SAP	Sound A Mono	Mono	Mono				
BTSC		STEREO + SAP	Korean Stereo	Stereo	Stereo				
БТОО		MONO	Sound A Mono	Mono	Mono				
	21	STEREO		Woho	Mono				
	21	MONO + SAP	No Matrix	Left = Mono	Left = Mono				
		STEREO + SAP		Right = SAP	Right = SAP				
FM-Radio	40	MONO	Sound A Mono	Mono	Mono				
		STEREO	Korean Stereo	Stereo	Stereo				
<sup>1)</sup> Automatic ref	<sup>1)</sup> Automatic refresh to Sound A Mono, do not write any other value to the register FM Matrix!								

#### Table 6-18: Manual Sound Select Modes for SAT-Standards

			Source Ch	annels of Sound S	elect Block for S	AT-Modes	
Broadcasted Sound Standard	Selected MSP Standard Code	Broadcasted Sound Mode	FM Matrix	FM/AM (source select: 0)	Stereo or A/B (source select: 1)	Stereo or A (source select: 3)	Stereo or B (source select: 4)
	6, 50 <sub>hex</sub>	MONO	Sound A Mono	Mono	Mono	Mono	Mono
FM SAT	51 <sub>hex</sub>	STEREO	No Matrix	Stereo	Stereo	Stereo	Stereo
		BILINGUAL	No Matrix	Left = A (FM1) Right = B (FM2)	Left = A (FM1) Right = B (FM2)	A (FM1)	B (FM2)

#### 7. Appendix D: Application Information

#### 7.1. Phase Relationship of Analog Outputs

The user does not need to correct output phases when using the loudspeaker output directly. The SCART1 output has opposite phase.

The following schematics shows the phase relationship of all analog inputs and outputs.


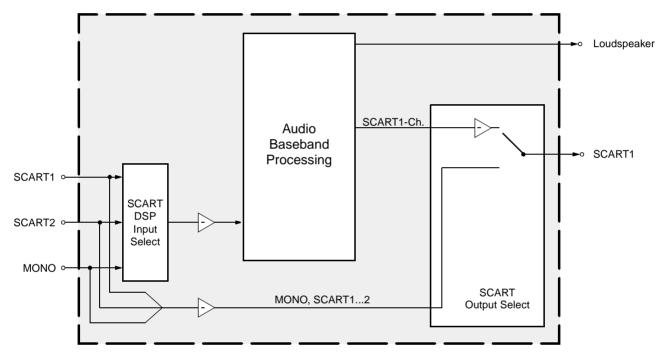


Fig. 7-1: Phase diagram of the MSP 34x5G

#### 7.2. Application Circuit

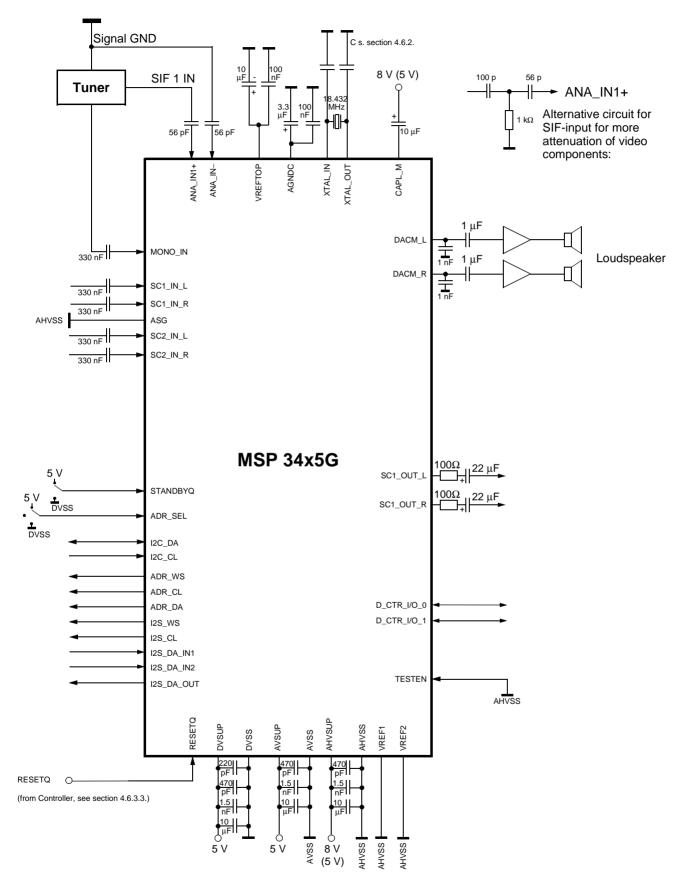

#### 8. Appendix E: MSP 34x5G Version History

#### MSP 3435G-A2

First release for BTSC-Stereo/SAP and FM-Radio.

#### MSP 34x5G-B5

- additional package PLQFP64
- digital input specification changed as of version B5 and later (see Section 4.6. on page 53)
- max. analog high supply voltage AHVSUP 8.7 V.
- supply currents changed as of version B5 and later (see Section 4.6.3. on page 58)
- programmable A2 and carrier mute thresholds
- new D/K standard 0D<sub>hex</sub>: HDEV3 and NICAM
- additional preference in Automatic Standard Detection

#### MSP 34x5G-B6

- improved AM-performance (see page 69)
- new D/K standard for Poland (see Table 3–7 on page 20)
- improved I<sup>2</sup>C hardware problem handling (see Section 3.1.1. on page 15)
- faster system-D/K-loop for stereo detection
- extended features in the CONTROL register (see Section 3.1.2. on page 16)

#### MSP 34x5G-B8

- fine-tuning of A2-identification and carrier mute
- EIA-J identification: faster transition time stereo/ bilingual to mono
- J17 FM-deemphasis implemented
- input specification for RESETQ and TESTEN changed

Micronas GmbH Hans-Bunte-Strasse 19 D-79108 Freiburg (Germany) P.O. Box 840 D-79008 Freiburg (Germany) Tel. +49-761-517-0 Fax +49-761-517-2174 E-mail: docservice@micronas.com Internet: www.micronas.com

Printed in Germany Order No. 6251-480-3PD

#### 9. Data Sheet History

1. Preliminary data sheet: "MSP 34x5G Multistandard Sound Processor Family, Edition Oct. 26, 1998, 6251-480-1PD. First release of the preliminary data sheet.

2. Preliminary data sheet: "MSP 34x5G Multistandard Sound Processor Family", Edition July 11, 2000, 6251-480-2PD. Second release of the preliminary data sheet. Major changes:

- section Specifications: specification for PLQFP64 package added
- specification for version B5 and B6 added (see Appendix E: Version History)
- reset description modified
- I<sup>2</sup>S and ADR functionality added
- MSP 3425G and MSP 3465G added
- Multistandard controller software flow diagram added

3. Preliminary data sheet: "MSP 34x5G Multistandard Sound Processor Family", March 5, 2001, 6251-480-3PD. Third release of the preliminary data sheet. Major changes:

- Section 4.2.: pin allocation for PLQFP64 corrected
- I<sup>2</sup>C-bus description changed
- ACB register: documentation for bit allocation D\_CTR\_I/O changed

All information and data contained in this data sheet are without any commitment, are not to be considered as an offer for conclusion of a contract, nor shall they be construed as to create any liability. Any new issue of this data sheet invalidates previous issues. Product availability and delivery are exclusively subject to our respective order confirmation form; the same applies to orders based on development samples delivered. By this publication, Micronas GmbH does not assume responsibility for patent infringements or other rights of third parties which may result from its use.

Further, Micronas GmbH reserves the right to revise this publication and to make changes to its content, at any time, without obligation to notify any person or entity of such revisions or changes.

No part of this publication may be reproduced, photocopied, stored on a retrieval system, or transmitted without the express written consent of Micronas GmbH.



**Preliminary Data Sheet Supplement** 

Subject:	MSP 34xxG Version History			
Data Sheet Concerned:	All MSP 34xxG Data Sheets			
Supplement:	No. 2/ 6251-525-2PDS			
Edition:	Oct. 11, 2000			

#### Version Changes within the MSP 34xxG Family:

For a detailed description of the below-mentioned items, see the corresponding data sheets. For quick reference, check the version history in the data sheet appendices.

	MSP 34x0G	A4	B4	B5	B6	B8
	MSP 34x1G		A1		A2	B8
	MSP 34x2G				A1	
	MSP 34x5G	A4		B5	B6	B8
	MSP 34x7G				B6	B8
technology		0.8 µ	0.5 µ	0.5 µ	0.5 µ	0.45 µ
power dissipation (typical) at 8 V operation	MSP 34x0/x1/x5/x7 MSP 34x2	740 mW	640 mW	640 mW	640 mW 690 mW	600 mW
digital input specification change				х	х	х
specification of max. analog high voltage (AHVSUP)		8.4 V	8.4 V	8.7 V	8.7 V	8.7 V
programmable A2 and carrier mute thresholds				х	х	х
new Standard Select Mode 0D <sub>hex</sub> : D/K-NICAM together with HDEV3 FM mode				х	х	х
additional preference "color" for 4.5 MHz carrier in Automatic Standard Detection				х	х	х
improved AM-performance (better SNR and THD)					х	х
new Standard Select Mode 07 <sub>hex</sub> : D/K3 for Poland					х	х
faster system D/K loop for stereo detection (standards 4, 5, 7, B with ASS = on)					х	х
improved I <sup>2</sup> C hardware problem handling					х	х
extended features in the CONTROL register (readout hardware / reset status)					х	х
Micronas Dynamic Bass (MDB)	MSP 34x0/x1/x2				х	х
Micronas Dynamic Bass (improved MDB)	MSP 34x0/x1/x2					х
faster identification for all standards, major speedup of identification for EIA-J standard						х
faster carrier mute						х
J17 deemphasis						х

This datasheet has been downloaded from:

www.DatasheetCatalog.com

Datasheets for electronic components.