 


## Chapter 5: Jumper Settings

### D-LINK

### DE - 220 P C A T

<b>NIC Type</b>	Ethernet
<b>Transfer Rate</b>	10Mbps
<b>Data Bus</b>	16-bit ISA
<b>Topology</b>	Linear Bus/Star
<b>Wiring Type</b>	Unshielded twisted pair AUI Transceiver via DB-15 port RG-58A/U 50ohm coaxial
<b>Boot ROM</b>	Available



N0895

DIAGNOSTIC LED(S)		
LED	Status	Condition
LED1	On	Power on
LED1	Blinking	Data is being transmitted/received (UTP only)
LED1	Off	Power off
LED2	On	Network connection is good
LED2	Blinking	Data is being transmitted/received (UTP only)
LED2	Off	Network connection is broken
LED3	On	Collision detected on network
LED3	Off	No collision detected on network
LED4	On	Network connection is broken (BNC only)
LED4	Blinking	Card is transmitting for an extended time (jabber)
LED4	Off	Normal operation