


Chapter 5: Jumper Settings

OLIVETTI

NCU 9113/NCU 9114 (LCX1 PC9/11,PC13)

NIC Type	Ethernet
Transfer Rate	10Mbps
Data Bus	8-bit ISA
Topology	Star
Wiring Type	Unshielded twisted pair
Boot ROM	Available

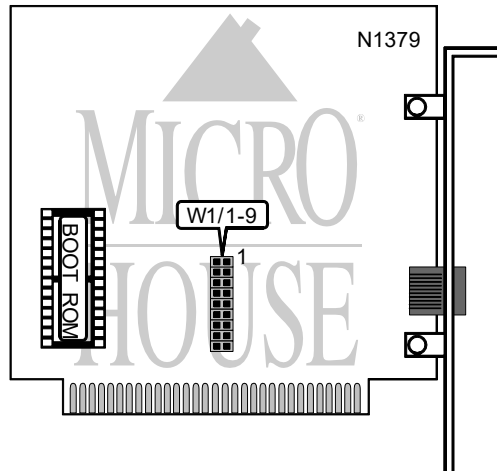

BOOT ROM CONFIGURATION	
Setting	W1/1
Enabled	Closed
Disabled	Open

USER CONFIGURABLE SETTINGS		
Purpose	Location	Setting
í Factory configured - do not alter	W1/2	Open

Continued next page...

THE NETWORK INTERFACE CARD TECHNICAL GUIDE
OLIVETTI
NCU 9113/NCU 9114 (LCX1 PC9/11,PC13)

... continued from previous page.

BIOS ADDRESS SELECTION					
Address	W1/3	W1/4	W1/5	W1/6	W1/7
C8000h	Closed	Closed	Open	Closed	Closed
CA000h	Open	Closed	Open	Closed	Closed
CC000h	Closed	Open	Open	Closed	Closed
CE000h	Open	Open	Open	Closed	Closed
D0000h	Closed	Closed	Closed	Open	Closed
D2000h	Open	Closed	Closed	Open	Closed
D4000h	Closed	Open	Closed	Open	Closed
D6000h	Open	Open	Closed	Open	Closed
D8000h	Closed	Closed	Open	Open	Closed
DA000h	Open	Closed	Open	Open	Closed
DC000h	Closed	Open	Open	Open	Closed
DE000h	Open	Open	Open	Open	Closed
E0000h	Closed	Closed	Closed	Closed	Open
E2000h	Open	Closed	Closed	Closed	Open
E4000h	Closed	Open	Closed	Closed	Open
E6000h	Open	Open	Closed	Closed	Open
E8000h	Closed	Closed	Open	Closed	Open
EA000h	Open	Closed	Open	Closed	Open
EC000h	Closed	Open	Open	Closed	Open
EE000h	Open	Open	Open	Closed	Open

INTERRUPT SELECTION		
IRQ	W1/8	W1/9
2	Closed	Open
3	Open	Closed