
## **Chapter 5: Jumper Settings** OLÍVETTI NCU 9142 ASSY 7920-XX

Ethernet 10Mbps 8-bit ISA NIC Type Transfer Rate Data Bus

Linear Bus
AUI Transceiver via DB-15 port
RG-58A/U 50ohm coaxial Topology Wiring Type

**Boot ROM** Available

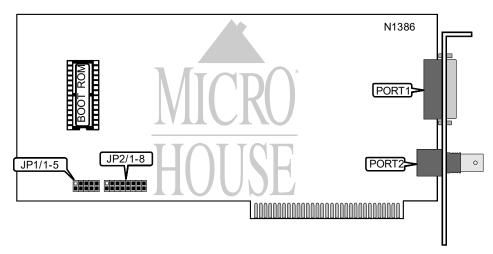

CONNECTIONS						
Purpose	Location	Purpose	Location			
AUI Transceiver via DB-15 port	PORT1	G-58A/U 50ohm coaxial port	PORT2			

BIOS ADDRESS SELECTION								
Address	JP1/1	JP1/2	JP1/3	JP1/4	JP1/5			
í Disabled	Closed	Open	Open	Open	Open			
DC000h	Open	Closed	Open	Open	Open			
D8000h	Open	Open	Closed	Open	Open			
CC000h	Open	Open	Open	Closed	Open			
C8000h	Open	Open	Open	Open	Closed			

Continued next page...

## THE NETWORK INTERFACE CARD TECHNICAL GUIDE OLIVETTI NCU 9142 ASSY 7920-XX

. . . continued from previous page.

BASE I/O ADDRESS SELECTION								
Address	JP2/1	JP2/2	JP2/3	JP2/4	JP2/5	JP2/6	JP2/7	JP2/8
í 300h	Closed	Open						
310h	Open	Closed	Open	Open	Open	Open	Open	Open
330h	Open	Open	Closed	Open	Open	Open	Open	Open
350h	Open	Open	Open	Closed	Open	Open	Open	Open
250h	Open	Open	Open	Open	Closed	Open	Open	Open
280h	Open	Open	Open	Open	Open	Closed	Open	Open
2A0h	Open	Open	Open	Open	Open	Open	Closed	Open
2E0h	Open	Closed						