


# EAGLE TECHNOLOGY NE32HUB-BASE

**NIC Type** Ethernet  
**Network Transfer Rate** 10Mbps x 12  
**Data Bus** EISA  
**Topology** Star  
**Wiring Type** Unshielded twisted pair  
**Boot ROM** Not available

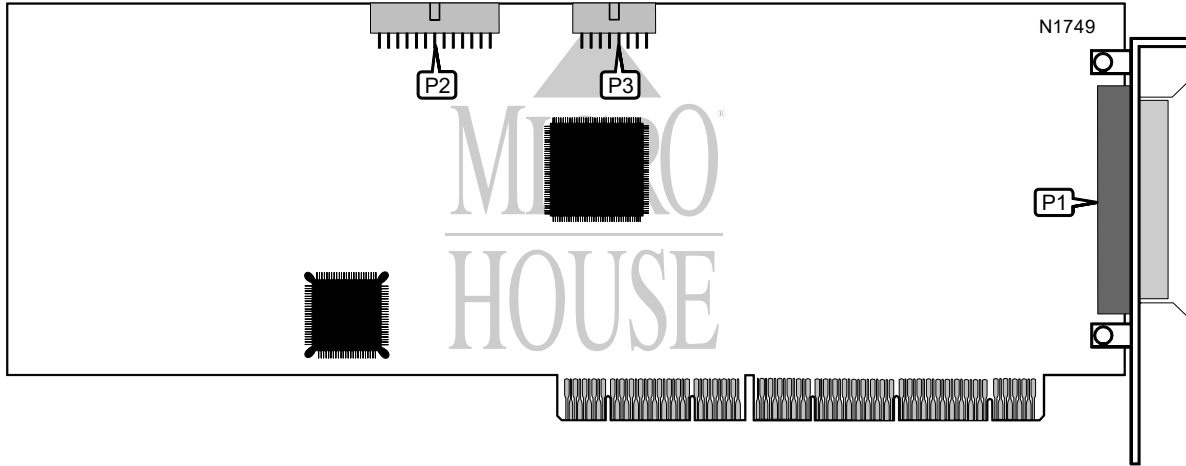

CONNECTIONS			
Function	Label	Function	Label
Unshielded twisted pair ports (12)	P1	NE32HUB-PME connector	P3
NE32HUB-TPE connector	P2		
Note: Standard RJ-45 unshielded twisted pair connectors are provided on an included cable and external box.			

MISCELLANEOUS TECHNICAL NOTES
When viewed from the rear of the machine, the NE32HUB-Base card must be installed to the left of all other NE32HUB cards. Only one NE32HUB-Base card may be installed per system. For the NE32HUB-TPE and NE32HUB-PME cards, see documents N1750 and N1751.