
CREATIVE LABS, INC. 16-BIT AUDIO CARD (MIDI VER.3)

Card Type Sound card
Chip Set Unidentified
Maximum Onboard Memory Unidentified

I/O Options Game/MIDI port, CD-ROM audio in, microphone in, line in, line out,

speaker out, wavetable connector, PC speaker connector

Data Bus 16-bit ISA

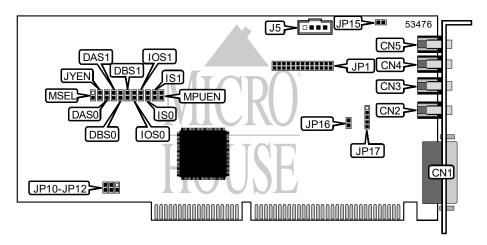

CONNECTIONS			
Function	Label	Function	Label
Game/MIDI port	CN1	Audio in - CD-ROM	J5
Speaker out	CN2	Wavetable connector JP	
Line out	CN3	N3 PC Speaker connector JP	
Microphone in	CN4	Unidentified JP16	
Line in	CN5	Unidentified JP17	

USER CONFIGURABLE SETTINGS		
Function	Label	Position
í MPU I/O address 330h	MSEL	Closed
MPU I/O address 300h	MSEL	Open
í MPU-401 enabled	MPUEN	Closed
MPU-401 disabled	MPUEN	Open
í Joystick enabled	JYEN	Closed
Joystick disabled	JYEN	Open

BASE I/O ADDRESS			
Setting	IOS1		
í 220h	Closed	Closed	
240h	Closed	Open	
260h	Open	Closed	
280h	Open	Open	

Continued on next page . . .

CREATIVE LABS, INC. 16-BIT AUDIO CARD (MIDI VER.3)

. . . continued from previous page

- 1			
		LOW DMA CHANNEL S	ELECTION
	Setting	DAS0	DAS1
	DMA 0	Closed	Closed
	íDMA 1	Open	Closed
	DMA 3	Closed	Open
	Disabled	Open	Open

HIGH DMA CHANNEL SELECTION		
Setting	DBS0	DBS1
íDMA 5	Closed	Closed
DMA 6	Open	Closed
DMA 7	Closed	Open
Low DMA enabled	Open	Open

INTERRUPT SELECTION			
IRQ	IS0	IS1	
2	Closed	Closed	
í 5	Closed	Open	
7	Open	Closed	
10	Open	Open	

MITSUMI INTERRUPT SELECTION			
IRQ	JP10	JP11	JP12
3	Closed	Open	Open
10	Open	Closed	Open
11	Open	Open	Closed
Disable	Open	Open	Open