


ISA SUPER I/O CARD
TS5188 ISA USER'S MANUAL

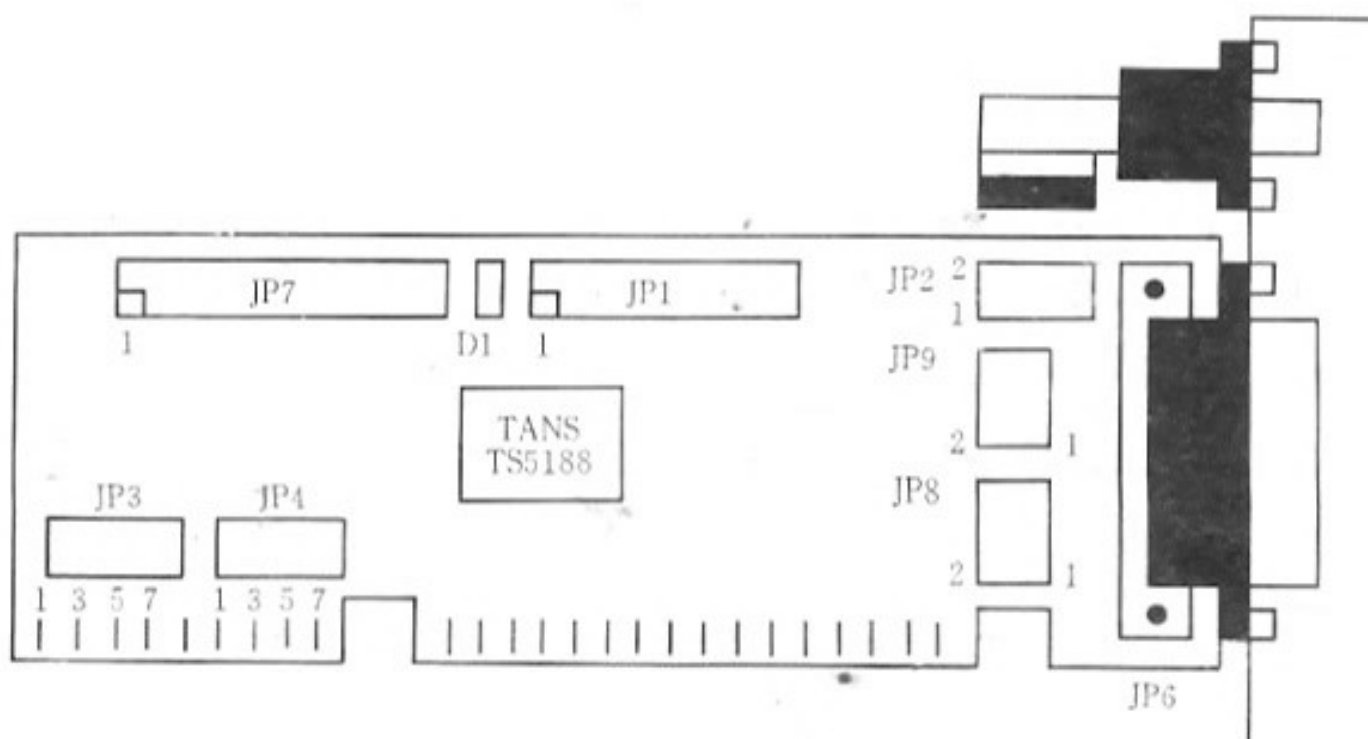

D1: HDD LED CONNECTOR
 JP7: HDD CONNECTOR
 JP1: FDD CONNECTOR
 JP2: GAME PORT CONNECTOR
 JP6: PRINTER PORT CONNECTOR
 JP9: SERIAL PORT 2 CONNECTOR
 JP8: SERIAL PORT 1 CONNECTOR

JP3 :

1-2 ON	HDD ENABLE	(Default)
1-2 OFF	HDD DISABLE	
3-4 ON	FDD ENABLE	(Default)
3-4 OFF	FDD DISABLE	
5-6 ON	FDD A/B CHANGE MODE	
5-6 OFF	FDD NORMAL MODE	(Default)
7-8 ON	GAME PORT ENABLE	(Default)
7-8 OFF	GAME PORT DISABLE	

9-10	11-12	PRINTER	PORT
ON	ON	LPT3 (\$ 3BC - \$ 3BE)	
OFF	ON	LPT2 (\$ 278 - \$ 27A)	
ON	OFF	LPT1 (\$ 378 - \$ 37A)	(Default)
OFF	OFF	DISABLE	

JP4 :

1-2	3-4	5-6	7-8	PORT 1 (JP7)	PORT 2 (JP8)
ON	ON	OFF	ON	COM1	COM2 (Default)
ON	ON	ON	OFF	COM1	COM4
ON	ON	OFF	OFF	COM1	DISABLE
ON	OFF	OFF	ON	COM3	COM2
ON	OFF	ON	OFF	COM3	COM4
ON	OFF	OFF	OFF	COM3	DISABLE
OFF	OFF	OFF	ON	DISABLE	COM2
OFF	OFF	ON	OFF	DISABLE	COM4
OFF	OFF	OFF	OFF	DISABLE	DISABLE

COM1 \$ 3F8 - \$ 3FF, IRQ4

COM2 \$ 2F8 - \$ 2FF, IRQ3

COM3 \$ 3E8 - \$ 3EF, IRQ4

COM4 \$ 2E8 - \$ 2EF, IRQ3