


# TANDY/RADIO SHACK 1000 SL/2

<b>Processor</b>	8086
<b>Processor Speed</b>	4/8MHz
<b>Chip Set</b>	Tandy
<b>Max. Onboard DRAM</b>	640KB
<b>Cache</b>	None
<b>BIOS</b>	Phoenix
<b>Dimensions</b>	330mm x 218mm
<b>I/O Options</b>	Proprietary printer interface, serial ports (2), monitor port
<b>NPU Options</b>	8087

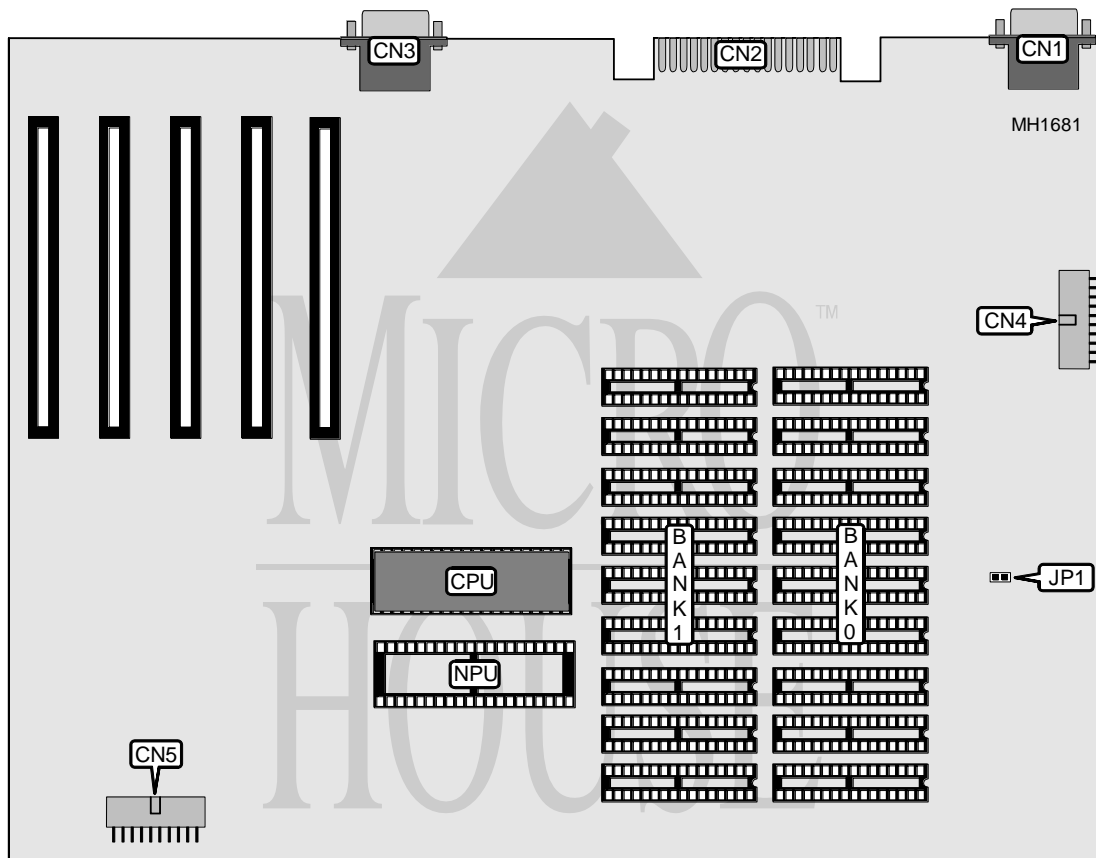

CONNECTIONS			
Purpose	Location	Purpose	Location
Serial port	CN1	Keyboard/Joystick satellite board	CN4
Proprietary printer interface	CN2	Audio control satellite board	CN5
Monitor	CN3		

*Continued on next page . . .*

# TANDY/RADIO SHACK

## 1000 SL/2

... continued from previous page

USER CONFIGURABLE SETTINGS		
Function	Jumper	Position
í Factory configured - do not alter	JP1	N/A
í Microphone audio jumper	E2 & E3	Closed
Line audio device	E1 & E2	Closed
Note: Mic/line jumper located on audio control satellite board.		

DRAM CONFIGURATION		
Size	Bank 0	Bank 2
512KB	(9) 4864	NONE
640KB	(9) 4864	(9) 4816