


# UNIDENTIFIED G 2 - A 2 8 6

<b>Processor</b>	80286 (Exact location unknown)
<b>Processor Speed</b>	12/16MHz
<b>Chip Set</b>	Unknown
<b>Max. Onboard DRAM</b>	4MB
<b>Cache</b>	None
<b>BIOS</b>	AMI
<b>Dimensions</b>	220mm x 220mm
<b>I/O Options</b>	None
<b>NPU Options</b>	80287 (Exact location unknown)

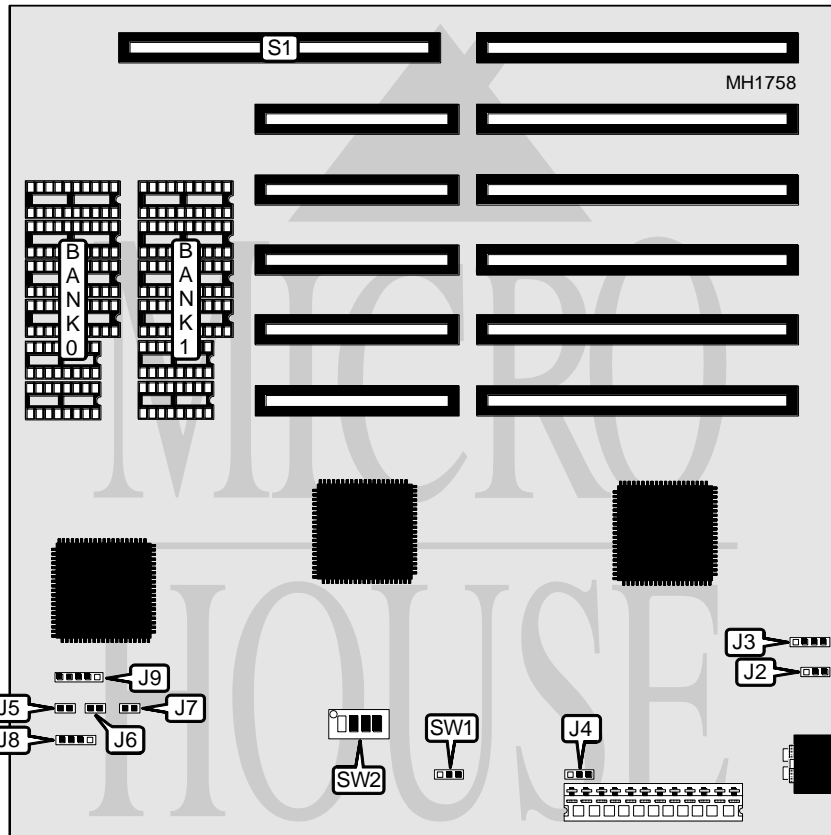

CONNECTIONS			
Purpose	Location	Purpose	Location
External battery	J3	Speaker	J8
Turbo LED	J5	Power LED & keylock	J9
Reset switch	J6	External memory card slot	S1
Turbo switch	J7		

Continued on next page . . .

# UNIDENTIFIED

## G 2 - A 2 8 6

... continued from previous page

USER CONFIGURABLE SETTINGS		
Function	Jumpe/Switchr	Position
í Internal battery	J2	pins 1 & 2 closed
External battery	J2	pins 2 & 3 closed
í Power good signal detect from power supply	J4	pins 1 & 2 closed
Power good signal detect from board	J4	pins 2 & 3 closed
í Monitor type select color	SW1	pins 1 & 2 closed
Monitor type select monochrome	SW1	pins 2 & 3 closed
í RAM relocation enabled	SW2/switch 4	Off
RAM relocation disabled	SW2/switch 4	On

DRAM CONFIGURATION							
Size	Bank 0	Bank 1	Bank 2	Bank 3	SW2/1	SW2/2	SW2/3
512KB	(4) 44256	NONE	N/A	N/A	Off	Off	Off
1MB	(4) 44256	(4) 44256	N/A	N/A	Off	On	Off
2MB	N/A	N/A	(4) 256K x 9	NONE	On	Off	Off
4MB	N/A	N/A	(4) 256K x 9	(4) 256K x 9	On	On	Off
Note: Bank 2 & Bank 3 can be found on the external memory card. Memory card and Onboard memory cannot be used at the same time.							