


UNIDENTIFIED TURBO MAINBOARD (4.77/10MHZ)

| | |
|-------------------------------|---------------|
| Processor | 8088 |
| Processor Speed | 4.77/10MHz |
| Chip Set | Unidentified |
| Video Chip Set | None |
| Maximum Onboard Memory | 640KB |
| Maximum Video Memory | None |
| Cache | None |
| BIOS | Unidentified |
| Dimensions | 276mm x 196mm |
| I/O Options | None |
| NPU Options | 8087 |

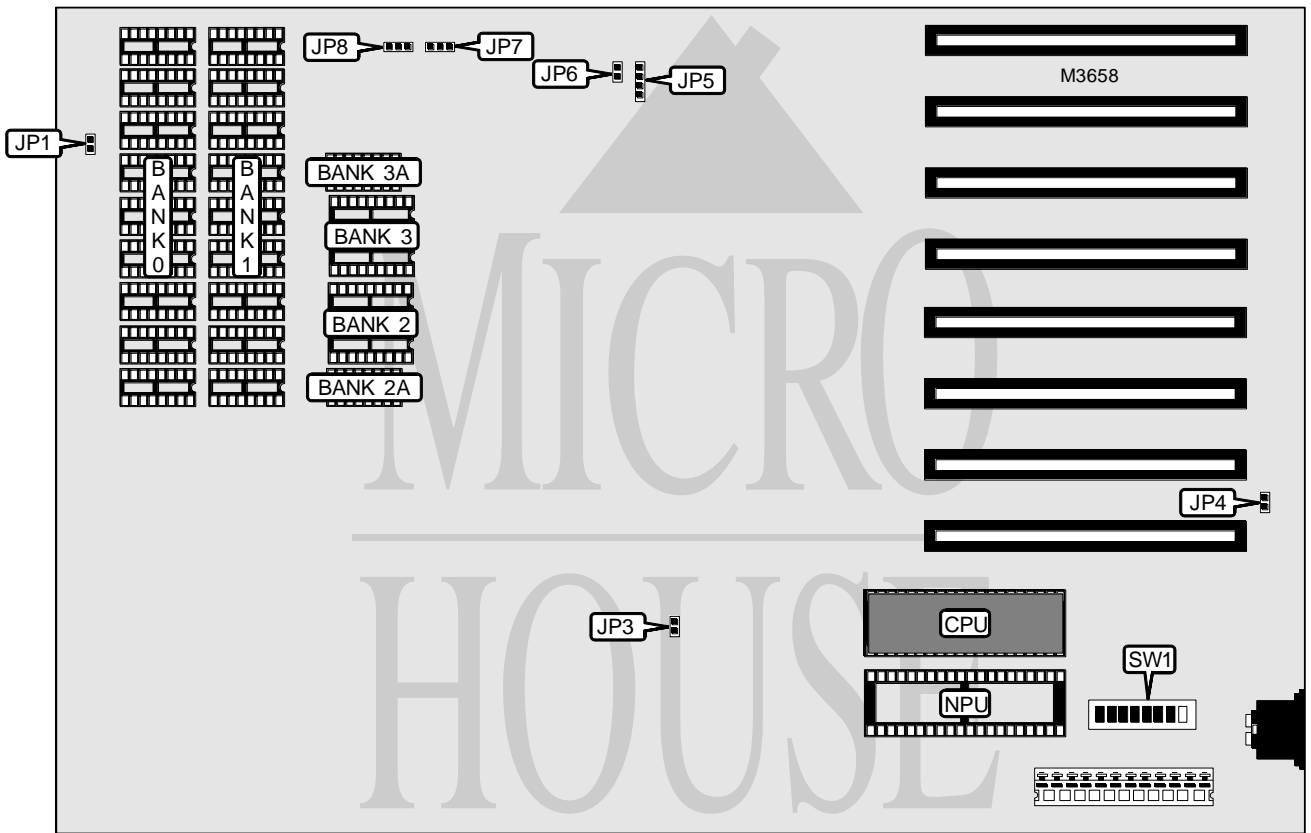

| CONNECTIONS | | | |
|--------------|----------|--------------|----------------|
| Purpose | Location | Purpose | Location |
| Speaker | JP1 | Turbo LED | JP5 pins 1 & 2 |
| Keylock | JP3 | Power LED | JP5 pins 3 & 4 |
| Reset switch | JP4 | Turbo switch | JP6 |

Continued on next page . . .

UNIDENTIFIED TURBO MAINBOARD (4.77/10MHZ)

... continued from previous page

| USER CONFIGURABLE SETTINGS | | |
|-------------------------------------|-------|----------|
| Function | Label | Position |
| í Factory configured - do not alter | SW1/1 | Off |
| í NPU not installed | SW1/2 | On |
| NPU installed | SW1/2 | Off |
| í Factory configured - do not alter | SW1/3 | Off |
| í Factory configured - do not alter | SW1/4 | Off |

| DRAM CONFIGURATION | | | | | | |
|--------------------|-----------|-----------|----------|----------|----------|----------|
| Size | Bank 0 | Bank 1 | Bank 2 | Bank 2A | Bank 3 | Bank 3A |
| 256KB | (9) 41256 | None | None | None | None | None |
| 512KB | (9) 41256 | (9) 41256 | None | None | None | None |
| 576KB | (9) 41256 | (9) 41256 | (2) 4464 | (1) 4164 | None | None |
| 640KB | (9) 41256 | (9) 41256 | (2) 4464 | (1) 4164 | (2) 4464 | (1) 4164 |

| FLOPPY DRIVE SELECTION | | |
|------------------------|-------|-------|
| Drives installed | SW1/7 | SW1/8 |
| 1 | On | On |
| 2 | Off | On |
| 3 | On | Off |
| 4 | Off | Off |

| MONITOR SELECTION | | |
|-------------------|-------|-------|
| Type | SW1/5 | SW1/6 |
| None | On | On |
| Color (40 x 20) | Off | On |
| Color (80 x 25) | On | Off |
| Monochrome | Off | Off |

| TURBO SELECTION | | |
|--|-------------------|-------------------|
| Type | JP7 | JP8 |
| Always in turbo mode | Pins 1 & 2 closed | Pins 2 & 3 closed |
| Turbo select through software | Pins 2 & 3 closed | Pins 1 & 2 closed |
| Turbo select through software & keyboard | Pins 1 & 2 closed | Pins 1 & 2 closed |

Note: To toggle between normal and turbo modes, press CTRL, ALT, + to enable turbo and CTRL, ALT, - to disable turbo.