
ASUS COMPUTER INTERNATIONAL KN-97 (REV. 1.03)

Processor	Pentium Pro/Pentium II
Processor Speed	150/166/180/200/233/266/300/333MHz
Chip Set	Intel
Video Chip Set	None
Maximum Onboard Memory	384MB (EDO supported)
Maximum Video Memory	None
Cache	256/512KB (located on Pentium Pro/Pentium II CPU)
BIOS	Unidentified
Dimensions	330mm x 218mm
I/O Options	32-bit PCI slots (5), floppy drive interface, green PC connector, IDE interfaces
	(2), parallel port, PS/2 mouse interface, serial ports (2), IR connector, USB
	connector
NPU Options	None

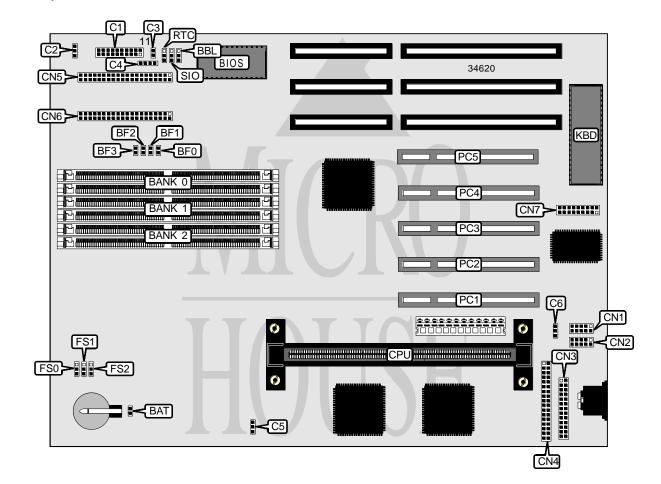

Continued on next page. . .

ASUS COMPUTER INTERNATIONAL KN-97 (REV. 1.03)

... continued from previous page

CONNECTIONS							
Purpose	Location	Purpose	Location				
Power LED & keylock	C1/pins 1 - 5	Power fan	C6				
Speaker	C1/pins 7 - 10	Serial port 1	CN1				
Message LED	C1/pins 12 & 13	Serial port 2	CN2				
Green PC connector	C1/pins 14 & 15	Parallel port	CN3				
Soft off power supply	C1/pins 16 & 17	Floppy drive interface	CN4				
Reset switch	C1/pins 19 & 20	IDE interface 1	CN5				
Chassis fan power	C2	IDE interface 2	CN6				
IDE interface LED	C3	USB, PS/2 mouse, IR connector	CN7				
Chassis alarm	C4	32-bit PCI slots	PC1 – PC5				
CPU fan power	C5						

	USER CONFIGURABLE SETTINGS							
	Function Label Po							
í	Battery current test disabled	BAT	Closed					
	Battery current test enabled	BAT	Open					
í	Flash BIOS boot block write protect disabled	BBL	Pins 1 & 2 closed					
	Flash BIOS boot block write protect enabled	BBL	Pins 2 & 3 closed					
í	CMOS memory normal operation	RTC	Pins 1 & 2 closed					
	CMOS memory clear	RTC	Pins 2 & 3 closed					
í	On board I/O enabled	SIO	Pins 1 & 2 closed					
	On board I/0 disabled	SIO	Pins 2 & 3 closed					

SIMM CONFIGURATION						
Size	Bank 0	Bank 1	Bank 2			
8MB	(2) 1M x 36	None	None			
16MB	(2) 1M x 36	(2) 1M x 36	None			
16MB	(2) 2M x 36	None	None			
24MB	(2) 1M x 36	(2) 1M x 36	(2) 1M x 36			
32MB	(2) 2M x 36	(2) 2M x 36	None			
32MB	(2) 4M x 36	None	None			
48MB	(2) 2M x 36	(2) 2M x 36	(2) 2M x 36			
64MB	(2) 4M x 36	(2) 4M x 36	None			
64MB	(2) 8M x 36	None	None			
96MB	(2) 4M x 36	(2) 4M x 36	(2) 4M x 36			
128MB	(2) 8M x 36	(2) 8M x 36	None			
128MB	(2) 16M x 36	None	None			
192MB	(2) 8M x 36	(2) 8M x 36	(2) 8M x 36			
256MB	(2) 16M x 36	(2) 16M x 36	None			
384MB	(2) 16M x 36	(2) 16M x 36	(2) 16M x 36			
Note: Board accepts EDO memory.						

Continued on next page. . .

ASUS COMPUTER INTERNATIONAL KN-97 (REV. 1.03)

... continued from previous page

	CACHE CONFIGURATION	
Note:	256KB/512KB cache is located on the Pentium Pro/Pentium II CPU.	

CPU SPEED SELECTION (PENTIUM PRO)							
CPU speed Clock speed Multiplier BF0 BF1 BF2 BF3							
150MHz	66MHz	2.5x	Open	Closed	Closed	Closed	
166MHz	60MHz	2.5x	Open	Closed	Closed	Closed	
180MHz	66MHz	3x	Closed	Open	Closed	Closed	
200MHz	66MHz	3x	Closed	Open	Closed	Closed	
Note: Pins designated should be in the closed position.							

CPU SPEED SELECTION (PENTIUM PRO, CON'T)							
CPU speed	Clock speed	Multiplier	FS0	FS1	FS2		
150MHz	66MHz	2.5x	2&3	1&2	1&2		
166MHz	60MHz	2.5x	1&2	1&2	1&2		
180MHz	66MHz	3x	2&3	1&2	1&2		
200MHz	66MHz	3x	1&2	1&2	1 & 2		
Note: Pins designated should be in the closed position.							

CPU SPEED SELECTION (PENTIUM II)								
CPU speed Clock speed Multiplier BF0 BF1 BF2 BF3								
233MHz	66MHz	3.5x	Open	Open	Closed	Closed		
266MHz	66MHz	4x	Closed	Closed	Open	Closed		
300MHz	66MHz	4.5x	Open	Closed	Open	Closed		
333MHz	66MHz	5x	Closed	Open	Open	Closed		
Note: Pins desi	Note: Pins designated should be in the closed position							

Note: Pins designated should be in the closed position.

CPU SPEED SELECTION (PENTIUM II, CON'T)							
CPU speed	Clock speed	Multiplier	FS0	FS1	FS2		
233MHz	66MHz	3.5x	1&2	1 & 2	1&2		
266MHz	66MHz	4x	1&2	1 & 2	1&2		
300MHz	66MHz	4.5x	1&2	1 & 2	1 & 2		
333MHz	66MHz	5x	1&2	1 & 2	1 & 2		
Note: Pins designated should be in the closed position.							