



2-2 JUMPER SETTINGS

DISPLAY MODE SELECT : JP32

| | |
|------------|-------------------------|
| CONDITION | JP32 |
| COLOR | Short (Default Setting) |
| MONOCHROME | Open |

CPU TYPE SELECT : JP28 - JP80

| CPU | JP28 | JP30 | JP70 | JP72 | JP80 |
|---------------|------|---------------|------|------|------|
| 486DX/DX2/DX4 | OPEN | 2-3, 4-5, 6-7 | 1-2 | 2-3 | 1-2 |
| 487SX | OPEN | 1-2, 4-5, 6-7 | 1-2 | 2-3 | 1-2 |
| P24T(WT) | OPEN | 1-2, 4-5, 6-7 | 1-2 | 2-3 | 1-2 |
| 486SX(PGA) | OPEN | 5-6 | 1-2 | 2-3 | 1-2 |
| CX486S(WT) | OPEN | 5-6 | 2-3 | 1-2 | 1-2 |
| CX486S(WB) | OPEN | 5-6 | 2-3 | 1-2 | 2-3 |
| CX486S2(WT) | OPEN | 5-6 | 2-3 | 1-2 | 1-2 |
| CX486S2(WB) | OPEN | 5-6 | 2-3 | 1-2 | 2-3 |
| CX486DX(WT) | OPEN | 2-3, 4-5, 6-7 | 2-3 | 1-2 | 1-2 |
| CX486DX(WB) | OPEN | 2-3, 4-5, 6-7 | 2-3 | 1-2 | 2-3 |
| CX486DX2(WT) | OPEN | 2-3, 4-5, 6-7 | 2-3 | 1-2 | 1-2 |
| CX486DX2(WB) | OPEN | 2-3, 4-5, 6-7 | 2-3 | 1-2 | 2-3 |

CLOCK SETTING : JP34, JP35, JP36

| CPU | JP34 | JP35 | JP36 |
|-----------|-------|-------|-------|
| 25MHz | CLOSE | OPEN | CLOSE |
| 33MHz | CLOSE | CLOSE | OPEN |
| 40MHz | OPEN | OPEN | CLOSE |
| 50MHz | OPEN | CLOSE | OPEN |
| 486DX2-50 | CLOSE | OPEN | CLOSE |
| 486DX2-66 | CLOSE | CLOSE | OPEN |

CACHE SIZE SELECT : JP58

| | JP58 | JP123 | JP7 | JP5 |
|----------------|------|-------|-------|-------|
| 256K | 1-2 | OPEN | OPEN | CLOSE |
| 512K | 1-2 | CLOSE | CLOSE | CLOSE |
| 256K (64K x 8) | 2-3 | OPEN | CLOSE | CLOSE |

CMOS BATTERY SETTING : JP33

| | |
|------------------|---------------|
| | JP33 |
| Normal Operation | 1-2 (Default) |
| Discharge CMOS | 2-3 |

VL-BUS CLOCK SELECT : JP118

| | |
|------------------------|-------|
| | JP118 |
| Adjusted clock | 2-3 |
| Normal clock (Default) | 1-2 |

CHIPSET CLOCK ADJUSTMENT: JP38

| | |
|----------|------|
| | JP38 |
| NORMAL | 1-2 |
| RESERVED | 2-3 |

CPU VOLTAGE TYPE

| | JP136 | JP137 | JP138 | JP139 |
|----|-------|-------|-------|-------|
| 3V | OPEN | CLOSE | 2-3 | 2-3 |
| 5V | CLOSE | OPEN | 1-2 | 1-2 |

WARNING:

- The Intel 486DX4-100MHz CPU must be set as a 3V CPU.
- The Intel 486DX/486DX2, AMD 486DX/DX2, Cyrix 486DX2 must be set as a 5V CPU.
- The wrong setting of a CPU voltage may damage the CPU.