
630BF/630BN

USER'S MANUAL

M/B For Socket 370 Pentium® III Processor

NO. G03-630BFRIA

Release date: NOV 2000

**** Year 2000 compliant ****

Trademark:

- * Pentium is registered trademark and MMX is a trademark of Intel Corporation, the other names and brands are the property of their respective owners**
- * Specifications and Information contained in this documentation are furnished for information use only, and are subject to change at any time without notice, and should not be construed as a commitment by manufacturer.**

TABLE OF CONTENT

USER'S NOTICE	1
MANUAL REVISION INFORMATION	2
THERMAL SOLUTIONS	2
CHAPTER 1 INTRODUCTION OF 630BF/630BN MOTHERBOARD	
1-1 FEATURE OF MOTHERBOARD	3
1-2 SPECIFICATION	4
1-3 PERFORMANCE LIST	5
1-4 LAYOUT DIAGRAM & JUMPER SETTING	6
CHAPTER 2 HARDWARE INSTALLATION	
2-1 HARDWARE INSTALLATION STEPS	8
2-2 CHECKING MOTHERBOARD'S JUMPER SETTING	8
2-3 INSTALL CPU	9
2-3-1 GLOSSARY	9
2-3-2 SETTING CPU BUS CLOCK & MEMORY CLOCK JUMPER	11
2-3-3 INSTALL CPU	11
2-3-4 OVERCLOCK RUNNING	12
2-4 INSTALL MEMORY	13
2-5 EXPANSION CARD	14
2-5-1 PROCEDURE FOR EXPANSION CARD INSTALLATION	14
2-5-2 ASSIGNING IRQ FOR EXPANSION CARD	15
2-5-3 INTERRUPT REQUEST TABLE FOR THIS MOTHERBOARD	15
2-6 CONNECTORS, HEADERS	16
2-7 STARTING UP YOUR COMPUTER	23
CHAPTER 3 INTRODUCING BIOS	
3-1 ENTERING SETUP	24
3-2 GETTING HELP	25
3-3 THE MAIN MENU	25
3-4 STANDARD CMOS FEATURES	26
3-5 ADVANCED BIOS FEATURES	28
3-6 ADVANCED CHIPSET FEATURES	30
3-6-1 ADVANCED DRAM CONTROL	31
3-7 INTEGRATED PERIPHERALS	32
3-7-1 ONCHIP IDE FUNCTION	33
3-7-2 ONCHIP DEVICE FUNCTION	34
3-7-3 WINBOND SUPERIO DEVICE	35

3-8	POWER MANAGEMENT SETUP.....	36
3-8-1	PM WAKE UP EVENTS.....	37
3-9	PNP/PCI CONFIGURATION SETUP.....	38
3-9-1	IRQ RESOURCES.....	39
3-10	PC HEALTH STATUS.....	40
3-11	FREQUENCY/VOLTAGE CONTROL	40
3-12	LOAD STANDARD/OPTIMIZED DEFAULTS.....	41
3-13	SET SUPERVISOR/USER PASSWORD.....	42

CHAPTER 4 DRIVER & FREE PROGRAM INSTALLATION

	MAGIC INSTALL SUPPORTS WINDOWS 95/98/98SE/NT4.0/2000.....	43
4-1	VGA INSTALL SIS 630 VGA DRIVER.....	44
4-2	PC-HEALTH WINBOND HARDWARE DOCTOR MONITORING SOFTWARE.....	46
4-2-1	HOW TO UTILIZE PC-HEALTH.....	47
4-3	LAN (Only for 630BF) INSTALL SIS 900 PCI FAST ETHERNET DRIVER...47	
4-4	SOUND INSTALL SIS 7018 AC'97 AUDIO DRIVER AND APPLICATION SOFTWARE.....	48
4-5	PC-CILLIN INSTALL PC-CILLIN98 ANTI-VIRUS SOFTWARE AND APPLICATION PROGRAM.....	50
4-6	HOW TO DISABLE ON-BOARD SOUND.....	51
4-7	HOW TO UPDATE BIOS.....	51

USER'S NOTICE

COPYRIGHT OF THIS MANUAL BELONGS TO **THE MANUFACTURER**. NO PART OF THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT MAY BE REPRODUCED, TRANSMITTED OR TRANSLATED INTO ANY LANGUAGE IN ANY FORM OR BY ANY MEANS WITHOUT WRITTEN PERMISSION OF **THE MANUFACTURER**.

THIS MANUAL CONTAINS ALL INFORMATION REQUIRED TO USE 630BF MOTHERBOARD AND WE DO ASSURE THIS MANUAL MEETS USER'S REQUIREMENT BUT WILL CHANGE, CORRECT ANY TIME WITHOUT NOTICE. **MANUFACTURER** PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, AND WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFIT, LOSS OF BUSINESS, LOSS OF USE OF DATA, INTERRUPTION OF BUSINESS AND THE LIKE).

PRODUCTS AND CORPORATE NAMES APPEARING IN THIS MANUAL MAY OR MAY NOT BE REGISTERED TRADEMARKS OR COPYRIGHTS OF THEIR RESPECTIVE COMPANIES, AND THEY ARE USED ONLY FOR IDENTIFICATION OR EXPLANATION AND TO THE OWNER'S BENEFIT, WITHOUT INTENT TO INFRINGE.

Manual Revision Information

Reversion	Revision History	Date
1.0	First Release	Nov 2000

Item Checklist

- 630BF/630BN
- Cable for IDE/Floppy
- CD for motherboard utilities
- Cable for USB Port
- Cable for LPT/PS2 Mouse
- Cable for COM1/COM2
- Cable for Audio
- 630BF/630BN User's Manual
- 630 LAN (630BF only)

Intel® Processor Family

Thermal Solutions

As processor technology pushes to faster speeds and higher performance, thermal management becomes increasingly crucial when building computer systems. Maintaining the proper thermal environment is key to reliable, long-term system operation. The overall goal in providing the proper thermal environment is keeping the processor below its specified maximum case temperature. Heatsinks induce improved processor heat dissipation through increased surface area and concentrated airflow from attached fans. In addition, interface materials allow effective transfers of heat from the processor to the heatsink. For optimum heat transfer, Intel recommends the use of thermal grease and mounting clips to attach the heatsink to the processor.

When selecting a thermal solution for your system, please refer to the website below for collection of heatsinks evaluated and recommended by Intel for use with Intel processors.

Vendor list for heatsink and fan of **Pentium® !!! processor**, please visit :

<http://developer.intel.com/design/Pentiumiii/components/index.htm>

Vendor list for heatsink and fan of **Intel®Celeron™ processor**, please visit :

<http://developer.intel.com/design/celeron/components/index.htm>

Chapter 1

Introduction of 630BF/630BN Motherboard

1-1 Feature of motherboard

The 630BF/630BN motherboard is design for use Intel's new generation Pentium processors, which utilize the Socket 370 design supports Pentium®III/Celeron FC-PGA/PPGA processors, and the memory size expandable to 1GB.

This motherboard use the newest SiS 630 chipset provides a high performance/low cost solution for socket 370 series CPUs based system, by integrating a high performance North Bridge, advanced hardware 2D/3D GUI engine and Super-South Bridge. Moreover, by integrating the Ultra AGP technology and advanced 128-bit graphic display interface, SiS 630 delivers AGP 4X performance and up to 2GB/s memory bandwidth, and provides powerful hardware decoding DVD accelerator to improve the DVD playback performance. On-board VGA memory can selected from 2Mb to 64Mb.

This motherboard provides 10/100Mbps Fast Ethernet interface (Only for 630BF) for Office requirement and offers AC'97 compliant interface that comprises digital audio engine with 3D-hardware accelerator, on-chip sample rate converter. This motherboard also provides dual USB host controller with four USB Ports that deliver better connectivity and 2x12Mb bandwidth. The built-in Fast PCI IDE controller supports Ultra DMA 33/66 function up to 66MB/s for data transfer rate. In addition, 630BF/630BN provides hardware monitor function that will monitoring and protect your computer.

This motherboard provides high performance & meets future specification demand. It is really wise choice for your computer.

1-2 Specification

Spec	Description
------	-------------

Design	* Baby AT form factor 4 layers PCB size: 22.0x22.0cm
Chipset	* SiS 630 Chipset
Clock Generator	* Support 66/100/133MHz system Bus Clock (CPU Bus Clock) Support 100/133 MHz system memory clock Support 33MHz PCI Bus clock
CPU Socket	* Support Pentium® III 500~1GHz processor * Support Celeron™ 300~766MHz processor * Support Cyrix MIII 500~600MHz processor * Support 66, 100 and 133MHz CPU Bus clock * Reserves support for future Intel Pentium® III processors
Memory Socket	* 168-pin DIMM socket x2 * PC-100/PC-133 SDRAM * Expandable to 1GB * Support 3.3V SDRAM DIMM
Expansion Slot	* 32-bit PCI slot x3, 2.2 Specification Compliant * AMR slot x1
Integrate VGA	* 3D graphic acceleration * VGA Memory Selectable by BIOS from 2MB to 64MB
Integrate IDE	* 2 channel of Bus Master IDE port supporting ULTRA DMA 33/66MB/s mode devices
Integrate LAN (Only for 630BF)	* Fast Ethernet Controller 10/100 Mbps
Audio	* AC'97 Digital Audio controller integrated * AC'97 Audio CODEC on board * Audio driver and utility included
BIOS	* Award 2Mb Flash ROM
Multi I/O	* PS/2 mouse headers * Floppy disk drive connector x1 * Parallel port x1 * Serial port x2 * USB headers x2 (connecting cable option) * Audio headers (Line-in, Line-out & MIC) * Game headers

1-3 Performance List

The following performance data list is the testing result of some popular benchmark testing programs. These data are just referred by users, and there is no responsibility


for different testing data values gotten by users (the different Hardware & Software configuration will result in different benchmark testing results.)

CPU: Intel PIII® 866MHz FC-PGA package
DRAM: 128M SDRAM x2 (Hyundai GM 72V66841ET75)
VGA Expansion Card: On Board VGA (Driver V1.05)
Hard Disk Driver: Quantum Fireball KX20A11
BIOS: Award Optimal default
OS: Win 98SE

Performance Test Report

	Share 8M	Share 16M	Share 32M
3D Mark 99	1908	1918	1912
3D Mark 2000	900	918	916
3D Winbench 99 V1.2	513	525	446
3D Winbench 2000	15.7	20.7	23
Final Reality	5.23	5.25	5.20
Winstone 99 V1.3	29.5	29.5	29.6
Winstone 2000	32.3	33	31.8
Winbench 99 :			
CPU Mark 99	67.1	68.1	68.5
FPU Winmark 99	4390	4390	4380
Business Disk Winmark99	4740	4550	4680
Hi-end Disk Winmark99	17100	16800	16300
Business Graphic Winmark	217	216	217
Hi-end Graphic Winmark	762	767	767
SYS Mark 2000 : SISMark 2000 Rating (Internet Content Creation / Office Productivity)			
Suites	156	157	157
Offical	154	155	156
SISOFT Sandra 2000 :			
CPU MIPS	2262	2262	2262
FPU MFLOPS	1120	1120	1120
CPU / Memory MB/S	234	236	235
FPU / Memory MB/S	255	257	256
QUAKE3 :			
DEMO1 FPS	22.0	22.1	22.2
DEMO2 FPS	21.3	21.6	21.6

1-4 Layout & Jumper Setting

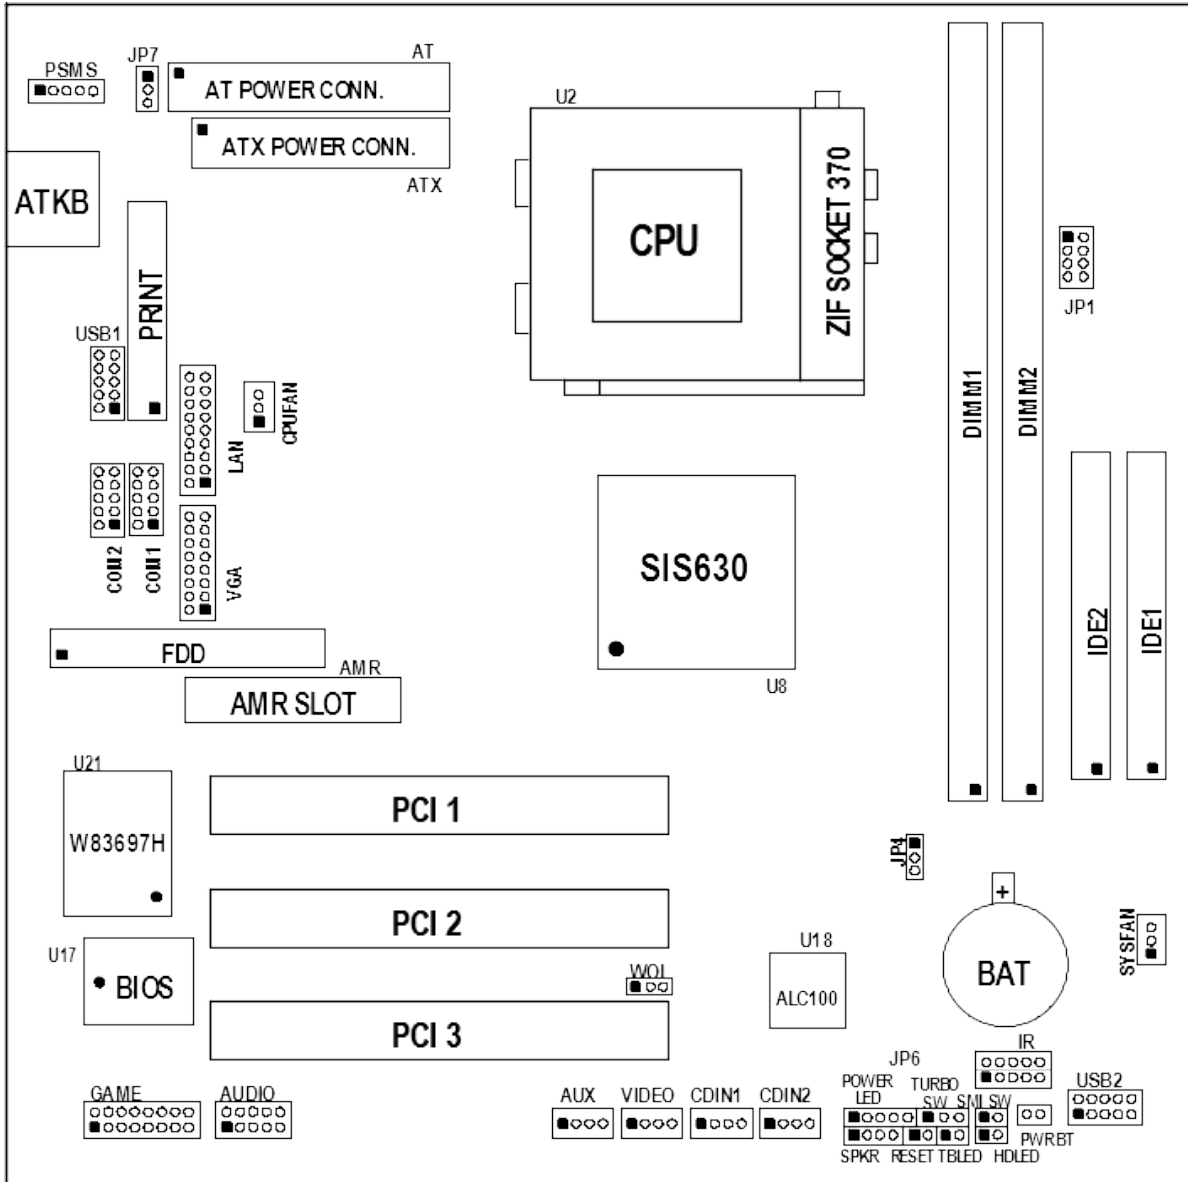

Jumpers

Jumper	Name	Description	Page
JP1	CPU & SDRAM Frequency Setting	8-pin Block	p.8
JP7	Keyboard Power ON Function Setting	3-pin Block	p.8
JP4	CMOS RAM Clear	3-pin Block	p.9

Connectors

Connector	Name	Description	Page
AT	AT Power Connector	12-Pin Block	p.16

ATX	ATX Power Connector	20-Pin Block	p.16
ATKB	Keyboard Connector	5-Pin Female	p.16
PSMS	PS2 Mouse Connector	5-Pin Connector	p.17
PRINT	Parallel Port Connector	26-Pin Block	p.17
COM1, COM2	Serial Port COMA, COMB	10-Pin Block	p.17
FDD	Floppy Driver Connector	34-Pin Block	p.18
IDE1	Primary IDE Connector	40-Pin Block	p.18
IDE2	Secondary IDE Connector	40-Pin Block	p.18
HDLED	IDE activity LED	2-Pin Connector	p.19
JP6	Front Panel Connector	16-Pin Block	p.19
IR	Infrared Module Connector	5-Pin Block	p.19
USB1, USB2	USB Port Connector	10-Pin Block	p.20
CPUFAN, SYSFAN	FAN Connector	Extra fanning system connectors	p.20
PWR BT	ATX power button/soft power button	2-Pin Connector	p.21
AUX, VIDEO	Auxiliary/Video Input Connector	4-Pin Block	p.21
CDIN1, CDIN2	CD Audio In connector	4-Pin Block	p.21
AUDIO	Audio Connector	10-Pin Block	p.22
GAME	GAME Port Connector	16-Pin Block	p.22
VGA	VGA Connector	16-Pin Block	p.22
LAN (Only for 630BF)	LAN Connector	18-Pin Block	p.22

Expansion Sockets

Socket/Slot	Name	Description	Page
ZIF Socket 370	CPU Socket	370-pin FC-PGA/PPGA CPU Socket	p.11
DIMM1, DIMM2	DIMM Module Socket	168-pin DIMM SDRAM Module Expansion Socket	p.13
PCI1, PCI2, PCI3	PCI Slot	32-bit PCI Local Bus Expansion slots	p.15
AMR	AMR Slot	Modem Riser Card slot	

Chapter 2

Hardware installation

2-1 Hardware installation Steps

Before using your computer, you had better complete the following steps:


1. Check motherboard setting
2. Install CPU
3. Install Memory
4. Install Expansion cards
5. Connect Ribbon cables, Panel wires, and power supply
6. Setup BIOS
7. Install software driver & utility

2-2 Checking Motherboard's Jumper Setting

1. CPU & SDRAM Clock Setting (8-pin): JP1


The motherboard's CPU & SDRAM memory clock adjusted through jumper JP1. Table as below:

CPU/SDRAM (MHz)	1-2	3-4	5-6	7-8
66/66	OFF	OFF	OFF	ON
66/100	OFF	OFF	OFF	OFF
100/100	ON	OFF	OFF	OFF
100/133	ON	OFF	ON	OFF
133/100	ON	ON	OFF	OFF
133/133	ON	ON	ON	OFF

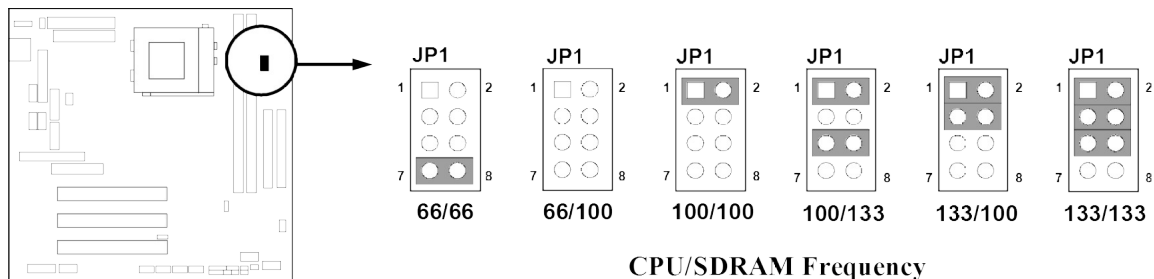

2. Keyboard Power On Function Setting (3-pin): JP7


This allows you to disable the keyboard power on function. Set the jumper to enabled or disabled if you wish to use your keyboard (by pressing <>) to power on your computer. This feature requires an ATX power supply that can supply at least 300mA on the +5VSB lead. The default is set to disable.

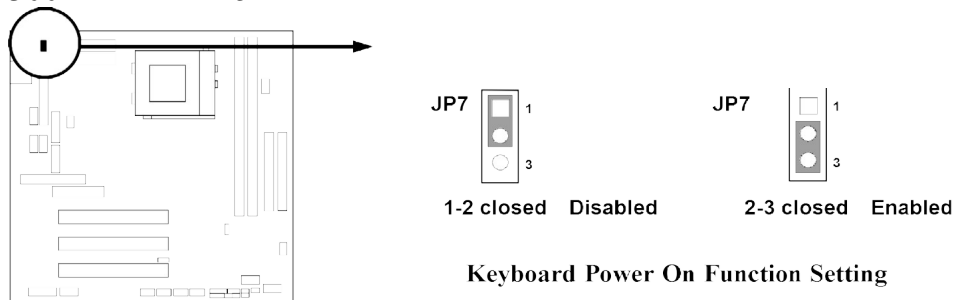

3. CMOS RAM Clear (3-pin): JP4

A battery must be used to retain the motherboard configuration in CMOS RAM short 2-3 pins of JP4 to store the CMOS data.

Note: You can clear CMOS by shorting 1-2 pin, while the system is off. Then return to 2-3 pin position. Avoid clearing the CMOS while the system is on, it will damage the motherboard always unplug the power cord from the wall socket.

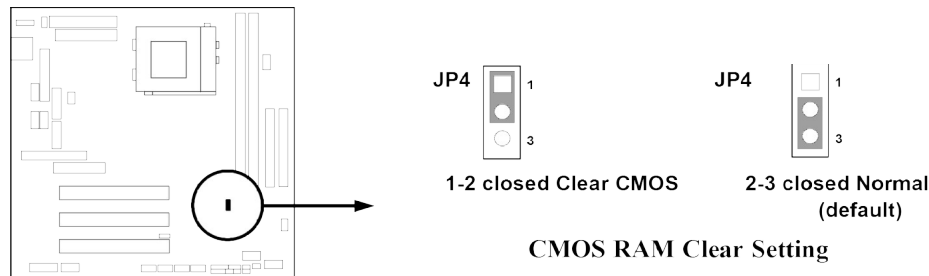

2-3 Install CPU

2-3-1 Glossary

Chipset (or core logic) - two or more integrated circuits which control the interfaces between the system processor, RAM, I/O devices, and adapter cards.

Processor slot/socket - the slot or socket used to mount the system processor on the motherboard.

Slot (AGP, PCI, ISA, RAM) - the slots used to mount adapter cards and system RAM.

AGP - Accelerated Graphics Port - a high speed interface for video cards; runs at 1X (66MHz), 2X (133MHz), or 4X (266MHz).

PCI - Peripheral Component Interconnect - a high speed interface for video cards, sound cards, network interface cards, and modems; runs at 33MHz.

ISA - Industry Standard Architecture - a relatively low speed interface primarily used for sound cards and modems; runs at approx. 8MHz.

Serial Port - a low speed interface typically used for mouse and external modems.

Parallel Port - a low speed interface typically used for printers.

PS/2 - a low speed interface used for mouse and keyboards.

USB - Universal Serial Bus - a medium speed interface typically used for mouse, keyboards, scanners, scanners, and some digital cameras.

Sound (interface) - the interface between the sound card or integrated sound connectors and speakers, mic, game controllers, and MIDI sound devices.

LAN (interface) - Local Area Network - the interface to your local area network.

BIOS (Basic Input/Output System) - the program logic used to boot up a computer and establish the relationship between the various components.

Driver - software, which defines the characteristics of a device for use by another device or other software.

Processor - the "central processing unit" (CPU); the principal integrated circuit used for doing the "computing" in "personal computer"

Front Side Bus Frequency

The working frequency of the motherboard, which is generated by the clock generator for CPU, DRAM and PCI BUS.

CPU Internal Frequency - the frequency of CPU, which is also the actual working frequency of CPU.

Bus Frequency Ratio - the ratio of the working frequency, multiply Front Side Bus Frequency with Bus Frequency Ratio will form the CPU Internal Frequency.

CPU L2 Cache - the flash memory inside the CPU, normally Pentium III CPU has 256K or above, while Celeron CPU will have 128K.

Recognize of CPU

The way to recognize the specification of CPU from the packing Pentium III 370 pins FC-PGA

On the surface of the CPU as shown on the right picture, under the word of "PENTIUM III" the code is:

RB 80526 P2 866 256

RB : FC-PGA packing

P2 : P2-133MHz front side bus frequency
PY-100MHz front side bus frequency

866 : CPU internal frequency, where here is 866MHz

256 : the size of L2 cache, where here is 256K



Celeron FC-PGA

On the surface of the CPU as shown on the right picture, under the word of "Celeron" the code is:


566/128/66/1.5V

566 : CPU internal frequency, where here is 566MHz

128 : the size of L2 cache, where here is 128K

66 : front side bus frequency, where here is 66MHz

1.5V : the voltage for the CPU

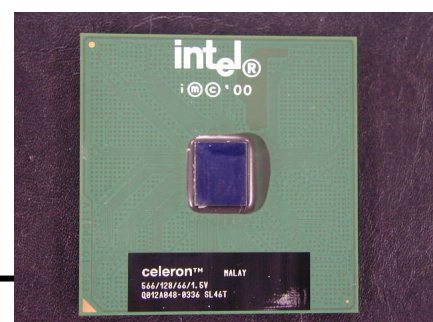

2-3-2 Setting CPU Bus Clock & Memory Clock Jumper

Setting the front side bus frequency and SDRAM frequency

The motherboard uses jumper JP1 for the front side bus frequency and SDRAM frequency setting as shown from the table below:

CPU/SDRAM (MHz)	1-2	3-4	5-6	7-8
66/66	OFF	OFF	OFF	ON
66/100	OFF	OFF	OFF	OFF
100/100	ON	OFF	OFF	OFF
100/133	ON	OFF	ON	OFF
133/100	ON	ON	OFF	OFF
133/133	ON	ON	ON	OFF

Example: Using a Pentium® III 866 CPU with front side bus frequency of 133MHz and PC-133 SDRAM module, the setting of JP1 are 1-2 closed, 3-4 closed, 5-6 closed, 7-8 open for CPU BUS CLOCK to be 133MHz and SDRAM CLOCK to be 133MHz.


For experience user looking for over clocking, please refer to sec 2-3-4

2-3-3 Install CPU

This motherboard provides a ZIF socket 370. The CPU that comes with the motherboard should have a cooling FAN attached to prevent overheating. If this is not the case, then purchase a correct cooling FAN before you turn on your system.

<p>WARNING! Be sure that there is sufficient air circulation across the processor's heatsink and CPU cooling FAN is working correctly, otherwise it may cause the processor and motherboard overheat and damage, you may install an auxiliary cooling FAN, if necessary.</p>

To install a CPU, first turn off your system and remove its cover. Locate the ZIF socket and open it by first pulling the level sideways away from the socket then upward to a 90-degree angle. Insert the CPU with the correct orientation as shown below. The notched corner should point toward the end of the level. Because the CPU has a corner pin for two of the four corners, the CPU will only fit in the orientation as shown.

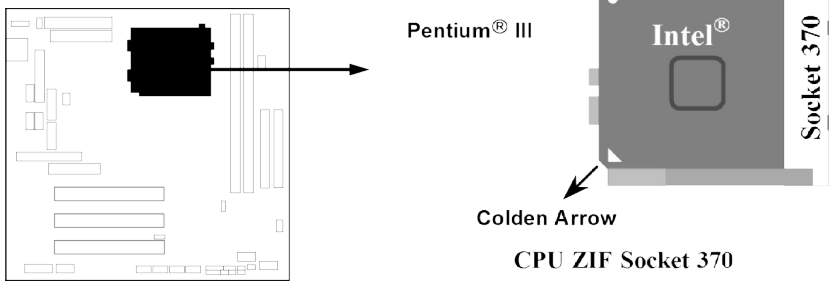

When you put the CPU into the ZIF socket. No forces require to insert of the CPU, then press the level to locate position slightly without any extra force.

2-3-4 Over clock Running

WARNING! This section is for experienced motherboard installer only. Over clocking can result in system instability or even shortening life of the processor.

After setting the Jumper JP1 you can choose over clock running by BIOS CMOS SETUP UTILITY. When you entered CMOS SETUP UTILITY, choose “Frequency/Voltage control” you will see the screen as below then.

1. You can choose the situation you want to try.

CPU/SDRAM (MHz)	1-2	3-4	5-6	7-8
66/66	OFF	OFF	OFF	ON
66/100	OFF	OFF	OFF	OFF
100/100	ON	OFF	OFF	OFF
100/133	ON	OFF	ON	OFF
133/100	ON	ON	OFF	OFF
133/133	ON	ON	ON	OFF

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software
Frequency/Voltage Control

Cyrrix III Clock Ra	CPU Host/DRAM Clock	Item Help
Auto Detect DIMM/P	Default []	
Spread Spectrum	66/66MHz []	
CPU Host/DRAM Cloc	66/100MHz []	Menu Level >
CPU Clock Ratio Ju	75/75MHz []	
	83/83MHz []	
	95/95MHz []	
	96/96MHz []	
	97/97MHz []	
	100/100MHz []	
	100/133MHz []	
	112/112MHz []	
	133/100MHz []	
	133/133MHz []	
	140/140MHz []	
↑↓:Move ENTER:Accept ESC:Abort		

↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults	

NOTE! The BIOS allows you select Bus Frequency from 66MHz to 140MHz, the wrong setting will cause system can not starting, when it happen you have to clear CMOS and adjust correct setting for your CPU. Again we don't suggest user running over clock.

2-4 Install Memory

This motherboard provides **two** 168-pin DUAL INLINE MEMORY MODULES (DIMM) sites for memory expansion available from minimum memory size of 16MB to maximum memory size of 1GB SDRAM.

Valid Memory Configurations

Bank	168-Pin DIMM		Total Memory
Bank 0, 1 (DIMM1)	SDRAM 32, 64, 128, 256, 512MB	X 1	16MB~512MB
Bank 2, 3 (DIMM2)	SDRAM 32, 64, 128, 256, 512MB	X 1	16MB~512MB
Total	System Memory (Max. 1GB)		16MB~1GB

Generally, installing SDRAM modules to your motherboard is very easy, you can refer to figure 2-4 to see what a 168-Pin PC100 & PC133 SDRAM module looks like.

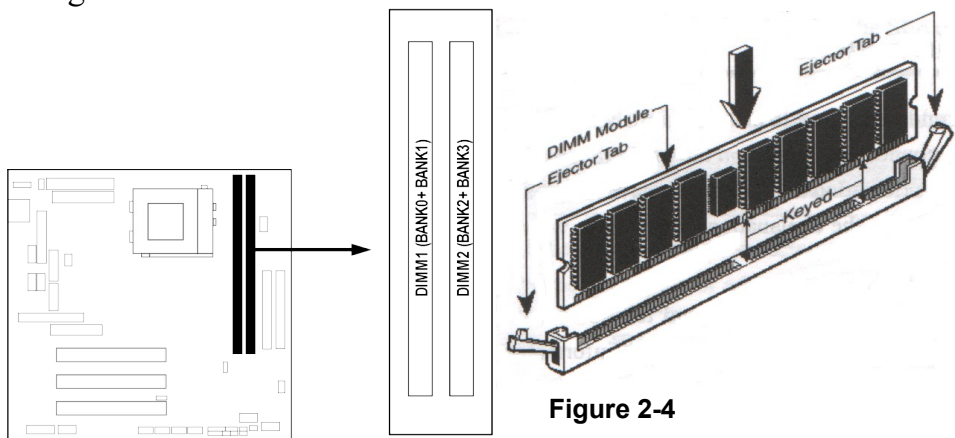


Figure 2-4

NOTE! When you install DIMM module fully into the DIMM socket the eject tab should be locked into the DIMM module very firmly and fit into its indentation on both sides.

WARNING! For the SDRAM CLOCK is set at 133MHz, use only PC133-compliant DIMMs. When this motherboard operate at 133Mhz, most system will not even boot if non-compliant modules are used because of the strict timing issues, if your DIMM are not PC133-compliant, set the SDRAM clock to 100MHz to ensure system stability.

2-5 Expansion Cards

WARNING! Turn off your power when adding or removing expansion cards or other system components. Failure to do so may cause severe damage to both your motherboard and expansion cards.

2-5-1 Procedure For Expansion Card Installation

1. Read the documentation for your expansion card and make any necessary hardware or software setting for your expansion card such as jumpers.
2. Remove your computer's cover and the bracket plate on the slot you intend to use.
3. Align the card's connectors and press firmly.
4. Secure the card on the slot with the screen you remove above.
5. Replace the computer system's cover.
6. Set up the BIOS if necessary.
7. Install the necessary software driver for your expansion card.

2-5-2 Assigning IRQs For Expansion Card

Some expansion cards need an IRQ to operate. Generally, an IRQ must exclusively assign to one use. In a standard design, there are 16 IRQs available but most of them are already in use.

Standard Interrupt Assignments

IRQ	Priority	Standard function
0	1	System Timer
1	2	Keyboard Controller
2	N/A	Programmable Interrupt
3 *	11	Communications Port (COM2)
4 *	12	Communications Port (COM1)
5 *	13	Sound Card (sometimes LPT2)
6	14	Floppy Disk Controller
7 *	15	Printer Port (LPT1)
8	3	System CMOS/Real Time Clock

9 *	4	ACPI Mode when enabled
10 *	5	IRQ Holder for PCI Steering
11 *	6	IRQ Holder for PCI Steering
12 *	7	PS/2 Compatible Mouse Port
13	8	Numeric Data Processor
14 *	9	Primary IDE Channel
15 *	10	Secondary IDE Channel

* These IRQs are usually available for ISA or PCI devices.

2-5-3 Interrupt Request Table For This Motherboard

Interrupt request are shared as shown the table below:

	INT A	INT B	INT C	INT D
PCI slot 1	—	Shared	—	—
PCI slot 2	—	—	Shared	—
PCI slot 3	—	—	—	Shared
Onboard VGA	—	—	—	—
AC97/MC97	—	Shared	—	—
Onboard USB	—	—	—	Shared
Onboard USB 2	—	—	—	Shared
LAN (for 630BF Only)	—	—	Shared	—



IMPORTANT! If using PCI cards on shared slots, make sure that the drivers support “Shared IRQ” or that the cards don’t need IRQ assignments. Conflicts will arise between the two PCI groups that will make the system unstable or cards inoperable.

2-6 Connectors, Headers


1. Power Connector: AT Power Connector (12-pin block): AT

This connector connects to a standard AT power supply. To connect the leads from the power supply, ensure first that the power supply is not plugged. Most power supplies provide two plugs (P8 and P9), each containing six wires, two of which are black. Orient the connectors so that the black wires are located in the middle.

Using a slight angle, align the plastic guide pins on the lead to their receptacles on the connector. Once aligned, press the lead onto the connector until the lead locks into place.

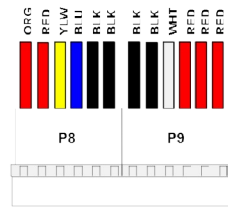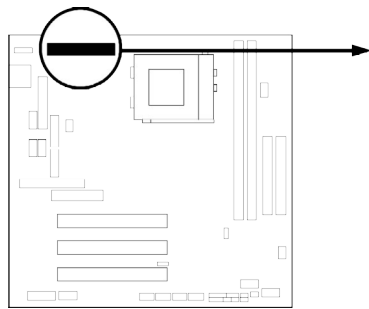


Power Connector on Motherboard

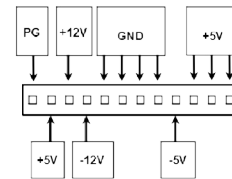

Power Plugs from Power Supply

2. Power Connector: ATX Power Connector (20-pin block): ATX

ATX Power Supply connector. This is a new defined 20-pins connector that usually comes with ATX case. The ATX Power Supply allows to use soft power on momentary switch that connect from the front panel switch to 2-pins Power On jumper pole on the motherboard. When the power switch on the back of the ATX power supply turned on, the full power will not come into the system board until the front panel switch is momentarily pressed. Press this switch again will turn off the power to the system board.

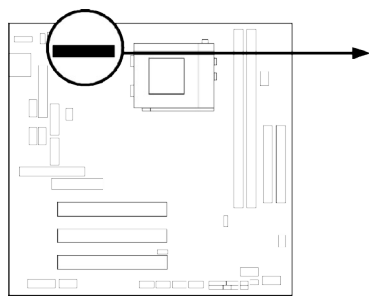


PIN	ROW2	ROW1
1	3.3V	3.3V
2	-12V	3.3V
3	GND	GND
4	Soft Power On	5V
5	GND	GND
6	GND	5V
7	GND	GND
8	-5V	Power OK
9	+5V	+5V (for Soft Logic)
10	+5V	+12V

* Please don't turn off/on power supply too quickly. We recommend at least wait 4sec before turn on the power, to protect the system.

3. Keyboard Connector (5-pin female): ATKB

This connection is for a standard IBM-compatible or a 101 enhanced keyboard.

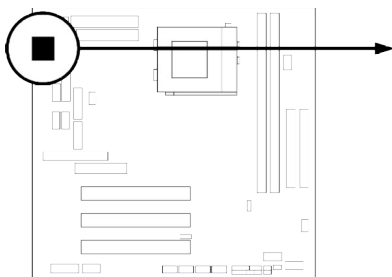


Keyboard Connector (5-pins female)



Connector Plug from Keyboard

4. PS/2 Mouse Connector (5-pin block): PSMS


You must purchase an optional PS/2 mouse set for connection of 5-pins block to mount on an open slot of your computer's case.

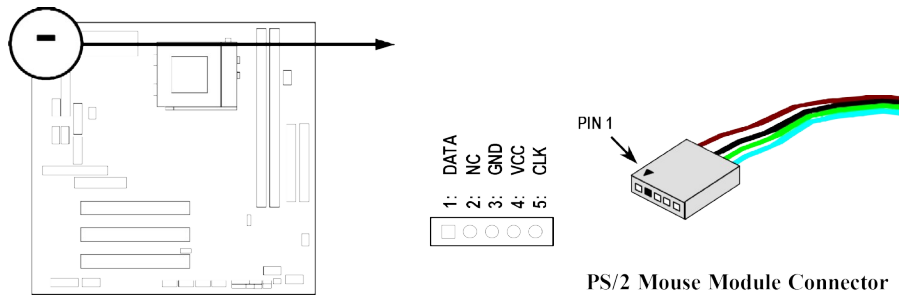

5. Parallel Printer Connector (26-pin Block): PRINT


Connection for the enclosed parallel port ribbon cable with mounting bracket. Connect the ribbon cable to this connection and mount the bracket to the case on an open slot. It will then be available for a parallel printer cable.

NOTE: *Serial printers must be connected to the serial port. You can enable the parallel port and choose the IRQ through BIOS Setup.*

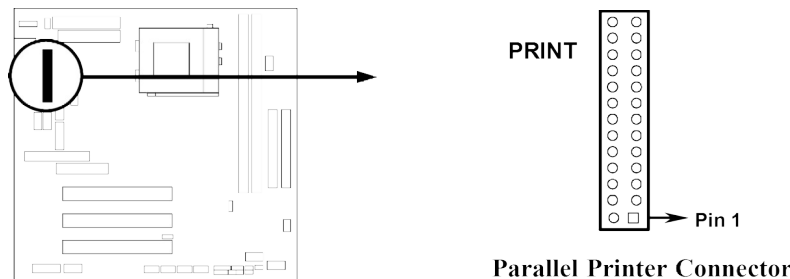


6. Serial port COMA and COMB Connector (Two 10-pin blocks): COM1, COM2

These connectors support the provided serial port ribbon cables with mounting bracket. Connect the ribbon cables to these connectors and mount the bracket to the case on an open slot. The two serial ports on the mounting bracket will then be used for pointing devices or other serial devices. See BIOS configuration of “Onboard Serial Port”

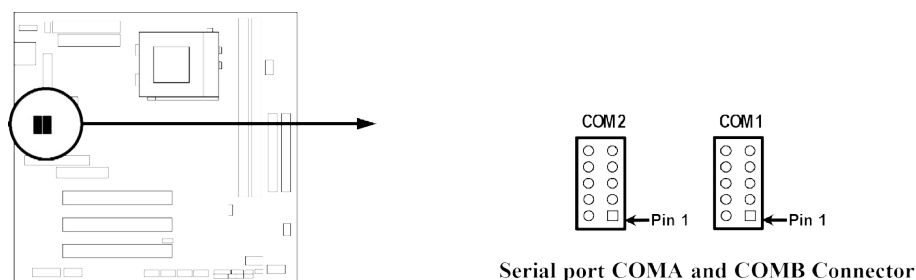


7. Floppy drive Connector (34-pin block): FDD

This connector supports the provided floppy drive ribbon cable. After connecting the single plug end to motherboard, connect the two plugs at other end to the floppy drives.

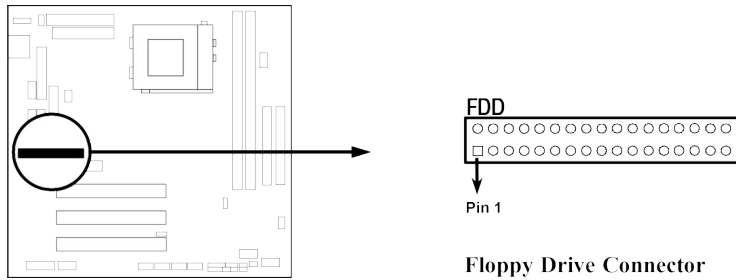


8. Primary IDE Connector (40-pin block): IDE1

This connector supports the provided IDE hard disk ribbon cable. After connecting the single plug end to motherboard, connect the two plugs at other end to your hard disk(s). If you install two hard disks, you must configure the second drive to Slave mode by setting its jumpers accordingly. Please refer to the documentation of your hard disk for the jumper settings.

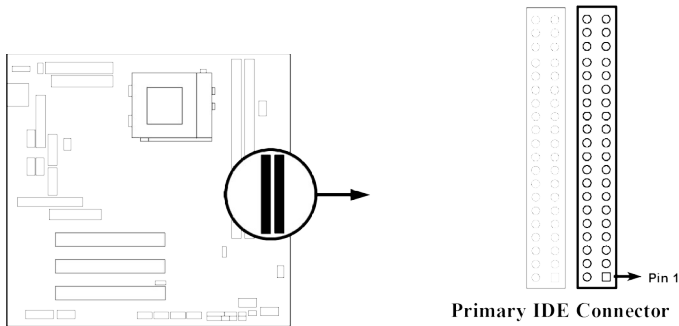



9. Secondary IDE Connector (40-pin block): IDE2

This connector connects to the next set of Master and Slave hard disks. Follow the same procedure described for the primary IDE connector. You may also configure two hard disks to be both, Masters using one ribbon cable on the primary IDE connector and another ribbon cable on the secondary IDE connector.

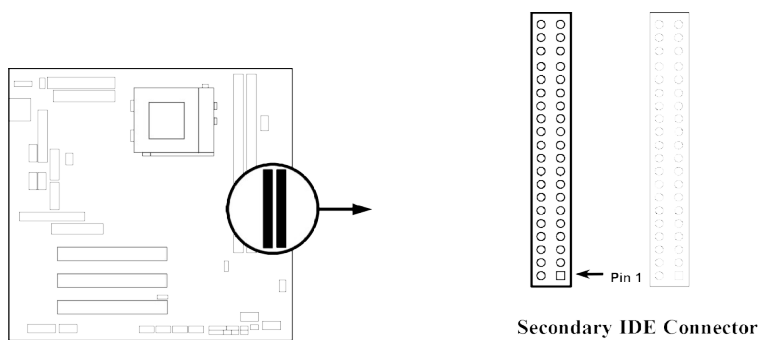

10. IDE activity LED: HDLED

This connector connects to the hard disk activity indicator light on the case.

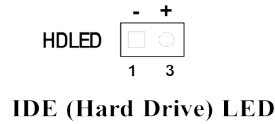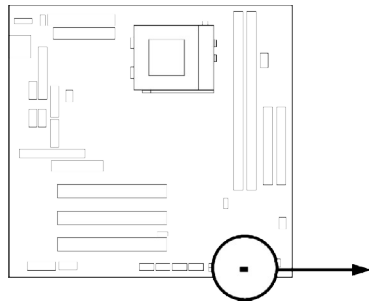

11. Front Panel connector: This 16-pin connector to connect to case front panel switch.

A. Turbo LED switch: TBLED

The motherboard's turbo function is always on. The turbo LED will remain constantly lit while the system power is on. You may also to connect the Power LED from the system case to this lead. See the figure below.

B. Reset switch lead: RESET


This 2-pin connector connects to the case-mounted reset switch for rebooting your computer without having to turn off your power switch. This is a preferred method of rebooting in order to prolong the life of the system's power supply. See the figure below.

C. Keyboard lock switch lead & Power LED: KEYLOCK & POWER LED

This 5-pin connector connects to the case-mounted key switch for locking the keyboard for security purposes and Power LED together.

D. Speaker connector: SPKR



This 4-pin connector connects to the case-mounted speaker. See the figure below.

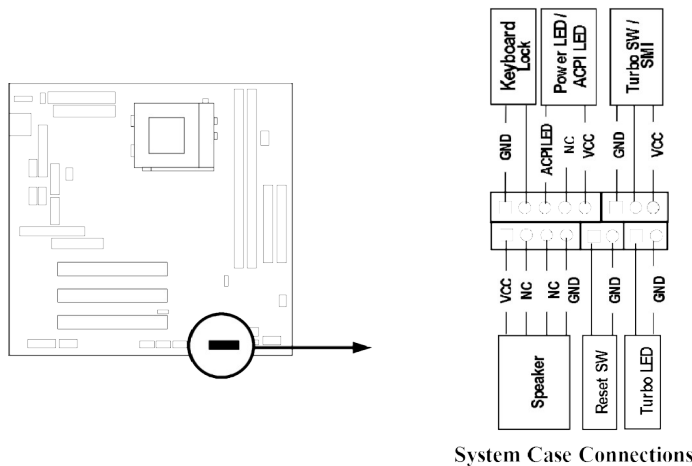



System Case Connections

12. IR infrared module connector: IR



This connector supports the optional wireless transmitting and receiving infrared module. This module mounts to small opening on system cases that support this feature you must also configure the setting through BIOS setup. Use the five pins as shown on the Back View and connect a ribbon cable from the module to the motherboard according to the pin definitions.

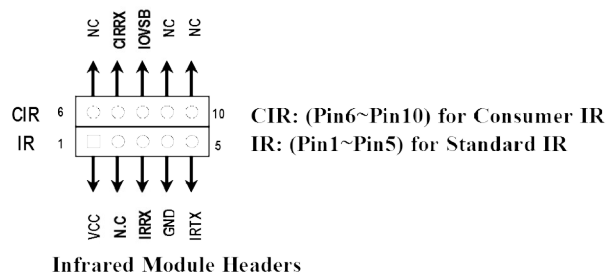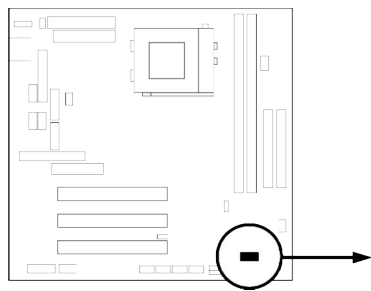

13. USB Port connector: USB1, USB2

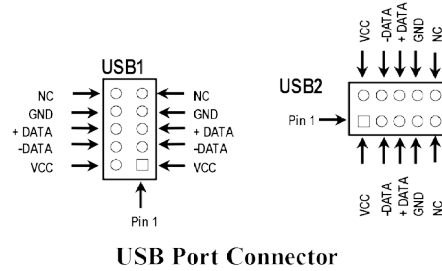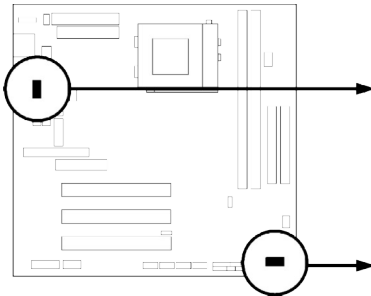

14. FAN connector: CPUFAN, SYSFAN

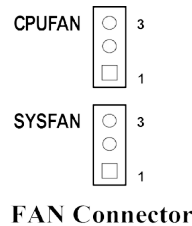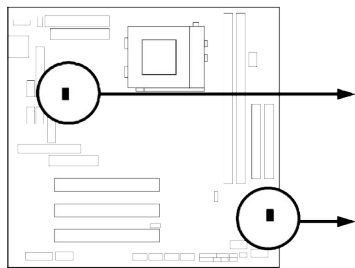


15. ATX Power button: PWR BT

When using ATX power, the system power can be controlled by a momentary switch connected to PS-ON. Pushing the button once will switch ON/OFF the system. The system Power LED will show the status of the system's power.


Selections

One touch Power ON/OFF

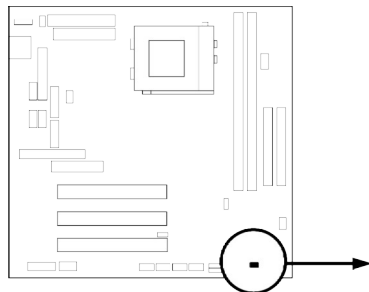


ATX Power Button

16. Auxiliary/Video Input connector : AUX, VIDEO

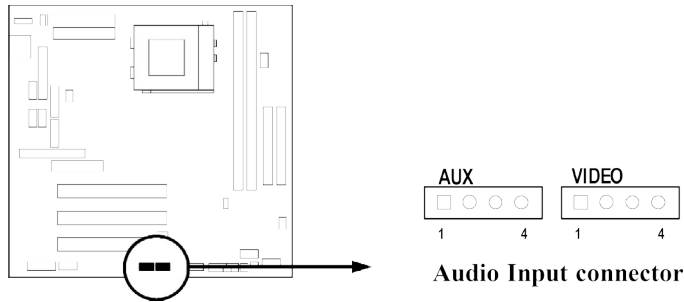

17. CD Audio in connector : CDIN1, CDIN2


CDIN1 and CDIN2 are the connectors for CD-Audio Input signal, Please connect it to CD-ROM CD-Audio output connector.

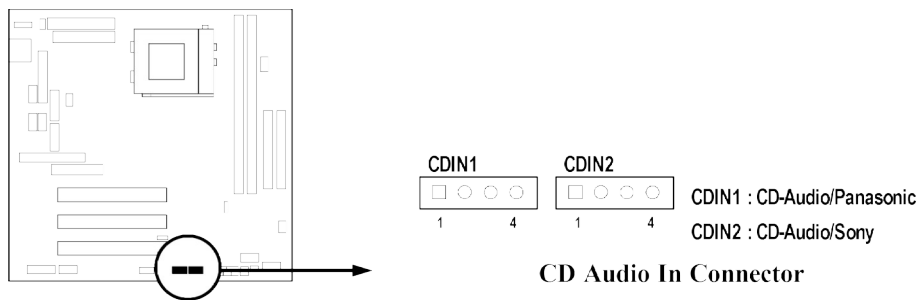


18. Audio connector: AUDIO

This connector supports the provided AUDIO cable which with mounting bracket including 3 phone Jacks: LINE-OUT, LINE-IN, MIC.

Line-out : audio output to speaker
Line-in : audio input to sound chip
MIC : Microphone Connector

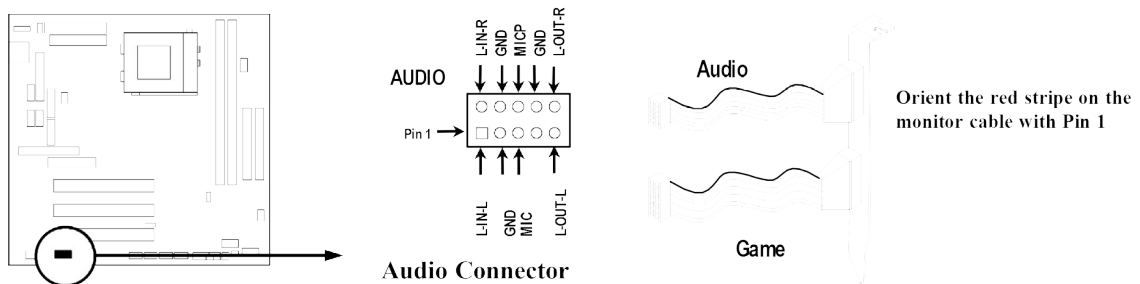


19. Game/MIDI Port connector : GAME

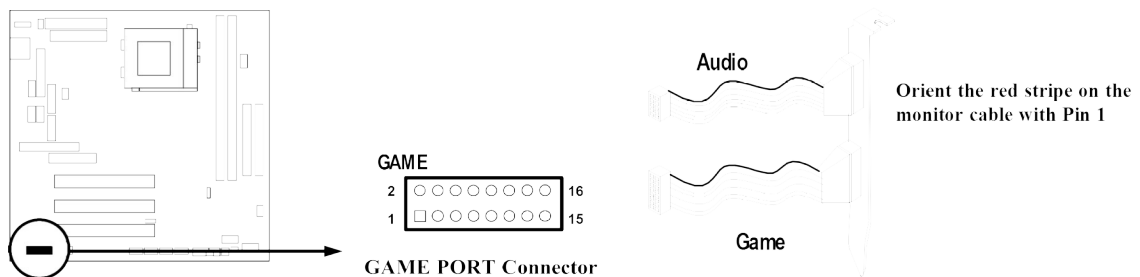


20. VGA connector : VGA

This connector supports the provided VGA cable with mounting bracket. Connect the ribbon cable to connector and mount the bracket to the case on an open slot.

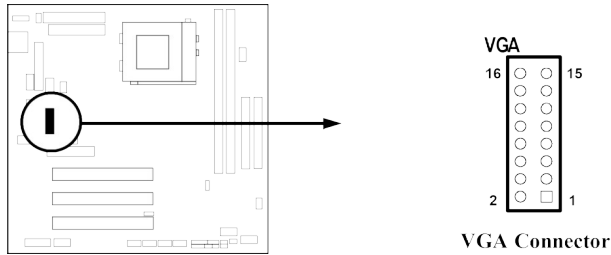

21. LAN connector : LAN (only for 630BF)

This connector supports the provided LAN cable with adaptor and mounting bracket mounting this adaptor supports standard RJ45 connector for Network connection.

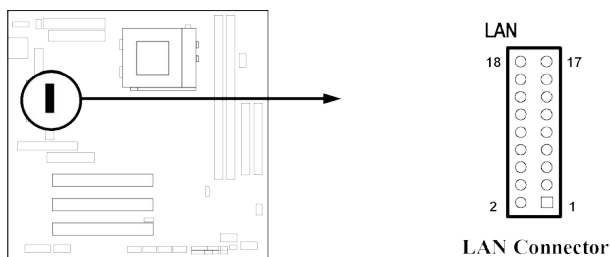

2-7 Starting Up Your Computer

1. After all connection are made, close your computer case cover.
2. Be sure all the switch are off, and check that the power supply input voltage is set to proper position, usually in-put voltage is 220V~240V or 110V~120V depending on your country's voltage used.
3. Connect the power supply cord into the power supply located on the back of your system case according to your system user's manual.
4. Turn on your peripheral as following order:
 - a. Your monitor.
 - b. Other external peripheral (Printer, Scanner, External Modem etc...)
 - c. Your system power. For ATX power supplies, you need to turn on the power supply and press the ATX power switch on the front side of the case.
5. The power LED on the front panel of the system case will light. The LED on the monitor may light up or switch between orange and green after the system is on. If it complies with green standards or if it is has a power standby feature. The system will then run power-on test. While the test are running, the BIOS will alarm beeps or additional message will appear on the screen.

If you do not see any thing within 30 seconds from the time you turn on the power. The system may have failed on power-on test. Recheck your jumper settings and connections or call your retailer for assistance.

Beep	Meaning
One short beep when displaying logo	No error during POST
Long beeps in an endless loop	No DRAM install or detected
One long beep followed by three short beeps	Video card not found or video card memory bad
High frequency beeps when system is working	CPU overheated System running at a lower frequency

6. During power-on, press <Delete> key to enter BIOS setup. Follow the instructions in BIOS SETUP.
7. **Power off your computer:** You must first exit or shut down your operating system before switch off the power switch. For ATX power supply, you can press ATX power switching after exiting or shutting down your operating system. If you use Windows 9X, click “**Start**” button, click “**Shut down**” and then click “**Shut down the computer?**” The power supply should turn off after windows shut down.

Chapter 3

Introducing BIOS

The BIOS is a program located on a Flash Memory on the motherboard. This program is a bridge between motherboard and operating system. When you start the computer, the BIOS program gain control. The BIOS first operates an auto-diagnostic test called POST (power on self test) for all the necessary hardware, it detects the entire hardware device and configures the parameters of the hardware synchronization. Only when these tasks are completed done it gives up control of the computer to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate, it is the key factor for system stability, and in ensuring that your system performance as its best.

In the BIOS Setup main menu of Figure 3-1, you can see several options. We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press <Esc> to quit the BIOS Setup.

-
-
- Press ↑↓←→ (up, down, left, right) to choose, in the main menu, the option you want to confirm or to modify.
 - Press <F10> when you have completed the setup of BIOS parameters to save these parameters and to exit the BIOS Setup menu.
 - Press Page Up/Page Down or +/- keys when you want to modify the BIOS parameters for the active option.

3-1 Entering Setup

Power on the computer and by pressing immediately allows you to enter Setup. If the message disappears before your respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the “RESET” button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to

Press <F1> to continue, <Ctrl-Alt-Esc> or to enter Setup

3-2 Getting Help

Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Status Page Setup Menu/Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>.

3-3 The Main Menu

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (Figure 3-1) will appear on the screen. The Main Menu allows you to select from fourteen setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software

Standard CMOS Features	Frequency/Voltage Control
------------------------	---------------------------

Advanced BIOS Features	Load optimized Defaults
Advanced Chipset Features	Load Standard Defaults
Integrated Peripherals	Set Supervisor Password
Power Management Setup	Set User Password
PnP/PCI Configurations	Save & Exit Setup
PC Health Status	Exit Without Saving
Esc : Quit	
F10 : Save & Exit Setup	
↑ ↓ → ← : Select Item	
Time, Date, Hard Disk Type...	

Figure 3-1

Standard CMOS Features

Use this Menu for basic system configurations.

Advanced BIOS Features

Use this menu to set the Advanced Features available on your system.

Advanced Chipset Features

Use this menu to change the values in the chipset registers and optimize your system's performance.

Integrated Peripherals

Use this menu to specify your settings for integrated peripherals.

Power Management Setup

Use this menu to specify your settings for power management.

PnP/PCI configurations

This entry appears if your system supports PnP/PCI.

PC Health Status

This entry shows your PC health status.

Frequency/Voltage Control

Use this menu to specify your settings for frequency/voltage control.

Load Optimized Defaults

Use this menu to load the BIOS default values that are factory settings for optimal performances system operations.

Load Standard Defaults

Use this menu to load the BIOS default values for the minimal/stable performance system operation.

Set Supervisor/User Password

Use this menu to set User and Supervisor Passwords.

Save & Exit Setup

Save CMOS value changes to CMOS and exit setup.

Exit Without Saving

Abandon all CMOS value changes and exit setup.

3-4 Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into several categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software			
Standard CMOS Features			
Date (mm:dd:yy)	Wed, Jul, 26 2000	Item Help	
Time (hh:mm:ss)	17 : 35 : 22		
> IDE Primary Master	Press Enter None	Menu Level > Change the day, month, year and century	
> IDE Primary Slave	Press Enter None		
> IDE Secondary Master	Press Enter None		
> IDE Secondary Slave	Press Enter None		
Drive A	1.44M, 3.25 in.		
Drive B	None		
Video	EGA/VGA		
Halt On	All,But Keyboard		
Base Memory	640K		
Extended Memory	56320K		
Total Memory	57344K		
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help			
F5:Previous Values F6:Optimized Defaults F7:Standard Defaults			

Date

The date format is <day><month><date><year>.

Day Day of the week, from Sun to Sat, determined by BIOS. Read-only.

Month The month from Jan. through Dec.

Date The date from 1 to 31 can be keyed by numeric function keys.

Year The year depends on the year of the BIOS.

Time

The time format is <hour><minute><second>.

Primary Master/Primary Slave

Secondary Master/Secondary Slave

Press PgUp/<+> or PgDn/<-> to select Manual, None, Auto type. Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category. If your hard disk drive type is not matched or listed, you can use Manual to define your own drive type manually.

If you select Manual, related information is asked to be entered to the following items. Enter the information directly from the keyboard. This information should be provided in the documentation from your hard disk vendor or the system manufacturer.

If the controller of HDD interface is SCSI, the selection shall be "None".

If the controller of HDD interface is CD-ROM, the selection shall be "None"

Access Mode The settings are Auto Normal, Large, and LBA.

Cylinder number of cylinders

Head number of heads

Precomp write precomp

Landing Zone landing zone

Sector number of sectors

3-5 Advanced BIOS Features

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software
Advanced BIOS Features

Virus Warning	Disabled	Item Help	
CPU Internal Cache	Enabled		
External Cache	Enabled	Menu Level > Allows you to choose The VIRUS warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep	
CPU L2 Cache ECC Checking	Disabled		
Processor Number Feature	Enabled		
Quick Power On Self Test	Enabled		
First Boot Device	Floppy		
Second Boot Device	HDD-0		
Third Boot Device	LS120		
Fourth Boot Device	Disabled		
Swap Floppy Drive	Disabled		
Boot Up Floppy Seek	Enabled		
Boot Up NumLock Status	Off		
Gate A20 Option	Fast		
Typematic Rate Setting	Disabled		
Typematic Rate (Chars/Sec)	6		
Typematic Delay (Msec)	250		
Security Option	Setup		
OS Select For DRAM > 64MB	Non-OS2		
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults			

Virus Warning

Allows you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

Disabled (default) No warning message to appear when anything attempts to access the boot sector or hard disk partition table.

Enabled Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector of hard disk partition table.

CPU Internal Cache

The default value is Enabled.

Enabled (default) Enable cache

Disabled Disable cache

Note: The internal cache is built in the processor.

External Cache

Choose Enabled or Disabled. This option enables the Level 2 cache memory.

CPU L2 Cache ECC Checking

Choose Enabled or Disabled. This option enables the Level 2 cache memory ECC (error check correction).

Processor Number Feature

This option is for Pentium® III processor. During Enabled, this will check the CPU Serial number. Disabled this option if you don't want the system to know the Serial number.

Quick Power On Self-Test

This category speeds up Power On Self Test (POST) after you power on the computer. If this is set to Enabled. BIOS will shorten or skip some check items during POST.

Enabled (default) Enable quick POST

Disabled Normal POST

First/Second/Third/Fourth Boot Device

The BIOS attempts to load the operating system from the devices in the sequence selected in these items. The settings are Floppy, LS/ZIP, HDD-0/HDD-1/HDD-3, SCSI, CDROM, LAN and Disabled.

Swap Floppy Drive

Switches the floppy disk drives between being designated as A and B. Default is Disabled.

Boot Up Floppy Seek

During POST, BIOS will determine if the floppy disk drive installed is 40 or 80 tracks. 360K type is 40 tracks while 760K, 1.2M and 1.44M are all 80 tracks.

Boot Up NumLock Status

The default value is On.

- On** (default) Keypad is numeric keys.
- Off** Keypad is arrow keys.

Gate A20 Option

- Normal** The A20 signal is controlled by keyboard controller or chipset hardware.
- Fast** (default) The A20 signal is controlled by port 92 or chipset specific method.

Typematic Rate Setting

Keystrokes repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be selected. The settings are: Enabled/Disabled.

Typematic Rate (Chars/Sec)

Sets the number of times a second to repeat a keystroke when you hold the key down. The settings are: 6, 8, 10, 12, 15, 20, 24, and 30.

Typematic Delay (Msec)

Sets the delay time after the key is held down before it begins to repeat the keystroke. The settings are 250, 500, 750, and 1000.

Security Option

This category allows you to limit access to the system and Setup, or just to Setup.

- System** The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
- Setup** (default) The system will boot, but access to Setup will be denied if the correct password is not entered prompt.

OS Select For DRAM > 64MB

Allows OS2[®] to be used with >64MB or DRAM. Settings are Non-OS/2 (default) and OS2. Set to OS/2 if using more than 64MB and running OS/2[®].

Report No FDD For Win 95

Whether report no FDD for Win 95 or not. The settings are: Yes, No.

3-6 Advanced Chipset Features

The Advanced Chipset Features Setup option is used to change the values of the chipset registers. These registers control most of the system options in the computer.

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software
Advanced Chipset Features

Advanced DRAM Control 1 Press Enter System BIOS Cacheable Enabled Video RAM Cacheable Enabled Memory Hole at 15M-16M Disabled AGP Aperture Size 64MB Graphic Window WR Combin Enabled Concurrent function(MEM) Enabled Concurrent function(PCI) Enabled CPU Pipeline Control Enabled PCI Delay Transaction Disabled Memory Parity Check Disabled	Item Help	
		Menu Level >
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

Advanced DRAM Control 1

Please refer to section 3-6-1

System BIOS Cacheable

Selecting Enabled allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result. The settings are: Enabled and Disabled.

Video RAM Cacheable

Select Enabled allows caching of the video BIOS, resulting in better system performance. However, if any program writes to this memory area, a system error may result. The settings are: Enabled and Disabled.

Memory Hole at 15M-16M

You can reserve this area of system memory for ISA adapter ROM. When this area is reserved, it cannot be cached. The user information of peripherals that need to use this area of system memory usually discusses their memory requirements. The settings are: Enabled and Disabled.

PCI Delay Transaction

The chipset has an embedded 32-bit posted write buffer to support delay transactions cycles. Select Enabled to support compliance with PCI specification version 2.1. The settings are: Enabled and Disabled.

Memory Parity Check

This function provides parity check of memory.
The choice is either Disabled or Enabled.

3-6-1 Advanced DRAM Control

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software

Advanced DRAM Control 1

Auto Configuration	Auto	Item Help
SDRAM RAS Active Time	5T	Menu Level >>
SDRAM RAS Precharge Time	3T	
RAS to CAS Delay	4T	
Dram Background Command	Delay 1T	
LD-Off Dram RD/WR Cycles	Delay 1T	
Write Recovery Time	2T	
VCM REF to ACT/REF Delay	9T	
VCM ACCT - ACT/REF Delay	8T	
Early CKE Delay 1T Cntrl	Normal	
Early CKE Delay Adjust	1ns	
Mem Command Output Time	Delay 1T	
SDRAM/VCM CAS Latency	3T	
MD Driving Rate	Weak	
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

3-7 Integrated Peripherals

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software

Integrated Peripherals

> OnChip IDE Function	Press Enter	Item Help
> OnChip Device Function	Press Enter	Menu Level >
> Winbond SuperIO Device	Press Enter	
Init Display First	PCI Slot	
System Share Memory Size	8 MB	
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

OnChip IDE Function

Please refer to section 3-7-1

OnChip Device Function

Please refer to section 3-7-2

Winbond SuperIO Device

Please refer to section 3-7-3

Init Display First

This item allows you to decide to activate whether PCI Slot or AGP VGA first. The settings are: PCI Slot, AGP Slot.

3-7-1 OnChip IDE Function

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software

OnChip IDE Function

Internal PCI/IDE	Both	Item Help	
Primary Master PIO	Auto	Menu Level >>	
Primary Slave PIO	Auto		
Secondary Master PIO	Auto		
Secondary Slave PIO	Auto		
Primary Master UDMA	Auto		
Primary Slave UDMA	Auto		
Secondary Master UDMA	Auto		
Secondary Slave UDMA	Auto		
IDE Burst Mode	Enabled		
IDE HDD Block Mode	Enabled		
IDE Prefetch Mode	Enabled		
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults			

Internal PCI/IDE

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select Both to activate each channel separately. The settings are: Both, IDE0, IDE1.

Primary/Secondary Master/Slave PIO

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device. The settings are: Auto, Mode 0, Mode 1, Mode 2, Mode 3, Mode 4.

Primary/Secondary Master/Slave UDMA

Ultra DMA/33 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If your hard drive and your system software both support Ultra DMA/33 and Ultra DMA/66, select Auto to enable BIOS support. The settings are: Auto, Disabled.

IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support. The settings are: Enabled, Disabled.

3-7-2 OnChip Device Function

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software
OnChip Device Function

AC97 Sound Device	Enabled	Item Help
Game Port Address	201	
Midi Port Address	330	
Midi Port IRQ	10	
AMR Modem DEVICE	Enabled	Menu Level >>
ETHERNET Function	Enabled	
ETHERNET Address ID Input	Press Enter	
Current Mac address is 003018-000001		← (Only for 630BF)
USB Controller	Enabled	
USB Keyboard Support	Disabled	
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

AC97 Sound Device

This item allows you to decide to enable/disable the chipset family to support AC97 Audio. The settings are: Enabled, Disabled.

Game Port Address/Midi Port Address

This will determine which Address the Game Port/Midi Port will use.

AMR Modem DEVICE

This item allows you to decide to enable/disable the chipset family to support AC97 Modem. The settings are: Auto, Disabled.

USB Controller

Select *Enabled* if your system contains a Universal Serial Bus (USB) controller and you have a USB peripherals. The settings are: Enabled, Disabled.

USB Keyboard Support

Select *Enabled* if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard. The settings are: Enabled, Disabled.

ETHERNET Address ID Input (*Only for 630BF*)

This item allows you to setting the Mac address from 003018 to 000001.

3-7-3 Winbond SuperIO Device

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software

Winbond SuperIO Device

Onboard FDC Controller	<u>Enabled</u>	Item Help
Onboard Serial Port 1	3F8/IRQ4	
Onboard Serial Port 2	2F8/IRQ3	
UART 2 Mode	Normal	
RxD,TxD Active	Hi,Hi	
IR Transmission Delay	Enabled	
IR Duplex Mode	Half	
Use IR Pins	IR-Rx2Tx2	
Onboard Parallel Port	378/IRQ7	
Parallel Port Mode	SPP	
EPP Mode Select	EPP1.9	
ECP Mode Use DMA	3	
Menu Level >>		
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

Onboard FDC Controller

Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install add-on FDC or the system has no floppy drive, select Disabled in this field. The settings are: Enabled and Disabled.

Onboard Serial Port 1/Port 2

Select an address and corresponding interrupt for the first and the second serial ports. The settings are: 3F8/IRQ4, 2E8/IRQ3, 3E8/IRQ4, 2F8/IRQ3, Disabled, Auto.

UART 2 Mode

This item allows you to determine which InfraRed(IR) function of the onboard I/O chip, this functions uses.

Onboard Parallel Port

There is a built-in parallel port on the on-board Super I/O chipset that Provides Standard, ECP, and EPP features. It has the following option:

Disabled

(3BCH/IRQ7)/ Line Printer port 0

(278H/IRQ5)/ Line Printer port 2

(378H/IRQ7) Line Printer port 1

Parallel Port Mode

SPP : Standard Parallel Port

EPP : Enhanced Parallel Port

ECP : Extended Capability Port

SPP/EPP/ECP/ECP+EPP

To operate the onboard parallel port as Standard Parallel Port only, choose “SPP.” To operate the onboard parallel port in the EPP modes simultaneously, choose “EPP.” By choosing “ECP”, the onboard parallel port will operate in ECP mode only. Choosing “ECP+EPP” will allow the onboard parallel port to support both the ECP and EPP modes simultaneously. The ECP mode has to use the DMA channel, so choose the onboard parallel port with the ECP feature. After selecting it, the following message will appear: “ECP Mode Use DMA” at this time, the user can choose between DMA channels 3 to 1. The onboard parallel port is EPP Spec. compliant, so after the user chooses the onboard parallel port with the EPP function, the following message will be displayed on the screen: “EPP Mode Select.” At this time either EPP 1.7 spec. or EPP 1.9 spec. can be chosen.

3-8 Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy saving while operating in a manner consistent with your own style of computer use.

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software

Power Management Setup

ACPI Function	Enabled	Item Help
Video Off Option	Susp, Stby -> off	

Video Off Method	V/H SYNC+Blank	Menu Level >
Switch Function	Break/Wake	
MODEM Use IRQ	3	
Hot key Function As	Disabled	
HDD Off After	Disabled	
Power Button Function	Instant-Off	
> PM Wake Up Events	Press Enter	
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

← (for ATX Power Support)

ACPI Function

This item allows you to Enabled/Disabled the Advanced Configuration and Power Management (ACPI). The settings are Enabled and Disabled.

Video Off Option

This determines the manner in which the monitor is blanked. The choice are Suspend → off, All Modes → Off, and Always On.

Video Off Method

This determines the manner in which the monitor is blanked.

- DPMS (default)** Initial display power management signaling.
- Blank Screen** This option only writes blanks to the video buffer.
- V/H SYNC+Blank** This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.

Modem Use IRQ

This determines the IRQ in which the MODEM can use.

The settings are: 3, 4, 5, 7, 9, 10, 11, NA.

Power Button Function (Only for ATX Power Supply)

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state. The settings are: Delay 4 Sec, Instant-Off.

PM Wake-Up Events

Please refer to section 3-8-1

3-8-1 PM Wake up Events

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software

PM Wake Up Events

IRQ [3-7,9-15],NMI	Enabled	Item Help	
IRQ 8 Break Suspend	Disabled		
Ring Power Up Control	Disabled	Menu Level >> ← for ATX Power Supply	
MACPME Power Up Control	Disabled		
PCIPME Power Up Control	Disabled		
KB Power ON Password	Enter		
Power Up by Alarm	Disabled		
x Month Alarm	NA		
x Day of Month Alarm	0		
x Time (hh:mm:ss) Alarm	0 : 0 : 0		
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults			

Ring Power Up Control

During Disabled, the system will ignore any incoming call from the modem. During Enabled, the system will boot up if there's an incoming call from the modem.

MACPME Power Up Control

During Disabled, the system will ignore any incoming call from the EtherNet controller. During Enabled, the system will boot up if there's an incoming call from the EtherNet controller.

PCIPME Power Up Control

This will enable the system to wake up by PCI device Power Management function. The settings are: Enabled and Disabled.

KB Power ON Password

This item can setting Power On Password, if you Enabled keyboard Power On function then you can Power On system by key-in the password which you setting.

Power Up by Alarm

This function is for setting date and time for your computer to boot up. During Disabled, you cannot use this function. During Enabled, choose the Date and Time Alarm:

Date(of month) Alarm

You can choose which month the system will boot up. Set to 0, to boot every day.

Time(hh:mm:ss) Alarm

You can choose what hour, minute and second the system will boot up.

Note: If you have change the setting, you must let the system boot up until it goes to the operating system, before this function will work.

3-9 PnP/PCI Configuration Setup

This section describes configuring the PCI bus system. PCI, or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed the

CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software
PnP/PCI Configurations

Reset Configuration Data	Disabled	Item Help
Resources Controlled By	Manual	Menu Level >
> IRQ Resources	Press Enter	
PCI/VGA Palette Snoop	Disabled	Default is Disabled. Select Enabled to Reset Extended System Configuration Data (ESCD) when you exit Setup if you have Installed a new add-on and the system reconfiguration has caused such a serious conflict that the OS cannot boot
↑ ↓ → ← Move Enter: Select Item +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Optimized Defaults F7: Standard Defaults		

Reset Configuration Data

Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system can not boot. The settings are: Enabled and Disabled.

Resource Controlled By

The Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating system such as Windows®95/98. If you set this field to “manual” choose specific resources by going into each of the sub menu that follows this field (a sub menu is preceded by a “>”).

The settings are: Auto(ESCD), Manual.

IRQ Resources

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt.

Please refer to section 3-9-1

PCI/VGA Palette Snoop

Leave this field at *Disabled*. The settings are Enabled, Disabled.

3-9-1 IRQ Resources

IRQ Resources

		Item Help
IRQ-3	assigned to	Menu Level > Default is Disabled. Select Enabled to Reset Extended System Configuration Data (ESCD) when you exit Setup if you have Installed a new add-on and the system reconfiguration has caused such a serious conflict that the OS cannot boot
IRQ-4	assigned to	
IRQ-5	assigned to	
IRQ-7	assigned to	
IRQ-9	assigned to	
IRQ-10	assigned to	
IRQ-11	assigned to	
IRQ-12	assigned to	
IRQ-14	assigned to	
IRQ-15	assigned to	
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

3-10 PC Health Status

This section shows the Status of you CPU, Fan, Warning for overall system status. This is only available if there is Hardware Monitor onboard.

PC Health Status

		Item Help	
CPU Warning Temperature	Disabled	Menu Level >	
Shutdown Temperature	Disabled		
Show PC Health in Post	Enabled		
Current System Temp.	28°C/82°F		
Current CPU Temperature	29°C/84°F		
Current CPUFAN Speed	4687 RPM		
Current SYSFAN Speed	0 RPM		
Vcore	1.69V		
Vcc3.3	3.31V		
+ 5V	5.00V		
+12V	+ 12.02V		
-12V	- 12.16V		
5VSB (V)	5.45V		
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults			

Show PC Health in Post

During Enabled, it displays information list below. The choice is either Enabled or Disabled

Current CPU Temperature/Current System Temp/Current CPUFAN, SYSFAN Speed/ Vcore/ Vcc/3.3V/+5V/+12V/-12V/5VSB(V)

This will show the CPU/FAN/System voltage chart and FAN Speed.

3-11 Frequency/Voltage Control

This section is for setting CPU Frequency Control.

CMOS Setup Utility - Copyright(C) 1984-2000 Award Software
Frequency/Voltage Control

Cyrix III Clock Ratio	Default	Item Help Menu Level > CyrixIII CPU Ratio Adjust
Auto Detect DIMM/PCI Clk	Enabled	
Spread Spectrum	Disabled	
CPU Host/DRAM Clock	Default	
CPU Clock Ratio Jumpless	x 3.0	
↑ ↓ → ← Move Enter:Select Item +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

Cyrix III Clock Ratio

This item allows you to set Cyrix III Clock Ratio. The settings are Default, X3.0, X3.5, X4, X4.5, X5, X5.5, X6, X6.5, X7.0, X7.5, X8.0.

Auto Detect DIMM/PCI Clk

This item allows you to enable/disable auto detect DIMM/PCI Clock.

The settings are: Enabled, Disabled.

CPU Host/DRAM Clock

This item allows you to set the CPU Host/DRAM Clock

The choice are: Default, 66/66Mhz, 66/100Mhz, 75/75MHz, 83/83MHz, 95/95MHz, 96/96MHz, 97/97MHz, 100/100MHz, 100/133MHz, 112/112MHz, 133/100MHz, 133/133MHz, 140/140MHz

3-12 Load Standard/Optimized Defaults

Load Standard Defaults

When you press <Enter> on this item, you get confirmation dialog box with a message similar to:

Load Standard Defaults (Y/N)? N

Pressing <Y> loads the BIOS default values for the most stable, minimal-performance system operations.

Load Optimized Defaults

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:

Load Optimized Defaults (Y/N)? N

Pressing <Y> loads the default values that are factory settings for optimal performance system operations.

3-13 Set Supervisor/User Password

You can set either supervisor or user password, or both of them. The differences are:

Supervisor password: Can enter and change the options of the setup menus.

User password: Can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

ENTER PASSWORD:

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm that the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

PASSWORD DISABLED.

When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option. If the Security option is set to “System”, the password will be required both at boot and at entry to Setup. If set to “Setup”, prompting only occurs when trying to enter Setup.


Chapter 4

DRIVER & FREE PROGRAM INSTALLATION

Check your package and there is A MAGIC INSTALL CD included. This CD consists of all DRIVERS you need and some free application programs and utility programs. In addition, this CD also include an auto detect software which can tell you which hardware is installed, and which DRIVERS needed so that your system can function properly. We call this auto detect software MAGIC INSTALL.

MAGIC INSTALL supports WINDOWS 95/98/98SE/NT4.0/2000

Insert CD into your CD-ROM drive and the MAGIC INSTALL Menu should appear as below. If the menu does not appear, double-click MY COMPUTER / double-click CD-ROM drive or click START / click RUN / type X:\SETUP.EXE (assuming X is your CD-ROM drive).

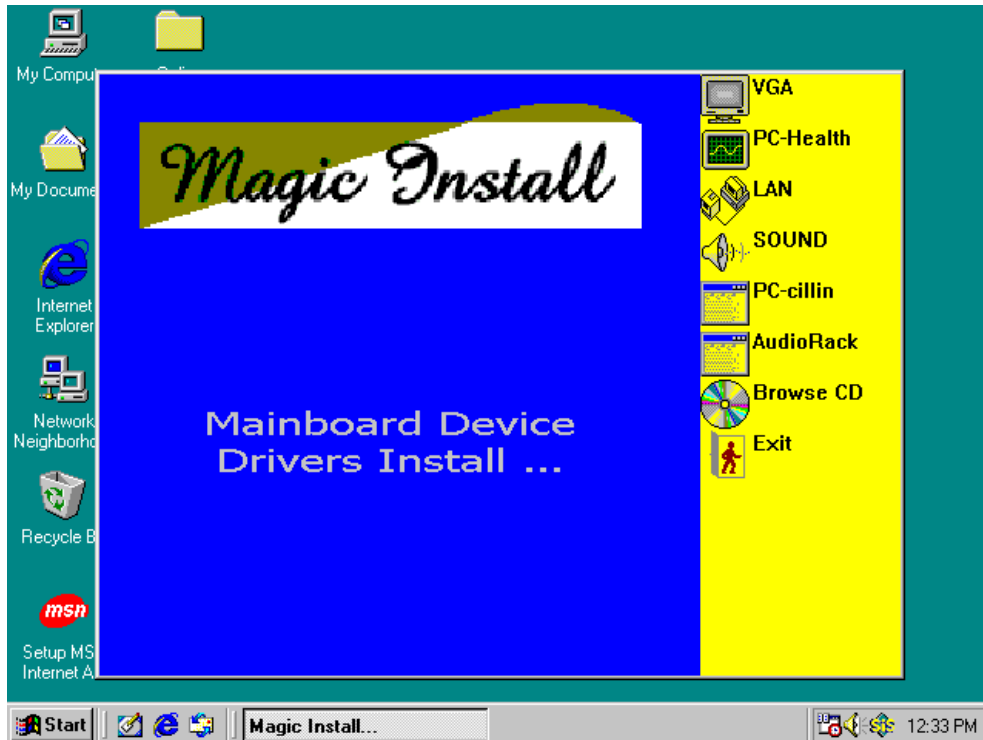

From MAGIC INSTALL MENU you may make 8 selections:

- | | |
|--------------|---|
| 1. VGA | Install SiS 630 On-chip VGA driver |
| 2. PC-HEALTH | Install Winbond Hardware Doctor Monitoring Software |
| 3. LAN | Install PCI Fast Ethernet driver |
| 4. SOUND | Install On-chip AC'97 Audio driver |
| 5. PC-CILLIN | Install PC-CILLIN98 Anti-virus program |
| 6. AUDIORACK | Install Sound Application software |
| 7. BROWSE CD | To browse the contents of the CD |
| 8. EXIT | To exit from Magic Install menu |

4-1 VGA Install SiS 630 VGA Driver

The path of the file:


for WINDOWS 9X is X:\SIS630\VGA\WIN9X\SETUP.EXE (including WIN95/98/98SE/98ME)

for WIN95NT4.0 is X:\SIS630\VGA\WINNT40

for WINDOWS 2000 is X:\SIS630\VGA\WIN2000\SETUP.EXE

for LINUX is X:\SIS630\LINUX


A. For WINDOWS 95/98/98SE/98ME/2000

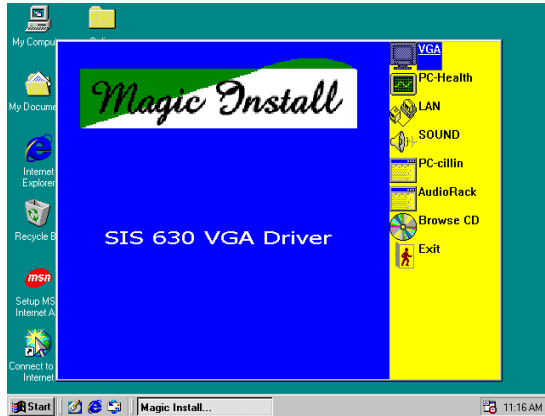


1. Click VGA when Magic Install MENU appears





2. Click Next when SiS630 Multimedia Package appears

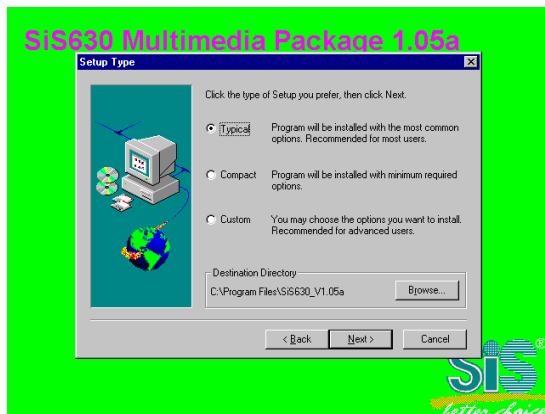

3. Multimedia Package support three types of Setup: Typical, Compact, Custom Please choice Typical and Click Next to continue step

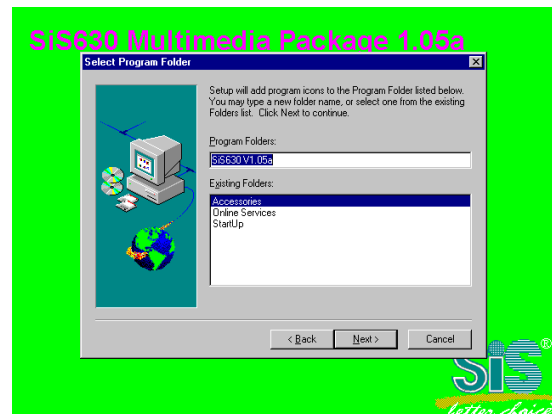


4. System will add program icons to the Program Folder listed. Click Next to continue, and after “Start Copying Files” window appears click Next

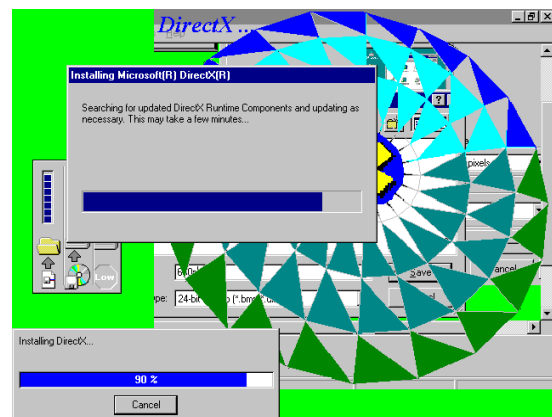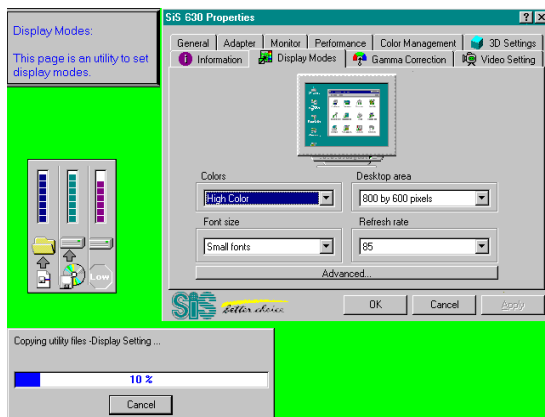

5. System starting install VGA driver

6. Install Microsoft Direct X

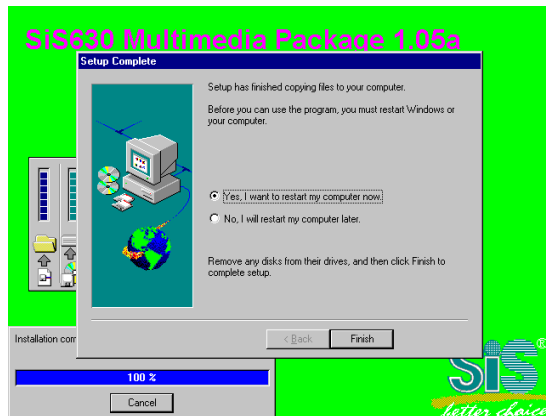

7. After Setup complete please select restart my computer now and click Finish to complete setup

4-2 PC-HEALTH Winbond Hardware Doctor Monitoring Software

The path of the file is X:\SIS630\HEALTH-W\SETUP.EXE
(Only support WINDOWS 95/98/98SE/98ME)


In Windows 95/98 Winbond Hardware Doctor Monitoring Software needs some system files to copy in Utility that's why it needs install PC-HEALTH twice to complete setup.



1. Click PC-Health when Magic Install Menu appears




2. Click OK when Winbond Hardware Doctor Setup Window appears

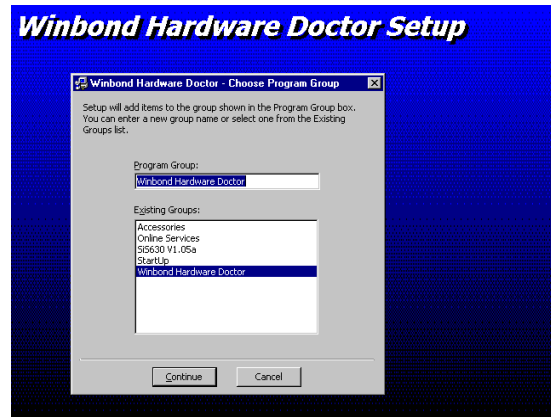

3. Click the Button to start installation
4. Select Program Group name or enter a new group name, click continue to setup and click OK after setup complete

4-2-1 How To Utilize PC-HEALTH

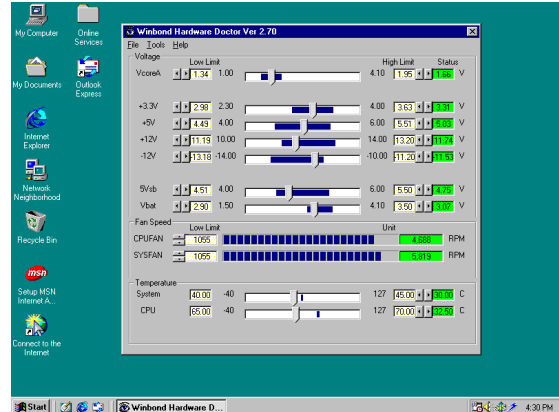


1. Click Program → Winbond Hardware Doctor → Hardware Doctor the Winbond Hardware Doctor will appear
You can remove the Utility in Control Panel → Add/Remove Program icon
2. After executing Winbond Hardware Doctor it supports system voltage, Fan speed and CPU/SYSTEM Temperature. Because this is a On-time Monitoring program therefore the value will change after it detected, if the value is over default setting the system will have warning picture and beeps

4-3 LAN (Only for 630BF) Install SiS 900 PCI Fast Ethernet Driver

The path of the file:
for WINDOWS 9X/2000 is X:\SIS630\LANDRV\SETUP.EXE


(Including WINDOWS 95/98/98SE/98ME/2000)
for WINDOWS NT4.0 is X:\SIS630\LANDRV\NT40

WINDOWS 95/98/98SE/98ME/2000 Setup

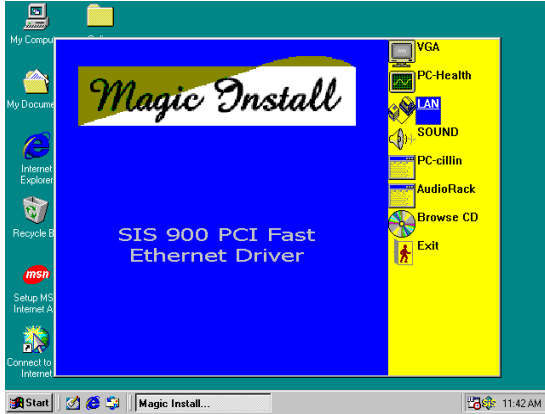

1. Click LAN when Magic Install Menu appears

2. Click NEXT when SiS PCI LAN Driver Setup appears

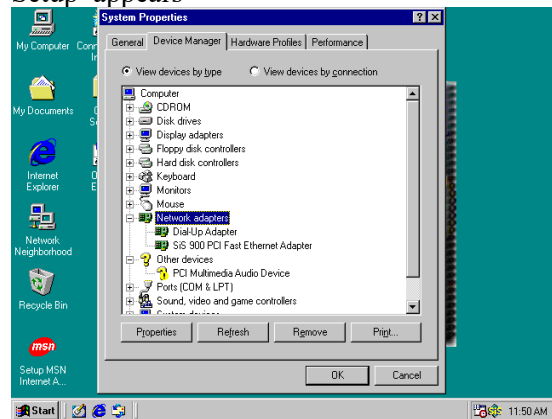


3. Choice restart my computer now to finish setting up LAN Card, click Finish to complete setup

4. After restart computer you can check in control Panel\System Device Manager\ Network adapters to make sure LAN card Driver setup completely Click NEXT when SiS PCI LAN Driver Setup appears

4-4 SOUND Install SiS 7018 AC'97 Audio Driver and Application Software

The path of the file is X:\SIS630\SOUND\SETUP.EXE
(Support WINDOWS 95/98/98SE/98ME/NT4.0/2000)

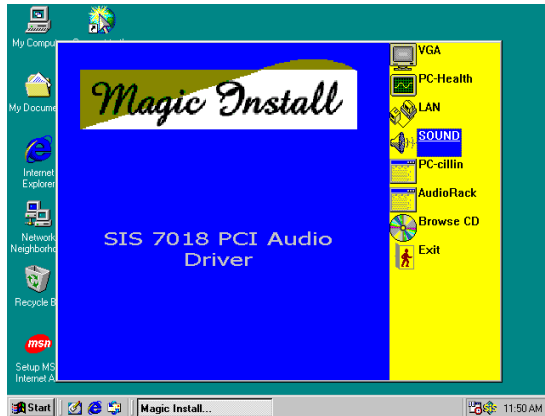

1. Click SOUND when Magic Install Menu window appears



2. Click Next when SiS PCI Audio Driver Setup window appears




3. Click Next to install the driver in Program Files Folder



4. Select restart my computer now and click Finish to complete setup



5. After restart computer the system will auto detect SiS 7018 Audio Driver and install it to system


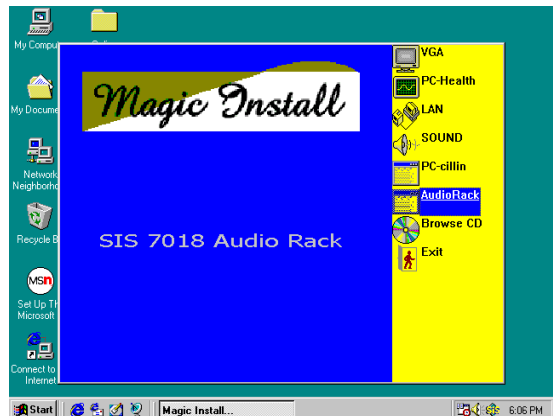


6. Click Audio Rack when Magic Install Menu appears




7. Run Programs →Audio Rack will show next screen

4-5 PC-CILLIN Install PC-CILLIN98 Anti-virus Software and Application program

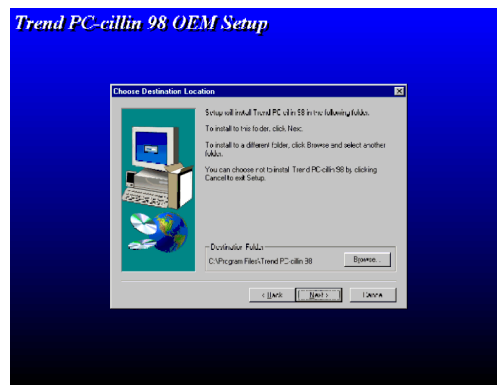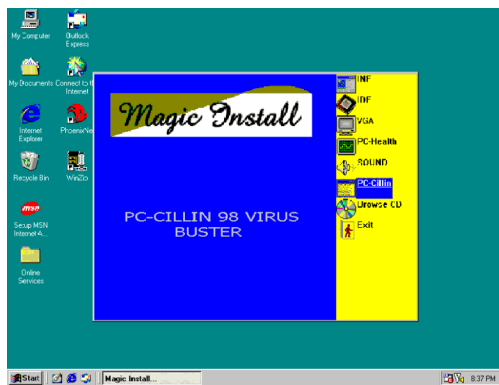


1. Click PC-CILLIN when MAGIC INSTALL MENU Appears
2. Click NEXT when PC-CILIN 98 OEM SETUP APPEARS. Then click YES when the announcement of copywrite appears. Software is starting to detect HD for virus

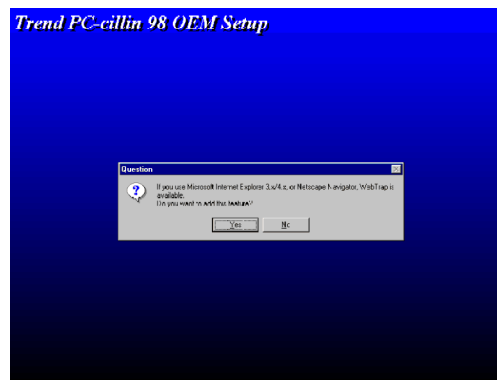

3. Click NEXT or choose BROWSE to change
4. Start to install the software, choose YES or


the path For the file to be stored

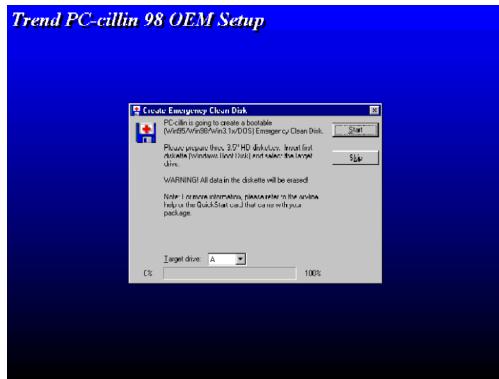

NO when asked if you want PC-CILLIN To be added in ACTIVE CHANNEL or in Your internet browser



5. If you want to make a rescue disc, insert a 1.44 MB disc

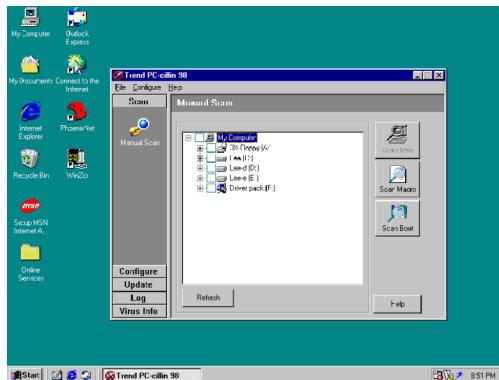

6. Choose if you want to re-start and click Finish

7. After install PC-CILLIN98 complete we recommend select update item to download newest virus code and setting Auto refresh virus code

4-6 How To Disable On Board Sound Function

Please key in “DEL” key after power on to enter BIOS SETUP screen and choose Integrate Peripherals → On-Chip Device Function → AC97 Audio item to disabled all on board Sound function by Page Down key.

4-7 HOW TO UPDATE BIOS

STEP 1. Prepare a boot disc. (you may make one by click START click RUN type SYS A: click OK)

STEP 2. Copy utility program to your boot disc. You may copy from DRIVER CD

X:\FLASH\AWDFLASH.EXE or download from our web site.

STEP 3. Copy latest BIOS for 630BF/630CN from our web site to your boot disc.

STEP 4. Insert your boot disc into A:,

start the computer, type “Awdflash A:\630BFxxx.BIN /SN/PY/CC/R”

630BFxxx.BIN is the file name of latest BIOS it can be 630BFA03.BIN or 630BFB02.BIN

SN means don't save existing BIOS data

PY means renew existing BIOS data

CC means clear existing CMOS data

R means restart computer

STEP 5. Push ENTER and the BIOS will be updated, computer will be restarted automatically