

6LX/EX68

Jumper Setting

CMOS Clear JP13

Normal	2-3 Close (Default)
Clear CMOS	3-4 Close

CPU Bus Frequency JP7

On = Close Off = Open

CPU	ModelRatio	Bus Freq	JP1			
			1,2	3,4	5,6	7,8
233 MHz	3.5 x	66.6 MHz	Off	Off	On	On
266 MHz	4.0 x	66.6 MHz	On	On	Off	On
300 MHz	4.5 x	66.6 MHz	Off	On	Off	On
333 MHz	5.0 x	66.6 MHz	On	Off	Off	On
366 MHz	5.5 x	66.6 MHz	Off	Off	Off	On