

# 6VIA85T

## User's Manual Version 1.0

The information presented in this publication has been made carefully for reliability; however, no responsibility is assumed for inaccuracies. Specifications are subject to change without notice.

IBM, PC/AT, and PC/XT are trademarks of International Business Machines Corporation.

Socket370 is a trademark of Intel Corporation

AWARD is a registered trademark of Phoenix Software Inc.

MS-DOS and WINDOWS NT are registered trademarks of Microsoft Corporation.

**Trademarks and/or registered trademarks are the properties of their respective owners.**

---

# Table of Contents

## Introduction

## 1. Motherboard Description

1.1 Introduction	1-1
1.2 Package Contents	1-1
1.3 Features	1-2
1.4 6VIA85T Motherboard Layout	1-5
1.5 CPU Installation	1-7
1.6 DIMM SDRAM Installation	1-8
1.7 Connectors & Jumper Setting	
1.7.1 Back Panel Connectors	
1.7.1.1 PS/2 Mouse/Keyboard Connector	1-9
1.7.1.2 USB Connectors: USB1/USB2	1-9
1.7.1.3 Serial Interface ports: COM1/2	1-10
1.7.1.4 Parallel Interface port	1-10
1.7.1.5 Audio Port Connector	1-10
1.7.2 AT/ATX Power Connectors: AT/ATX	1-11
1.7.3 Floppy Disk Connector: FDD1	1-12
1.7.4 Hard Disk Connectors: IDE1/IDE2	1-12
1.7.5 Fan Connectors: FAN1/2	1-12
1.7.6 Wake-on-LAN Connector: WOL1	1-13
1.7.7 Front Panel Connector: PANEL1	1-14
1.7.8 CMOS Function Setting: JBAT1	1-15
1.7.9 CPU Clock Frequency Setting: JCK3~4	1-16

# Table of Contents

## 2. BIOS Setup

2.1 Main Menu	2-4
2.2 Standard CMOS Features	2-7
2.3 Advanced BIOS Features	2-10
2.4 Advanced Chipset Features	2-14
2.5 Integrated Peripherals	2-19
2.6 Power Management Setup	2-24
2.7 PnP/PCI Configurations	2-30
2.8 PC Health Status	2-33
2.9 Frequency/Voltage Control	2-34
2.10 Load Fail-Safe Defaults	2-35
2.11 Load Optimized Defaults	2-36
2.12 Set Supervisor/user Password	2-37
2.13 Save & Exit Setup	2-39
2.14 Exit Without Saving	2-40

## 3. Driver Installation

3.1 Main Menu	3-1
3.2 Installing VIA 4 in 1 Driver	3-2

## a. Appendix

# Chapter 1

## 1.1 Introduction

The 6VIA85T motherboard is designed for using Intel PIII™ Front Side Bus Frequency 66/100/133MHz CPU, which utilize the Socket-370 design and the memory size expandable to 1.536GB.

This motherboard use the latest VIA VT82C694T chipset, applying 133MHz Front Side Bus frequency and 133MHz memory interface delivers a clear upgrade path to the future generation of 133MHz processors, PC-100/PC-133 DIMM DRAM. The 6VIA85T motherboard offers ULTRA ATA 66/100 to provide speedier HDD throughout that boosts overall system performance.

It is ideal for multi-tasking and fully supporting MS-DOS, Windows, Windows NT , Windows ME, Windows 2000, Novell, OS/2, Windows95/98, Windows 98SE, Windows XP, UNIX, Liunx , SCO UNIX etc. This manual also explains how to install the mainboard for operation, and how to setup your CMOS configuration with the BIOS setup program.

## 1.2 Package Contents

- ◆ HDDUDMA 66/100 Cable.
- ◆ HDD Cable.
- ◆ Flash Memory written for BIOS update.
- ◆ Fully Setup Driver CD.
- ◆ This Manual.
- ◆ COM/Parallel port cable

## 1.3 Features

### CPU

- ◆ Intel FC-PGA Pentium III/Tualatin/Celeron Processors  
500MHz~1.2GHz or higher processor with 66/100/133 MHz FSB.
- ◆ VIA Cyrix III Processors.

### Chipset

- ◆ North Bridge System Chipset : VT82C694T
- ◆ South Bridge System Chipset: VT82C686B

### DRAM Memory

- ◆ Supports 8/16/32/64....MB DIMM module socket.
- ◆ Supports Synchronous DRAM(3.3V)
- ◆ Supports a maximum memory size of 1.536GB with SDRAM.

### AGP for fast VGA solution

- ◆ AGP specification compliant.
- ◆ AGP 66 MHz 3.3v/1.5v for 2X/4X device support.

*Note:*

*If an unstable issue occurs, after installing " VIA 4 in 1 driver ". We suggest you to re-install " VIA 4 in 1 driver ", and then select " install VIA AGP VxD in Standard mode " at " VIA\_GART AGP Driver " item.*

### PCI Expansion Slot

- ◆ Provide one 16 bit ISA, and three 32 bit PCI slots .

### Support AT/ATX Power supply connector.

## 1.3 Features

### On-Board IDE

- ◆ An IDE controller on the VIA VT82C686B Chipset provides IDE HDD/CD-ROM with PIO, Bus Master and Ultra DMA 33/66/100 operation modes.
- ◆ Can connect up to four IDE devices.

### On-Board Peripherals:

- ◆ 1 floppy port supports 2 FDD with 360K, 720K, 1.2M, 1.44M and 2.88M byte.
- ◆ 2 serial ports (COM1+COM2).
- ◆ 1 parallel port supports SPP/EPP/ECP mode.
- ◆ 1 IrDA/HP connector for SIR.


### BIOS

- ◆ The mainboard BIOS provides “Plug & Play” BIOS which detects the peripheral devices and expansion cards of the board automatically.
- ◆ The mainboard provides a Desktop Management Interface (DMI) function which records your M/B specifications.
- ◆ BIOS support CD-ROM, SCSI, LAN BOOT, Temperature sensor, Wake on modem, LAN, Alarm Bus CLK setup with BIOS.


### Support Ring on by modem/Alarm on (ATX only)

- ◆ Support System power up from Modem ring up or timer of System. Required enabled in Ring on by modem and Alarm on in BIOS.

# 1.4 6VIA85T Motherboard Layout

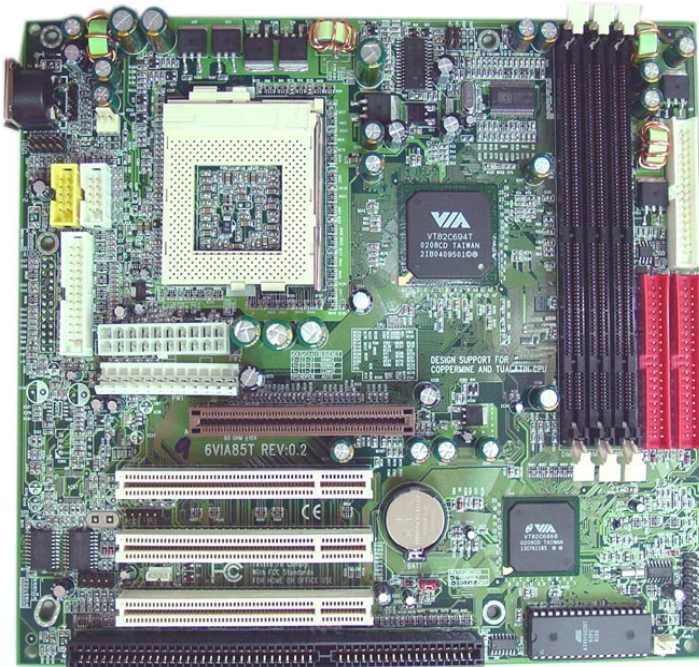

## 1.4 6VIA85T Layout

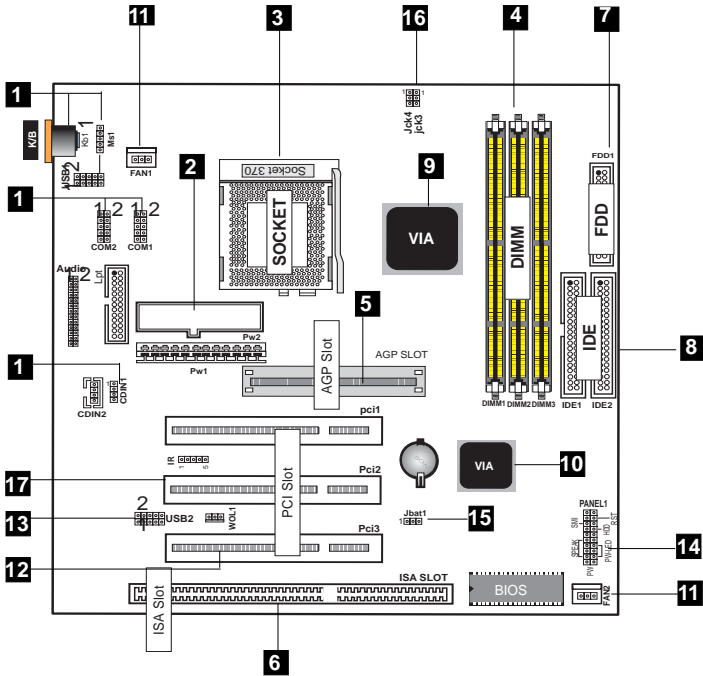

1. Back Panel I/O Connectors (Mouse, Keyboard, USB1, , COM1, COM2, Printer)
2. AT/ATX Power Connector
3. CPU Processor (Socket 370)
4. SDRAM DIMM Sockets (DIMM1/DIMM2/DIMM3)
5. AGP Slot
6. ISA Slot




- 7. Floppy Connector**
- 8. IDE Connectors (IDE1/IDE2)**
- 9. North Bridge (VIA VT82C694T)**
- 10. South Bridge (VIA VT82C686B)**
- 11. Fan Connectors (Fan1/2)**
- 12. Wake-On-LAN Connector**
- 13. Front USB2 Port Connector**
- 14. Front Panel Connector (PANEL1)**
- 15. CMOS Function Selection (JBAT1)**
- 16. CPU Clock Freq. Setting (JCK3~JCK4)**
- 17. IR Connector**

## 1.5 CPU Installation

The motherboard operates with Socket 370 for Intel PIII™ processor. The CPU should always have a Heat Sink and cooling fan attached to prevent overheating.

### CPU Installation Procedures: Socket 370

1. Pull the lever sideways away from the socket then raise the lever to a 90-degree angle.
  2. Locate Pin 1 in the socket and look for the white dot or cut edge in the CPU. Match Pin 1 with the white dot or cut edge then insert the CPU.
  3. Press the lever down to complete installation.
- 4. Make sure that pin 1 of Socket 370 is matching with Pin 1 of CPU.**
- 5. Ensure that all CPU pins are completely in socket before pressing down the socket lever.**

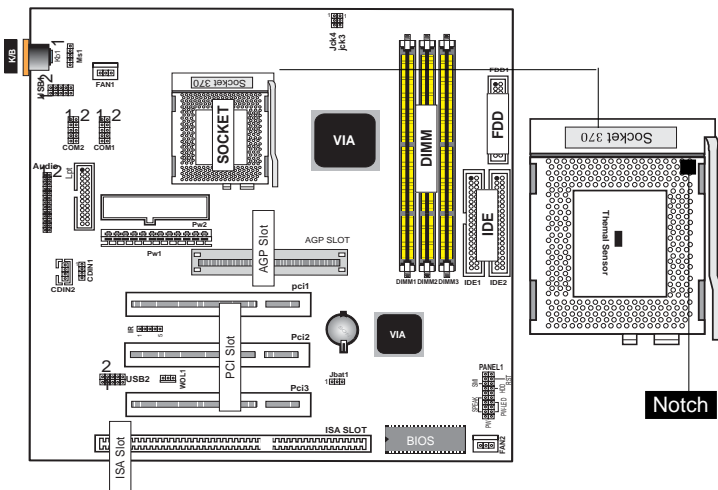

## 1.6 DIMM SDRAM Installation


DRAM Access Time: 3.3V Unbuffered SDRAM/ PC66/PC100 and PC133 Type required.

DRAM Type: 16MB, 32MB, 64MB, 128MB, 256MB, 512MB DIMM Module. (168 pin)

### How to install a DIMM Module:

1. The DIMM socket has a “Plastic Safety Tab” and the DIMM memory module has an asymmetrical notch”, so the DIMM memory module can only fit into the slot in one direction.
2. Push the tabs out. Insert the DIMM memory modules into the socket at a 90-degree angle then push down vertically so that it will fit into place.
3. The Mounting Holes and plastic tabs should fit over the edge and hold the DIMM memory modules in place.

Bank	Memory module
DIMM 1 ( Bank 0-1 )	16MB, 32MB, 64MB, 128MB, 256MB, 512MB 168 pin, 3.3v SDRAM
DIMM 2 ( Bank 2-3 )	16MB, 32MB, 64MB, 128MB, 256MB, 512MB 168 pin, 3.3v SDRAM
DIMM 3 ( Bank 4-5 )	16MB, 32MB, 64MB, 128MB, 256MB, 512MB 168 pin, 3.3v SDRAM
	<b>Total System Memory(Max 1.536GB)</b>

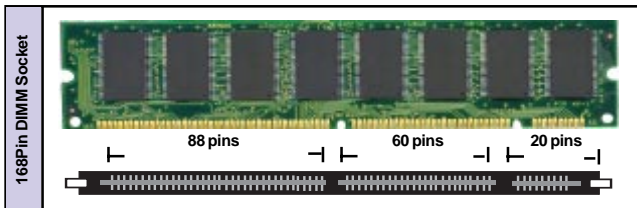

## 1.7 Connectors & Jumpers Setting


### 1.7.1 Back Panel I/O Connectors

#### 1.7.1.1 PS/2 Mouse / Keyboard Connector

- \* This connector will compatible with standard at AT size (large DIN) keyboard plugs. You may use a DIN to mini DIN adapter on standard AT keyboards.
- \* This system will direct IRQ12 to PS/2 mouse.

#### 1.7.1.2 USB Connectors: USB1/USB2

The motherboard provides a OHCI(Open Host Controller Interface)Universal Serial Bus Roots for attaching USB devices such as a keyboard, mouse and other USB devices. You can plug the USB devices directly into this connector.

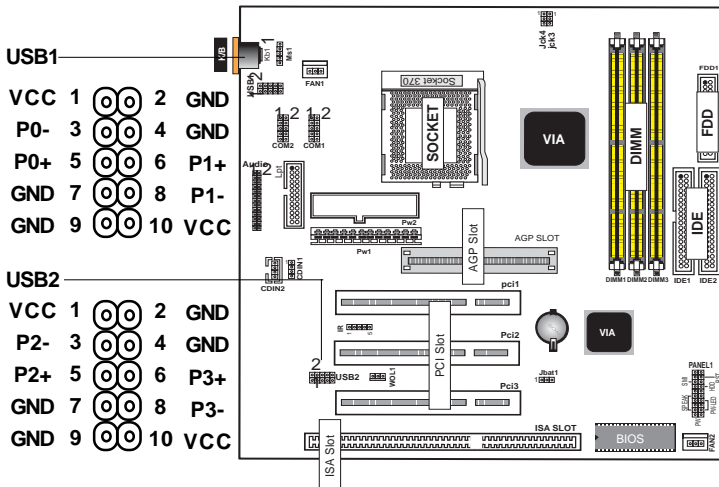


### 1.7.1.3 Serial Interface Ports: COM1 / COM2

The serial interface port is sometimes referred to as an RS-232 port or an asynchronous communication port. Mice, printers, modems and other peripheral devices can be connected to a serial port. The serial port can also be used to connect your computer system. If you like to transfer the contents of your hard disk to another system, it can be accomplished by serial port.

#### COM1/COM2



1

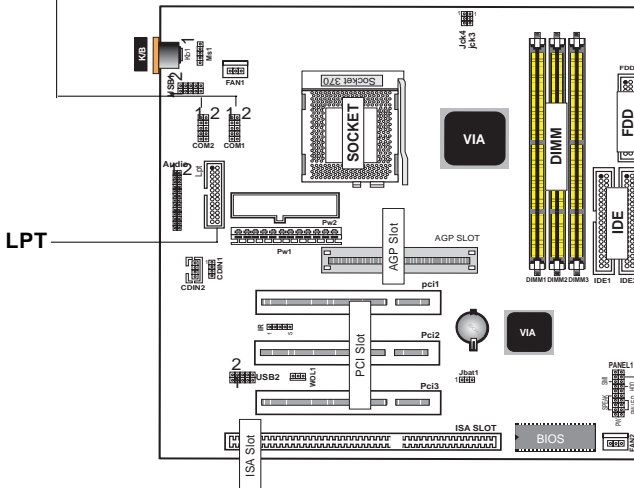

### 1.7.1.4 Parallel Interface Port

Unlike serial ports, parallel interface ports have been standardized and should not present any difficulty interfacing peripherals to your system. Sometimes called a Centronics port, the parallel port is almost exclusively used with printers. The parallel port on your system has a 25-pin, DB 25 connector.

## 1.7.2 AT/ATX Power Connectors: AT/ATX

This connector supports the power button on-board. Using the ATX power supply, functions such as Modem Ring Wake-Up and Soft Power Off are supported on this motherboard. This power connector supports instant power-on functionality, which means that the system will boot up instantly when the power connector is inserted on the board.




PW1

Pin AT	Description	Pin AT	Description
1	Power Good	7	Ground
2	+5V DC	8	Ground
3	+12V DC	9	-5V DC
4	-12V DC	10	+5V DC
5	Ground	11	+5V DC
6	Ground	12	+5V DC

### Note:

This power supply connectors are two 6-pin male header connectors. Plug the dual connectors from the power directly onto the board connectors. The majority of power supply have 2 leads. Each lead has 6 wires. 2 of them are black, orient the connectors, so the black wires are in the middle.

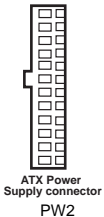ATX Power Supply connector  
PW2

Pin ATX	Signal	Pin ATX	Signal
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	5V	14	PS-ON
5	GND	15	GND
6	5V	16	GND
7	GND	17	GND
8	PW-OK	18	-5V
9	5V_SB	19	5V
10	12V	20	5V

### Note:

Make sure that the ATX PIII power supply can take at least 1Amp on the 5Volt standby lead (5VSB).

### Important:

Before you switch on your power supply, please make sure:

1. Memory Module installing is OK.
2. Power supply setting is OK.
3. AGP card 2X/4X is OK.

### 1.7.3 Floppy Disk Connector: FDD1


This connector supports the provided floppy drive ribbon cable. After connecting the single end to the board, connect those two plugs on the other end to the floppy drives.

### 1.7.4 Hard Disk Connectors: IDE1/IDE2

These connectors support the provided IDE hard disk ribbon cable. After connecting the single end to the board, connect those two plugs at the other end to your hard disk.


If you install two hard disks, you must configure the second drive to Slave mode by setting its jumper settings. BIOS now supports SCSI device or IDE CD-ROM boot up (see "HDD Sequence SCSI/IDE First" & "Boot Sequence" in the BIOS Features Setup of the BIOS SOFTWARE) (Pin 20 is removed to prevent inserting in the wrong orientation when using ribbon cables with pin 20 plugged).

### 1.7.5 Fan Connectors: Fan1/2

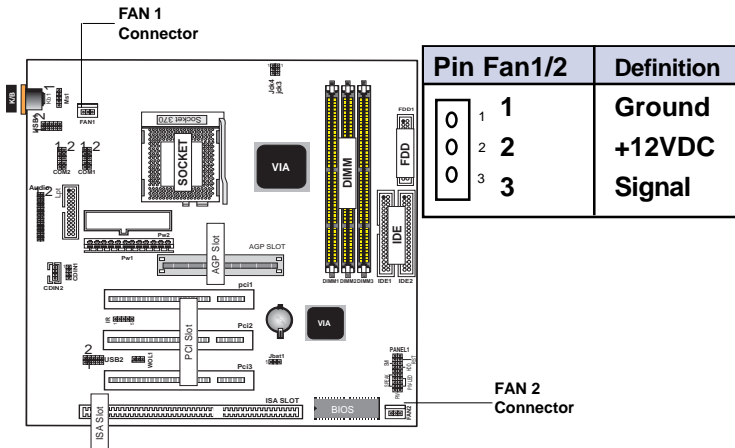

These connectors support cooling fans of 1Amp or less. Orientate the fans so that the heatsink fins allow airflow to go across the onboard heat sink(s) instead of the expansion slots. Depending on the fan manufacturer, the wiring and plug may be different. The red wire should be positive, while the black should be ground. Connect the fan's plug to the board taking into consideration the polarity of the this connector.


## 1.7.6 Wake-On-LAN Connector: WOL1

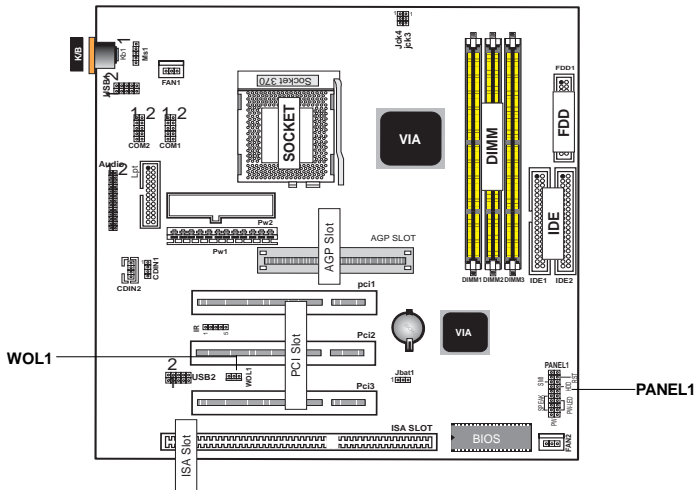

Pin	Definition
1	5V_SB
2	Ground
3	Signal



## 1.7.7 Front Panel Connector: PANEL1

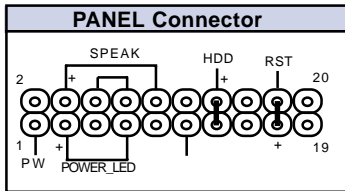

### ATX Power Switch (PW)

The system power is controlled by a momentary switch connected to this lead. Pushing the button once will switch the system ON.

### Power LED Lead (POWER\_LED)

The system power LED lights when the system power is on.

### Speaker Connector (SPEAK)

The speaker (onboard or offboard) provides error beep code information during the Power Self-Test when the computer cannot use the video interface. The speaker is not connected to the audio subsystem and does not receive output from the audio subsystem.

### Hard Drive LED Connector (HDD)


This connector supplies power to the cabinet IDE activity LED. Read and write activity by devices connected to the Primary or Secondary IDE connectors will cause the LED to light up.



### Reset Switch Lead (RST)

The connector can be connected to a momentary SPST type switch that is normally open. When the switch is closed, the motherboard resets and runs the POST.

## 1.7.8 CMOS Function Selection: JBAT1

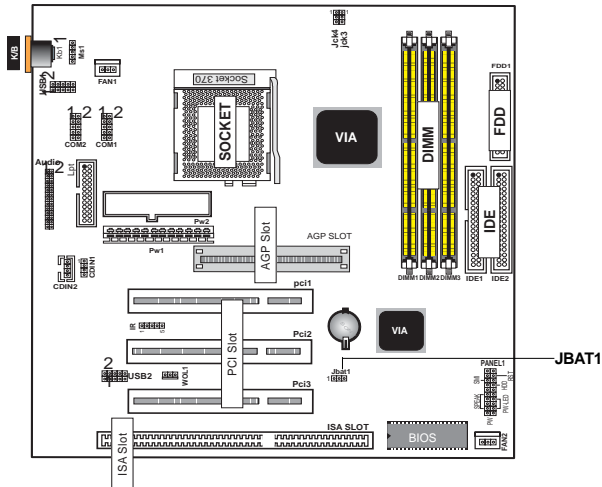This jumper allows you to clear the data, time, and system setup parameters from CMOS. To erase the CMOS Real Time Clock(RTC) RAM data, please follow the Note below.



Pin JBAT1	Definition
1-2 	Normal (Default)
2-3 	Clear CMOS


### NOTE:

**(Please follow the procedure below to clear CMOS data.)**

- (1) Remove the AC power line.
- (2) JBAT1(2-3) Closed.
- (3) Wait five seconds.
- (4) JBAT1(1-2) Closed.
- (5) AC Power on.
- (6) Reset your desired password or clear CMOS data.

### 1.7.9 CPU Clock Freq. Setting: JCK3~JCK4

Overclocking is operating a CPU/Processor beyond its specified frequency. JCK3~JCK4 jumper is used for the CPU Front Side Bus Frequencies from 66MHz to 133MHz.

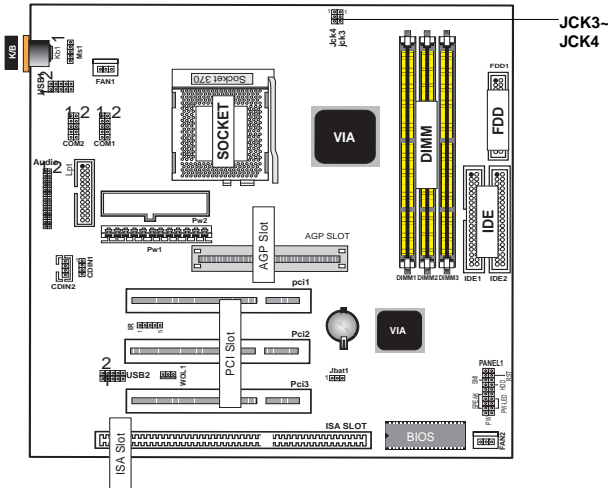

JCK3	JCK4	FSB Clock	PCI(MHz)	Default
2-3 	2-3 	66	33.3	
1-2 	2-3 	100	33.3	
1-2 	1-2 	133	33.3	*
Open 	Open 	Auto	33.3	

**Note:**

We don't recommend you to overclock, otherwise, you will very possibly damage your CPU and reduce it's life.

# Chapter 2

## Introduction

This chapter discusses the Award Setup program built into the ROM BIOS. The Setup program allows the user to modify the basic system configuration. This special information is then stored in battery-backed RAM so that it retains the setup information when the power is turned off.

The Award BIOS installed in your computer system's ROM (Read Only Memory) is a custom version of an industry standard BIOS. This means that it supports Intel PIII™ Processor. The BIOS provides critical low-level support for standard devices such as disk drives and serial and parallel ports.

The rest of this manual is intended to guide you through the process of configuring your system using Setup.

## Plug and Play Support

This Phoenix-AWARD BIOS supports the Plug and Play Version 1.0A specification. ESCD(Extended System Configuration Data)write is supported.

## EPA Green PC Support

This Phoenix-AWARD BIOS supports Version 1.03 of the EPA Green PC specification.

## PCI Bus Support

This Phoenix-AWARD BIOS also supports Version 2.1 of the Intel PCI (Peripheral Component Interconnect)local bus specification.

### **APM Support**

This Phoenix-AWARD BIOS supports Version 1.1&1.2 of the Advanced Power Management(APM) specification. Power management features are implemented via the System Management Interrupt(SMI). Sleep and Suspend power management modes are supported. Power to the hard disk drives and video monitors can be managed by this Phoenix-AWARD BIOS.

### **DRAM Support**

SDRAM (Synchronous DRAM) are supported.

### **Support CPU**

This Phoenix-AWARD BIOS supports the Intel PIII™ Processor.

### **Using Setup**

In general, you use the arrow keys to highlight items, press <Enter> to select, use the <PgUp> and <PgDn> keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program by using the keyboard.

#### *Note:*

**(BIOS version 1.0 is for reference only. If there is a change in BIOS version, please use the actual version on the BIOS.)**

---

<b>Keystroke</b>	<b>Function</b>
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left(menu bar)
Right arrow	Move to the item on the right(menu bar)
Esc	Main Menu: Quit without saving changes Submenus: Exit Current page to the next higher level menu
Move Enter	Move to item you desired
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+Key	Increase the numeric value or make changes
-Key	Decrease the numeric value or make changes
Esc Key	Main menu-Quit and not save changes into CMOS Status Page Setup Menu and option Page Setup Menu-Exit Current page and return to Main Menu
F1 Key	General help on Setup navigation keys.
F5 Key	Load previous values from CMOS
F6 Key	Load the fail-safe defaults from BIOS default table
F7 Key	Load the optimized defaults
F10 Key	Save all the CMOS changes and exit

## 2.1 Main Menu

Once you enter Phoenix-AWARD BIOS CMOS Set up Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions. Use the arrow keys to select among the items and press<Enter> to accept and enter the sub-menu.

**“WARNING”**

*The information about BIOS defaults on manual (Figure 1,2,3,4,5,6,7,8,9,10,11,12,13,14)is just for reference, please refer to the BIOS installed on the board for updated information.*

❖ **Figure 1. Main Menu**

Phoenix-Award BIOS CMOS Setup Utility

Standard CMOS Features	Frequency/Voltage Control
Advanced BIOS Features	Load Fail-Safe Defaults
Advanced Chipset Features	Load Optimized Defaults
Integrated Peripherals	Set Supervisor Password
Power Management Setup	Set User Password
PNP/PCI Configurations	Save & Exit Setup
PC Health Status	Exit Without Saving
Esc : Quit F9 : Menu in BIOS ←→↑↓: Select Item	
F10 : Save & Exit Setup	
Time , Date , Hard Disk Type ...	

### Standard CMOS Features

This setup page includes all the items in standard compatible BIOS.

### **Advanced BIOS Features**

This setup page includes all the items of the BIOS special enhanced features.

### **Advanced Chipset Features**

This setup page includes all the items of the Chipset special enhanced features.

### **Integrated Peripherals**

This selection page includes all the items of the IDE hard drive and Programmed Input/Output features.

### **Power Management Setup**

This setup page includes all the items of the power management features.

### **PnP/PCI Configurations**

This setup page includes the user defined or default IRQ Setting.

### **PC Health Status**

This page shows the hardware Monitor information of the system.

### **Frequency / Voltage Control**

This setup page controls the CPU's clock and frequency ratio.

### **Load Fail-Safe Defaults**

Use this menu to load the BIOS default values for the minimal/stable performance for your system operating.



**Load Optimized Defaults**

These settings are more likely to configure a workable computer when something is wrong. If you cannot boot the computer successfully, select the BIOS Setup options and try to diagnose the problem after the computer boots. These settings do not provide optional performance.

**Set Supervisor Password**

Change, set, or, disable password. It allows you to limit access to the system and Setup, or just to Setup.

**Set User Password**

You can specify both a User and a Supervisor password. When you select either password option, you are prompted for a 1-6 character password. Enter the password and then retype the password when prompted.

**Save & Exit Setup**

Save CMOS value changes to CMOS and exit setup.

**Exit Without Saving**

Abandon all CMOS value changes and exit setup.

## 2.2 Standard CMOS Features

This item in the Standard CMOS Setup Menu is divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

### ❖ Figure 2. Standard CMOS Features

Phoenix-Award BIOS CMOS Setup Utility

#### Standard CMOS Features

Date(mm:dd:yy)	Tue,Jun 6 2000	Item Help
Time (hh:mm:ss)	11:26:10	
IDE Primary Master	None	Menu Level
IDE Primary Slave		Change the day,
IDE Secondary Master		month,year
IDE Secondary Master	None	and century.
Drive A	1.44M,3.5 in	
Drive B	None	
Video	EGA/VGA	
Halt On	All,But Keyboard	
Base Memory	640K	
Extended Memory	65472K	
Total	1024K	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

## Main Menu Selections

This table shows the selections that you can make on the Main Menu.

Item	Options	Description
Date	Month DD YYYY	Set the system,date. Note that the 'Day' automatically changes when you set the data.
IDE Primary Master	Options are in its sub menu.	Press<Enter> to enter the sub menu of detailed.
IDE Primary Slave	Options are in its sub menu.	Press<Enter> to enter the sub menu of detailed.
IDE Secondary Master	Options are in its sub menu.	Press<Enter> to enter the sub menu of detailed.
IDE Secondary Slave	Options are in its sub menu.	Press<Enter> to enter the sub menu of detailed.
Drive A Drive B	None 360K,5.25in 1.2M,5.25in 720K,3.5in 1.44M,3.5in 2.88M,3.5in	Select the type of floppy disk drive installed in your system.
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device.

Item	Options	Description
Halt On	All Errors No Errors All, but Keyboard All, but Diskette All, but Disk/Key	Select the situation in which you want the BIOS to stop the POST process and notify.
Base Memory	N/A	Displays the amount of conventional memory detected during boot up.
Extended Memory	N/A	Displays the amount of conventional memory detected during boot up.
Total Memory	N/A	Displays the total memory available in the system.

## Phoenix-Award BIOS CMOS Setup Utility

## Primary Master

IDE HDD Auto-Detection	Press Enter	Item Help
IDE Primary Master Access Mode	Auto	Menu Level
	Auto	
Capacity	13022MB	
Cylinder	25232	
Head	16	
Precomp	0	
Landing Zone	25231	
Sector	61	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

## 2.3 Advanced BIOS Features

### ❖ Figure 3. Advanced BIOS Features

Phoenix-Award BIOS CMOS Setup Utility

#### Advanced BIOS Features

Virus Warning	Disabled	Item Help
CPU Internal Cache	Enabled	
External Cache	Enabled	Menu Level
CPU L2 Cache ECC Checking	Enabled	
Processor Number Feature	Enabled	
Quick Power On Self Test	Enabled	
First Boot Device	Floppy	Allows you to choose the VIRUS warning feature for IDE
Second Boot Device	HDD-0	Hard Disk boot sector protection.
Third Boot Device	LS120	If this function is enabled and someone attempts to write data into this area, BIOS will show a warning message on screen and alarm beep
Boot Other Device	Enabled	
Swap Floppy Drive	Disabled	
Boot Up Floppy Seek	Enabled	
Boot Up NumLock Status	On	
Gate A20 Option	Fast	
Typematic Rate Setting	Disabled	
Typematic Rate (Chars/Sec)	6	
Typematic Delay (Msec)	250	
Security Option	Setup	
OS Select For DRAM >64MB	Non-OS2	
Video BIOS Shadow	Enabled	
C8000-CBFFF	Disabled	
CC000-CFFFF	Disabled	
D0000-D3FFF	Disabled	
D4000-D7FFF	Disabled	
D8000-DBFFF	Disabled	
DC000-DFFFF	Disabled	
Small Logo(EPA) Show	Disabled	

←→↑↓: Move Enter:Select +/-PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

### Virus Warning

This option allows you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempts to write data into this area, BIOS will show a warning message on screen and alarm beep.

**The Choices:** Disabled(default), Enabled.

**CPU Internal Cache**

These two categories speed up memory access. However, it depends on CPU/chipset design.

**Enabled(default)** Enabled cache.

**Disabled** Disabled cache.

**External Cache**

This fields allow you to Enable or Disable the CPU'S "Level 2" secondary cache. Caching allows better performance.

**Enabled(default)** Enabled cache.

**Disabled** Disabled cache.

**CPU L2 Cache ECC Checking**

The item allows you to enable/disable CPU L2 Cache ECC Checking.

**The Choices:** Enabled(default), Disabled.

**Processor Number Feature**

The item will show up when you install the Pentium III processor.

**Enabled(default)** Pentium Processor Number Feature.

**Disabled** Disabled.

**Quick Power On Self Test**

This category speeds up Power on Self-Test(POST) after you power up the computer. If it is set to Enable, BIOS will shorten or skip some check items during POST.

**Enabled** Enabled quick POST.

**Disabled (default)** Normal POST.

**First/Secondary/Third Boot Device**

This BIOS attempts to load the operating system from the devices in the sequence selected in these items.

**The Choices:** Floppy, LS120, HDD-0, SCSI, CDROM, HDD-1, HDD-2, HDD-3, ZIP100, LAN, Disabled.

**Boot Other Device**

**The Choices:** Enabled(default), Disabled.

**Swap Floppy Drive**

If the system has two floppy drives, you can swap the logical drive name assignments.

**The Choices:** Disabled(default), Enabled.

**Boot Up Floppy Seek**

Seek disk drives during boot up. Disabled speeds boot-up.

**The Choices:** Enabled(default), Disabled.

**Boot Up NumLock Status**

Select power on state for Numlock.

**On (default)** Numpad is number keys.

**Off** Numpad is arrow keys.

**Gate A20 Option**

Select if chipset or keyboard controller should control Gate A20.

**Normal** A pin in the keyboard controller controls Gate A20.

**Fast (default)** Lets chipset control Gate A20.

**Typematic Rate Setting**

**Enabled** Enabled this option to adjust the keystroke repeat rate.

**Disabled (default)** Disabled.

**Typematic Rate (Char/Sec)**

Range between 6(**default**) and 30 characters per second. This option controls the speed of repeating keystrokes.

**Typematic Delay (Msec)**

This option sets the time interval for displaying the first and the second characters.

**The Choices:** 250(**default**), 500, 750, 1000.

### Security Option

This category allows you to limit access to the system and Setup, or just to Setup.

#### System

The system will not boot and access to Setup will be denied if the correct password is not entered in prompt.

#### Setup (default)

The system will boot, but access to Setup will be denied if the correct password is not entered in prompt.

### OS Select For DRAM

Select the operating system that is running with greater than 64MB of RAM on the system.

**The Choices: Non-OS2(default), OS2.**

### Video BIOS Shadow

Determines whether video BIOS will be copied to RAM for faster execution.

#### Enabled(default)

Optional ROM is enabled.

#### Disabled

Optional ROM is disabled.

C8000-CFFFF Shadow / D0000-DFFFF Shadow

Determines whether video BIOS will be copied to RAM for faster execution.

#### Enabled

Optional ROM is Shadowed.

#### Disabled (default)

Optional ROM is not

Shadowed.

**Note:** For C8000-DFFFF option-ROM on PCI BIOS, BIOS will automatically enable the shadow RAM. User does not have to select the item.

### Small Logo(EPA) Show

**The Choices: Disabled(default), Enabled.**



## 2.4 Advanced Chipset Features

This section allows you to configure the system based on the specific features of the installed chipset. This chipset manages bus speeds and access to system memory resources, such as DRAM and external cache. It also coordinates communications of the PCI bus. It must be stated that these items should never need to be altered. The default settings have been chosen because they provide the best operating conditions for your system. The only time you might consider making any changes would be if you discovered that data was lost while using your system.

### ❖ **Figure 4. Advanced Chipset Features**

Phoenix-Award BIOS CMOS Setup Utility

#### Advanced Chipset Features

DRAM Timing By SPD	Enabled	Item Help
DRAM Clock	Host CLK	
SDRAM Cycle Length	3	
Bank Interleave	Disabled	
Memory Hole	Disabled	Menu Level
P2C/C2P Concurrency	Enabled	
System BIOS Cacheable	Disabled	
Video RAM Cacheable	Disabled	
DRAM Drive Strength	Press Enter	
AGP Aperture Size	64M	
AGP-4X Mode	Enabled	
AGP Driving Control	Auto	
AGP Driving Value	DA	
AGP Fast Write	Disabled	
On Chip USB	Enabled	
USB Keyboard Support	Disabled	
USB Mouse Support	Disabled	
CPU to PCI Write Buffer	Enabled	
PCI Dynamic Bursting	Enabled	
PCI Master 0 WS Write	Enabled	
PCI Delay Transaction	Enabled	
PCI #2 Access #1 Retry	Enabled	
AGP Master 1WS Write	Disabled	
AGP Master 1WS Read	Disabled	
Memory Parity / ECC Check	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

**DRAM Timing By SPD**

The DRAM timing is controlled by the DRAM Timing Registers. The Timings programmed into this register are dependent on the system design.

**The Choices:** Enabled(default), Disabled.

**DRAM Clock**

This item determines DRAM Clock following the CPU host clock, or .

**The Choices:** Host CLK(default), Host CLK+33M, Host CLK-33M.

**SDRAM Cycle Length**

When synchronous DRAM is installed, the number of clock cycle of CAS latency depends on the DRAM timing. Do not reset this field from the default value specified by the system designer.

**The Choices:** 3(default), 2, Auto.

**Memory Hole**

In order to improve performance, certain space in memory can be reserved for ISA cards. This memory must be mapped into the memory's space below 16MB.

**The Choices:** Disabled(default), Enabled.

**P2C/C2P Concurrency**

The item allows you to enable/disable the PCI to CPU to PCI concurrency.

**The Choices:** Enabled(default), Disabled.

**System BIOS Cacheable**

When enabled, the access to the system BIOS ROM address at F0000H-FFFFFFH is cached.

**The Choices:** Disabled(default), Enabled.

### Video RAM Cacheable

When enabled, the access to the system VGA RAM address is cached.

**The Choices:** Disabled(default), Enabled.

### Phoenix-Award BIOS CMOS Setup Utility

#### DRAM Drive Strength

ESDRAM Memory Type	Disabled	Item Help
Delay DRAM Read Latch	No Delay	
Memory Data Drive	8mA	Menu Level
SDRAM Command Drive	16mA	
Memory Address Drive	16mA	
Memory Data Drive	16mA	
CAS# Drive	8mA	
RAS# Drive	16mA	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

### AGP Aperture Size

Select the size of the Accelerated Graphic Port(AGP) aperture. The aperture is a portion of the PCI memory address range dedicated for graphics memory address space. Host cycle that hit the aperture range are forwarded to the AGP without any translation.

**The Choices:** 64M(default), 32M, 16M, 8M, 4M, 128M.

### AGP-4XMode

The item allows you to enable/disable the AGP-4X Mode.

**The Choices:** Enabled(default), Disabled.

### AGP Driving Control

By choosing “Auto” the system BIOS will the AGP output Buffer Drive strength that were defined by AGP Card. By choosing “Manual”, it allows user to set AGP output Buffer Drive strength by manual.

**The Choices:** Auto(default), Manual.

**AGP Driving Value**

This item allows you to adjust the AGP driving force.

**The Choices:** Min=0000~Max=00FF.

**AGP Fast Write**

**The Choices:** Disabled(default), Enabled.

**Onchip USB**

This should be enabled if your system has a USB installed on the system board and you wish to use it. Even when so equipped, if you add a higher performance controller, you will need to disable this feature.

**The Choices:** Enabled(default), Disabled.

**USB Keyboard Support**

Select Enabled if your system contains a Universal Serial Bus(USB) controller and you have a USB keyboard.

**The Choices:** Disabled(default), Enabled.

**USB Mouse Support**

Select Enabled if your system contains a Universal Serial Bus(USB) controller and you have a USB mouse.

**The Choices:** Disabled(default), Enabled.

**CPU to PCI Write Buffer**

When this field is Enabled, write from the CPU to the PCI bus are buffered, to compensate for the speed differences between the CPU and the PCI bus. When Disabled, they are not buffered and the CPU must wait until the write is complete before starting another write cycle.

**The Choices:** Enabled(default), Disabled.

**PCIDynamic Bursting**

**The Choices:** Enabled(default), Disabled.

**PCIMaster 0 WS Write**

When this field is Enabled, write to the PCI bus are executed with zero wait states.

**The Choices:** Enabled(default), Disabled.

**PCIDelay Transaction**

**The Choices:** Disabled(default), Enabled.

**PCI #2 Access #1 Retry**

**The Choices:** Enabled(default), Disabled.

**AGP Master 1WS Write**

When Enabled, write data to the AGP (Accelerated Graphic Port) that will be executed with one wait states.

**The Choices:** Disabled(default), Enabled.

**AGP Master 1WS Read**

When Enabled, read data to the AGP (Accelerated Graphic Port) that will be executed with one wait states.

**The Choices:** Disabled(default), Enabled.

**Memory Parity / ECC Check**

Select Enabled, Disabled, or Auto. In Auto mode, the BIOS enables the memory checking automatically when it detects the presence of ECC or parity DRAM.

**The Choices:** Disabled(default), Enabled.

## 2.5 Integrated Peripherals

### ❖ Figure 5. Integrated Peripherals

Phoenix-Award BIOS CMOS Setup Utility

#### Integrated Peripherals

On-Chip IDE Channel 0	Enabled	Item Help
On-Chip IDE Channel 1	Enabled	
IDE Prefetch Mode	Enabled	Menu Level
Primary Master PIO	Auto	
Primary Slave PIO	Auto	
Secondary Master PIO	Auto	
Secondary Slave PIO	Auto	
Primary Master UDMA	Auto	
Primary Slave UDMA	Auto	
Secondary Master UDMA	Auto	
Secondary Slave UDMA	Auto	
Init Display First	PCI Slot	
IDE HDD Block Mode	Enabled	
Onboard FDC Controller	Enabled	
Onboard Serial Port 1	Auto	
Onboard Serial Port 2	Auto	
UART 2 Mode	Standard	
IR Function Duplex	Half	
RxD,TxD Active	No,Yes	
Onboard Parallel Port	378/IRQ7	
Parallel Onboard Mode	Normal	
ECP Mode Use DMA	3	
EPP Mode Type	EPP1.9	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

#### On-Chip IDE Channel 0

**Enabled (default)**

Enabled onboard 1st channel  
 IDE port.

**Disabled**

Disabled onboard 1st channel  
 IDE port.

**On-Chip IDE Channel 1**

<b>Enabled (default)</b>	Enabled onboard 2nd channel IDE port.
<b>Disabled</b>	Disabled onboard 2nd channel IDE port.

**IDE Prefetch Mode**

The onboard IDE drive interface supports IDE prefetching, for faster drive access. If you install a primary and or secondary add-in IDE interface, set this field to Disabled if the interface does not support prefetching.

**The Choices: Enabled(default), Disabled.**

**Primary Master PIO(for onboard IDE 1st channel)**

<b>Auto (default)</b>	BIOS will automatically detect the IDE HDD Accessing mode.
<b>Mode 0~4</b>	Manually set the IDE Accessing mode.

**Primary Slave PIO(for onboard IDE 2nd channel)**

<b>Auto (default)</b>	BIOS will automatically detect the IDE HDD Accessing mode.
<b>Mode 0~4</b>	Manually set the IDE Accessing mode.

**Secondary Master PIO(for onboard IDE 1st channel)**

<b>Auto (default)</b>	BIOS will automatically detect the IDE HDD Accessing mode.
<b>Mode 0~4</b>	Manually set the IDE Accessing mode.

**Secondary Slave PIO(for onboard IDE 2nd channel)**

<b>Auto (default)</b>	BIOS will automatically detect the IDE HDD Accessing mode.
<b>Mode 0~4</b>	Manually set the IDE Accessing mode.

**Primary Master UDMA****Auto (default)**

BIOS will automatically detect the IDE HDD Accessing mode.

**Disabled**

Disabled.

**Primary Slave UDMA****Auto (default)**

BIOS will automatically detect the IDE HDD Accessing mode.

**Disabled**

Disabled.

**Secondary Master UDMA****Auto (default)**

BIOS will automatically detect the IDE HDD Accessing mode.

**Disabled**

Disabled.

**Secondary Slave UDMA****Auto (default)**

BIOS will automatically detect the IDE HDD Accessing mode.

**Disabled**

Disabled.

**Init Display First****PCISlot (default)**  
Slot.

Set Init Display First to PCI

**OnboardAGP**

Set Init Display First to onboard AGP.

**IDE HDD Block Mode****Enabled(default)**

Enabled.

**Disabled**

Disabled.

**Onboard FDC Controller****Enabled(default)**

Enabled.

**Disabled**

Disabled.



**Onboard Serial Port1/Port2**

Select an address and corresponding interrupt for the first and second serial ports.

**The Choices:** **Auto(default)**, (3E8/IRQ4), (2E8/IRQ3), (3F8/IRQ4), (2F8/IRQ3).

**UART2Mode**

This item allows you select to which Infra Red(IR) function of the onboard I/O chip you wish to use.

**The Choices:** **Standard** (default), SCR, ASKIR.

**IR Function Duplex**

This item allows you select to which Infra Red(IR) function of the onboard I/O chip you wish to use.

**The Choices:** **Half** (default), Full.

**Onboard Parallel Port**

This item allows you to select the I/O address with which to access the onboard parallel port controller.

**The Choices:** **378/IRQ7**(default), Disabled, 278/IRQ5, 3BC/IRQ7.

**Parallel Onboard Mode**

**Normal(default)**

**SPP**

Using Parallel port as Standard Parallel Port.

**EPP**

Using Parallel port as Enhanced Parallel Port.

**ECP**

Using Parallel port as Extended Capabilities Port.

**ECP/EPP**

Using Parallel port as ECP/EPP mode.

**ECP Mode Use DMA**

**The Choices:** 3(default), 1.

**EPP Mode Select**

**The Choices:** EPP1.7(default), EPP1.9.

## 2.6 Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy while operating in a manner consistent with your own style of computer use.

❖ **Figure 6. Power Management Setup**

Phoenix-Award BIOS CMOS Setup Utility

### Power Management Setup

ACPI Function Power Management PM Control by APM Video Off Option Video Off Method Modem Use IRQ Soft-Off by PWRBTN Wake Up Events	Enabled Press Enter Yes Suspend->Off V/H SYNC+Blank 3 Instant-Off Press Enter	Item Help Menu Level
---	--	-------------------------

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

### ACPIFunction

This item display status of the Advanced Configuration and Power Management (ACPI).

**\*ACPI function for ATX power only.**

Phoenix-Award BIOS CMOS Setup Utility

### Power Management

Power Management HDD Power Down Doze Mode SuspendMode	User Define Disabled Disabled Disabled	Item Help Menu Level
--	---	-------------------------

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

## Power Management

This category allows you to select the type (or degree) of power saving and is directly related to the following modes.

1. HDD Power Down.
2. Doze Mode.
3. Suspend Mode.

If you highlight the “Press Enter” next to the “Power Management” label and then press the enter key, it will take you to a submenu with the following options:

### Power Management

This option allows you to set each mode individually. When not disabled, each of the ranges are from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min. and disable.

**The Choices:** User Define (default), Min Saving, Max Saving.

### HDD Power Down

By default, this is “Disabled”, meaning that no matter the mode of the rest of the system, the hard drive will remain ready. Otherwise, you have a range of choices from 1 to 15 minutes or Suspend. This means that you can select to have your hard disk drive be turned off after a selected number of minutes or when the rest of the system goes into a suspend mode.

**The Choices:** Disabled(default).

### Doze Mode/Suspend Mode

The **Doze Mode**, and **Suspend Mode** fields set the Period of time after each of these modes activates. At Max Saving, these modes activate sequentially (in the given order) after one minute; at Min Saving after one hour.

**The Choices:** Disabled(default).

**PM Control by APM**

- No** System BIOS will ignore APM when Power Management is on.
- Yes (default)** System BIOS will wait for APM'S prompt before it enters any PM mode.

**Video Off Option**

This field determines when to activate the video off feature for monitor power management.

**Video Off Method**

This determines the manner in which the monitor is blanked.

- V/HSYNC+Blank (default)** This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
- Blank Screen** This option only writes blanks to the video buffer.
- DPMS Support** Initial display power management signaling.

**Modem Use IRQ**

This determines the IRQ, which can be applied in Modem use.

- 3 (default)**  
**4/5/7/9/10/11/NA.**

**Soft-Off by PWRBTN**

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state when the system has "hung".

**The Choices: Instant-Off(default), Delay 4 Sec.**

## Phoenix-Award BIOS CMOS Setup Utility

## Wake Up Event

VGA	OFF	Item Help
LPT & COM	LPT/COM	Menu Level
HDD & FDD	ON	
PCI Master	OFF	
Wake Up On LAN/Ring	Disabled	
RTC Alarm Resume	Disabled	
Date (of Month)	0	
Resume Time (hh:mm:ss)	0 0 0	
Primary INTR	ON	
IRQs Activity Monitoring	Press Enter	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

**Wake Up Events**

If you highlight the “Press Enter” next to the “Wake Up Events” label and then press the enter key, it will take you to a submenu with the following options:

**VGA**

When set to On, any event occurring at a VGA port will awaken a system which has been powered down.

**LPT & COM**

When set to On, any event occurring at a COM(serial) / LPT (printer) port will awaken a system which has been powered down.

### HDD & FDD

When set to On(default), any event occurring at a hard or floppy drive will awaken a system which has been powered down.

### PCI Master

When set to On, any event occurring at a PCI port will awaken a system which has been powered down.

### Poweron by PCI Card

**The Choices:** Disabled(default), Enabled.

### Modem Ring Resume

To use this function, you need a LAN add-on card which supports power on function. It should also support the wake-up on LAN jump. **The Choices:** Disabled(default).

### RTC Alarm Resume

When “Enabled”, you can set the date and time at which the RTC (real-time clock) alarm awakens the system from Suspend mode.

## Phoenix-Award BIOS CMOS Setup Utility

### IRQs Activity Monitoring

IRQ 3 (COM2)	Enabled	Item Help
IRQ 4 (COM1)	Enabled	
IRQ 5 (LPT2)	Enabled	Menu Level
IRQ 6 (Floppy Disk)	Enabled	
IRQ 7 (LPT1)	Enabled	
IRQ 8 (RTC Alarm)	Disabled	
IRQ 9 (IRQ2 Redir)	Disabled	
IRQ 10 (Reserved)	Disabled	
IRQ 11 (Reserved)	Disabled	
IRQ 12 (PS2/Mouse)	Enabled	
IRQ 13 (Coprocessor)	Enabled	
IRQ 14 (Hard Disk)	Enabled	
IRQ 15 (Reserved)	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

**IRQs Activity Monitoring**

When set to On(default), any event occurring at Primary INTR will awaken a system which has been powered down.

The following is a list of IRQ, Interrupt ReQuests, which can be exempted much as the COM ports and LPT ports above can. When an I/O device wants to gain the attention of the operating system, it signals this by causing an IRQ to occur. When the operating system is ready to respond to the request, it interrupts itself and performs the service. As above, the choices are On and Off. Off is the default. When set On, activity will neither prevent the system from going into a power management mode nor awaken it.

IRQ3	(COM1)
IRQ4	(COM2)
IRQ5	(LPT2)
IRQ6	(Floppy Disk)
IRQ7	(LPT1)
IRQ8	(RTC Alarm)
IRQ9	(IRQ2 Redir)
IRQ10	(Reserved)
IRQ11	(Reserved)
IRQ12	(PS/2 Mouse)
IRQ13	(Coprocessor)
IRQ14	(Hard Disk)
IRQ15	(Reserved)



## 2.7 PnP/PCI Configurations

This section describes configuring the PCI bus system. PCI or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed of the CPU itself when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users make any changes to the default settings.

### ❖ **Figure 7. PnP/PCI Configurations**

Phoenix-Award BIOS CMOS Setup Utility

#### PnP/PCI Configurations

PNP OS Installed	No	Item Help
Reset Configuration Data	Disabled	Menu Level
Resources Controlled By	Auto(ESCD)	Select Yes if you are using a Plug and Play capable operating system select No if you need the BIOS to configure non-boot devices
IRQ Resources	Press Enter	
DMA Resources	Press Enter	
PCI/VGA Palette Snoop	Disabled	
Assign IRQ For VGA	Enabled	
Assign IRQ For USB	Enabled	

←→↑↓: Move Enter:Select +/-PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

### **PNP OS Installed**

When set to YES, BIOS will only initialize the PnP cards used for booting (VGA, IDE, SCSI). The rest of the cards will be initialized by the PnP operating system like Windows 95. When set to No, BIOS will initialize all the PnP cards. Therefore for non-PnP operating systems (DOS, Netware), this option must be set to No.

**Reset Configuration Data**

The system BIOS supports the PnP feature so the system needs to record which resource is assigned and proceeds resources from conflict. Every peripheral device has a node, which is called ESCD. This node records which resources are assigned to it. The system needs to record and update ESCD to the memory locations. These locations (4K) are reserved at the system BIOS.

If Disabled (Default) is chosen, the system's ESCD will update only when the new configuration varies from the last one. If Enabled is chosen, the system is forced to update ESCDs and then is automatically set to the "Disabled" mode.

IRQ3	assigned to: PCI PnP
IRQ4	assigned to: PCI PnP
IRQ5	assigned to: PCI PnP
IRQ6	assigned to: PCI PnP
IRQ7	assigned to: PCI PnP
IRQ8	assigned to: PCI PnP
IRQ9	assigned to: PCI PnP
IRQ10	assigned to: PCI PnP
IRQ11	assigned to: PCI PnP
IRQ12	assigned to: PCI PnP
IRQ13	assigned to: PCI PnP
IRQ14	assigned to: PCI PnP
IRQ15	assigned to: PCI PnP

**Resources Controlled By**

By Choosing "Auto" (default), the system BIOS will detect the system resources and automatically assign the relative IRQ and DMA channel for each peripheral. By Choosing "Manual" the user will need to assign IRQ & DMA for add-on cards. Be sure that there are no IRQ/DMA and I/O port conflicts.

### **IRQ Resources**

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt.

### **PCI / VGA Palette Snoop**

Choose Disabled or Enabled. Some graphic controllers which are not VGA compatible take the output from a VGA controller and map it to their display as a way to provide boot information and VGA compatibility.

However, the color information coming from the VGA controller is drawn from the palette table inside the VGA controller to generate the proper colors, and the graphic controller needs to know what is in the palette of the VGA controller. To do this, the non-VGA graphic controller watches for the write access to the VGA palette and registers the snoop data. In PCI based systems, the Write Access to the palette will not show up on the ISA bus if the PCI VGA controller responds to the Write.

In this case, the PCI VGA controller should not respond to the Write, it should only snoop the data and permit the access to be forwarded to the ISA bus. The non-VGA ISA graphic controller can then snoop the data on the ISA bus. Unless you have the above situation, you should disable this option.

<b>Disabled</b> (default)	Function Disabled.
<b>Enabled</b>	Function Enabled.

### **Assign IRQ For VGA**

Lets the user choose which IRQ to assign for the VGA.

### **Assign IRQ For USB**

Lets the user choose which IRQ to assign for the USB.

## 2.8 PC Health Status

### ❖ Figure 8. PC Health Status

Phoenix-Award BIOS CMOS Setup Utility

#### PC Health Status

CPU Temp.	36°C/96.8°F	Item Help
System Temp.	40°C/104°F	
Fan1 Speed	5120RPM	Menu Level
Fan2 Speed	0RPM	
Vcore	1.53V	
2.5V	2.50V	
3.3V	3.28V	
5V	5.00V	
12V	11.76V	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

#### CPU Temp.

This field displays the current CPU temperature, if your computer contains a monitoring system.

#### System Temp.

This field displays the current system temperature, if your computer contains a monitoring system.

#### CPU Fan1/2 Speed

This field displays the current speed of the CPU Fans, if your computer contains a monitoring system.

#### CPU Vcore, 2.5V, 3.3V, 5V, 12V

Detect system's voltage status automatically.

## 2.9 Frequency / Voltage Control

### ❖ Figure 9. Frequency / Voltage Control

Phoenix-Award BIOS CMOS Setup Utility

#### Frequency / Voltage Control

Auto Detect DIMM / PCI CLK	Enabled	Item Help
Spread Spectrum	Disabled	
CPU Host / PCI Clock	Default	Menu Level

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit  
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults  
 F7:Optimized Defaults

#### Auto Detect DIMM / PCI CLK

This item allows you to enable/disable auto detect DIMM / PCI CLOCK.

**The Choices:** Enabled(default), Disabled.

#### Spread Spectrum

This function is designed to EMI test only.

**The Choices:** Disabled(default), Enabled.

#### CPU Host Clock (CPU/PCI)

This item allows you to select the CPU Host Clock (CPU/PCI).

##### 133MHz

**The Choices:** Default, 133/33MHz(+0.5spd), 133/33(-0.5spd), 138/35MHz(spd off), 147/37MHz(spd off).

##### 66MHz

**The Choices:** Default, 66/33MHz(+0.5spd), 66/33(-0.5spd), 66/33MHz(spd off), 75/38MHz(spd off), 79/40MHz(spd off), 100/33(+0.5spd), 100/33(-0.5spd), 110/35MHz(spd off), 115/37MHz(spd off).

##### 100MHz

**The Choices:**Default, 100/33MHz(+0.5spd), 100/33(-0.5spd), 110/35MHz(spd off), 115/37MHz(spd off).

## 2.10 Load Fail-Safe Defaults

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:

### ❖ **Figure 10. Load Fail-Safe Defaults**

Phoenix-Award BIOS CMOS Setup Utility

Standard CMOS Features	Frequency/Voltage Control
Advanced BIOS Features	<b>Load Fail-Safe Defaults</b>
Advanced Chipset Features	Load Optimized Defaults
Integrated Peripherals	Set Supervisor Password
Power Management	<b>Load Fail-Safe Default (Y/N)? N</b>
PNP/PCI Configuration	Save & Exit Setup
PC Health Status	Exit Without Saving
Esc : Quit F9 : Menu in BIOS ←→↑↓: Select Item	
F10 : Save & Exit Setup	
Time , Date , Hard Disk Type ...	


Pressing 'Y' loads the default values that are factory settings for optimal performance of system operations.

## 2.11 Load Optimized Defaults

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:

❖ **Figure 11. Load Optimized Defaults**

Phoenix-Award BIOS CMOS Setup Utility

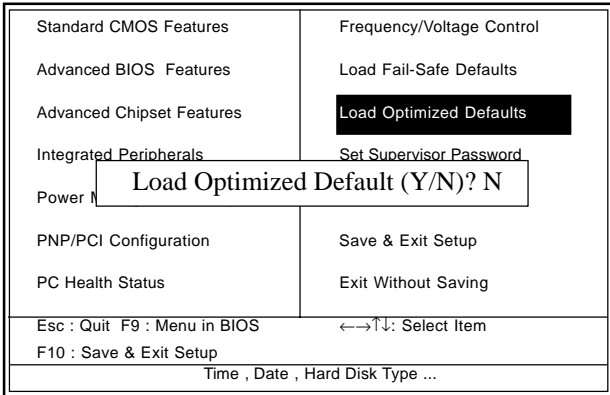


Pressing ‘Y’ loads the default values that are factory settings for optimal performance of system operations.

## 2.12 Set Supervisor / User Password

### ❖ Figure 12. Set Supervisor / User Password

Phoenix-Award BIOS CMOS Setup Utility

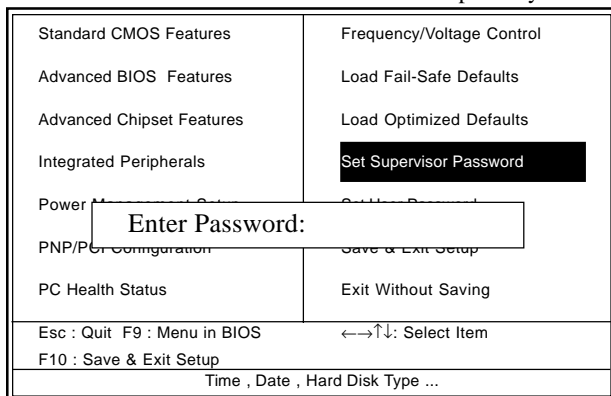

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

### Enter Password

Type a password, up to eight characters, and press <Enter>. The password you type now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <ESC> to abort the selection and not enter a password. To disable the password, just press <Enter> when you are prompted to enter a password. A message will confirm that you wish to disable the password. Once the password is disabled, the system will boot and you can enter setup freely.




### **Password Disabled**

If you select “System” at the Security Option of BIOS Features Setup Menu, you will be prompted for the password every time when the system is rebooted, or any time when you try to enter Setup. If you select “Setup” at the Security Option of BIOS Features Setup Menu, you will be prompted only when you try to enter Setup.

## 2.13 Save & Exit Setup

### ❖ Figure 13. Save & Exit Setup

#### Phoenix-Award BIOS CMOS Setup Utility

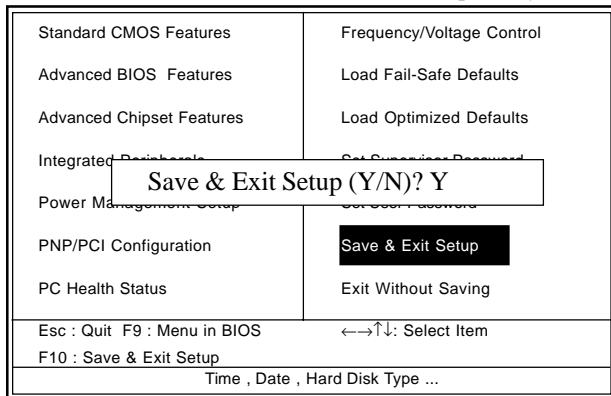


Typing “Y” will quit the Setup Utility and save the user setup value to RTC CMOS RAM.

Typing “N” will return to the Setup Utility.

## 2.14 Exit Without Saving

❖ **Figure 14. Exit Without Saving**

Phoenix-Award BIOS CMOS Setup Utility

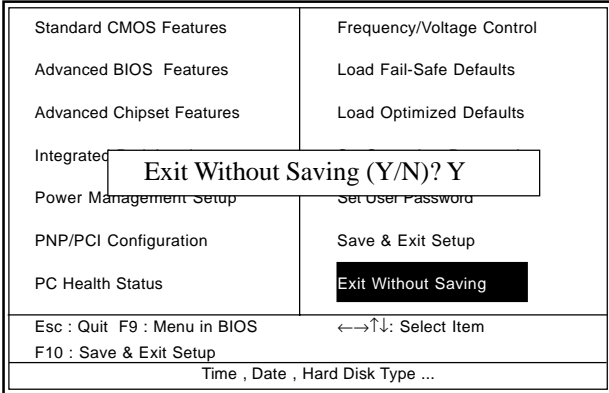

Typing “Y” will quit the Setup Utility without saving to RTC CMOS RAM.

Typing “N” will return to the Setup Utility.

# Chapter 3

There are motherboard drivers and utilities included in this CD disc. You don't have to install all of them to boot your system. But after you finish the hardware installation, you have to install your operating system first (such as windows 98) before you can install any drivers or utilities. Please refer to your operation system installation guide.

**Note:** Please follow recommended procedure after install Windows 98/ME/XP/2000.

## 3.1 Auto-run Menu

You can use the auto-run menu of this CD disc and choose the utility or driver and select model name.



## 3.2 Installing VIA 4 in 1 Driver

You can install the VIA 4 in 1 driver (IDE Bus master (For Windows NT use), VIA ATAPI Vendor Support Driver, VIA AGP, IRQ Routing Driver (For Windows 98 use), VIA Registry (INF) Driver) from the Bonus Pack CD disc auto-run menu.




(1)  
Click "Driver" Item.




(2)  
Click  
"Chipset" Item.



(3)  
Click  
"VIA Service Pack" Item.

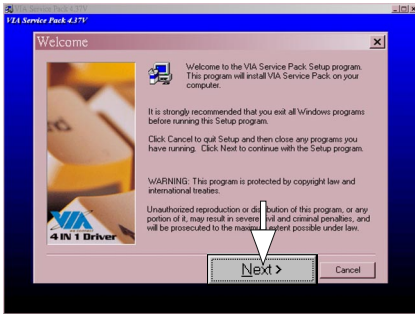

(4)  
Click "Next".

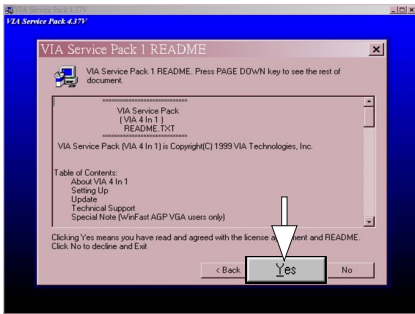

(5)  
Click "Yes".