



OTHER JUMPERS

J1	2-3 : NORMAL 1-2 : EXTERNAL BATT CONNECTOR	J30	VESA CLOCK STATE JUMPER 1-2 : <- 33MHz 2-3 : > 33MHz
J4	SHORT - CGA OPEN - MONO,EGA,VGA	J31	TURBO LED
J11	EXTERNAL GREEN CONNECTOR	J32	TURBO SWITCH
J12	CPU VOLTAGE SELECT 1-3,2,4 : FOR 3.3V CPU 3-5,4,6 : FOR 5V CPU	J33	RESET SWITCH
J19	AMD CPU INTERNAL CLK SELECT 1-2 : X3 2-3 : X2	J34	SPEAKER
J20	CYRIX CPU STATE JUMPER 1-2 SHORT : X2 1-2 OPEN : X1	J35	KEYLOCK & POWER LED
J29	VESA WAIT STATE JUMPER 1-2 : 0 WAIT 2-3 : 1 WAIT	J36	SIM5--SIM8 BANK SELECT 1-2 : BANK2 2-3 : BANK0

Then, we should adjust CPU internal CLK select

\* AMD CPU Internal CLK select

CPU	X3	X2
J19	1-2	2-3

\* Cyrix CPU state jumper

CPU	X3	X2	X1
J20	3-4 short	1-2 short	1-2 open

CPU Type Selection:

J13	J14	J15	J16	J17	J18	J21	J22	J23	J24	J25	J26
SX	1-2	2-3	2-3	2-3	0	0	0	0	0	0	0
DX	1-2	2-3	2-3	1-2	0	3-4	3-4	0	0	0	0
SXL	1-2	2-3	2-3	2-3	1-2	0	3-4	0	0	2-3	4-5
DXL	1-2	2-3	2-3	1-2	1-2	0	3-4	3-4	0	2-3	4-5
M6	2-3	1-2	2-3	2-3	0	2-3	0	2-3	1-2	2-3	2-3
M7	2-3	1-2	2-3	1-2	0	2-3	3-4	3-4	2-3	1-2	2-3
P2AT	1-2	1-2	1-2	1-2	0	1-2	0	2-3	2-3	2-3	3-4
P2AD	1-2	1-2	1-2	1-2	0	1-2	1-2	3-4	0	2-3	4-5
MISC	1-2	1-2	0	1-2	2-3	1-2	3-4	0	2-3	4-5	1-2
											3-4

Remark: \* Power on and show "S" on screen that we call SL-Enhanced CPU.

\* Table below show Intel/AMD/Cyrix SL-Enhanced CPU list:

INTEL:	SXL-25/33	(will released in near future)
	DXL-33/50	(M6)
	DX2L-50/66	(M7)
	DX4L-75/100	(M7)
AMD	DX4S-100/120	(M7)
	DX4S-133/160	(M7)
Cyrix	SX-40	(M7)
	DX-40	(M7)
	DX2L-66/80	(M7)
	DX4L-100	(M7)
	SX86-100	(MISC)

The motherboard support at all 486SX, 486DX, 486DX2, 486DX4 for Intel/AMD/Cyrix/IBM, INTEL 486SX, 486 OverDrive and Pentium OverDrive series, and Cyrix M1SC. The table below show the jumper setting for the CPUs.

Structure:

CPU Type Selection

Please check your CPU to jumper setting

If your CPU is AMD 486DX/DX2 series, please set your jumper setting at DX

If your CPU is Intel 486DX/DX2 (low power series), 486DX4 (3.3v series) and AMD 486DX4S (low power series), please set your jumper setting at DXL

If your CPU is Cyrix SX series, please set your jumper setting at M6  
If your CPU is Cyrix DX/DX2/DX4 series, please set your jumper setting at M7

If your CPU is Cyrix M1SC (C586-100CP), please set your jumper setting at M1SC

Then adjust JP12 and JP10 for CPU voltage 3.3V/4.5V, 4v or 5v

J10	5V	3.3V/3.45V	4V
J12	3-5,4-6	1-3,2-4	1-3,2-4

Clock Speed selection

J27 1-2	0	S	0	S
J27 3-4	0	S	S	0
J27 5-6	S	S	S	0

If your CPU is DX4 series, the table show for Intel / AMD jumper setting

J28	Intel DX4	AMD DX4
	2-3	1-2

Посетите нашу страничку в Интернетте  
<http://rvesti.mil.ru>  
 E-mail: [rvesti@mil.ru](mailto:rvesti@mil.ru)