



# Manuals

Select Country:

Biostar Europe

Biostar Taiwan

Latin America



Video Cards



**BONUS**

## 8500UUR

[\(Click here for full Diagram\)](#)

### JP3, JP23 CMOS Function Select (JP3 for V.1 & JP23 for V.2)

Open	To maintain setup data (Default)
Closed	To clear setup memory

### JP4,5ECP DMA Channel Select

1-2 Closed	Channel 1
2-3 Closed	Channel 3

### Hard Disk LED

JP8	HDD LED
-----	---------

### JP9 Flash ROM Type Voltage Select

1-2 Closed	+5 V
2-3 Closed	+12 V
All Open	EPROM used

### JP14 SRAM Voltage Select

1-3, 2-4 Closed	5 V
3-5, 4-6 Closed	3 V

### JP 13 Suspend mode

JP13	Suspend Switch
------	----------------

### JP24\* CPU VOLTAGE SELECT (V.3 or later)

--	--

1-2 Closed	3.55 V (VRE)
2-3 Closed	3.45 V (VR/STD)

### JP10 PCI IDE Disk Select

	1-2 Disk Change	3-4 Base Addr	5-6 PCI IDE
Enabled	Closed	Open	Open
Disabled	Open	Closed	Closed

### Cache Memory Size Select

Jumper	256 Kb	512 Kb	1 Mb
JP16	Open	Open	Closed
JP17	Open	Closed	Closed
JP18	Open	Closed	Closed
JP19	Open	Open	Closed

### CPU Speed Selection

CPU Speed	JP11 (1-2)	JP11 (3-4)	JP11 (5-6)	JP25
75 MHz	CLOSED	OPEN	OPEN	OPEN
90MHz	CLOSED	OPEN	CLOSED	OPEN
100MHz	CLOSED	CLOSED	CLOSED	OPEN
120MHz	CLOSED	OPEN	CLOSED	CLOSED
133MHz	CLOSED	CLOSED	CLOSED	CLOSED

\*V.1 has JP11 only and supports up to 100 MHz. V.3 has JP11 & 25 and supports 120/133 MHz.

### J15 Connectors

Pin No	Assignment	Pin No	Assignment
1	Speaker	10	Turbo LED-
2	NC	11	Turbo LED+
3	Ground	12	Reset Control
4	+5 Vdc	13	Ground
5	Power LED+	14	NC
6	NC	15	NC
7	Ground	16	NC
8	Key Lock	17	+5 Vdc
9	Ground	18	Ground

### JP20 Fan Connector

--	--

1	Ground
2	Ground
3	+12 V
4	+12 V
5	Ground
6	Ground

[Home](#) | [Company](#) | [Products](#) | [Support](#) | [Contact](#)