


Configuration

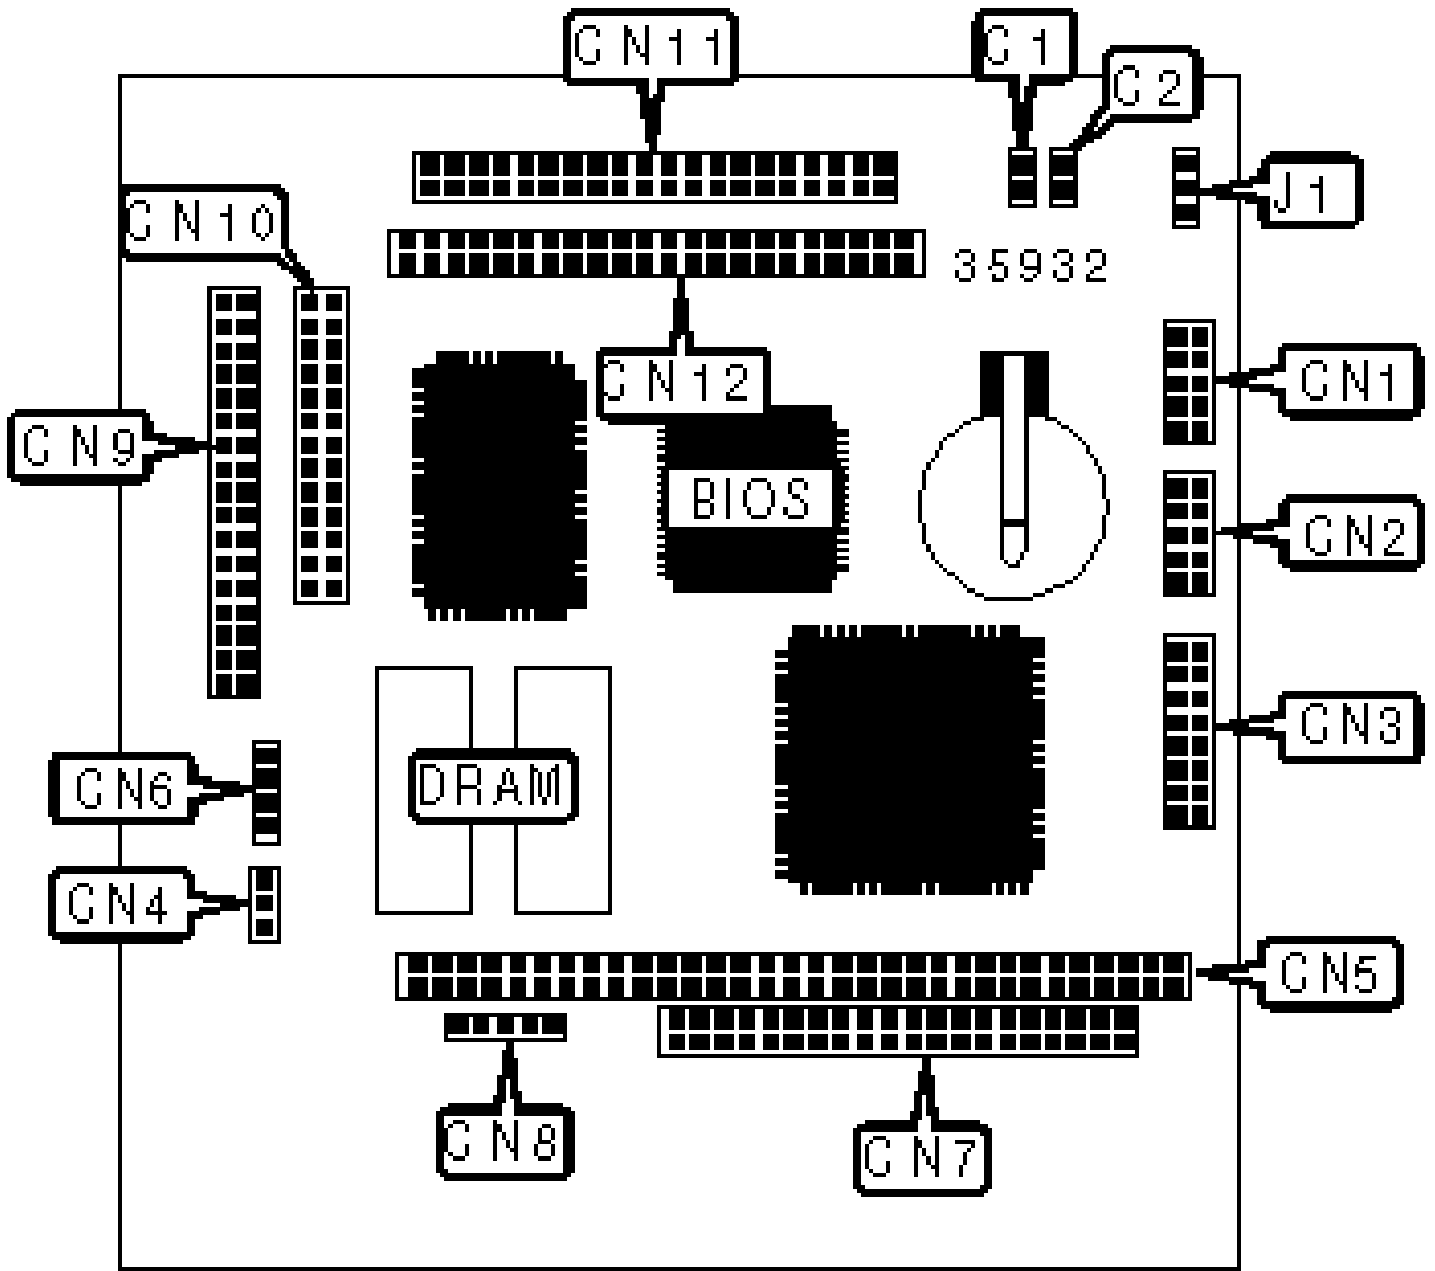

CONNECTIONS

Purpose	Location	Purpose	Location
IDE interface LED	C1	Power connector	CN6
Reset switch	C2	PC/104 connector	CN7
Serial port 2	CN1	Auxiliary keyboard connector	CN8
Serial port 1	CN2	Floppy drive interface	CN9
VGA interface	CN3	Parallel port	CN10
Power connector	CN4	IDE interface	CN11
PC/104 connector	CN5	Flat panel connector	CN12

USER CONFIGURABLE SETTINGS

Function	Label	Position
» CMOS memory normal operation	J1	Pins 1 & 2 closed
CMOS memory clear	J1	Pins 2 & 3 closed

SIMM CONFIGURATION

Size	Bank 0	Bank 1
2MB	2MB	None
4MB	2MB	2MB

VIDEO MEMORY CONFIGURATION

Note: The location of the video memory is unidentified.