


ACER, INC.

MX6E PLUS

Configuration

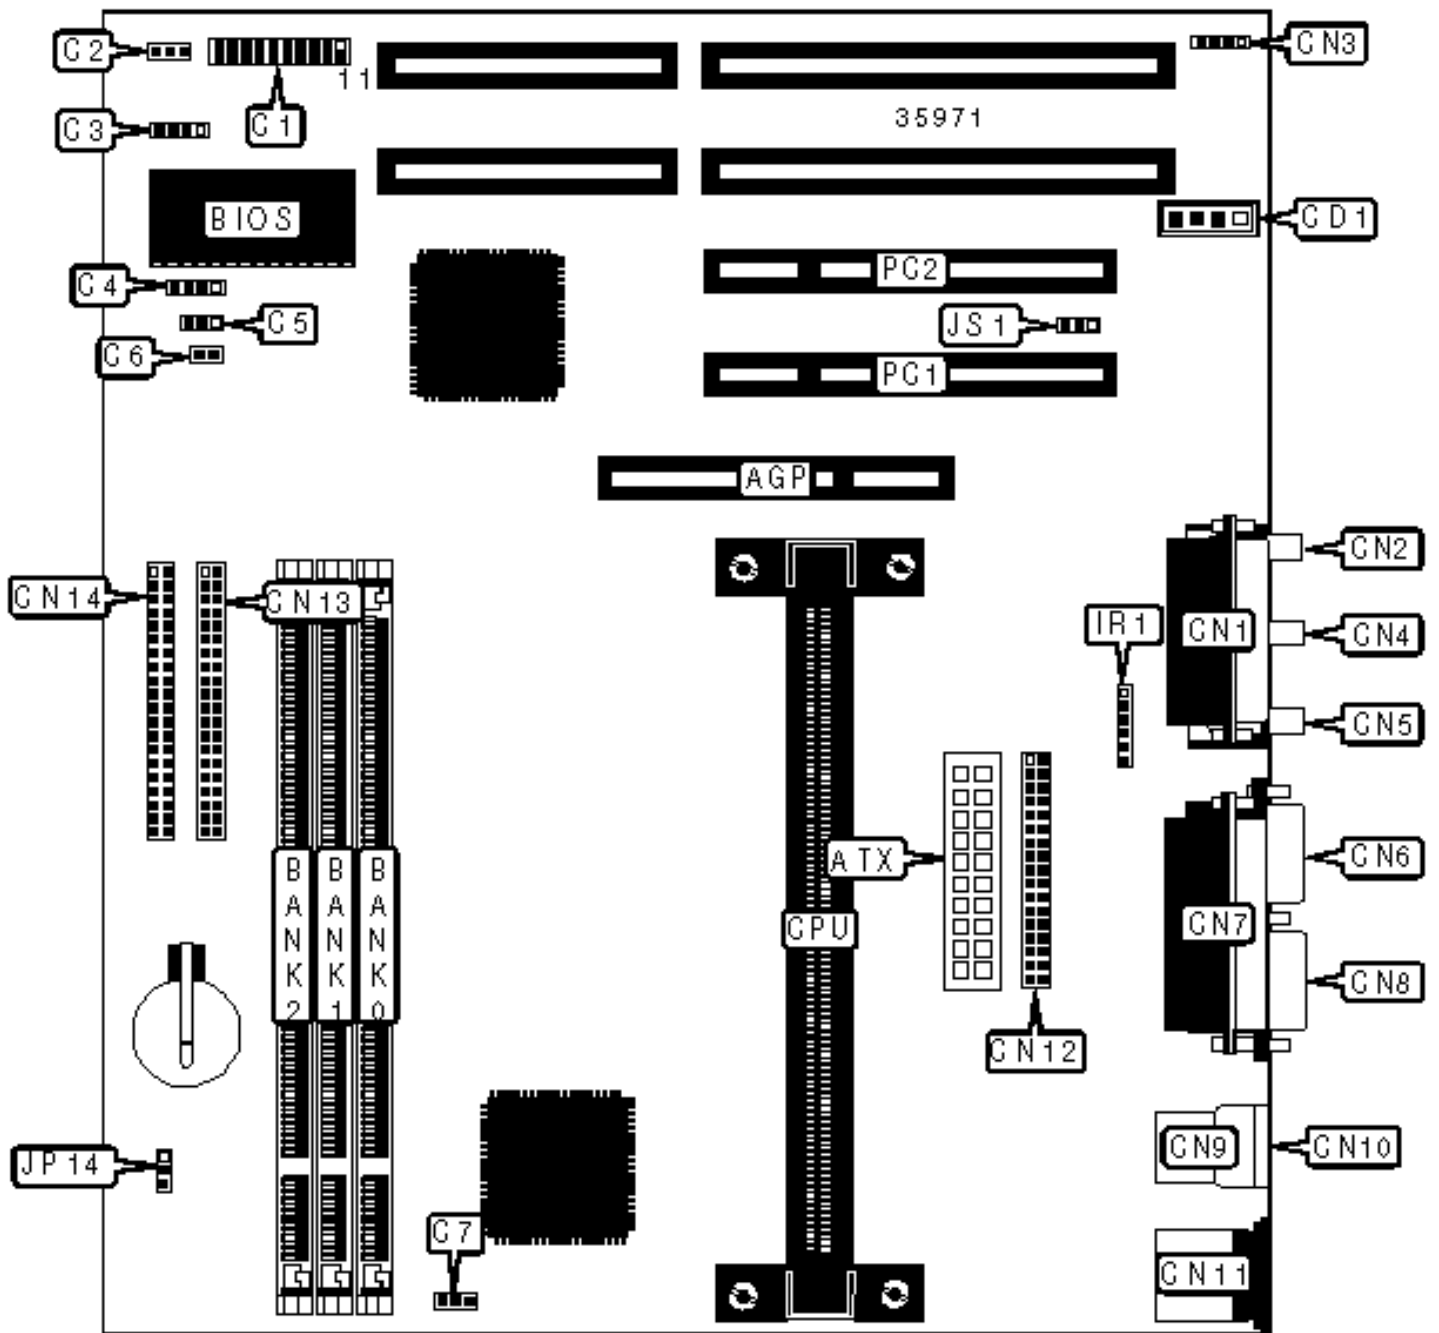

CONNECTIONS

Purpose	Location	Purpose	Location
AGP slot	AGP	Mono in	CN3/pins 1 & 2
ATX power connector	ATX	Microphone out	CN3/pins 3 & 4
Keylock	C1/pins 1 & 2	Line in	CN4
ACPI LED	C1/pins 3 – 5	Line out	CN5
Speaker	C1/pins 7 – 10	Serial port 2	CN6
Reset switch	C1/pins 19 & 20	Parallel port	CN7
Chassis fan power	C2	Serial port 1	CN8
IDE interface LED	C3	USB connector 1	CN9
Wake on modem connector	C4	USB connector 2	CN10
Wake on LAN connector	C5	PS/2 mouse port	CN11
Soft off power supply	C6	Floppy drive interface	CN12
CPU fan power	C7	IDE interface 2	CN13
Audio in – CD-ROM	CD1	IDE interface 1	CN14
Game/MIDI port	CN1	IR connector	IR1
Microphone in	CN2	32-bit PCI slots	PC1 – PC2

USER CONFIGURABLE SETTINGS

Function	Label	Position
» On board sound enabled	JP14	Pins 1 & 2 closed
On board sound disabled	JP14	Pins 2 & 3 closed
» CMOS memory normal operation	JS1	Pins 1 & 2 closed
CMOS memory clear	JS1	Pins 2 & 3 closed

DIMM CONFIGURATION

Size	Bank 0	Bank 1	Bank 2
8MB	(1) 1M x 64	None	None
16MB	(1) 2M x 64	None	None
16MB	(1) 1M x 64	(1) 1M x 64	None
24MB	(1) 2M x 64	(1) 1M x 64	None
24MB	(1) 1M x 64	(1) 1M x 64	(1) 1M x 64
32MB	(1) 4M x 64	None	None
32MB	(1) 2M x 64	(1) 1M x 64	(1) 1M x 64
32MB	(1) 2M x 64	(1) 2M x 64	None
40MB	(1) 4M x 64	(1) 1M x 64	None
40MB	(1) 2M x 64	(1) 2M x 64	(1) 1M x 64
48MB	(1) 4M x 64	(1) 1M x 64	(1) 1M x 64
48MB	(1) 4M x 64	(1) 2M x 64	None
48MB	(1) 2M x 64	(1) 2M x 64	(1) 2M x 64
56MB	(1) 4M x 64	(1) 2M x 64	(1) 1M x 64
64MB	(1) 8M x 64	None	None

DIMM CONFIGURATION (CON'T)

Size	Bank 0	Bank 1	Bank 2
64MB	(1) 4M x 64	(1) 2M x 64	(1) 2M x 64
64MB	(1) 4M x 64	(1) 4M x 64	None
72MB	(1) 8M x 64	(1) 1M x 64	None
72MB	(1) 4M x 64	(1) 4M x 64	(1) 1M x 64
80MB	(1) 8M x 64	(1) 1M x 64	(1) 1M x 64
80MB	(1) 8M x 64	(1) 2M x 64	None
80MB	(1) 4M x 64	(1) 4M x 64	(1) 2M x 64

88MB	(1) 8M x 64	(1) 2M x 64	(1) 1M x 64
96MB	(1) 8M x 64	(1) 2M x 64	(1) 2M x 64
96MB	(1) 8M x 64	(1) 4M x 64	None
96MB	(1) 4M x 64	(1) 4M x 64	(1) 4M x 64
104MB	(1) 8M x 64	(1) 4M x 64	(1) 1M x 64
112MB	(1) 8M x 64	(1) 4M x 64	(1) 2M x 64
128MB	(1) 16M x 64	None	None
128MB	(1) 8M x 64	(1) 4M x 64	(1) 4M x 64
128MB	(1) 8M x 64	(1) 8M x 64	None
136MB	(1) 16M x 64	(1) 1M x 64	None
136MB	(1) 8M x 64	(1) 8M x 64	(1) 1M x 64
144MB	(1) 16M x 64	(1) 1M x 64	(1) 1M x 64
144MB	(1) 16M x 64	(1) 2M x 64	None
144MB	(1) 8M x 64	(1) 8M x 64	(1) 2M x 64
152MB	(1) 16M x 64	(1) 2M x 64	(1) 1M x 64
160MB	(1) 16M x 64	(1) 2M x 64	(1) 2M x 64
160MB	(1) 16M x 64	(1) 4M x 64	None
160MB	(1) 8M x 64	(1) 8M x 64	(1) 4M x 64
168MB	(1) 16M x 64	(1) 4M x 64	(1) 1M x 64
176MB	(1) 16M x 64	(1) 4M x 64	(1) 2M x 64
192MB	(1) 16M x 64	(1) 4M x 64	(1) 4M x 64
192MB	(1) 16M x 64	(1) 8M x 64	None
192MB	(1) 8M x 64	(1) 8M x 64	(1) 8M x 64
200MB	(1) 16M x 64	(1) 8M x 64	(1) 1M x 64
208MB	(1) 16M x 64	(1) 8M x 64	(1) 2M x 64
224MB	(1) 16M x 64	(1) 8M x 64	(1) 4M x 64

256MB	(1) 16M x 64	(1) 8M x 64	(1) 8M x 64
-------	--------------	-------------	-------------

Note: Board accepts EDO & SDRAM memory.

CACHE CONFIGURATION

256KB/512KB cache is located on the Pentium II CPU. 128KB cache is located on the Celeron 300A & 333 C