
CALIBER COMPUTER

80486-50B

Configuration

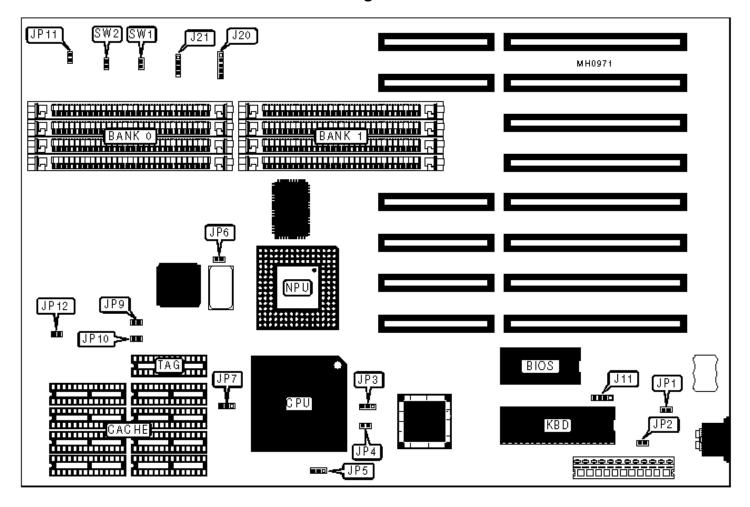

CONNECTIONS			
Purpose	Location	Purpose	Location
External battery	J11	Turbo LED	JP11
Power LED & keylock	J20	Reset switch	SW1
Speaker	J21	Turbo switch	SW2

USER CONFIGURABLE SETTINGS			
	Function	Jumper	Position
»	CMOS memory normal operation	JP1	pins 1 & 2 closed
	CMOS memory clear	JP1	pins 2 & 3 closed
»	Monitor type select color	JP2	Closed
	Monitor type select monochrome	JP2	Open
»	Factory configured - do not alter	JP6	Open
»	Factory configured - do not alter	JP7	pins 1 & 2 closed

DRAM CONFIGURATION			
Size	Bank 0	Bank 1	
1MB	(4) 256K x 9	NONE	
2MB	(4) 256K x 9	(4) 256K x 9	
4MB	(4) 1M x 9	NONE	
5MB	(4) 256K x 9	(4) 1M x 9	
8MB	(4) 1M x 9	(4) 1M x 9	
16MB	(4) 4M x 9	NONE	
20MB	(4) 1M x 9	(4) 4M x 9	
20MB	(4) 4M x 9	(4) 1M x 9	
32MB	(4) 4M x 9	(4) 4M x 9	

CACHE CONFIGURATION			
Size Bank 0 TAG			
64KB	(8) 8K x 8	(1) 8K x 8	
256KB	(8) 32K x 8	(1) 32K x 8	

CACHE JUMPER CONFIGURATION			
Size	JP9	JP10	JP12
64KB	Open	Open	Open
256KB	Closed	Closed	Closed

CPU TYPE CONFIGURATION				
Туре	JP3	JP4	JP5	
80486SX	Open	Open	pins 2 & 3 closed	
80487SX	pins 1 & 2 closed	Closed	pins 1 & 2 closed	
80486DX	pins 2 & 3 closed	Closed	pins 1 & 2 closed	