


FORCOM TECHNOLOGY CORPORATION

M396F

Configuration

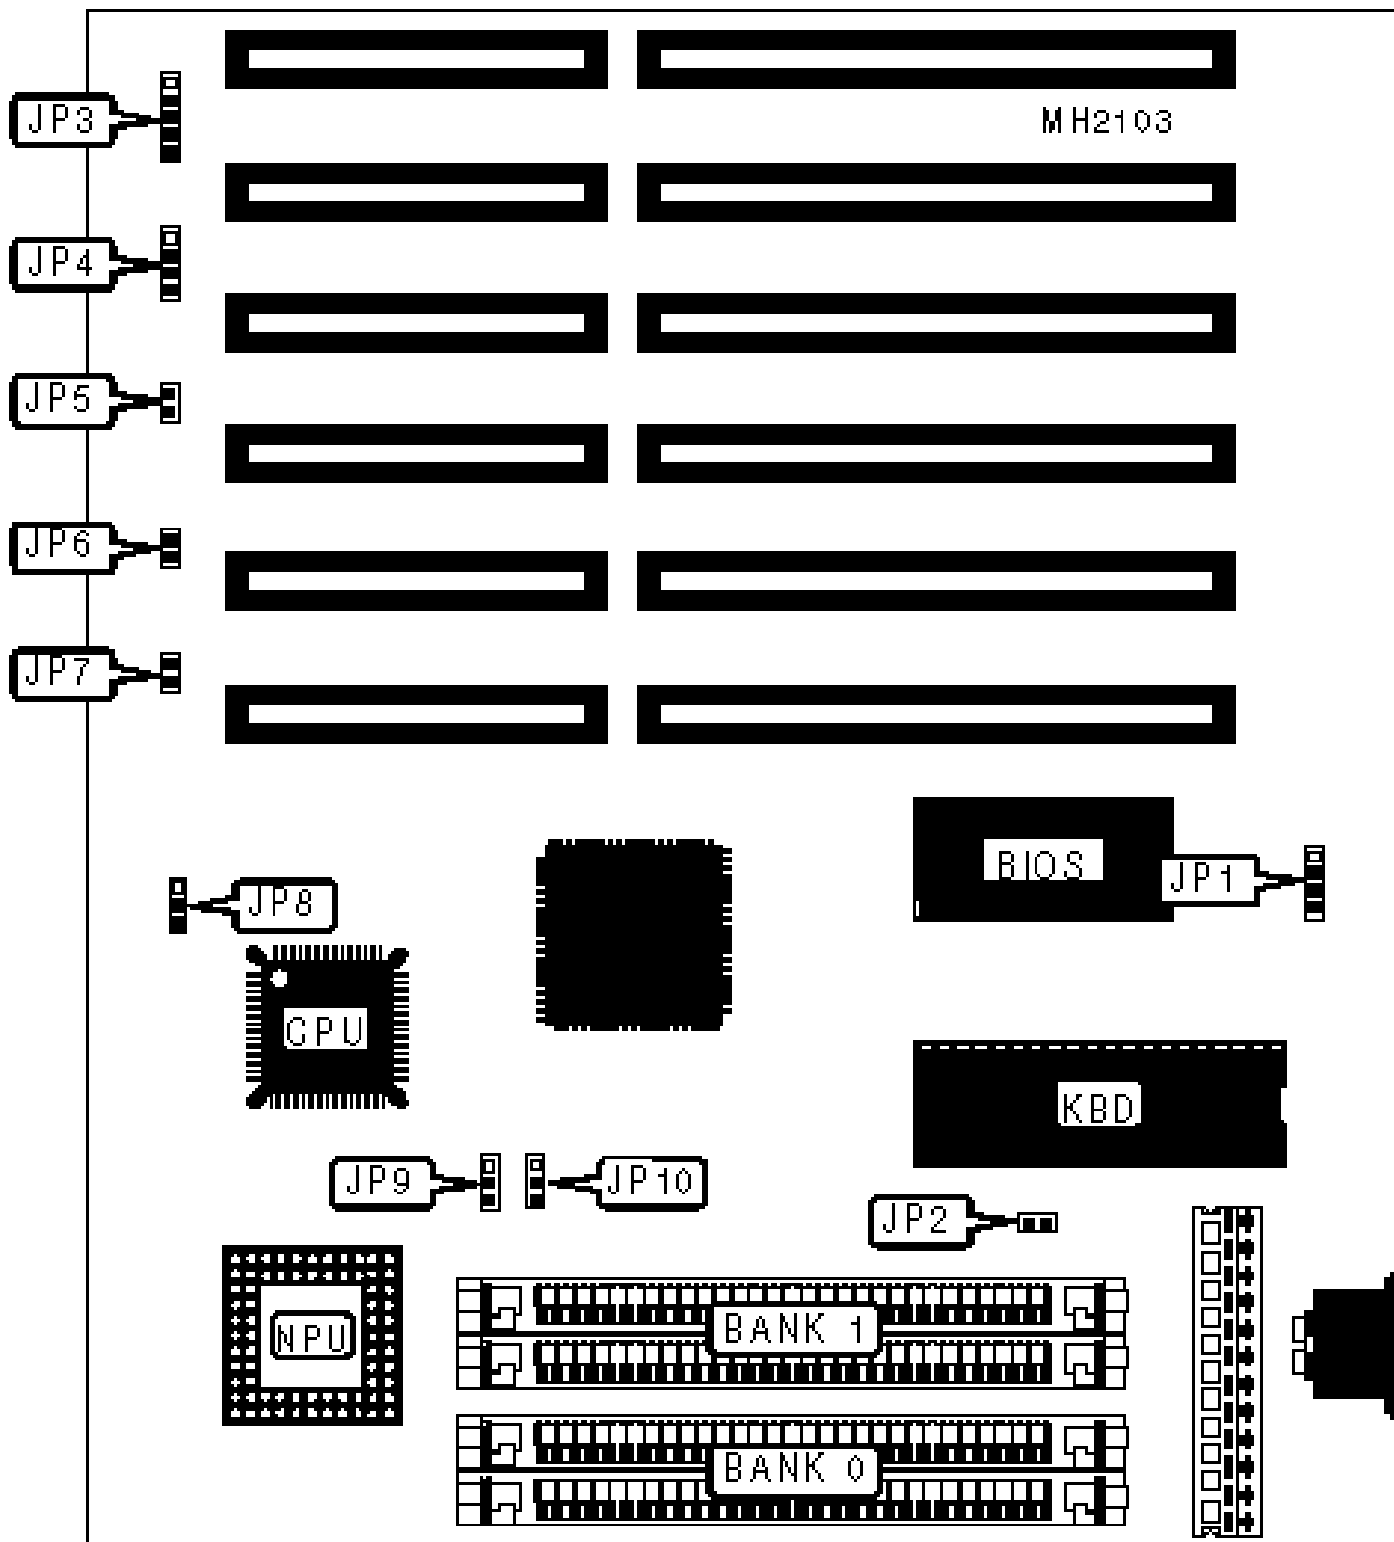

CONNECTIONS

Purpose	Location	Purpose	Location
External battery	JP1	Turbo LED	JP5
Power LED & keylock	JP3	Turbo switch	JP6
Speaker	JP4	Reset switch	JP7

USER CONFIGURABLE SETTINGS

Function	Jumper	Position
» Monitor type select color	JP2	Closed
Monitor type select monochrome	JP2	Open

DRAM CONFIGURATION

Size	Bank 0	Bank 1
512KB	(2) 256K x 9	NONE
1MB	(2) 256K x 9	(2) 256K x 9
1MB	(2) 512K x 9	NONE
2MB	(2) 512K x 9	(2) 512K x 9
2MB	(2) 1M x 9	NONE
4MB	(2) 1M x 9	(2) 1M x 9
8MB	(2) 4M x 9	NONE
16MB	(2) 4M x 9	(2) 4M x 9

CPU CLOCK CONFIGURATION

Clock	JP8	JP9	JP10
16MHz	pins 2 & 3 closed	pins 1 & 2 closed	pins 1 & 2 closed
20MHz	pins 2 & 3 closed	N/A	N/A

25MHZ	pins 2 & 3 closed	pins 1 & 2 closed	pins 2 & 3 closed
33MHz	pins 2 & 3 closed	pins 2 & 3 closed	pins 1 & 2 closed
40MHz	pins 1 & 2 closed	pins 2 & 3 closed	pins 2 & 3 closed