


IBM CORPORATION  
NETFINITY 3000 (TYPE 8476)

Configuration

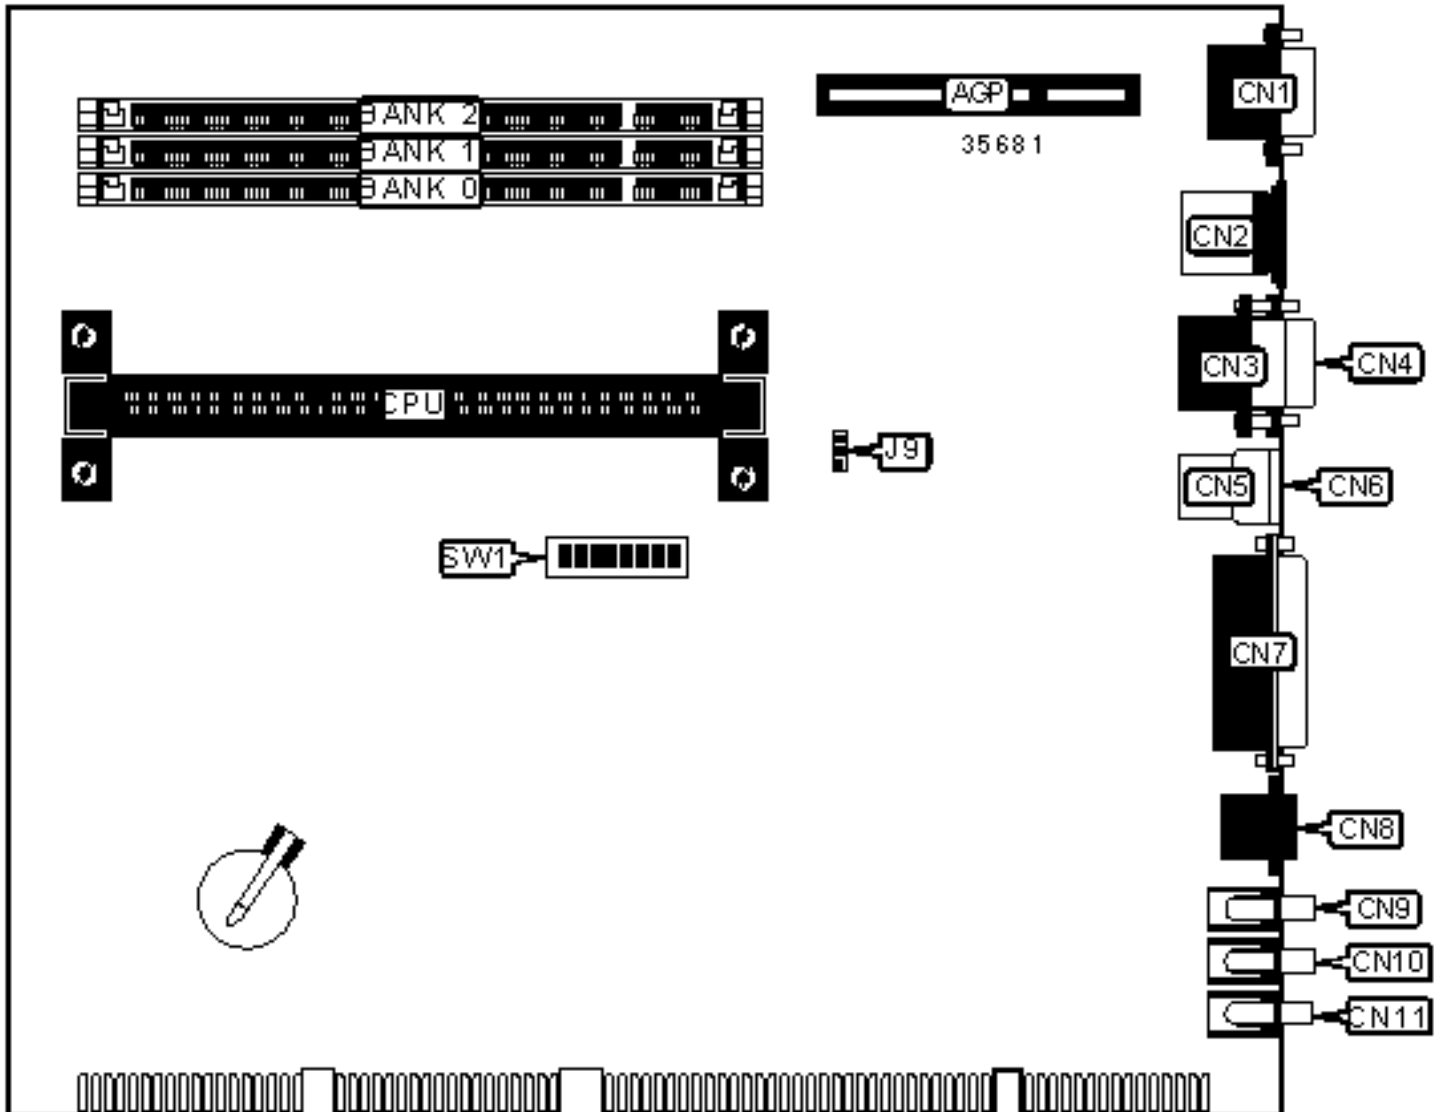

## CONNECTIONS

Purpose	Location	Purpose	Location
AGP slot	AGP	USB connector 2	CN6
VGA port	CN1	Parallel port	CN7
PS/2 mouse port	CN2	Ethernet 10/100BaseT connector	CN8
Serial port 2	CN3	Line out	CN9
Serial port 1	CN4	Line in	CN10
USB connector 1	CN5	Microphone in	CN11

## USER CONFIGURABLE SETTINGS

Function	Label	Position
» CMOS memory	J9	Unidentified
BIOS operation	SW1/5	Unidentified
Ethernet normal operation	SW1/6	Off
Ethernet MAC disabled	SW1/6	On
Password enabled	SW1/7	Off
Password disabled	SW1/7	On
Floppy drive write protect disabled	SW1/8	Off
Floppy drive write protect enabled	SW1/8	On

## DIMM CONFIGURATION

Size	Bank 0	Bank 1	Bank 2
32MB	(1) 4M x 64	None	None
64MB	(1) 8M x 64	None	None
64MB	(1) 4M x 64	(1) 4M x 64	None
96MB	(1) 8M x 64	(1) 4M x 64	None

96MB	(1) 4M x 64	(1) 4M x 64	(1) 4M x 64
128MB	(1) 16M x 64	None	None
128MB	(1) 8M x 64	(1) 4M x 64	(1) 4M x 64
128MB	(1) 8M x 64	(1) 8M x 64	None
160MB	(1) 16M x 64	(1) 4M x 64	None
192MB	(1) 16M x 64	(1) 4M x 64	(1) 4M x 64
192MB	(1) 16M x 64	(1) 8M x 64	None
192MB	(1) 8M x 64	(1) 8M x 64	(1) 8M x 64
224MB	(1) 16M x 64	(1) 8M x 64	(1) 4M x 64
256MB	(1) 16M x 64	(1) 8M x 64	(1) 8M x 64
384MB	(1) 16M x 64	(1) 16M x 64	(1) 16M x 64
Note: Board accepts SDRAM memory.			

### CACHE CONFIGURATION

Note: 512KB cache is located on the Pentium II CPU.

### CPU SPEED SELECTION

CPU speed	Clock speed	Multiplier	SW1/1	SW1/2	SW1/3	SW1/4
266MHz	66MHz	4x	On	On	Off	On
300MHz	66MHz	4.5x	Off	On	Off	On
350MHz	100MHz	3.5x	Off	Off	On	On