
J-MARK COMPUTER CORPORATION

J-TX98 R2

Configuration

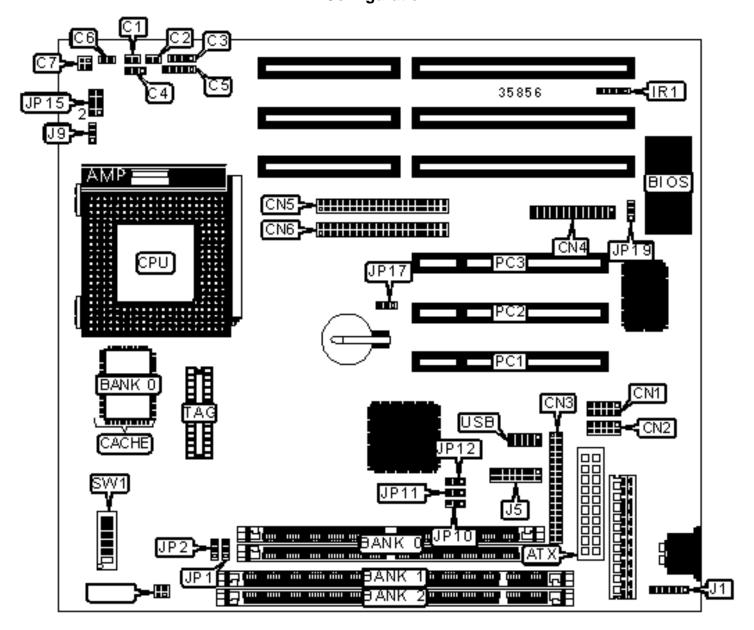

	CONNE	CTIONS	
Purpose	Location	Purpose	Location
ATX power connector	ATX	Floppy drive interface	CN3
Turbo LED	C1	Parallel port	CN4
Reset switch	C2	IDE interface 2	CN5
Speaker	C3	IDE interface 1	CN6
Turbo switch	C4	IR connector	IR1
Power LED & keylock	C5	PS/2 mouse interface	J1
IDE interface LED	C6	VGA interface	J5
Soft off power supply	C7	CPU fan power	J9
Serial port 1	CN1	32-bit PCI slots	PC1 – PC3
Serial port 2	CN2	USB connector	USB

USER CONFIGURABLE SETTINGS						
	Function	Label	Position			
»	Factory configured - do not alter	JP11	Unidentified			
»	Factory configured - do not alter	JP12	Unidentified			
»	Factory configured - do not alter	JP14	Unidentified			
»	CMOS memory normal operation	JP17	Pins 1 & 2 closed			
	CMOS memory clear	JP17	Pins 2 & 3 closed			
	Flash BIOS voltage select 12v	JP19	Pins 1 & 2 closed			
	Flash BIOS voltage select 5v	JP19	Pins 2 & 3 closed			

SIMM CONFIGURATION				
Size	Bank 0			
8MB	(2) 1M x 36			

16MB	(2) 2M x 36			
32MB	(2) 4M x 36			
64MB	(2) 8M x 36			
128MB	(2) 16M x 36			
Note: Board accepts EDO memory.				

DIMM CONFIGURATION						
Size	Bank 2					
8MB	(1) 1M x 64	None				
16MB	(1) 2M x 64	None				
16MB	(1) 1M x 64	(1) 1M x 64				
24MB	(1) 2M x 64	(1) 1M x 64				

DIMM CONFIGURATION (CON'T)						
Size	Bank 1	Bank 2				
32MB	(1) 4M x 64	None				
32MB	(1) 2M x 64	(1) 2M x 64				
40MB	(1) 4M x 64	(1) 1M x 64				
48MB	(1) 4M x 64	(1) 2M x 64				
64MB	(1) 8M x 64	None				
64MB	(1) 4M x 64	(1) 4M x 64				
72MB	(1) 8M x 64	(1) 1M x 64				
80MB	(1) 8M x 64	(1) 2M x 64				
96MB	(1) 8M x 64	(1) 4M x 64				
128MB	(1) 16M x 64	None				
128MB	(1) 8M x 64	(1) 8M x 64				

136MB	(1) 16M x 64	(1) 1M x 64			
144MB	(1) 16M x 64	(1) 2M x 64			
160MB	(1) 16M x 64	(1) 4M x 64			
192MB	(1) 16M x 64	(1) 8M x 64			
256MB	(1) 16M x 64	(1) 16M x 64			
Note: Board accepts SDRAM memory.					

CACHE CONFIGURATION							
Size Bank 0 TAG							
256KB	(1) 32K x 64	(1) 32K x 8					
512KB	(1) 64K x 64	(1) 32K x 8					

	CPU SPEED SELECTION (CX 6X86)								
CPU speed	lock speed	Multiplier	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	
120MHz	50MHz	2x	On	On	On	On	Off	Off	
133MHz	55MHz	2x	On	On	Off	On	Off	Off	
150MHz	60MHz	2x	Off	On	On	On	Off	Off	
166MHz	66MHz	2x	On	Off	On	On	Off	Off	

	CPU SPEED SELECTION (IBM 6X86)								
CPU speedClock speed Multiplier SW1/1 SW1/2 SW1/3 SW1/4 SW1/5 SW1/6								SW1/6	
120MHz	50MHz	2x	On	On	On	On	Off	Off	
133MHz	55MHz	2x	On	On	Off	On	Off	Off	
150MHz	60MHz	2x	Off	On	On	On	Off	Off	
166MHz	66MHz	2x	On	Off	On	On	Off	Off	

	CPU SPEED SELECTION (CX 6X86MX)								
CPU speed	lock speed	Multiplier	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	
166MHz	60MHz	2.5x	Off	On	On	On	On	Off	
166MHz	66MHz	2.5x	On	Off	On	On	On	Off	
233MHz	66MHz	3x	On	Off	On	Off	On	Off	

CPU SPEED SELECTION (IBM 6X86MX)								
CPU speed	lock speed	Multiplier	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6
166MHz	60MHz	2.5x	Off	On	On	On	On	Off
166MHz	66MHz	2.5x	On	Off	On	On	On	Off
233MHz	66MHz	3x	On	Off	On	Off	On	Off

CPU SPEED SELECTION (IDT C6)								
CPU speed	lock speed	Multiplier	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6
150MHz	50MHz	3x	On	On	On	Off	On	Off
180MHz	60MHz	3x	Off	On	On	Off	On	Off
200MHz	66MHz	3x	On	Off	On	Off	On	Off

	CPU SPEED SELECTION (AM K5)								
CPU speed	lock speed	Multiplier	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	
75MHz	50MHz	1.5x	On	On	On	Off	Off	Off	
90MHz	60MHz	1.5x	Off	On	On	Off	Off	Off	
100MHz	66MHz	1.5x	On	Off	On	Off	Off	Off	
133MHz	66MHz	1.5x	On	Off	On	Off	Off	Off	
166MHz	66MHz	2.5x	On	Off	On	On	On	Off	

	CPU SPEED SELECTION (AM K6)								
CPU speed	lock speed	Multiplier	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	
166MHz	66MHz	2.5x	On	Off	On	On	On	Off	
200MHz	66MHz	3x	On	Off	On	Off	On	Off	
233MHz	66MHz	3.5x	On	Off	On	Off	Off	Off	
266MHz	66MHz	4x	On	Off	On	On	Off	On	
300MHz	66MHz	4.5x	On	Off	On	On	On	On	

	CPU SPEED SELECTION (INTEL)								
CPU speed	lock speed	Multiplier	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	
75MHz	50MHz	1.5x	On	On	On	Off	Off	Off	
90MHz	60MHz	1.5x	Off	On	On	Off	Off	Off	
100MHz	66MHz	1.5x	On	Off	On	Off	Off	Off	
120MHz	60MHz	2x	Off	On	On	On	Off	Off	
133MHz	66MHz	2x	On	Off	On	On	Off	Off	
150MHz	60MHz	2.5x	Off	On	On	On	On	Off	
166MHz	66MHz	2.5x	On	Off	On	On	On	Off	
200MHz	66MHz	3x	On	Off	On	Off	On	Off	

	CPU SPEED SELECTION (INTEL MMX)								
CPU speed	lock speed	Multiplier	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	
166MHz	66MHz	2.5x	On	Off	On	On	On	Off	
200MHz	66MHz	3x	On	Off	On	Off	On	Off	
233MHz	66MHz	3.5x	On	Off	On	Off	Off	Off	

CPU VOLTAGE SELECTION

Voltage	JP15/pins 1 & 2	JP15/pins 3 & 4	JP15/pins 5 & 6	JP15/pins 7 & 8
2.2v	Open	Closed	Open	Open
2.8v	Open	Open	Open	Closed
2.9v	Closed	Open	Open	Closed
3.2v	Open	Open	Closed	Closed
3.45v	Open	Closed	Closed	Closed
3.52v	Closed	Closed	Closed	Closed

ON BOARD VIDEO SELECTION								
Setting JP1 JP2 JP10								
Enabled	Pins 1 & 2 closed	Pins 1 & 2 closed	Pins 2 & 3 closed					
Disabled	Pins 2 & 3 closed	Pins 2 & 3 closed	Pins 1 & 2 closed					