


Configuration

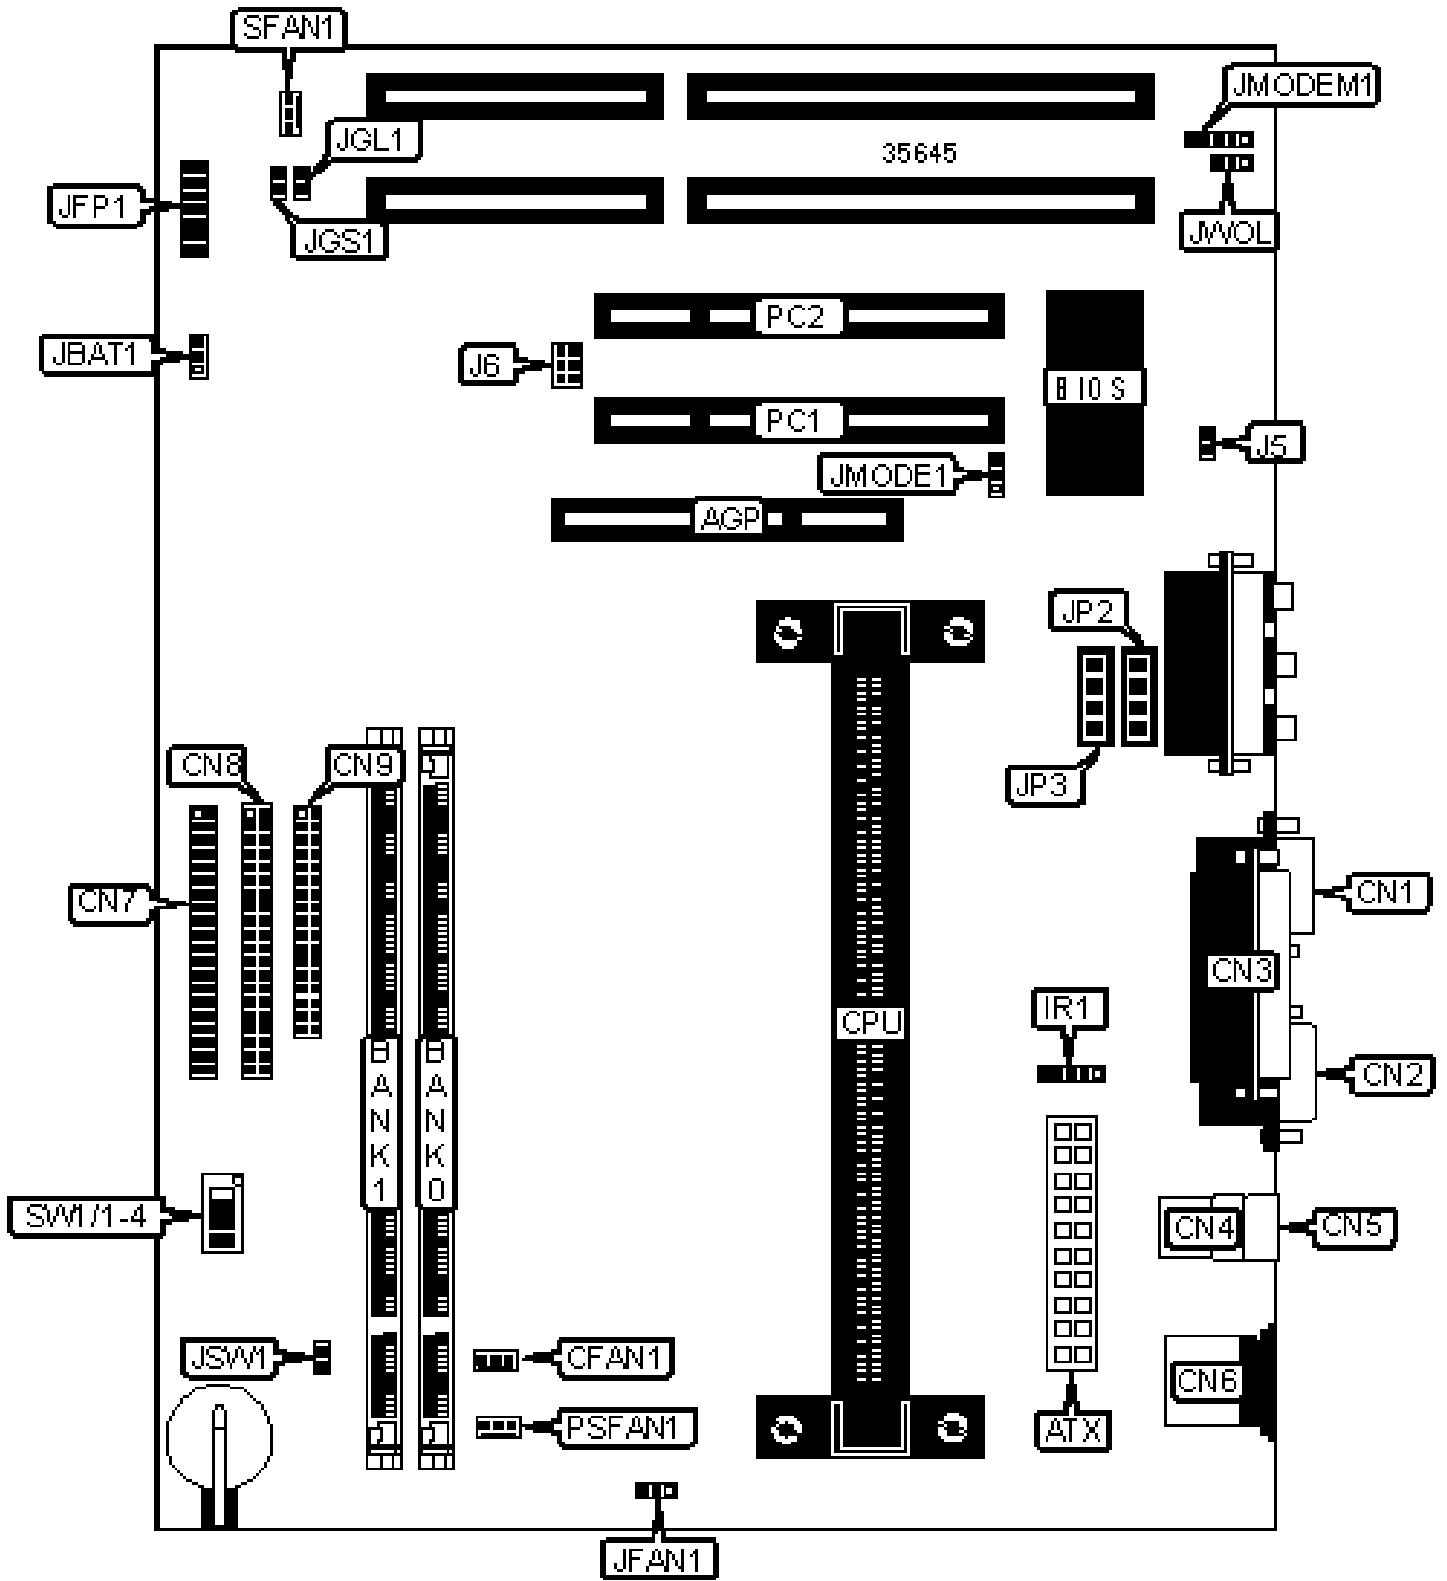

CONNECTIONS

Purpose	Location	Purpose	Location
AGP slot	AGP	CPU fan power	JFAN1
ATX power connector	ATX	IDE interface LED	JFP1/pins 1 & 8
CPU fan power	CFAN1	Power LED	JFP1/pins 2 - 4
Serial port 2	CN1	Power switch	JFP1/pins 5 & 6
Serial port 1	CN2	Speaker	JFP1/pins 9 - 12
Parallel port	CN3	Reset switch	JFP1/pins 13 & 14
USB connector 1	CN4	Suspend switch	JGS1
USB connector 2	CN5	Green PC LED	JGL1
PS/2 mouse port	CN6	Wake on modem connector	JMODEM1
IDE interface 1	CN7	Wake on LAN connector	JWOL1
IDE interface 2	CN8	Soft power off switch	JSW1
Floppy drive interface	CN9	32-bit PCI slots	PC1 - PC2
IR connector	IR1	Chassis fan power	PSFAN1
SB link connector	J6	Power supply fan power	SFAN1

USER CONFIGURABLE SETTINGS

Function	Label	Position
Flash BIOS voltage select 12v	JMODE1	Pins 1 & 2 closed
Flash BIOS voltage select 5v	JMODE1	Pins 2 & 3 closed
» CMOS memory normal operation	JBAT1	Pins 1 & 2 closed
CMOS memory clear	JBAT1	Pins 2 & 3 closed
» Boot up by switch	JP5	Closed
Immediate boot up	JP5	Open

DIMM CONFIGURATION

Size	Bank 0	Bank 1	Bank 2	Bank 3
8 MB	(1) 1M x 64	None	None	None
16 MB	(1) 1M x 64	(1) 1M x 64	None	None
16 MB	(1) 2M x 64	None	None	None
24 MB	(1) 1M x 64	(1) 1M x 64	(1) 1M x 64	None
32 MB	(1) 1M x 64	(1) 1M x 64	(1) 1M x 64	(1) 1M x 64
32 MB	(1) 2M x 64	(1) 2M x 64	None	None
32 MB	(1) 4M x 64	None	None	None
40 MB	(1) 2M x 64	(1) 2M x 64	(1) 1M x 64	None
48 MB	(1) 2M x 64	(1) 2M x 64	(1) 2M x 64	None

DIMM CONFIGURATION (CONT')

Size	Bank 0	Bank 1	Bank 2	Bank 3
64 MB	(1) 2M x 64	(1) 2M x 64	(1) 2M x 64	(1) 2M x 64
64 MB	(1) 4M x 64	(1) 4M x 64	None	None
64 MB	(1) 8M x 64	None	None	None
80 MB	(1) 4M x 64	(1) 4M x 64	(1) 2M x 64	None
96 MB	(1) 4M x 64	(1) 4M x 64	(1) 4M x 64	None
128 MB	(1) 4M x 64	(1) 4M x 64	(1) 4M x 64	(1) 4M x 64
128 MB	(1) 8M x 64	(1) 8M x 64	None	None
130 MB	(1) 8M x 64	(1) 8M x 64	(1) 4M x 64	None
192 MB	(1) 8M x 64	(1) 8M x 64	(1) 8M x 64	None
256 MB	(1) 8M x 64	(1) 8M x 64	(1) 8M x 64	(1) 8M x 64

CACHE CONFIGURATION

Note: The 256/512KB cache is located on the Pentium II CPU.

CPU SPEED SELECTION (PENTIUM)

CPU speed	Clock speed	Multiplier	SW1/1	SW1/2	SW1/3	SW1/4
200MHz	66MHz	3x	On	On	Off	On
233MHz	66MHz	3.5x	On	Off	Off	On
266MHz	66MHz	4x	On	On	On	Off
300MHz	66MHz	4.5x	On	Off	On	Off
333MHz	66MHz	5x	On	On	Off	Off