


# 12B JUMPER SETTING

SOFTWARE SPEED SETTING:  
 WHEN J42 IS OPEN, LOW  
 WHEN J42 IS SHORTED,  
 SPEED:  
 CLOLED JUMPER:  
 MEMORY JUMPER SETTING:

JUMPER SETTING		RAM LOCATION	
J28	J29	LF	BF
SHORTED	SHORTED	BANK11	BANK11
OPEN	SHORTED	21256x18	NONE
SHORTED	OPEN	21256x18	2162x18
SHORTED	OPEN	21256x18	21256x18

RAEL JUMPER. ←  
 &3 ALWAYS SHORTED  
 MODE JUMPER:  
 ALWAYS SHORTED  
 S(JUMPER) ←  
 ALWAYS SHORTED  
 S JUMPER: ←  
 WHEN J31 SHORTED, NO-WAIT STATE,  
 WHEN J31 IS OPEN, 1-WAIT STATE.

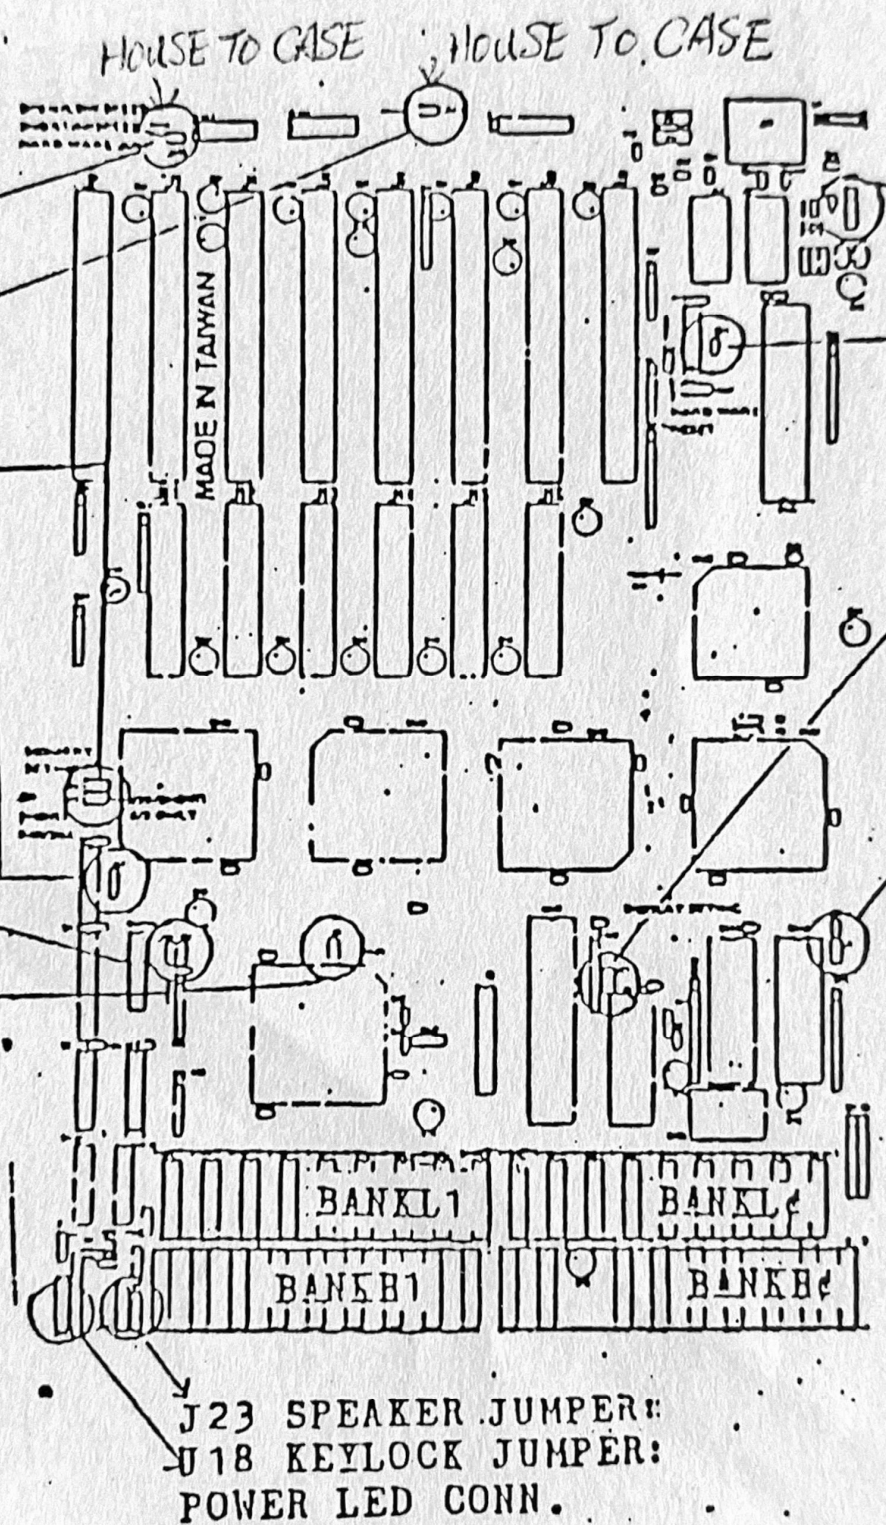

J22 BATTERY JUMPER:  
 J40 HARDWARE RESET  
 J27  WHEN J27 IS C  
 MONO DISPLAY.  
 J27  WHEN J27 IS S  
 COLOR DISPLAY  
 J1 ROM JUMPER:  
 J1 WHEN J1 IS OPEN,  
 27128: ROM CHIP INS  
 J1 WHEN J1 IS SHORT  
 27256: ROM CHIP INS

J23 SPEAKER JUMPER:  
 J18 KEYLOCK JUMPER:  
 POWER LED CONN.