



Jumper Settings

Jumper Table

Jumper Table Summary of AP5S

CPU Type

Jumper Settings

CPU Type	JP5	JP13		
P54C	1-2, 3-4, 5-6	1-2, 3-4, 5-6		
CPU Voltage				
CPU Voltage	JP18	JP19	JP20	
VRE Type	Closed	Open	Open	
STD Type	Open	Closed	Open	
CPU Frequency				
CPU Frequency	JP3	JP4	JP14	JP15
75 MHz	2-3	2-3	2-3	2-3
90 MHz	2-3	1-2	2-3	2-3
100 MHz	1-2	2-3	2-3	2-3
120 MHz	2-3	1-2	2-3	1-2
133 MHz	1-2	2-3	2-3	1-2
150 MHz	2-3	1-2	1-2	1-2
166 MHz	1-2	2-3	1-2	1-2
200 MHz	1-2	2-3	1-2	2-3
L2 Cache Mode				
Cache Mode		JP1		
Linear mode (Cyrix)		1-2		
Interleave mode (Intel)		2-3		
Flash ROM Type				
Flash ROM		JP8		
12V		1-2		
5V (default)		2-3		
Super I/O Controller				
Function		JP16		
Enabled		1-2		
Disabled		2-3		
ECP DMA Channel				
ECP DMA Channel	JP6	JP7		
3	1-2	1-2		
1	2-3	2-3		
CMOS				
Function		JP12		
Normal		1-2		
Clear CMOS		2-3		
PS/2 Mouse				
Function		JP10		
Enabled		1-2		
Disabled		2-3		
Onboard Connectors				
Connector		Function		
CON2		AT-keyboard		
CON3		Power		
CON4		PS/2 mouse header		
CON5		COM1		

CON6	Floppy disk
CON7	IDE1
CON8	COM2
CON9	Parallel
CON10	IDE2
CON11	Multifunction connector
JP2	Reserved
JP9	Reserved
JP11	Reserved
JP17	Fan
JP21	IR
JP22	IDE LED
JP23	Reserved
JP24	Reserved
JP25	Reserved
USB	USB interface

Last Updated: 2004/07/15