


LT600-DR

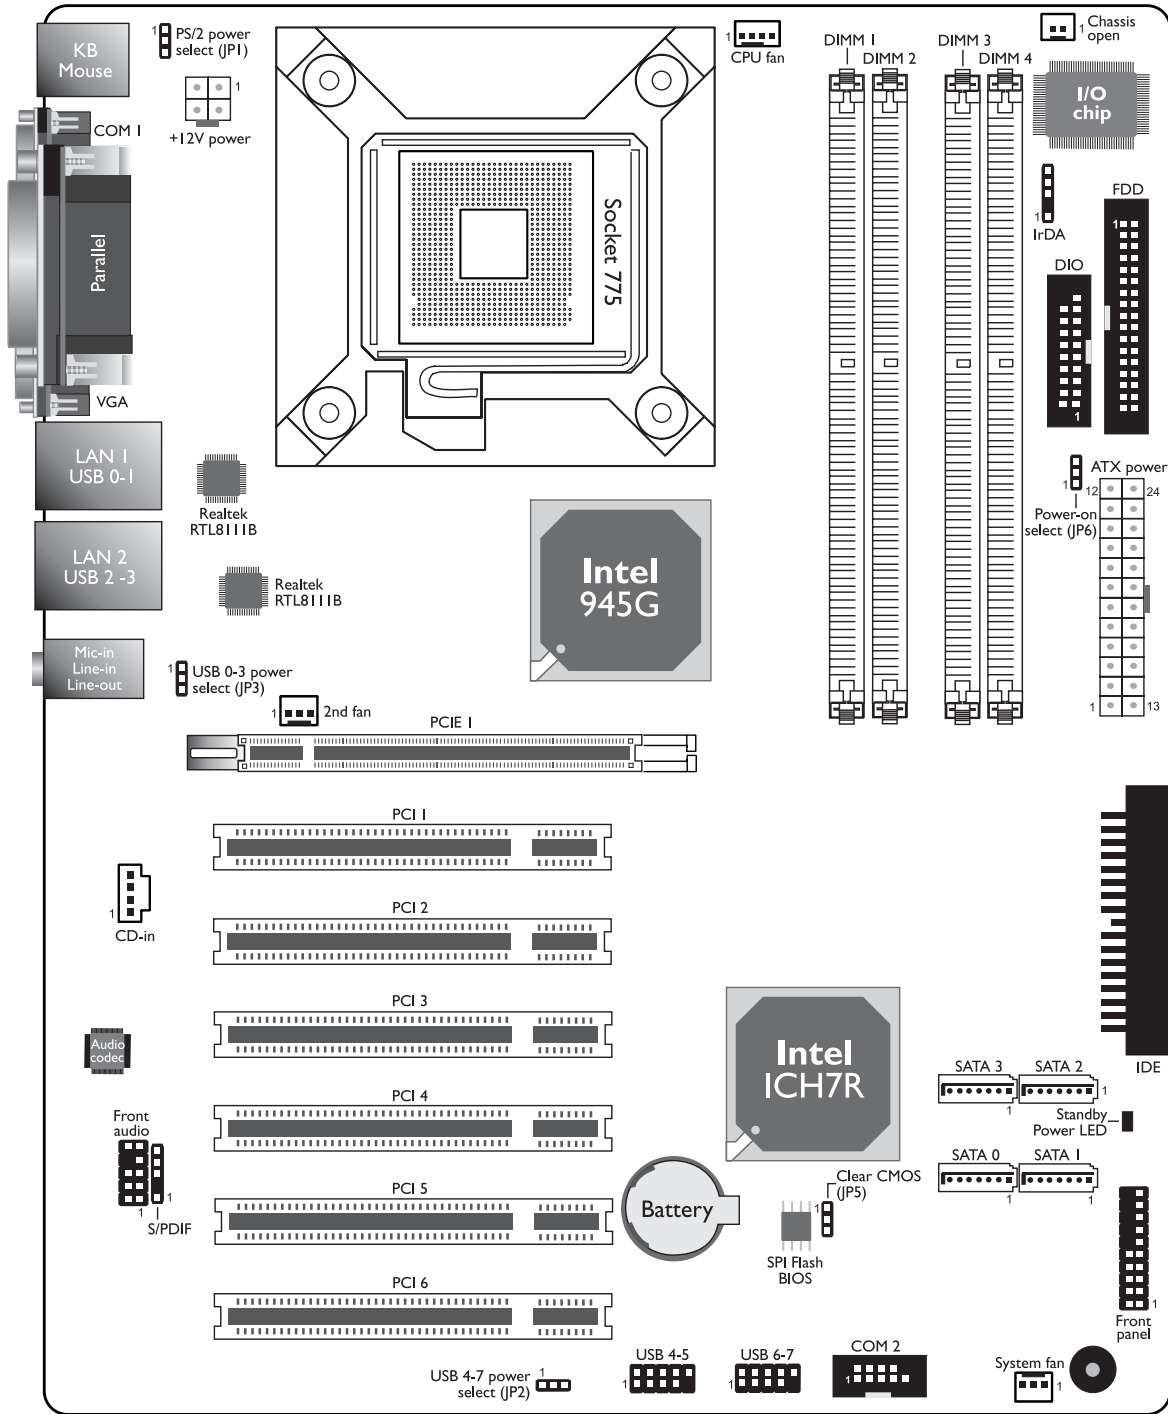

Clear CMOS Data	JP5
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

PS/2 Power	JP1
5V (default)	1-2 On
5V_standby	2-3 On

USB Power: 0-3 (JP3), 4-7 (JP2)	
5V (default)	1-2 On
5V_standby	2-3 On

Power-on Select	JP6
Power-on via AC power	2-3 On
Power-on via power button	1-2 On