

Á, ñ CB652M-LX CPU ¼÷±×·¹ÀÏµå Á;ÆÛ

MULT	66MHz	100MHz	JP1	JP2	JP3	JP4
3.5x	233MHz	350MHz	ON	OFF	OFF	ON
4.0x	266MHz	400MHz	ON	ON	ON	OFF
4.5x	300MHz	450MHz	ON	OFF	ON	OFF
5.0x	333MHz	500MHz	ON	ON	OFF	OFF
5.5x	366MHz	550MHz	ON	OFF	OFF	OFF
6.0x	400MHz	600MHz	OFF	ON	ON	ON
6.5x	433MHz	650MHz	OFF	OFF	ON	ON
7.0x	466MHz	700MHz	OFF	ON	OFF	ON
7.5x	500MHz	750MHz	OFF	OFF	OFF	ON
8.0x	533MHz	800MHz	OFF	ON	ON	OFF