


CT950-B

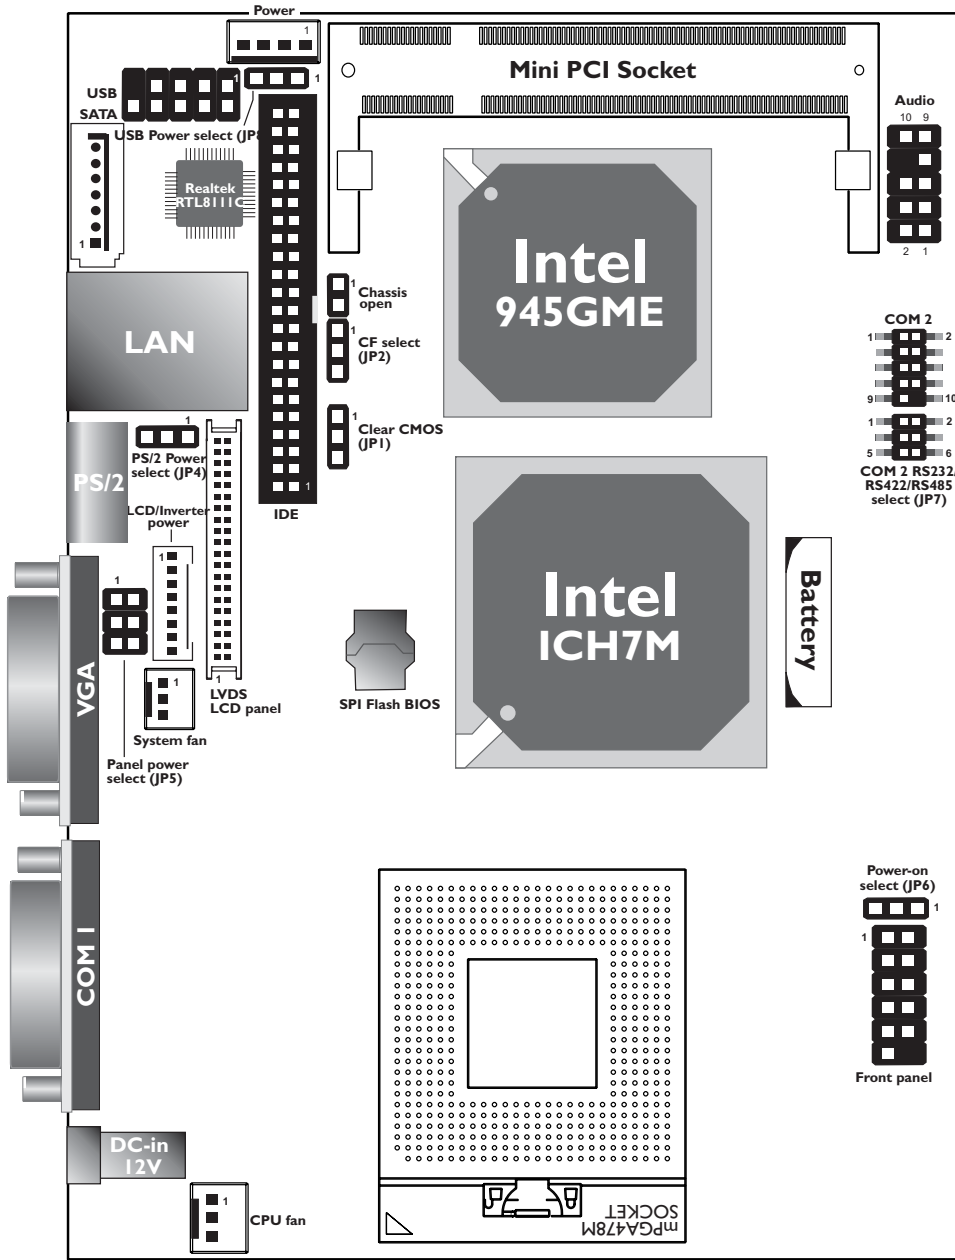

Power-on Select	JP6	USB Power	JP8
Power-on via power button (default)	1-2 On	5V (default)	1-2 On
Power-on via AC power	2-3 On	5V_standby	2-3 On
Clear CMOS Data	JP1	PS/2 Power	JP4
Normal (default)	1-2 On	5V (default)	1-2 On
Clear CMOS Data	2-3 On	5V_standby	2-3 On
CompactFlash Setting	JP2	Panel Power Select	JP5
Master (default)	1-2 On	12V	1-2 On
Slave	2-3 On	5V	3-4 On
COM 2 RS232/422/485 Select	JP7	3.3V (default)	5-6 On
RS232 (default)	1-2 On	Before powering-on the system, make sure settings on JP9 match the LCD panel's specifications. Selecting the incorrect voltage will seriously damage the LCD panel.	
RS422 half duplex	3-4 On		
RS485	5-6 On		