


Unknown CX29

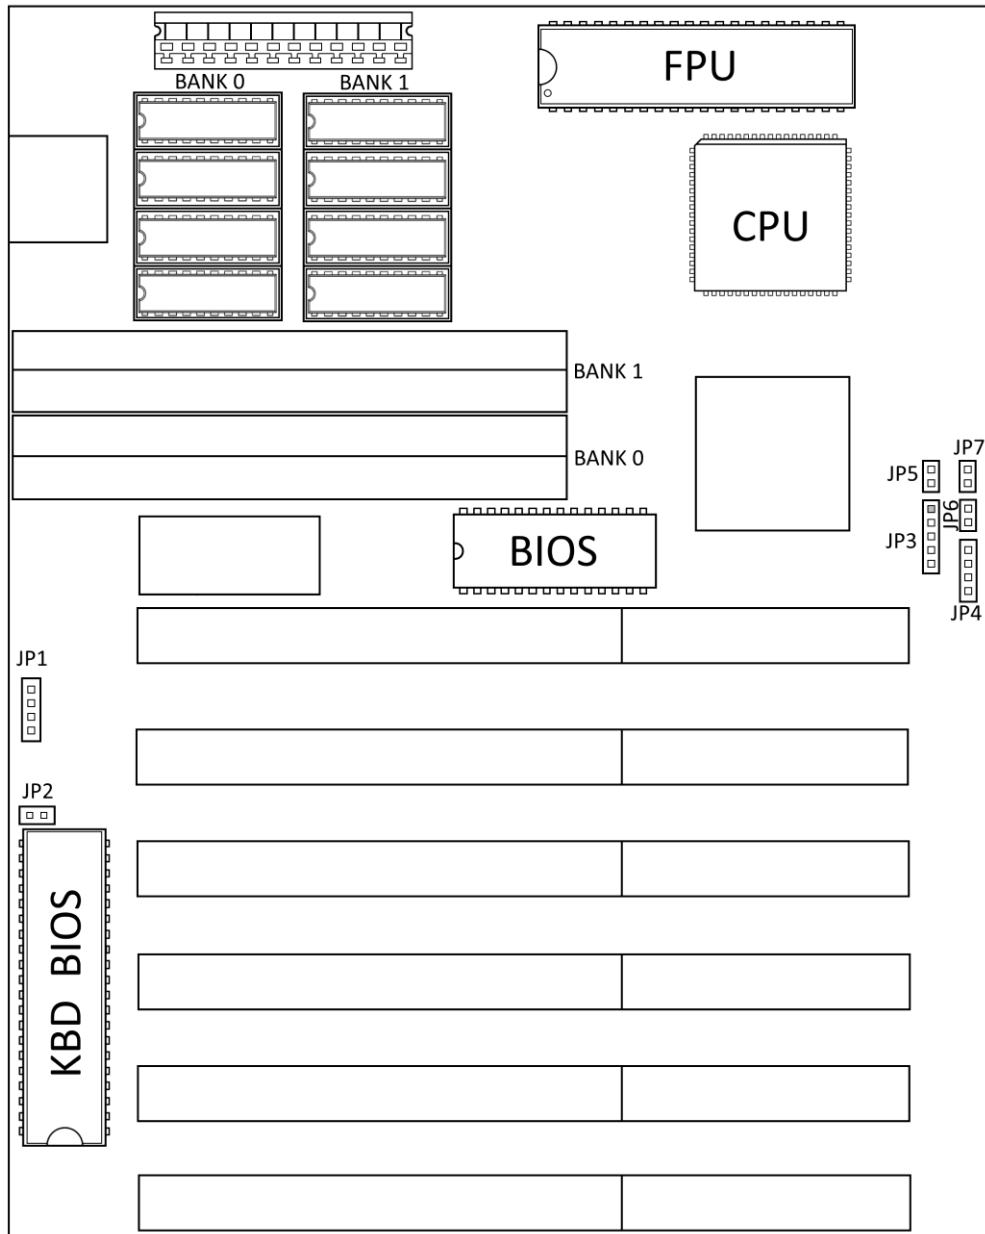

CONNECTIONS			
Purpose	Location	Purpose	Location
External battery	JP1	Reset switch	JP5
Power LED (1-3) & keylock (4-5)	JP3	Turbo LED	JP6
Speaker	JP4		

USER CONFIGURABLE SETTINGS			
Function		Jumper/Switch	Position
»	Monitor type select color	JP2	On
	Monitor type select monochrome	JP2	Off
»	Turbo switch CPU - full speed	JP7	Off
	Turbo switch CPU - 8 MHz*	JP7	On

* Set "Turbo switch function" in BIOS to "Enable"

DRAM CONFIGURATION: DIP20			DRAM CONFIGURATION: SIMM30	
Size	Bank 0	Bank 1	Bank 0	Bank 1
512 KB	(4) 44256	-	-	-
1 MB	(4) 44256	(4) 44256	-	-
2 MB	-	-	(2) 1Mx9	-
4 MB	-	-	(2) 1Mx9	(2) 1Mx9