 


## DH800 User's Manual Appendix

## For the IEEE-1394 pin definition

 
Below is IEEE-1394 pin assignment for you reference. Please notice which versions you used. You can see this information above the memory modules on the DH800 board. Please read the pin assignment under the correct version.

From Ver 1.2



Pin 1 TPA0+	Pin 2 TPA0-
Pin 3 GND	Pin 4 GND
Pin 5 TPB0+	Pin 6 TPB0-
Pin 7 +12V	Pin 8 +12V
Pin 9 NC	Pin 10 GND

Before Ver 1.2



 Pin 1 TPB1+
 Pin 2 TPB1 

 Pin 3 GND
 Pin 4 GND

 Pin 5 TPA1+
 Pin 6 TPA1 

 Pin 7 +12V
 Pin 8 +12V

 Pin 9 NC
 Pin 10 NC

IWILL ©Copyright 2004