

Dragon 50MHz EISA 486

Mainboard

Addendum for User's Manual

Rev. 1.2

(Oct. 14, 92)

=====

CONTROL OF SYSTEM SPEED

System speed can be controlled by keyboard. To change the speed by keyboard use '-' and '+' of the numeric keypad. Press 'Ctrl' 'Alt' 'Shift' and '-' for normal speed and press 'Ctrl' 'Alt' 'Shift' and '+' for fast or turbo speed.

ENG/SN/038