

Service Home	Trouble Shooting	Reference Material	Upgrades & Parts	Software Updates		Order Status
------------------------------	----------------------------------	------------------------------------	--------------------------------------	----------------------------------	--	------------------------------

Jumpers/Switches/Controls

[Jumpers](#)
[Controls](#)

Jumpers

Jumpers Locations

= jumpered
 = unjumpered

PASS (default) Password feature is enabled.

Password feature is disabled.

VGA (default) The built-in VGA is enabled.

The built-in VGA is disabled.

VGAIrq VGA generation of IRQ9 is enabled.

default VGA generation of IRQ9 is disabled.

PARIRQ Sets LPT1 or LPT3 for IRQ7.

Sets LPT2 for IRQ5.

Disabled.

SPEED Speed set for 25 MHz or 50 MHz processors.

Speed set for 33 MHz or 66 MHz processors.

SELECT



System is configured for a 486 DX or 486 DX2

processor.



The system is configured for a 486 SX processor.



The system is configured for a 487 SX or an

OverDrive processor.

JP55*




Internal speaker enabled (default).



Internal speaker disabled. To add an external speaker, remove the factory installed jumper and, using a standard twin lead PC speaker, connect pins 1 & 4. Pins 2 & 4 are functionally equivalent. Pin 3 is removed as a key.

* Rev A03 and higher system boards only.

Controls

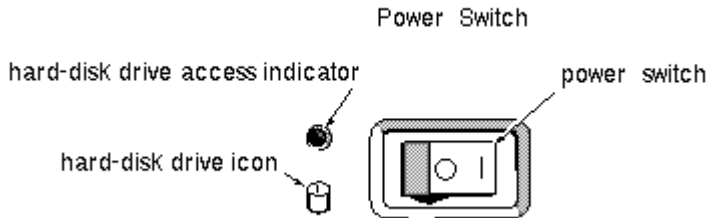

For [comments and suggestions](#) about the Dell Service and Support Center.

Copyright 1997 Dell Computer Corporation. All rights reserved.
([Terms of Use](#))