


# EL620-C

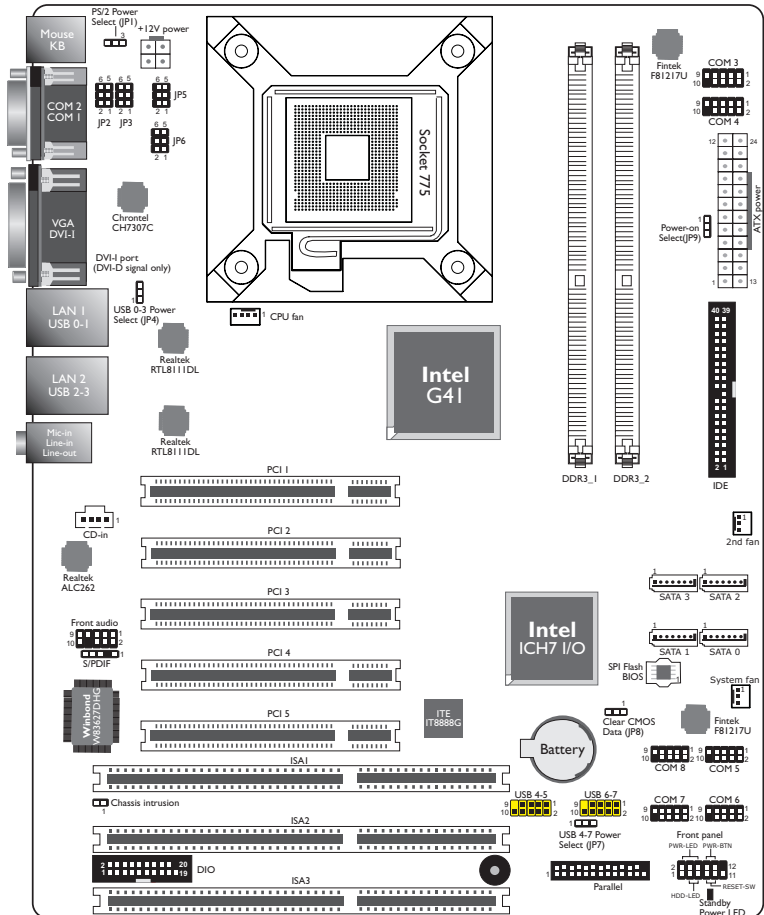

Power-on Select	JP9
Power-on via power button (default)	1-2 On
Power-on via AC power	2-3 On

Clear CMOS Data	JP8
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

COM 1 (JP6), COM 2 (JP2) RS232/RS422/RS485 Select	
RS232 (default)	1-2 On
RS422 Half Duplex	3-4 On
RS485	5-6 On

PS/2 Power Select	JP1
+5V (default)	1-2 On
+5V_standby	2-3 On

COM 1 (JP5), COM 2 (JP3) RS232/Power	
RS232 (default)	1-3, 2-4 On
RS232 with power	3-5 (+5V), 4-6 (+12V) On

USB Power: 0-3 (JP4), 4-7 (JP7)	
+5V (default)	1-2 On
+5V_standby	2-3 On