

Server


System board D873

Technical Manual

Dieses Handbuch wurde auf Recycling-Papier gedruckt.
This manual has been printed on recycled paper.
Ce manuel est imprimé sur du papier recyclé.
Este manual ha sido impreso sobre papel reciclado.
Questo manuale è stato stampato su carta da riciclaggio.
Denna handbok är tryckt på recyclingpapper.
Dit handboek werd op recycling-papier gedrukt.

Herausgegeben von/Published by
Siemens Nixdorf Informationssysteme AG
D-33094 Paderborn
D-81730 München

Bestell-Nr./Order No.: **A26361-D873-Z120-1-7619**
Printed in the Federal Republic of Germany
AG 0596 05/96

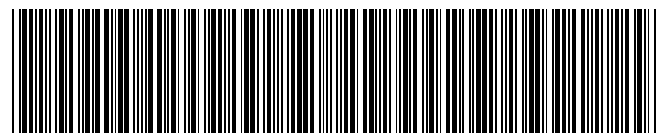

A26361-D873-Z120-1-7619

Is there ...

...any technical problem or other question you need clarified?...

Please contact:

- one of our IT Service Shops
- your sales partner
- your sales office

You will find the addresses of the IT Service Shops in the enclosed warranty coupon booklet.

... anything you want to tell us about this manual?

Please send us your comments quoting the order number of the manual.

Siemens Nixdorf Informationssysteme AG
Redaktion BS2000 OS ID4
Otto-Hahn-Ring 6
D-81730 München
Germany

System board D873

Technical Manual

Introduction

Important Notes

Settings in BIOS-Setup

Settings on the system board

Add-on modules on the system board

Error messages

Index

Your training needs . . .

The Siemens Nixdorf Training Centers offer you a wide range of training courses in information technology and on IT products and other subjects - onsite near to your workplace or offsite at one of our training centers.

Contact us for information on consulting, course schedules and selfstudy material

Please fax:

Fax: ++49 89 636-42945

Or write to:

Siemens Nixdorf Informationssysteme AG
Training Center, Beratungsservice
D-81730 München
Germany

Intel and Pentium are registered trademarks and OverDrive is a trademark of Intel Corporation, USA.

Microsoft, MS, MS-DOS, Windows and Windows 95 are registered trademarks of Microsoft Corporation.

PS/2 and OS/2 Warp are registered trademarks of International Business Machines, Inc.

All other trademarks referenced are the trademarks or registered trademarks of their respective owners, whose protected rights are acknowledged.

Copyright © Siemens Nixdorf Informationssysteme AG 1996.

All rights, including rights of translation, reproduction by printing, copying or similar methods, even of parts are reserved.

Offenders will be liable for damages.

All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Delivery subject to availability; right of technical modifications reserved.

Contents

Introduction	1
Notational conventions	1
Features.....	2
Ports and connectors.....	3
Possible screen resolutions.....	4
Interrupt table.....	5
Important Notes	7
Settings in BIOS Setup	9
System settings - Main menu	10
Time and Date - System Time / System Date	10
Floppy disk drive - Diskette A / Diskette B.....	11
Hard disk drives - Hard Disk 1 and Hard Disk 2	11
System startup - Boot Options.....	14
Type of monitor - Video Display	15
Base Memory	15
Extended Memory	15
Making advanced system settings - Advanced menu.....	16
Cache Memory	17
ROM areas in the RAM - Shadow Memory.....	19
Ports and controller - Peripheral Configuration	20
PCI Configuration	23
Additional system settings - Advanced System Configuration	25
Plug&Play functionality - Plug & Play O/S	26
Reset Configuration Data	27
Hard disk access - Large Disk Access Mode	27
Setting up the security features - Security Menu	28
Setup Password / System Password.....	28
Set Setup Password	29
Setup Password Lock.....	29
System Password - Set System Password.....	29
System Password Mode	30
System Load.....	30
Setup Prompt.....	30
Write protection for floppy disk drive - Diskette Write.....	31
Write protection for System BIOS - Flash Write	31
Soft Power Off	31
Remote Power On	31
Set Server Management - Server Menu	32

Contents

Server Management	32
O/S Boot Timeout	33
ASR&R Boot Delay	33
Boot Retry Counter	34
Start Diagnostic System.....	34
Hardware Watchdog	34
CPU 0 Status / CPU 1 Status.....	35
Pager Configuration	35
VT100 Configuration	38
Exiting BIOS Setup - Exit menu	40
Save Changes & Exit	40
Discard Changes & Exit.....	40
Get Default Values.....	40
Load Previous Values.....	40
Save Changes	40
Settings on the system board	41
Setting processor type - Jumper X400.....	42
System BIOS recovery - Switch 1	42
Write protection for system BIOS - Switch 5	43
Write protection for floppy disk drive - Switch 6	43
Switch 3, 4, 7 and 8.....	43
Add-on modules on the system board	45
Upgrading main memory.....	46
Replacing the processor	47
Upgrading the Second-level cache	49
Replacing the lithium battery.....	50
Error messages	51
Messages d'erreur	54
Mensajes de error	57
Messaggi di errore	60
Felmeddelanden	63
Foutmeldingen	66
Index	69

Introduction

This Technical Manual applies for the system board D873.

Notational conventions

The meanings of the symbols and fonts used in this manual are as follows:



This indicates instructions which it is essential to observe. Failure to do so may endanger your health, the operational integrity and electrical safety of your PC, or the security of your data.



This symbol is followed by supplementary information, remarks and tips.

► Texts which follow this symbol describe activities that must be performed.

▬ This symbol means that you must enter a blank space at this point.



This symbol means that you must press the Enter key.

Texts in this typeface are screen outputs from the PC.

Texts in this bold typeface are the entries you make via the keyboard.


Texts in italics indicate commands or menu item.

"Quotation marks" indicate highlighted text and names of chapters."

Features

- Dual processor system (second processor optional)
- Processor: Pentium, 75 to 166 MHz with 16 Kbytes internal cache (First-Level cache)
- Prepared for Pentium OverDrive processor (OverDrive-Ready)
- Neptun EISA PCI chipset
- 72-bit data bus (64-bit data and 8-bit parity)
- 512 Kbytes synchronous Second-Level cache (parity-checked)
- Memory configuration on system board: 8 Mbytes to 512 Mbytes (4 banks)
- 512 Kbytes Flash BIOS
- 4 PCI slots (1 slot shared)
- 4 EISA slots, bus master-capable (1 slot shared)
- Monitor controller connected to PCI bus; graphics processor TSENG ET4000/W32P, 1 Mbyte DRAM video memory
- ASIC for Server Management
- IDE hard disk controller connected to PCI bus for up to two IDE drives (e.g. IDE hard disk drive, ATAPI CD ROM drive))
- Real-time clock/calendar with integrated battery backup
- Floppy disk controller (up to 2.88 Mbytes format)
- Connector for loudspeaker, two fans, remote-On/Off, Floppy disk drive, IDE disk drive, control panel and service
- Monitor port
- Parallel port (ECP- and EPP-compatible)
- Two serial ports (compatible 16550, 16-Byte-FIFO)
- PS/2 mouse port
- PS/2 keyboard port
- CAN bus port for control of external drive cabinets (CAN = Controller Area Network)
- Security functions in BIOS

Ports and connectors

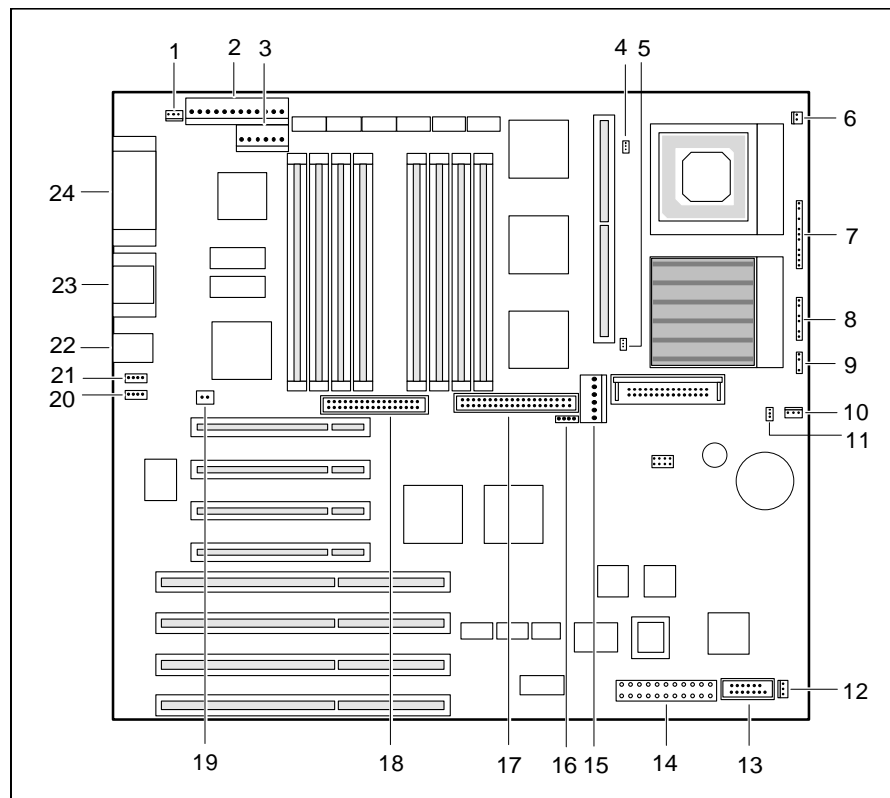

- | | |
|--|---|
| 1 = Connector for soft-off power supply | 14 = Power supply for Primergy 500 series |
| 2 = Power supply 5V and $\pm 12V$ | +5 V, 3,3 V and $\pm 12V$ |
| 3 = Power supply 5V | 15 = Connector for power supply 3,3 V |
| 4 = Temperature sensor for processor 2 | 16 = SCSI LED |
| 5 = Temperature sensor for processor 1 | 17 = IDE drives |
| 6 = ON/OFF switch | 18 = Floppy disk drives |
| 7 = Control panel 1 | 19 = Remote on |
| 8 = Control panel 2 | 20 = CAN bus controller 2 |
| 9 = Loudspeaker | 21 = CAN bus controller 1 |
| 10 = Fan 1 | 22 = Keyboard and mouse |
| 11 = Temperature sensor for air intake | 23 = Serial ports 1 and 2 |
| 12 = Fan 2 | 24 = Parallel port and monitor port |
| 13 = Signaling/auxiliary voltage for Primergy 500 series | |

Possible screen resolutions

The screen resolutions in the following table refer to the monitor controller on the system board.

If you are using an external monitor controller, you will find details of supported screen resolutions in the Operating Manual or Technical Manual supplied with the controller.

Screen resolution	Refresh rate (Hz)	Horizontal-rate (kHz)	Max. number of colors
640x350	70	31,3	16
640x350	84	38	16
640x480	60	31,3	16777216
640x480	75	38	16777216
640x480	90	48	65536
720x400	70	31,5	16
720x400	84	38	16
800x600	56	35	65536
800x600	60	38	65536
800x600	75	47	65536
800x600	90	60	256
1024x768	87 interlaced	36	256
1024x768	60	49	256
1024x768	70	57	256
1024x768	75	60	256
1280x1024	87 interlaced	49	16

Interrupt table



	Assigned IRQ
System clock	IRQ0
Keyboard	IRQ1
not available	IRQ2
Serial port COM2	IRQ3
Serial port COM1	IRQ4
free	IRQ5
Floppy disk drive controller	IRQ6
Parallel port LPT1	IRQ7
Real-time clock (RTC)	IRQ8
monitor controller/free	IRQ9
free	IRQ10
free	IRQ11
Mouse controller	IRQ12
Numeric processor	IRQ13
IDE controller	IRQ14
free	IRQ15

„Assigned IRQ“ = interrupts assigned as shipped



Note that an interrupt cannot be used by two ISA boards or onboard controllers at the same time.

The monitor controller of the system board does not require interrupt IRQ9. If you are using a different controller, it may need interrupt IRQ9.

Important Notes



Be sure to read this page carefully and note the information before you open the PC.

Please note the information provided in the chapter "Safety" in the Operating Manual of the PC.

Incorrect replacement of the lithium battery may lead to a risk of explosion. It is therefore essential to observe the instructions in the section „Add-on modules“ - „Replacing the lithium battery“. The lithium battery must be replaced with an identical battery or a battery type recommended by the manufacturer (CR2032).

Do not throw lithium batteries into the trashcan. Your vendor or dealer or their authorized representatives will take used batteries back free of charge so that they can be recycled or disposed of in the proper manner.

ADVARSEL



Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af samme fabrikat og type. Lever det brugte batteri tilbage til leverandøren.

ADVARSEL



Eksplosjonsfare ved feilaktig skifte av batteri. Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten. Brukte batterier kasseres i henhold til fabrikantens instruksjoner.

VARNING



Eksplosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparatillverkarenfabrikanten. Kassera använt batteri enligt fabrikantens instruktion.

VAROITUS




Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

Important Notes

Connecting cables for peripherals must be adequately insulated to avoid interference.

Modules with electrostatic sensitive devices (ESD) may be identified by labels.

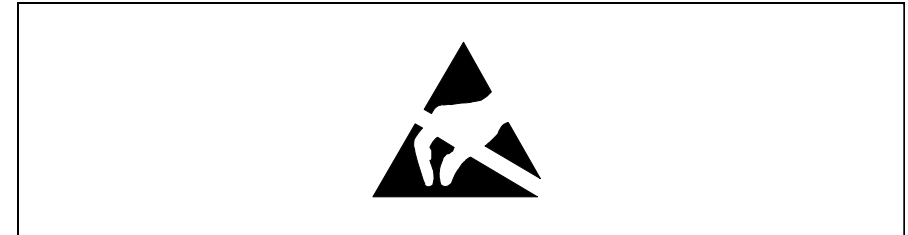

When you handle modules fitted with ESDs, you must observe the following points under all circumstances:

- You must always discharge yourself (e.g. by touching a grounded object) before working.
- The equipment and tools you use must be free of static charges.
- Pull out the power plug before inserting or pulling out modules containing ESDs.
- Always hold modules with ESDs by their edges.
- Never touch pins or conductors on modules fitted with ESDs.

Settings in BIOS Setup

The *BIOS Setup* menu allows you to set your hardware configuration and system functions. In addition, the *BIOS Setup* displays technical information on the PC's configuration.

When it is supplied, the PC is set to factory default settings which you can alter in the *BIOS Setup* menus. Any changes you make take effect as soon as you save the settings and quit the *BIOS Setup*.

The Operating Manual describes how to call the *BIOS Setup* and change menu entries.

You can select the following settings in the *BIOS Setup*:

Main - system functions

Advanced - advanced system configuration

Security - security features

Power - power-management features

Exit - save and quit



The various menus are described below with all setting options. Since the setting options depend on your PC's hardware configuration, some of them may not be offered in the *BIOS setup*.

System settings - Main menu

In the *Main menu* you can set up the following:

- Time (in the field marked *System Time*)
- Date (in the field marked *System Date*)
- Floppy disk drive (in the field marked *Diskette A* or *Diskette B*)
- Hard disk drive (in the submenu of *Hard Disk*)
- System boot (in the submenu of *Boot Options*)
- Display device (in the field marked *Video Display*)

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd.			
Main	Advanced	Security Server Exit	
System Time:	[07:42:19]	Item Specific Help	
System Date:	[08/11/1995]		
Diskette A:	[1.4M]		
Diskette B:	[None]		
▶ Hard Disk 1:	None		
▶ Hard Disk 2:	None		
▶ Boot Options			
Video Display:	[EGA/VGA]		
Base Memory:	640K		
Extended Memory:	63M		
F1 Help	↑↓ Select Item	-/+ Change Values	F9 Setup Defaults
ESC Exit	←→ Select Menu	Enter Select ▶ Sub-Menu	F7 Previous Values

Example for the *Main menu*

Time and Date - System Time / System Date

The *System Time* field and the *System Date* field show the time and date respectively according to the PC. The time is shown in the format *hh:mm:ss* (hours:minutes:seconds) and the date is shown in the format *mm/dd/yyyy* (month/day/year). You can move the cursor between the *System Time* and *System Date* fields (e.g. from hours to minutes) using the tabulator key.



If the settings in the *System Time* and *System Date* fields are frequently wrong when you power up the computer, the lithium battery is dead. Change the battery as described in „Add-on modules“ - „Replacing the lithium battery“).

Floppy disk drive - Diskette A / Diskette B

These two fields are used to specify the type of floppy disk drive installed.


360K, 720K, 1.2M, 1.4M, 2.8M

The entry depends on the floppy disk drive installed.
(Default entry Diskette A : 1.4M).

None A floppy disk drive is not installed.
(Default entry for Diskette B:).

Hard disk drives - Hard Disk 1 and Hard Disk 2

call the submenu to make corresponding settings of the IDE hard disk drive.

 You should change the default settings only if you are connecting an additional IDE drive.

The following description of the setting options for *Hard Disk 1* also applies to *Hard Disk 2*. The default settings depend on the installed drive.

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd. Main		
Hard Disk 1:	850 Mbyte	Item Specific Help
Autotype Hard Disk:	[Press Enter]	
Type:	[User]	
Cylinders:	[1647]	
Heads:	[16]	
Sectors/Track:	[63]	
Write Precomp:	[None]	
Transfer Mode:	[Standard]	
LBA Translation:	[Disabled]	
F1 Help ↓ Select Item -/+ Change Values F9 Setup Defaults ESC Exit ←→ Select Menu Enter Select ► Sub-Menu F7 Previous Values		

Example for the submenu *Hard Disk 1*



Only if you have installed a new unrecorded IDE hard disk drive, you should mark the *Autotype Hard Disk* field.

If you have set the hard disk parameters with *Autotype Hard Disk*, you can only reduce the values.

If you have installed a new unrecorded IDE hard disk drive, you should mark the *Autotype Hard Disk* field and press Enter. This has the effect of setting the optimum values for the IDE hard disk drive. You can change these values if you set the *Type* field to *User*.

Type - Hard Disk Type

This field is used to specify the type of hard disk drive.

None You cannot change the hard disk parameters (*Cylinders, Heads, Sector/Track* and *Write Precomp*). An IDE drive has not been installed.

1 to 39 The hard disk parameters (*Cylinders, Heads* etc.) are preset.

Auto If the hard disk supports this mode, the setup menu reads the hard disk parameters from the disk itself and sets them automatically. You do not need to select the parameters yourself.

User You can enter the hard disk parameters (*Cylinders, Heads* etc.) yourself.
If you have set the hard disk parameters with *Autotype Hard Disk*, you can only reduce the values.

Examples of user-defined entries (IDE drives):

hard disk parameter	hard disk capacity		
	850 Mbyte	1 Gbyte	1,6 Gbyte
Cylinders	1647	2097	3148
Heads	16	16	16
Sectors	63	63	63
Write Precomp	None	None	None

Cylinders, Heads, Sectors/Track, Write Precomp - hard disk parameter

These hard disk parameters are set in accordance with the IDE hard disk drive. If you want to change the hard disk parameters manually, set the *Type* field to *User*.

Transfer Mode

This field specifies the transfer mode for the IDE hard disk drive.

Standard One block is transferred for each interrupt (default entry).

2 Sectors, 4 Sectors, 6 Sectors, 8 Sectors, 16 Sectors

The set number of blocks (sectors) is transferred for each interrupt.

LBA Translation - Addressing

This field enables and disables the LBA (Logical Block Addressing) mode. LBA mode allows you to install and use hard disks with a capacity of more than 528 Mbytes. If a hard disk supports LBA mode, you can use the full capacity of the IDE hard disk.

The default entry depends on the installed IDE hard disk drive. Change the default entries only if you are installing another hard disk drive.



You may only use IDE drives in the LBA mode selected when they were set up. In other words, if you set up a hard disk with LBA mode *disabled*, you may only operate the hard disk with LBA mode *disabled*.

Enabled If the hard disk supports LBA and it has a capacity of more than 528 Mbytes, the BIOS translates the hard disk parameters, allowing the disk's full capacity to be used.

If the hard disk does not support LBA, its parameters are not translated.

Disabled The BIOS uses the hard disk parameters and supports a maximum capacity of 528 Mbytes.

System startup - Boot Options

calls the submenu in which you can select the settings for system startup.

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd. Main	
Boot Options	Item Specific Help
POST Error Halt: [No Halt On Any Errors] Quick Boot: [Disabled]	
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults ESC Exit ←→ Select Menu Enter Select ► Sub-Menu F7 Previous Values	

Example for submenu *Boot Options*

POST Error Halt - Aborting system startup

defines whether the system startup is to be aborted and the system halted when an error is detected.

Halt On All Errors

If the self-test detects an error, system startup is aborted after the self-test, and the system is halted.

No Halt On Any Errors

The system startup is not aborted. The error is ignored as far as possible (default entry).

Quick Boot

can reduce the extent of the self-test and thus accelerate the system startup.

- Enabled* When the PC is switched on, the quick self-test is carried out, in which the floppy disk drives are not checked.
- Disabled* When the PC is switched on, the complete PC configuration is tested (default entry).

Type of monitor - Video Display

This field is used to specify the type of monitor connected.

EGA/VGA, Color 80, Monochrome
Default entry: *EGA/VGA*

Base Memory

This field indicates the size of the available base memory below 1 Mbyte.

Extended Memory

This field indicates the size of the memory above 1 Mbyte.

Making advanced system settings - Advanced menu

Change the default settings only for special applications. Incorrect settings can cause malfunctions.

You can make the following system settings in the *Advanced* menu:

- Internal cache and second-level cache (in the *Cache Memory* submenu)
- Copy BIOS sections to the RAM (in the *Shadow Memory* submenu)
- Ports and controllers (in the *Peripheral Configuration* submenu)
- PCI functionality (in the *PCI Configuration* submenu)
- Additional system settings (in the *Advanced System Configuration* submenu)
- Plug&Play functionality (in the *Plug and Play O/S* field)
- Configuration data (in the *Reset Configuration Data* field)
- Hard disk access (in the *Large Disk Access Mode* field)

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd.			
Main	Advanced	Security	Server Exit
Warning!		Item Specific Help	
Setting items on this menu to incorrect values may cause your system to malfunction.			
<ul style="list-style-type: none"> ▶ Cache Memory ▶ Shadow Memory ▶ Peripheral Configuration ▶ PCI Configuration ▶ Advanced System Configuration 			
Plug & Play O/S:		[No]	
Reset Configuration Data:		[No]	
Large Disk Access Mode:		[DOS]	
F1 Help	↑↓ Select Item	-/+ Change Values	F9 Setup Defaults
ESC Exit	←→ Select Menu	Enter Select	▶ Sub-Menu F7 Previous Values

Example for the *Advanced* menu

Cache Memory

calls the submenu in which you can make the settings for the internal cache (in the processor) and the second-level cache (on the system board).

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd. Advanced	
Cache Memory	Item Specific Help
Cache: [Intern And Extern] Cache Mode: Write Back Cache System BIOS Area: [Enabled] Cache Video BIOS Area: [Enabled] Cache Memory Regions: C800 - CBFF: [Disabled] CC00 - CFFF: [Disabled] D000 - D3FF: [Disabled] D400 - D7FF: [Disabled] D800 - DBFF: [Disabled] DC00 - DFFF: [Disabled]	
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults ESC Exit ←→ Select Menu Enter Select ▶ Sub-Menu F7 Previous Values	

Example for submenu *Cache Memory*

Cache - cache utilization

This field switches the cache on and off. The cache is a buffer to which parts of the main memory and BIOS can be temporarily copied. The PC's performance is higher when the cache is switched on.

You must disable the cache if:

- the access time is too short for older applications
- you are installing *OS/2 Warp*.

Intern Only Only the internal cache is used.

Intern And Extern

Internal (first-level cache) and external cache (second-level cache) are enabled. If there is no external cache, only the internal cache is used (Default entry).

Disabled Internal (first-level cache) and external cache (second-level cache) are disabled. All cache-related settings are then without effect.

Cache Mode

Condition: The *Cache* field must be set to *Intern Only* or *Intern And Extern*.

Cache Mode sets the mode in which the CPU uses the cache. The field is set to *Write Back* and can not be changed.

In write-back mode the CPU writes information to the cache and the information is only written to main memory if necessary. Memory and cache contents are not identical.

Cache System BIOS Area / Cache Video BIOS Area

Condition: The *Cache* field must be set to *Intern Only* or *Intern And Extern*.

Cache System BIOS Area and *Cache Video BIOS Area* lets you specify the BIOS that should be mapped to the cache. Mapping the BIOS to the cache increases system performance.

Enabled The specified BIOS is mapped to the cache (default entry).

Disabled The specified BIOS is not mapped to the cache.

Cache Memory Regions

Condition: The *Cache* field must be set to *Intern Only* or *Intern And Extern*.

Cache Memory Regions lets you specify the BIOS ROM areas that should be mapped to the cache. Mapping the BIOS ROM areas to the cache increases system performance.

Enabled The relevant ROM area is mapped to the cache.

Disabled The relevant ROM area is not mapped to the cache (default entry).

ROM areas in the RAM - Shadow Memory

calls the submenu in which you can specify which parts of the ROM (Read Only Memory) are to be copied to the faster RAM (Random Access Memory) at system startup.

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd. Advanced	
Shadow Memory	Item Specific Help
System Shadow: Enabled Video Shadow: [Enabled] Shadow Memory Regions: C800 - CBFF: [Disabled] CC00 - CFFF: [Disabled] D000 - D3FF: [Disabled] D400 - D7FF: [Disabled] D800 - DBFF: [Disabled] DC00 - DFFF: [Disabled]	
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults ESC Exit ←→ Select Menu Enter Select ► Sub-Menu F7 Previous Values	

Example for submenu *Shadow Memory*

System Shadow

This field is always *Enabled*, because the System BIOS is automatically copied to the faster RAM.

Video Shadow

This field allows you to copy the video BIOS to fast RAM. Copying the video BIOS to fast RAM increases system performance.

Enabled The video BIOS is copied to fast RAM (default entry).

Disabled The video BIOS is not copied to fast RAM. This setting is not effective unless an external monitor controller is used.

Shadow Memory Regions - ROM areas

Shadow Memory Regions allows you to copy ROM areas to fast RAM. Copying ROM areas to fast RAM increases system performance.

Enabled The ROM area is copied to fast RAM.

Disabled The ROM area is not copied to fast RAM (default entry).

Ports and controller - Peripheral Configuration



Use the EISA configuration program (ECU) to make settings at the ports and controllers.

Peripheral Configuration calls the submenu in which you can set the ports and controllers.

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd. Advanced	
Peripheral Configuration	Item Specific Help
Serial 1: [Auto] Serial 2: [Auto] Parallel: [Auto] Parallel Mode: [Printer] Diskette Controller: [Enabled] Hard Disk Controller: [Enabled] Mouse Controller: [Enabled]	
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults ESC Exit ←→ Select Menu Enter Select ► Sub-Menu F7 Previous Values	

Example for submenu *Peripheral Configuration*

Serial 1 / Serial 2 - Serial ports

This field selects the address and the interrupt used to access the corresponding serial port.

3F8h, IRQ4, 2F8h, IRQ3, 3E8h, IRQ4, 2E8h, IRQ3,

The serial port is set to the shown address and interrupt.

Auto The serial port is automatically set to the next available combination (address, interrupt) (Default entry).

Disabled The serial port is disabled. The corresponding interrupt and address are free.

Parallel - parallel port

This field selects the address and the interrupt used to access the parallel port.

378h, IRQ7, 278h, IRQ5, 3BCh, IRQ7

The parallel port is set to the shown address and interrupt.

Auto The parallel port is automatically set to the next available combination (address, interrupt) (default entry).

Disabled The parallel port is disabled.

Parallel Mode

This field is used to specify whether the parallel port is to be used as a bi-directional input/output port or just as an output port. *ECP* and *EPP* transfer modes allow faster transfer rates of 2 and 2.4 Mbytes/s. These modes will only work with peripheral devices which support them. The field *Parallel* must be set to *378h* or *278h*

Printer The port functions as an output port only (default entry)

Bidirection Data can be transferred in both directions across the port.

EPP Fast transfer mode (up to 2 Mbytes/s), can output and receive data. Requires a peripheral device which supports the EPP (Enhanced Parallel Port) transfer mode.

ECP Fast transfer mode (up to 2.4 Mbytes/s), can output and receive data. Requires a peripheral device which supports the ECP (Enhanced Capability Port) transfer mode.

Diskette Controller

This field is used to enable and disable the built-in floppy disk controller on the system board.

Enabled The floppy disk controller is enabled - IRQ 6 is used. (default entry).

Disabled The floppy disk controller is disabled - IRQ 6 is free.

Hard Disk Controller

This field allows you to enable and disable the built-in IDE hard disk controller. The associated interrupt (IRQ 14) will only be available if no hard disk is physically connected.

Enabled The IDE hard disk controller is enabled (default entry).

Disabled The IDE hard disk controller is disabled.

Mouse Controller

This field is used to enable and disable the built-in mouse controller on the system board.

Enabled The mouse controller is enabled - IRQ 12 is used (default entry).

Disabled The mouse controller is disabled - IRQ 12 is free.

PCI Configuration



Use the EISA configuration program (ECU) to make settings at the VGA/PCI interrupts.

PCI Configuration calls the submenu in which you can make the settings for the PCI slots. The submenu has a scroll bar so that you can also show the settings for the PCI slots 3 and 4.

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd. Advanced	
PCI Configuration	Item Specific Help
PCI Interrupt Mapping INTA#: [Auto] PCI Interrupt Mapping INTB#: [Auto] PCI Interrupt Mapping INTC#: [Auto] PCI Interrupt Mapping INTD#: [Auto] VGA Interrupt: [Disabled] PCI Device, Slot #1 Default Latency Timer: [Yes] Latency Timer: [0040] PCI Device, Slot #2 Default Latency Timer: [Yes] Latency Timer: [0040]	
F1 Help ↓ Select Item -/+ Change Values F9 Setup Defaults ESC Exit ←→ Select Menu Enter Select ► Sub-Menu F7 Previous Values	

Example for submenu *PCI Configuration*

PCI Interrupt Mapping INTx# - Assignment of the PCI interrupts

defines which PCI interrupt is switched to which ISA interrupt. For a change to take effect, you must switch your system off and then on again when the *Setup-BIOS* has terminated.

With multifunctional PCI boards, all PCI interrupts can be used. The controllers on the system board do not need any PCI interrupts.

If you use a setting other than *Auto*, the Plug&Play functionality of the system BIOS for PCI boards is deactivated.

The PCI interrupts INTA#, INTB#, INTC# and INTD# are assigned as follows for PCI boards that require only a single PCI interrupt:

PCI slot 1 = INTA#, PCI slot 2 = INTB#,
 PCI slot 3 = INTC#, PCI slot 4 = INTD#,

Auto The PCI interrupts are assigned automatically in accordance with the Plug&Play guidelines (default entry).

Disabled No ISA interrupt is assigned to the PCI interrupt.

IRQ03, IRQ04, IRQ05, IRQ06, IRQ07, IRQ09, IRQ10, IRQ11, IRQ12, IRQ14, IRQ15
 The PCI interrupt is switched to the selected ISA interrupt. You may not select an ISA interrupt that is used by a component on the system board (e.g. controller) or an ISA board.

VGA Interrupt - Assigning PCI-VGA interrupt

assigns an interrupt to the monitor controller. The monitor controller on the system board does not require an interrupt and can be operated in *Disabled* mode. If you have not assigned a different interrupt using *PCI Interrupt Mapping*, then IRQ9 is assigned.

Enabled The interrupt is assigned to the monitor controller.

Disabled No interrupt is assigned to the monitor controller (default entry).

PCI Device, Slot #n: Default Latency Timer

specifies the lowest number of clock cycles in which a PCI master module can be active at the PCI bus. *n* stands for the number of the PCI slot. For the change to take effect, you must switch your PC off and then on again after the *Setup-BIOS* has terminated.

Yes The value predefined by the PCI module is accepted. The entry in the corresponding field for *PCI Device, Slot #n: Latency Timer* is ignored. (Default entry)

No The value predefined by the PCI module is ignored. The value set in the corresponding field for *PCI Device, Slot #n: Latency Timer* determines the number of clock cycles.

PCI Device, Slot #n: Latency Timer

Condition: the corresponding field for *PCI Device, Slot #n: Default Latency Timer* must be set to *No*.

The field defines the lowest number of clock cycles in which a burst can be transferred on the PCI bus. *n* stands for the number of the PCI slot.

0000h to 0280h Number of clock cycles (default entry = 0040h).

Additional system settings - Advanced System Configuration

calls the submenu in which you can make additional system settings.

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd. Advanced	
Advanced System Configuration	Item Specific Help
APIC: [Enabled] Video Subsystem: [Auto]	
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults ESC Exit ←→ Select Menu Enter Select ► Sub-Menu F7 Previous Values	

Example for the submenu *Advanced System Configuration*

APIC - Multiprocessor Interrupt Controller

defines the functionality of the APIC (Advanced Interrupt Controller) in the processor.

Enabled The second processor (if present) can be used by multiprocessor operating systems to enhance performance (default entry).

Disabled The second processor cannot be used by the operating system.



An operating system must always be operated with the settings as installed.
Novell NetWare can be operated only with the setting *Disabled*.

Video Subsystem - Monitor controller

defines settings for the monitor controller. If you are using your own monitor controller and are encountering problems, this setting may be the cause.

Auto default entry

3C3h, 46E8h further possible settings



Have settings changed only by a service technician or have the service technician instruct you in how to make changes.

Plug&Play functionality - Plug & Play O/S

defines the Plug&Play functionality. Plug&Play means that inserted modules are automatically recognized and installed if they support Plug&Play.

Yes The operating system (e.g. Windows 95) is responsible for some of the Plug&Play functions. Select this setting only if the operating system supports Plug&Play.

No The system BIOS is responsible for the complete Plug&Play functionality (default entry).

Reset Configuration Data

specifies whether or not the configuration data are reset and reinitialized when the system is booted.

- Yes* After the system is booted, the old configuration data are reset and the entry in this field is set to *No*. The current configuration data are ascertained by means of the Plug&Play functionality. The installed boards and drives are initialized with these data. Non-Plug&Play components must be entered manually.
- No* After the system is started, the Plug&Play functionality ascertains the current configuration data and uses this data to initialize the installed boards and drives. The configuration data of non-Plug&Play components are not reset (default entry).

Hard disk access - Large Disk Access Mode

specifies the type of hard disk access for large hard disks (more than 1024 cylinders, 16 heads).

- DOS* the operating system uses MS-DOS-compatible hard disk accesses (default entry).
- Other* If the operating system uses hard disk accesses which are not MS-DOS-compatible (e.g. Novell, SCO Unix).

Setting up the security features - Security Menu

You can set up the following security features in the *Security* menu:

- Protecting BIOS Setup (in the field marked *Set Setup Password*)
- Protecting BIOS of add-on modules (in the field marked *Setup Password Lock*)
- Protecting system boots (in the field marked *Set System Password*)
- Locking input devices (in the field marked *System Password Mode*)
- Prevention of system boots from floppy disk (in the field marked *System Load*)
- Prevention of write operations to floppy disk (in the field marked *Diskette Write*)
- Write protection for BIOS Setup Flash chip (in the field marked *Flash Write*)
- Switching off by software (in the field marked *Soft Power Off*)
- Remote Power On (in the field marked *Remote Power On*)

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd.		
Main Advanced Security Server Exit		
Setup Password	Not Installed	Item Specific Help
System Password	Not Installed	
Set Setup Password:	[Press Enter]	
Setup Password Lock:	[Standard]	
Set System Password:	[Press Enter]	
System Password Mode:	[System]	
System Load:	[Standard]	
Setup Prompt:	[Enabled]	
Diskette Write:	[Enabled]	
Flash Write:	[Enabled]	
Soft Power Off:	[Enabled]	
Remote Power On:	[Enabled]	
F1 Help	↓ Select Item	-/+ Change Values
ESC Exit	↔ Select Menu	Enter Select ▶ Sub-Menu
		F9 Setup Defaults
		F7 Previous Values

Example for the *Security* menu

Setup Password / System Password

These fields indicate whether the appropriate password is installed or not.

Set Setup Password

This field enables you to install the setup password. The setup password prevents unauthorized callup of the *BIOS setup*.

Mark the field and press the Return key. You can then enter and confirm the setup password (see also the PC Operating Manual).

Setup Password Lock

specifies the effect of the Setup Password. The setting in this field takes effect as soon as a Setup Password has been installed.

Standard Setup Password prevents unauthorized calls of the *BIOS Setup*. (Default entry).

Extended The Setup Password prevents unauthorized calls of the *BIOS Setup* and locks the keyboard when the PC is initialized. This prevents unauthorized access to settings for installed boards with a BIOS of their own. Access to the BIOS of the board is only possible if the Setup Password is entered during board initialization. No prompt to enter the password appears on screen.

System Password - Set System Password

Condition: the setup password must be installed.

This field enables you to install the system password. The system password prevents unauthorized callup of the system.

 
Mark the field and press the Return key. You can then enter and confirm the system password (see also the PC Operating Manual).

System Password Mode

specifies the effect of the system password. The setting in this field becomes effective as soon as a system password is installed.

System When the PC is started, the system password enables the operating system to be booted (default entry).

Keyboard When the PC is started, the operating system is booted and the keyboard and mouse are locked. The system password unlocks the keyboard and mouse.

 No prompt to enter the password appears on screen.

System Load

This field specifies the drive from which the operating system can be loaded.

Standard The operating system can be loaded from floppy disk or hard disk (default entry).

Diskette Lock The operating system can only be loaded from hard disk.

Setup Prompt

This field specifies whether the message `Press F2 to enter SETUP` is displayed when the PC is rebooted.

Enabled The message `Press F2 to enter SETUP` is displayed when the system is started (default entry).

Disabled The message is not displayed.

Write protection for floppy disk drive - Diskette Write

This field is used to define whether floppy disks can be written or deleted in the floppy disk drive.

Enabled Read, write and delete floppy disks is possible, if the switch 6 of the switch block is set to *OPEN* (default setting).

Disabled Floppy disks can only be read.

Write protection for System BIOS - Flash Write

This field can assign write protection to the System BIOS.

Enabled The System BIOS can be written to or deleted, provided switch 5 of the switch block is set to *OPEN*. BIOS update from floppy disk is possible (default entry).

Disabled The System BIOS can neither be written to nor deleted. BIOS update from floppy disk is not possible

Soft Power Off

This field specifies whether the PC can be switched off with a program (e.g. SWOFF).

Enabled The PC can be switched off with a program (default entry).

Disabled The PC cannot be switched off with a program.

Remote Power On

specifies whether the PC can be switched on from an external device (e.g. fax).

Enabled The PC can be switched on from an external device (default entry).

Disabled The PC cannot be switched on from an external device.

Set Server Management - Server Menu

You can set the following functions in the *Server* menu:

- Server management mode (in the field marked *Server Management*)
- Boot timeout of the operating system (in the field marked *O/S Boot Timeout*)
- Boot delay (in the field marked *ASR&R Boot Delay*)
- Number of attempts to boot the operating system (in the field marked *Boot Retry Counter*)
- Diagnostic system (in the field marked *Start Diagnostic System*)
- Time monitoring (in the field marked *Hardware Watchdog*)
- Processor status (in the fields marked *CPU 0 Status* and *CPU 1 Status*)
- Error transmission (in the field marked *Pager Configuration*)
- VT100 functionality (in the field marked *VT100 Configuration*)

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd.		Item Specific Help
Main Advanced Security Server Exit		
Server Management:	[Enabled]	
O/S Boot Timeout:	[Disabled]	
ASR&R Boot Delay:	[3 min]	
Boot Retry Counter:	[3]	
Start Diagnostic System:	[Disabled]	
Hardware Watchdog:	[Enabled]	
CPU 0 Status:	[Enabled]	
CPU 1 Status:	[Enabled]	
▶ Pager Configuration		
▶ VT100 Configuration		
F1 Help ↓ Select Item -/+ Change Values F9 Setup Defaults		
ESC Exit ←→ Select Menu Enter Select ▶ Sub-Menu F7 Previous Values		

Example for the *Server* menu

Server Management

specifies the operating mode of the server management BIOS.

Enabled Activates the server management functionality of the system BIOS. This setting is required to enable a server management process of the operating system to communicate with the system BIOS (default entry).

Disabled The server management functionality is deactivated.

O/S Boot Timeout

Condition: Novell NetWare or Windows NT operating system, ServerMan program

O/S Boot Timeout specifies whether a system reboot is performed when the operating system is not able to establish a connection with the server management BIOS within a defined period after system booting. The server management BIOS assumes that there is a boot error and initiates a reboot.



If the operating system does not have a server management process, you must select the setting *Disabled* so that the server management BIOS does not erroneously initiate a reboot. The server management process (agent) is installed using the *ServerMan* program.

2 min, 5 min, 15 min, 30 min, 60 min, 120 min, 240 min

After the displayed timeout period has expired, the system is rebooted if no connection with a server management process has been established.

Disabled No timeout takes place (default entry).

ASR&R Boot Delay

Condition: *Enabled* must be set in the *Server Management* field.

Specifies the boot delay after shutdown due to a fault (e.g. excessively high temperature). The system is rebooted after the set wait period has expired (default entry: *3 min*).

Further possible values are: *1 min, 2 min, 5 min, 7 min, 10 min, 15 min* and *20 min*

Boot Retry Counter

Condition: *Enabled* must be set in the *Server Management* field.

Specifies the maximum number of attempts to boot the operating system. After the time set in *O/S Boot Timeout* has expired, each failed retry is followed by a system reboot. Other critical system errors also result in system reboot and in counter decrementing. After the last retry the system is definitively shut down or a diagnostic system started (if still possible and *Enabled*).

0 to 7 Number of possible retries (default entry: *3*).

Start Diagnostic System

Condition: *Enabled* must be set in the *Server Management* field.

Specifies what is to happen after the number of system reboots defined in *Boot Retry Counter*.

Enabled The test and diagnostic system is started from the first IDE hard disk drive.

Disabled The test and diagnostic system is not started (default entry).

Hardware Watchdog

Condition: *Enabled* must be set in the *Server Management* field.

Specifies whether the system performs a reboot if the server management BIOS cannot reset a hardware counter at defined time intervals (system hangs).

Enabled System reboot is performed after the time interval has passed (default entry).

Disabled No system reboot is performed after the time interval has passed.

CPU 0 Status / CPU 1 Status

Condition: two processors must be installed.

Specifies if the processor can be used or not. You should disable a processor only if it has reported an internal malfunction. The malfunction is indicated in the error log that you can view using the *SCU* or *ServerMan* program.

Enabled The processor can be used by the operating system (default entry).

Disabled The processor cannot be used by the operating system.

i Even if only one processor is installed, both statuses are always displayed (*CPU 0 Status* and *CPU 1 Status*).

Pager Configuration

calls the submenu in which you can make the settings for remote transmission of errors by means of a pager. The server management BIOS can send a message (server number) via an attached modem (external: serial 1, serial 2; internal: modem board) to a pager if a system error occurs. Further settings for remote error transmission must be made by a server management process of the operating system or using *SCU*. The telephone number of the pager server, the subscriber number and the modem initialization sequences can also be entered there.

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd. Server	
Pager Configuration	Item Specific Help
Pager: [Disabled] Pager Interface Addr.: 3E8h Server Number: [0] Baud Rate: 2400 Com. Setting: 8/1, No Parity	
F1 Help ↓ Select Item -/+ Change Values F9 Setup Defaults ESC Exit ←→ Select Menu Enter Select ► Sub-Menu F7 Previous Values	

Example for the submenu *Pager Configuration*

Pager

enables or disables the pager.

Enabled In the event of an error a message (server number) is sent to a pager. A modem must be attached that can be accessed at the address set in the field *Pager Interface Addr.*.

Disabled In the event of an error no message is sent to a pager (default entry).



The modem board must be set so that it can be accessed via the pager interface address (see documentation on the modem board). On external modems attached via *Serial 1* or *Serial 2*, the pager interface address must correspond to the setting for *Serial 1* or *Serial 2* on the screen page *Advanced*.

Pager Interface Addr.

Condition: *Enabled* must be set in the field *Pager*.

Defines the I/O address used to communicate with the modem via a serial interface.

3F8h, 2F8h, 3E8, 2E8h

The specified I/O address is used for communication with the modem. The serial port at which the modem is attached must be set to the same address (default entry: *3E8h*).

Server Number

Condition: *Enabled* must be set in the field *Pager*.

Specifies the number used to uniquely identify the server in a pager message.

0 to 65535 Identification number of the server (default entry: *0*)

Baud Rate

Condition: *Enabled* must be set in the field *Pager*.

Indicates the baud rate of the serial port at which the modem for remote error transmission is attached.

2400 Error transmission is performed at 2400 baud. This value cannot be changed.

Com. Setting

Condition: *Enabled* must be set in the field *Pager*.

Indicates the data format used for error transmission.

8/1, No Parity Error transmission is performed with 8 data bits, 1 stop bit and without a parity check. The values cannot be changed.

VT100 Configuration

calls the submenu in which you make the settings for operating a VT100-compatible terminal on the system. A terminal can be connected directly at the server system via a serial port; screen output can be directed to this terminal in parallel to the attached monitor. Keyboard input at the terminal is likewise sent to the system and treated like input at the attached server keyboard. The BIOS setup of the system, for example, can be called up and modified at the terminal.



It is not possible to enter a system password in *Keyboard Mode* at the VT100 terminal.

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd.	
Server	
VT100 Configuration	Item Specific Help
VT100: [Disabled] VT100 Interface Addr.: 3F8h VT100 Interface IRQ: IRQ 4 Baud Rate: 9600 Com. Setting: 8/1, No Parity	
F1 Help	↓ Select Item -/+ Change Values F9 Setup Defaults ESC Exit ←→ Select Menu Enter Select ► Sub-Menu F7 Previous Values

Example for submenu *VT100 Configuration*

VT100

enables or disables VT100 operating mode.

Enabled VT100 operating mode is enabled.

Disabled VT100 operating mode is disabled (default entry).

VT100 Interface Addr.

Condition: *Enabled* must be set in the field *VT100*.

Defines the I/O address for communication with the terminal.

3F8h, 2F8h, 3E8, 2E8h

The specified I/O address is used for communication with the terminal. The serial port at which the terminal is connected must be set to the same address (default entry: *3F8h*).

VT100 IRQ

Condition: *Enabled* must be set in the field *VT100*.

Defines the interrupt for communication with the terminal.

IRQ3, IRQ4, IRQ5, IRQ6, IRQ7

The specified IRQ is used for communication with the terminal. The serial port at which the terminal is connected must be set to the same IRQ (default entry: *IRQ3*).

Baud Rate

Condition: *Enabled* must be set in the field *VT100*.

Specifies the baud rate for communication with the terminal.

1200, 2400, 4800, 9600, 19200

Data communication with the terminal is performed at the rate set (default entry: *9600*).

Com. Setting

Condition: *Enabled* must be set in the field *VT100*.

Indicates the data format used for terminal emulation.

8/1, No Parity The connection is established with 8 data bits, 1 stop bit and without a parity check. The values cannot be changed.

Exiting BIOS Setup - Exit menu

In the *Exit* menu, you can save your settings and exit BIOS Setup.

Phoenix BIOS Setup Copyright 1985-95 Phoenix Technologies Ltd.			
Main	Advanced	Security	Server Exit
Save Changes & Exit Discard Changes & Exit Get Default Values Load Previous Values Save Changes		Item Specific Help	
F1 Help ESC Exit	↓ Select Item ←→ Select Menu	-/+ Change Values Enter Select ▶ Sub-Menu	F9 Setup Defaults F7 Previous Values

Example for menu *Exit*

Save Changes & Exit

saves the settings you have made and exits BIOS Setup.

Discard Changes & Exit

exits BIOS Setup without saving the new settings.

Get Default Values

reverts all settings to the default values.


Load Previous Values

sets the values which were in effect when BIOS Setup was called.

Save Changes

saves the settings you have made without exiting the BIOS Setup.

Settings on the system board

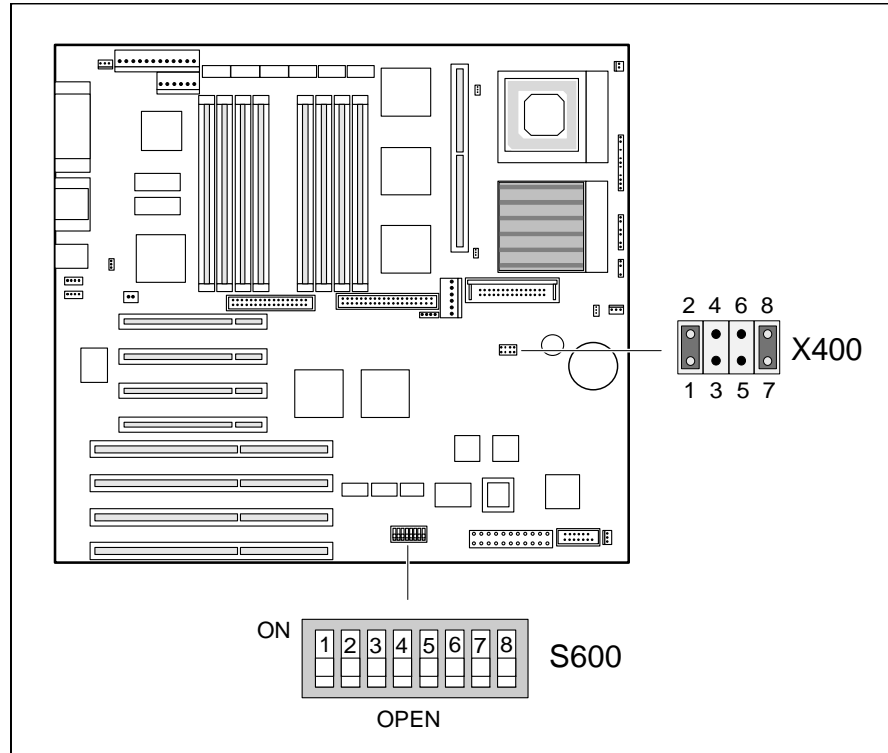

- X400 = Processor type
- S600/1 = System BIOS recovery
- S600/2 = Password protection for BIOS setup
- S600/3 = for future use
- S600/4 = for future use
- S600/5 = System BIOS write-protection
- S600/6 = Floppy disk write-protection
- S600/7 = reserved (do not change setting *OPEN*)
- S600/8 = for future use

Settings on the system board

Setting processor type - Jumper X400

The setting depends on the processor

The jumpers may only be set as specified in the table below for the particular processor used.

processor	jumper 1 - 2	jumper 3 - 4	jumper 5 - 6	jumper 7 - 8
100 MHz	not inserted	inserted	not inserted	not inserted
P54C 133 MHz	not inserted	inserted	inserted	not inserted
P54C 166 MHz	not inserted	inserted	inserted	inserted

System BIOS recovery - Switch 1

Switch 1 in switch block S600 permits recovery of the system BIOS after an errored update. To recover the BIOS you need a "recovery diskette" (please contact our customer service).

OPEN The system boots with the system BIOS of the system board (default entry).

ON The system boots from the recovery diskette in drive A. Recovery of the system BIOS is performed.



If switch 1 is set to *ON*, the setting of switch 5 has no relevance.

Write protection for system BIOS - Switch 5

Switch 5 in switch block S600 permits or prevents an update of the system BIOS. In order to perform an update of the system BIOS, the write protection for the system BIOS must also be removed in the *BIOS-Setup* (in the *Security* menu set the field for *Flash Write to Enabled*). Please contact our customer service if you want to perform a BIOS update.

OPEN The system BIOS can be overwritten (default entry).

ON The system BIOS is write-protected.

Write protection for floppy disk drive - Switch 6

Switch 6 specifies whether floppy disks can be written and deleted in the diskette drive when the write protection for the drive has been removed in the *BIOS-Setup* (in the *Security* menu set the field for *Diskette Write to Enabled*).

OPEN Floppy disks can be read, written and deleted (default entry).


ON Write protection for the diskette drive is active.

Switch 3, 4, 7 and 8

The switch 7 in the switch block S600 is reserved. Do not change the setting (*OPEN*)! The switches 3, 4 and 8 are for future use.



Add-on modules on the system board

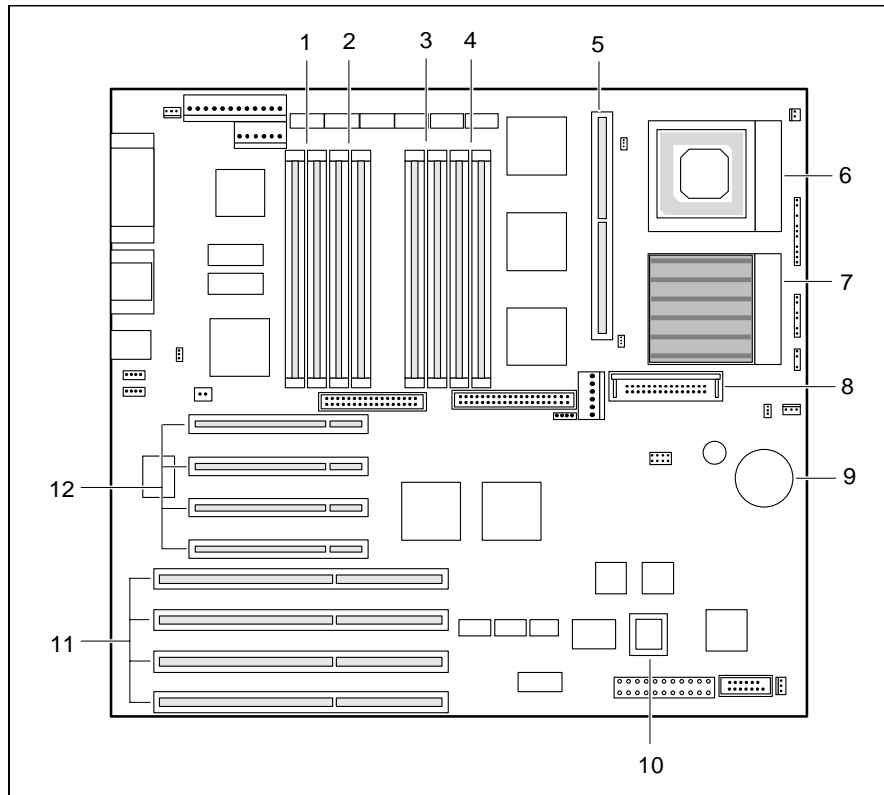


- | | |
|--|--|
| 1 = Locations bank 3 for main memory | 7 = First processor/OverDrive processor |
| 2 = Locations bank 2 for main memory | 8 = Voltage converter |
| 3 = Locations bank 1 for main memory | 9 = Lithium battery |
| 4 = Locations bank 0 for main memory | 10 = Flash BIOS |
| 5 = Location for second-level cache module | 11 = EISA slots (from below: 1, 2, 3, 4) |
| 6 = Second processor (optional) | 12 = PCI slots (from above: 1, 2, 3, 4) |

Upgrading main memory

The system board has eight slots for memory modules, divided into four memory banks (bank 0 to bank 3). Memory modules of 4, 8, 16, 32 and 64 Mbytes can be used for expanding memory. A memory bank must always be complete and equipped with modules of the same capacity. In other words, a memory bank may have a capacity of 8, 16, 32, 64 or 128 Mbytes and a maximum capacity of 512 Mbytes. Only fast memory modules with an access time of 70 ns or less may be used. The equipping sequence of the four memory banks is arbitrary, i.e. there may be unequipped banks between equipped banks.


i The EISA configuration program (ECU) must be run after a change of memory configuration, and the new configuration must be saved.

Installing memory modules

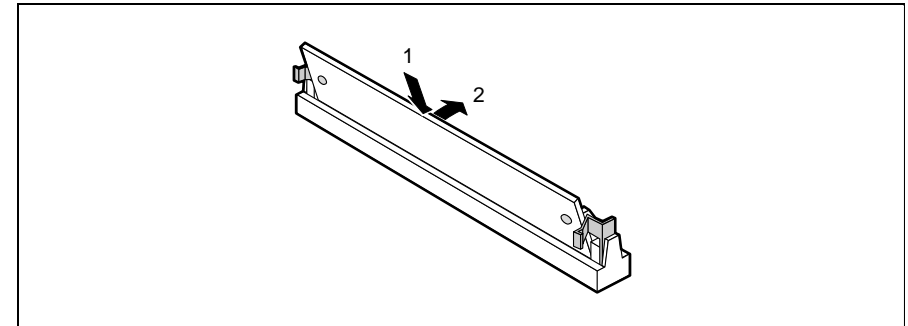

- ▶ Insert the memory module at an angle into the appropriate location (1). Ensure that the key notch and the two holes are correctly aligned with the retaining pins.
- ▶ Tilt the memory module upwards until it snaps into place vertically (2).


Removing a memory module

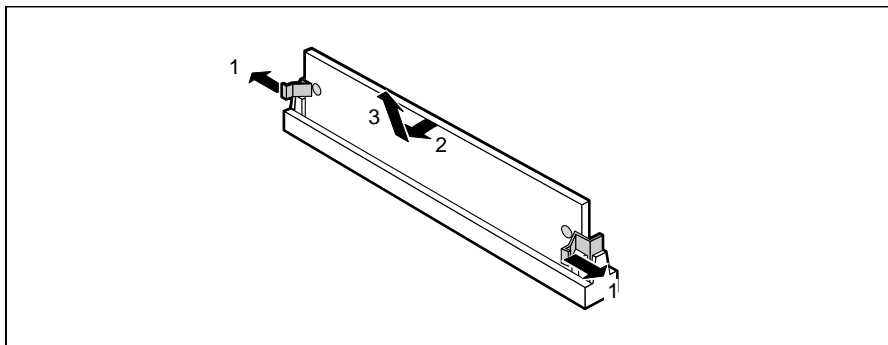

- ▶ Carefully push the retaining clips at each end of the module outwards (1).
- ▶ Tilt the memory module to the side (2) and withdraw it at an angle from the location (3).

Replacing the processor


The system board can be upgraded with a faster standard processor, with a second processor or with an OverDrive processor.

- 


The second processor must have the same clock rate as the first. A suitable multiprocessor operating system must be used if dual operation is required.

The second processor is installed in the free socket provided.

The OverDrive processor is installed in the socket for the first processor after removing the old processor. The OverDrive processor cannot be operated with a second processor (dual mode). A second processor must therefore be removed before using the OverDrive processor.

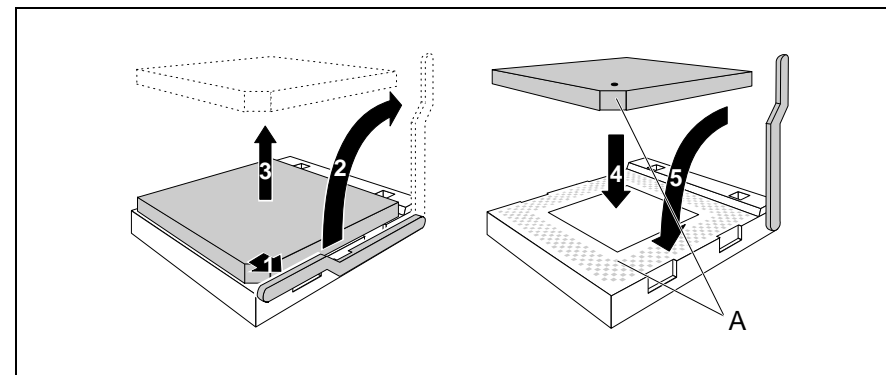

- ▶ Push the lever in the direction of the arrow (1) and lift it as far as it will go (2).
- ▶ If you replace one processor by another, disconnect the connector of the temperature monitoring unit of the processor from the system board and lift the processor out of its socket (3).
- ▶ Insert the new processor in the socket so that the mark on the upper side of the processor matches the mark (A) on the socket (4).


- 

The mark on the processor may be covered by a heat sink. In this case let yourself be guided by the marking in the rows of pins on the underside of the processor.

- ▶ Push the lever back down so that it snaps into place (5).
- ▶ Reconnect the connector of the temperature monitoring unit of the processor to the system board.
- ▶ Insert the jumpers in jumper block X400 as required by the installed processor.

Upgrading the Second-level cache

The system board has a socket for second-level cache. You can install a second-level cache module with 512 Kbytes.

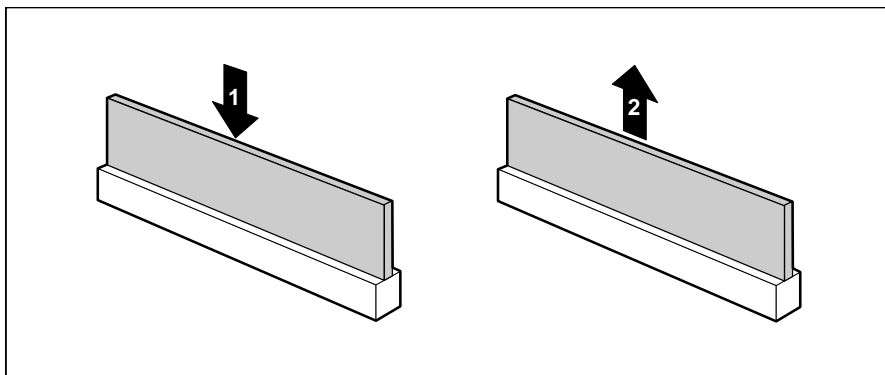

1 = Installing second-level cache

2 = Removing second-level cache

- ▶ Insert the second-level cache module into the mounting location, making sure it snaps into place (1).



In order to make best use of the second-level cache, you must set the *Cache* field in the *Advanced / Cache Memory* menu of the *BIOS-Setup* to *Intern And Extern*. You can enhance the performance in the same menu by setting the fields for *Cache System BIOS Area* and *Cache Video BIOS Area* to *Enabled*, and copying ROM parts into the cache with *Cache Memory Regions*.

Removing second-level cache modules

- ▶ Pull the second-level cache module out of the mounting location in the direction of the arrow.

Replacing the lithium battery




Incorrect replacement of the lithium battery may lead to a risk of explosion.

The lithium battery must be replaced with an identical battery or a battery type recommended by the manufacturer (CR2032).

Do not throw lithium batteries into the trashcan. Your vendor or dealer or their authorized representatives will take used batteries back free of charge so that they can be recycled or disposed of in the proper manner.

Make sure that you insert the battery the right way round. The plus pole must be on the top!

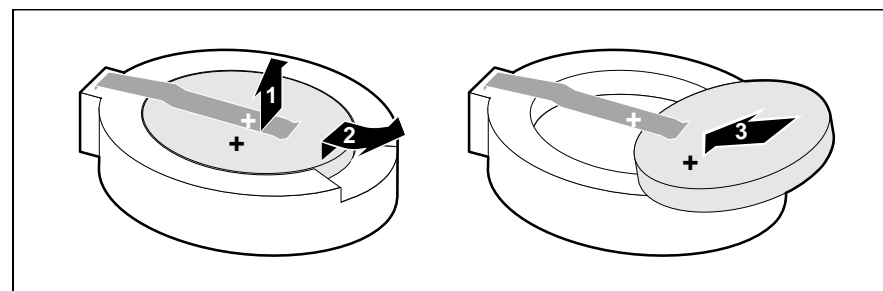

- ▶ Lift the contact (1) a few millimeters and remove the battery from its socket (2).
- ▶ Insert a new lithium battery of the same type in the socket (3).
- ▶ Set the date and the time in the BIOS setup.

Error messages

This chapter contains error messages generated by the system board.

nn Stuck Key

Release the key on the keyboard (nn is the hexadecimal code for the key).

Diskette drive A error

Diskette drive B error

Check the entry for the diskette drive in the *Main* menu and the entry for the diskette drive controller in the *Advanced - Peripheral Configuration* menu of the *BIOS Setup*. Check the connections to the diskette drive.

Extended RAM Failed at offset: nnnn

Failing Bits: nnnn

System RAM Failed at offset: nnnn

Switch the PC off and on again. If the message is still displayed, please contact your sales office or customer service.

Failure Fixed Disk 0

Failure Fixed Disk 1

Fixed Disk Controller Failure

Check the entry for the hard disk drive in the *Main* menu and the entry for the IDE hard disk controller in the *Advanced - Peripheral Configuration* menu of the *BIOS Setup*. Check the connections to the hard disk drive.

Fail Safe Timer NMI

Software NMI

Expansion Board was disabled

Switch the system off and check that the EISA boards are firmly seated and functioning correctly. If this message appears each time you switch the system on, please contact your sales office or customer service.

Incorrect Drive A - run SETUP

Incorrect Drive B - run SETUP

Correct the entry for the diskette drive in the *Main* menu of the *BIOS Setup*.

Error messages

Invalid configuration information

Invalid EISA configuration storage

Configuration error for slot

In the *Advanced* menu of the *BIOS-Setup* set the entry for *Reset Configuration Data* to *Yes*. Start the EISA configuration program (ECU) and reconfigure the system. If this message continues to appear each time you switch the system on, please contact your sales office or customer service.

Invalid NVRAM media type

Switch the PC off and on again. If the message is still displayed, please contact your sales office or customer service.

Keyboard controller error

Connect another keyboard. If the message is still displayed, please contact your sales office or customer service.

Keyboard error

Check that the keyboard is connected properly.

Monitor type does not match CMOS - RUN SETUP

Correct the entry for the monitor type in the *Main* menu of the *BIOS Setup*.

Operating system not found

Check the entry for the hard disk drive and the diskette drive in the *Main* menu of the *BIOS Setup*.

Parity Check 1

Parity Check 2

Switch the PC off and on again. If the message is still displayed, please contact your sales office or customer service.

Previous boot incomplete - Default configuration used

By pressing function key **F2** you can check and correct the settings in *BIOS Setup*. By pressing function key **F1** the PC starts with incomplete system configuration. If the message is still displayed, please contact your sales office or customer service.

Real time clock error

Call the *BIOS Setup* and enter the correct time in the *Main* menu. If the message is still displayed, please contact your sales office or customer service.

System battery is dead - Replace and run SETUP

Replace the lithium battery on the system module and redo the settings in the BIOS Setup.

System Cache Error - Cache disabled

Switch the PC off and on again. If the message is still displayed, please contact your sales office or customer service.

System CMOS checksum bad - run SETUP

Call the *BIOS Setup* and correct the previously made entries or set the default entries.

System timer error

Switch the PC off and on again. If the message is still displayed, please contact your sales office or customer service.

Messages d'erreur

Ce chapitre vous donne les messages d'erreur générés par le BIOS du système.

nn Stuck Key

Libérez la touche du clavier (*nn* est le code hexadécimal de cette touche).

Diskette drive A error

Diskette drive B error

Vérifiez dans le menu *Main* du *BIOS setup* l'entrée correspondant au lecteur de disquettes et dans le menu *Advanced - Peripheral Configuration* du *BIOS setup* l'entrée correspondant au contrôleur du lecteur de disquettes. Vérifiez les connecteurs du lecteur de disquettes.

Extended RAM Failed at offset: nnnn

Failing Bits: nnnn

System RAM Failed at offset: nnnn

Redémarrez votre PC. Si le message réapparaît, adressez-vous à votre revendeur ou à notre S.A.V.

Fixed Disk 0 Failure

Fixed Disk 1 Failure

Fixed Disk Controller Failure

Vérifiez dans le menu *Main* du *BIOS setup* l'entrée correspondant au lecteur de disque dur et dans le menu *Advanced - Peripheral Configuration* du *BIOS setup* l'entrée correspondant au contrôleur du lecteur de disque dur IDE. Vérifiez les connecteurs du lecteur de disquettes.

Fail Safe Timer NMI

Software NMI

Expansion Board was disabled

Mettez le système hors tension et vérifiez que les modules EISA fonctionnent correctement et sont bien connectés. Si ce message apparaît chaque fois que vous démarrez votre PC, adressez-vous à votre revendeur ou à notre S.A.V.

Incorrect Drive A - run Setup

Incorrect Drive B - run Setup

Entrez dans le menu *Main* du *BIOS setup* et paramétrez correctement l'entrée correspondant au lecteur de disquettes.

Messages d'erreur

Invalid configuration information
Invalid EISA configuration storage
Configuration error for slot

Pour l'entrée *Reset Configuration Data* du menu *Advanced* du *BIOS setup*, activez le paramètre *Yes*. Chargez le programme de configuration EISA (ECU) et reconfigurez le système. Si ce message apparaît encore chaque fois que vous démarrez votre PC, adressez-vous à votre revendeur ou à notre S.A.V.

Invalid NVRAM media type

Redémarrez votre PC. Si le message réapparaît, adressez-vous à votre revendeur ou à notre S.A.V.

Keyboard controller error

Connectez un autre clavier. Si le message réapparaît, adressez-vous à votre revendeur ou à notre S.A.V.

Keyboard error

Assurez-vous que le clavier est correctement connecté.

Monitor type does not match CMOS - RUN SETUP

Entrez dans le menu *Main* du *BIOS setup* et paramétrez correctement l'entrée correspondant au type d'écran.

Operating system not found

Vérifiez dans le menu *Main* du *BIOS setup* les entrées correspondant au lecteur de disque dur et au lecteur de disquettes.

Parity Check 1

Parity Check 2

Redémarrez votre PC. Si le message réapparaît, adressez-vous à votre revendeur ou à notre S.A.V.

Previous boot incomplete - Default configuration used

Appuyez la touche de fonction **F2** pour vérifier et corriger les valeurs dans *BIOS Setup*. Si vous appuyez la touche de fonction **F1** le PC démarre en configuration incomplète. Si le message réapparaît, adressez-vous à votre revendeur ou à notre S.A.V.

Real time clock error

Appelez le *BIOS setup* et entrez l'heure exacte dans le menu *Main*. Si le message réapparaît, adressez-vous à votre revendeur ou à notre S.A.V.

Messages d'erreur

System battery is dead - Replace and run SETUP

Remplacez la batterie au lithium sur la carte système et procédez à de nouveaux réglages dans le *BIOS setup*.

System Cache Error - Cache disabled

Redémarrez votre PC. Si le message réapparaît, adressez-vous à votre revendeur ou à notre S.A.V.

System CMOS checksum bad - run SETUP

Appelez le *BIOS setup* et corrigez les réglages effectués en dernier lieu ou activez les réglages standard.

System timer error

Redémarrez votre PC. Si le message réapparaît, adressez-vous à votre revendeur ou à notre S.A.V.

Mensajes de error

Aquí se describen los mensajes de error que son generados por el BIOS-Setup.

nn Stuck Key

Desbloquee la tecla del teclado (*nn* es el código hexadecimal para la tecla).

Diskette drive A error

Diskette drive B error

En el menú *Main* del *BIOS-Setup* verifique el valor correspondiente a la unidad de disquete y en el menú *Advanced - Peripheral Configuration* el valor para el controlador de la unidad de disquete. Controle las conexiones de la unidad de disquete.

Extended RAM Failed at offset: nnnn

Failing Bits: nnnn

System RAM Failed at offset: nnnn

Arranque de nuevo el PC. Si sigue visualizándose este mensaje, diríjase a su distribuidor o a nuestro servicio de postventa.

Fixed Disk 0 Failure

Fixed Disk 1 Failure

Fixed Disk Controller Failure

En el menú *Main* del *BIOS-Setup* verifique los valores para la unidad de disco duro y en el menú *Advanced - Peripheral Configuration* el valor para el controlador de unidad IDE. Controle las conexiones y los puentes de la unidad de disco duro.

Fail Safe Timer NMI

Software NMI

Expansion Board was disabled

Desconecte el sistema y verifique si los módulos EISA funcionan y han sido conectados correctamente. Si aparece este mensaje cada vez que conecta el sistema, diríjase a su distribuidor o al servicio de postventa.

Incorrect Drive A - run Setup

Incorrect Drive B - run Setup

Defina correctamente el registro de la unidad de disquete en el menú principal del *BIOS-Setup*.

Invalid configuration information

Invalid EISA configuration storage

Configuration error for slot

En el menú *Advanced* del *BIOS-Setup* ajuste el valor *Yes* para *Reset Configuration Data*. Arranque el programa de configuración EISA (ECU) y configure de nuevo su sistema. Si sigue visualizándose este mensaje cada vez que arranca su sistema, diríjase a su distribuidor o a nuestro servicio de postventa.

Invalid NVRAM media type

Arranque de nuevo el PC. Si sigue visualizándose este mensaje, diríjase a su distribuidor o a nuestro servicio de postventa.

Keyboard controller error

Conecte otro teclado. Si sigue visualizándose este mensaje, diríjase a su distribuidor o a nuestro servicio de postventa.

Keyboard error

Compruebe si el teclado está conectado correctamente.

Monitor type does not match CMOS - RUN SETUP

Defina correctamente en el menú principal del *BIOS-Setup* el registro para el tipo de pantalla..

Operating system not found

Compruebe en el menú principal del *BIOS-Setup* los registros de la unidad de disco duro y de la unidad de disquete.

Parity Check 1

Parity Check 2

Arranque de nuevo el PC. Si sigue visualizándose este mensaje, diríjase a su distribuidor o a nuestro servicio de postventa.

Previous boot incomplete - Default configuration used

Pulsando la tecla **F2** puede verificar y corregir los registros del BIOS-Setup. Pulsando la tecla **F1**, el sistema arranca con la configuración incompleta. Si sigue visualizándose este mensaje, diríjase a su distribuidor o a nuestro servicio de postventa.

Real time clock error

Active el *BIOS-Setup* y registre la hora correcta en el menú principal (*Main*). Si sigue visualizándose este mensaje, diríjase a su distribuidor o a nuestro servicio de postventa..

System battery is dead - Replace and run SETUP

Sustituya la pila de litio en el módulo de sistema y repita las operaciones de ajuste en el *BIOS-Setup*..

System Cache Error - Cache disabled

Arranque de nuevo el PC. Si sigue visualizándose este mensaje, diríjase a su distribuidor o a nuestro servicio de postventa.

System CMOS checksum bad - run SETUP

Active el *BIOS-Setup* y corrija los últimos registros hechos o ajuste los registros estándar.

System timer error

Arranque de nuevo el PC. Si sigue visualizándose este mensaje, diríjase a su distribuidor o a nuestro servicio de postventa.

Messaggi di errore

I messaggi di errore emessi dal system BIOS sono descritti qui in seguito.

nn Stuck Key

Liberate il tasto dalla tastiera (*nn* indica il codice esadecimale del tasto).

Diskette drive A error

Diskette drive B error

Controllate nel *BIOS-Setup*, menu *Main*, il valore indicato per il drive dei dischetti e nel menu *Advanced - Peripheral Configuration* il valore per il controller del drive dei dischetti. Controllate i collegamenti del drive per dischetti.

Extended RAM Failed at offset: nnnn

Failing Bits: nnnn

System RAM Failed at offset: nnnn

Riavviate nuovamente il PC. Se il messaggio ricompare rivolgetevi al Vostro rivenditore o al nostro servizio di assistenza tecnica..

Fixed Disk 0 Failure

Fixed Disk 1 Failure

Fixed Disk Controller Failure

Controllate nel *BIOS-Setup*, menu *Main*, i valori per il drive del disco fisso e nel menu *Advanced - Peripheral Configuration* il valore per il controller del driver IDE. Controllate i collegamenti ed i ponticelli del drive del disco fisso.

Fail Safe Timer NMI

Software NMI

Expansion Board was disabled

Spegnete il sistema e verificate che i componenti EISA funzionino e siano collegati in modo corretto. Se questo messaggio compare dopo l'accensione, rivolgetevi al Vostro rivenditore o al nostro servizio di assistenza tecnica.

Incorrect Drive A - run Setup

Incorrect Drive B - run Setup

Impostate nel *BIOS-Setup* del menu principale (*Main*) il valore corretto per il drive per dischetti.

Messaggi di errore

Invalid configuration information
Invalid EISA configuration storage
Configuration error for slot

Impostate nel *BIOS-Setup* del menu *Advanced* il valore per *Reset Configuration Data* su *Yes*. Avviate il programma di configurazione EISA (ECU) e riconfigurate il sistema. Se questo messaggio continuo ad venir visualizzato dopol'accensione, rivolgetevi al Vostro rivenditore oppure al nostro servizio di assistenza tecnica.

Invalid NVRAM media type

Riavviate nuovamente il PC. Se il messaggio ricompare rivolgetevi al Vostro rivenditore o al nostro servizio di assistenza tecnica.

Keyboard controller error

Collegate un'altra tastiera. Se il messaggio ricompare rivolgetevi al Vostro rivenditore o al nostro servizio di assistenza tecnica.

Keyboard error

Controllate che la tastiera sia collegata correttamente.

Monitor type does not match CMOS - RUN SETUP

Impostate nel *BIOS-Setup* del menu principale (*Main*) il valore corretto per il tipo di monitor.

Operating system not found

Controllate nel *BIOS-Setup* del menu principale i valori indicati per il drive per il disco rigido e per il drive per dischetti.

Parity Check 1

Parity Check 2

Riavviate nuovamente il PC. Se il messaggio ricompare rivolgetevi al Vostro rivenditore o al nostro servizio di assistenza tecnica.

Previous boot incomplete - Default configuration used

Premendo il tasto funzione **[F2]** potete verificare e correggere le impostazioni nel *BIOS-Setup*. Premendo il tasto funzione **[F1]**, il PC viene avviato con la configurazione di sistema completa. Se il messaggio ricompare rivolgetevi al Vostro rivenditore o al nostro servizio di assistenza tecnica.

Real time clock error

Richiamate il *BIOS-Setup* ed inserite nel menu principale (*Main*) l'ora esatta. Se il messaggio ricompare rivolgetevi al Vostro rivenditore o al nostro servizio di assistenza tecnica.

Messaggi di errore

System battery is dead - Replace and run SETUP

Sostituite la batteria al litio dell'unità di sistema ed inserite nuovamente i valori di impostazione nel *BIOS-Setup*.

System Cache Error - Cache disabled

Riavviate nuovamente il PC. Se il messaggio ricompare rivolgetevi al Vostro rivenditore o al nostro servizio di assistenza tecnica..

System CMOS checksum bad - run SETUP

Richiamate il *BIOS-Setup* e correggete gli ultimi valori impostati oppure indicati i valori standard.

System timer error

Riavviate nuovamente il PC. Se il messaggio ricompare rivolgetevi al Vostro rivenditore o al nostro servizio di assistenza tecnica.

Felmeddelanden

Nedan beskrivs de felmeddelanden som system-BIOS matar ut på systemkomponenten.

nn Stuck Key

Frigör den angivna tangenten (*nn* är tangentens hexadecimalkod).

Diskette drive A error

Diskette drive B error

Kontrollera inställningarna för diskettenheten i menyn *Main* i *BIOS-Setup*-menyn och inställningarna för diskettenhets-controllern i menyn *Advanced - Peripheral Configuration*. Kontrollera att diskettenheten är korrekt ansluten.

Extended RAM Failed at offset: nnnn

Failing Bits: nnnn

System RAM Failed at offset: nnnn

Starta upp PCn på nytt. Om meddelandet fortfarande visas bör du kontakta din återförsäljare eller vår kundservice.

Fixed Disk 0 Failure

Fixed Disk 1 Failure

Fixed Disk Controller Failure

Kontrollera inställningarna för hårddiskenheten i menyn *Main* i *BIOS-Setup*-menyn och inställningarna för IDE-drivenhets-controllern i menyn *Advanced - Peripheral Configuration*. Kontrollera hårddiskenhetens kontakter och kopplingspaneler.

Fail Safe Timer NMI

Software NMI

Expansion Board was disabled

Stäng av systemet och kontrollera att EISA-komponenterna fungerar och är korrekt anslutna. Om detta meddelande visas varje gång maskinen sätts på, bör du kontakta din återförsäljare eller vår kundservice.

Incorrect Drive A - run Setup

Incorrect Drive B - run Setup

Korriger inställningen för diskettenheten i menyn *Main* i *BIOS-Setup*-menyn.

Invalid configuration information

Invalid EISA configuration storage

Configuration error for slot

Ställ in värdet *Yes* för *Reset Configuration Data* i menyn *Advanced* i *BIOS-Setup*-menyn. Starta EISA-konfigurationsprogrammet (ECU), och konfigurera om systemet på nytt. Om detta meddelande visas varje gång maskinen sätts på, bör du kontakta din återförsäljare eller vår kundservice.

Invalid NVRAM media type

Starta upp PCn på nytt. Om meddelandet fortfarande visas bör du kontakta din återförsäljare eller vår kundservice.

Keyboard controller error

Anslut ett annat tangentbord. Om meddelandet fortfarande visas bör du kontakta din återförsäljare eller vår kundservice.

Keyboard error

Kontrollera att tangentbordet är korrekt anslutet.

Monitor type does not match CMOS - RUN SETUP

Korriger inställningarna för bildskärmtypen i menyn *Main* i *BIOS-Setup*-menyn.

Operating system not found

Kontrollera inställningarna för hårddisken och diskettenheten i menyn *Main* i *BIOS-Setup*-menyn.

Parity Check 1

Parity Check 2

Starta upp PCn på nytt. Om meddelandet fortfarande visas bör du kontakta din återförsäljare eller vår kundservice.

Previous boot incomplete - Default configuration used

Om du trycker på funktionstangenten **F2**, kan du kontrollera och korriger inställningarna i *BIOS-Setup*. Om du trycker på funktionstangenten **F1** startas PCn med den ofullständiga systemkonfigurationen. Om meddelandet fortfarande visas bör du kontakta din återförsäljare eller vår kundservice.

Real time clock error

Ropa upp *BIOS-Setup*-menyn och ställ in korrekt klockslag i menyn *Main*. Om meddelandet fortfarande visas bör du kontakta din återförsäljare eller vår kundservice..

System battery is dead - Replace and run SETUP

Byt ut litiumbatteriet på systemkomponenten och genomför inställningarna i *BIOS-Setup*-menyn på nytt.

System Cache Error - Cache disabled

Starta upp PCn på nytt. Om meddelandet fortfarande visas bör du kontakta din återförsäljare eller vår kundservice.

System CMOS checksum bad - run SETUP

Ropa upp *BIOS-Setup*-menyn. Korrigera de senast gjorda inställningarna eller ställ in standardvärdena igen.

System timer error

Starta upp PCn på nytt. Om meddelandet fortfarande visas bör du kontakta din återförsäljare eller vår kundservice.

Foutmeldingen

Vervolgens worden de foutmeldingen beschreven die het BIOS-systeem op de systeembouwgroep geeft.

nn Stuck Key

Laat de toets van het toetsenbord los (*nn* is de hexadecimale code voor de toets).

Diskette drive A error

Diskette drive B error

Controleer in de *BIOS-Setup*, in het menu *Main*, de instelling voor het diskteststation en in het menu *Advanced - Peripheral Configuration* de instelling voor de diskteststation-controller. Controleer de aansluitingen van het diskteststation.

Extended RAM Failed at offset: nnnn

Failing Bits: nnnn

System RAM Failed at offset: nnnn

Start de PC opnieuw. Als de melding opnieuw verschijnt, neem dan a.u.b. contact op met uw dealer of met onze klantendienst..

Fixed Disk 0 Failure

Fixed Disk 1 Failure

Fixed Disk Controller Failure

Controleer in de *BIOS-Setup*, in het menu *Main*, de instellingen voor de harde schijf en in het menu *Advanced - Peripheral Configuration* de instelling voor de IDE-controller. Controleer de aansluitingen en de doorverbindingen van de harde schijf.

Fail Safe Timer NMI

Software NMI

Expansion Board was disabled

Schakel het systeem uit en ga na of de EISA-modules goed werken en goed zijn verbonden. Als deze melding altijd verschijnt als het systeem wordt ingeschakeld, moet u contact opnemen met uw verkoper of met onze klantendienst.

Incorrect Drive A - run Setup

Incorrect Drive B - run Setup

Stel in de setup van het *BIOS*, in het menu *Main*, het diskteststation op de juiste wijze in.

Foutmeldingen

Invalid configuration information
Invalid EISA configuration storage
Configuration error for slot

Zet in de *BIOS-Setup* in het menu *Advanced* de instelling voor *Reset Configuration Data* op *Yes*. Start het EISA-configuratieprogramma (FCU) en configureer het systeem opnieuw. Als deze melding weer verschijnt telkens het systeem wordt ingeschakeld, moet u contact opnemen met uw verkoper of met onze klantendienst..

Invalid NVRAM media type

Start de PC opnieuw. Als de melding opnieuw verschijnt, neem dan a.u.b. contact op met uw dealer of met onze klantendienst.

Keyboard controller error

Sluit een ander toetsenbord aan. Als de melding opnieuw verschijnt, neem dan contact op met uw dealer of met onze klantendienst.

Keyboard error

Controleer of het toetsenbord goed is aangesloten.

Monitor type does not match CMOS - RUN SETUP

Stel in de setup van het *BIOS*, in het menu *Main*, het monitortype op de juiste wijze in.

Operating system not found

Controleer in de setup van het *BIOS*, in het menu *Main*, de instellingen van de harde schijf en het diskettestation..

Parity Check 1

Parity Check 2

Start de PC opnieuw. Als de melding opnieuw verschijnt, neem dan a.u.b. contact op met uw dealer of met onze klantendienst.

Previous boot incomplete - Default configuration used

Als u op de functietoets **F2** drukt, kunt u in de setup van het *BIOS* de instelling uittesten en verbeteren. Als u op de functietoets **F1** drukt, start de PC met de onvolledige systeemconfiguratie. Als de melding opnieuw verschijnt, neem dan a.u.b. contact op met uw dealer of met onze klantendienst.

Foutmeldingen

Real time clock error

Roep de setup van het *BIOS* op en stel in het menu *Main* de juiste tijd in. Als de melding opnieuw verschijnt, neem dan a.u.b. contact op met uw dealer of met onze klantendienst.

System battery is dead - Replace and run SETUP

Vervang de lithiumbatterij op het motherboard en stel de *BIOS* opnieuw in.

System Cache Error - Cache disabled

Start de PC opnieuw. Als de melding opnieuw verschijnt, neem dan a.u.b. contact op met uw dealer of met onze klantendienst.

 
System CMOS checksum bad - run SETUP

Roep de setup van het *BIOS* op en corrigeer wat u voor het laatst heeft ingesteld of stel de defaultwaarden in.

System timer error

Start de PC opnieuw. Als de melding opnieuw verschijnt, neem dan a.u.b. contact op met uw dealer of met onze klantendienst.

Index

 1
▶ 1
_ 1
528 Mbyte hard disk capacity 13

A
Access Mode, Large hard disk 27
Activating Plug&Play 26
Adding main memory 45
Additional settings 25
Add-on modules 45
 on the system board 45
Address, pager 36
Addressing IDE hard disk 13
Advanced BIOS Setup 16
Advanced system settings 16
Advanced System Configuration 25
APIC 25
ASR&R Boot Delay 33
Assigning
 Interrupt 5
 PCI interrupts 23
 PCI-VGA interrupt 24
Attempts to boot operating system 34
Available Base Memory 15
Available Extended Memory 15

B
Base Memory 15
Battery 7
Baud Rate 37, 39
Bidirection 21
BIOS
 mapping 18
 recovery 42
 Update 42

BIOS-Setup 9
 advanced system settings 16
 exiting 40
 menu 9
 security 28
 System settings 10
 terminating 40
 write protection 43
Board 3
Boot
 Delay 33
 error 33
 Options, settings 14
 Retry Counter 34
 routine, settings 14, 15
 Timeout 33
Booting operating system 30, 33, 34

C
Cache 17
 function 18
 upgrading Second-level cache 49
 write access 18
Cache Memory 17
 setting 17
 Regions 18
Cache Mode 18
Cache System BIOS Area 18
Cache Video BIOS Area 18
Changing lithium battery 50
Com. Setting 37, 39
Configuration data, settings 27
Configuring
 BIOS Setup 9
 pager 35
 parallel port 21
 PCI slot 23
 serial ports 21
 VT100 38

Index

Connectors 3
Controller
 floppy disk drive 22
 monitor 26
 setting 20
Copy ROM areas in the RAM 19
Counter Boot Retry 34
Courier 1
CPU Status 35
Cylinders 12

D
Date, setting 10
Deactivating Plug&Play 26
Default values 40
Default Latency Timer 24
Delay, boot 33
Diagnostic System 34
Disabling
 APIC 25
 floppy disk controller 22
 Hard Disk controller 22
 Hardware Watchdog 34
 mouse controller 22
 operating mode, VT100 38
 Pager 36
 Processor 35
Discard Changes & Exit 40
Disk controller, setting 20
Diskette A 11
Diskette B 11
Diskette Controller 22
Diskette Write 31
Diskette write protection 31
Display, type 15

E
ECP, Enhanced Capability Port 21
EISA slots, location 45

Enabling
 APIC 25
 floppy disk controller 22
 Hard Disk controller 22
 Hardware Watchdog 34
 mouse controller 22
 operating mode, VT100 38
 Pager 36
 Processor 35
 Server Number 36
Enhancing
 performance 17, 18, 19, 20, 49
EPP, Enhanced Parallel Port 21
Erreur, messages 54
Error
 messages 51
 remote transmission 35
 transmission 37
Error, mensajes 57
Errore, messaggi 60
ESD modules 8
Exit menu 40
Exiting BIOS Setup 40
Extended Memory 15
External cache, Second-level Cache 17
 write access 18
 setting 17

F
Features system board 2
Felmeddelanden 63
First connector
 IDE hard disk controller 22
First processor, location 45
First-level cache (internal cache) 17
 setting 17
Flash BIOS 31
 location 45
 write protection
Flash Write 31
Floppy disk controller
 disabling 22
 enabling 22

Floppy disk drive
 type 11
 write protection 43
 Floppy disk write-protection 31
 Foutmeldingen 66

G
 Get Default Values 40

H
 Handle modules with ESDs 8
 Hard Disk drive 11
 access settings 27
 capacity 13
 settings 11
 parameters 12
 addressing 13
 Hard Disk Type 12
 Hard Disk Controller 22
 Hard Disk Controller, setting 22
 Hardware
 configuration 9
 Watchdog 34
 HD controller, setting 20
 Heads 12
 High temperature 33

I
 I/O Address
 Pager 36
 VT100 39
 IDE hard disk drive 11, 13
 addressing 13
 settings 11
 IDE Hard Disk Controller, setting 22
 Important notes 7
 Increasing
 performance 17, 18, 19, 20, 49
 Installing
 memory modules 46
 Second-level cache 49

Interfaces 3
 configuring 21
 setting 20, 37
 serial 21
 Internal Cache Memory 17
 write access 18
 setting 17
 Interrupt
 Controller 25
 table 5
 VT100 39
 IRQ 5
 VT100 39

J
 Jumper 3
 block X400 48
 settings 41
 X400 42

L
 Large hard disk capacity 13
 Large Disk Access Mode 27
 Latency Timer 25
 LBA, Logical Block Addressing 13
 mode 13
 translation 13
 Lithium battery 7
 changing 50
 location 45
 Load Previous Values 40
 Loading operating system 30
 Location
 connectors 3
 EISA slots 45
 first processor 45
 Flash BIOS 45
 jumper 41
 lithium battery 45
 main memory 45
 OverDrive processor 45
 PCI slots 45

Location
 ports 3
 second processor 45
 second-level cache module 45
 switch block 41
 Voltage converter 45
 Logical Block Addressing 13

M
 Main Memory 15, 45
 location 45
 upgrading 45
 Main menu 10
 Mapping
 BIOS 18
 ROM 18
 Memory
 Base Memory 15
 Extended Memory 15
 main 15, 45
 upgrading main memory 45
 upgrading Second-level cache 49
 Memory modules 45
 installing 46
 removing 47
 Mensajes de error 57
 Menu
 BIOS Setup 9
 Exit 40
 main 10
 server 32
 Messages 51
 Press F2 to enter SETUP 30
 Messages d'erreur 54
 Messaggi di errore 60
 Mode, System Password Mode 30
 Modem, Pager Configuration 35
 Modules
 on the system board 45
 with ESDs 8
 Monitor
 controller 26
 type 15

Mouse controller
 disabling 22
 enabling 22
 Multiprocessor
 Interrupt Controller 25
 operating systems 25

N
 Notational conventions 1
 Novell Netware 25, 33
 Number of attempts
 to boot the operating system 34
 Number of system reboots 34

O
 O/S Boot Timeout 33
 Operating mode
 Server management 32
 VT100 38
 Operating system 25, 26, 33
 loading 30
 starting 30
 OverDrive processor 47
 location 45

P
 P54C 42
 Pager 36
 Address 36
 Configuration 35
 Interface Addr. 36
 Parallel port 21
 configuring 21
 Parallel Mode 21
 Parameter
 hard disk drive 11, 12
 Password
 setting 29
 Setup 28
 System 29
 System Password Mode 30
 PCI, Peripheral Component
 Interconnect 1

- PCI Configuration 23
- PCI Device, Slot #1 24, 25
- PCI Device, Slot #2 24, 25
- PCI Device, Slot #3 24, 25
- PCI interrupts assigning 23
- PCI slot
 - configuration 23
 - location 45
 - setting 24, 25
- PCI VGA interrupt 24
- Performance
 - increasing 17, 18, 19, 20, 49
- Period after system booting 33
- Peripheral Configuration 20
- Peripherals, setting 20
- Plug&Play
 - O/S 26
 - settings 26
- Ports 3
 - configuring 21
 - serial 21
 - setting 20, 37
- Possible screen resolutions 4
- POST Error Halt 14
- Power Off 31
- Power On, remote 31
- Press F2 to enter SETUP 30
- Previous Values 40
- Printer 21
- Processor
 - internal Cache 17
 - OverDrive 47
 - replacing 47
 - Status 35
 - type, setting 42
 - upgrading 47
- Program
 - SCU 35
 - ServerMan 33, 35
- Q**
- Quick self-test 15
- Quick boot 15
- Quotation marks 1
- R**
- RAM (Random Access Memory) 19
 - memory 45
- Recovery Diskette 42
- Recovery, System BIOS 42
- Reduced self-test 15
- Remote error transmission 35, 37
- Remote Power On 31
- Removing
 - main memory module 47
 - second-level cache modules 49
- Replacing the
 - lithium battery 50
 - processor 47
- Reset Configuration Data 27
- Resolutions, screen 4
- Retry Counter 34
- ROM (Read Only Memory) 19
 - areas 20
 - areas in the RAM 19
 - mapping 18
- S**
- S600, switch block 41
- Save Changes 40
- Save Changes & Exit 40
- Saving settings 40
- Screen resolutions 4
- SCU 35
 - Pager Configuration 35
- Second connector
 - IDE hard disk controller 22
- Second processor 47
 - location 45
- Second-level Cache 17
 - setting 17
 - write access 18

- second-level cache modules
 - installing 49
 - location 45
 - removing 49
 - upgrading 49
- Sector/Track 12
- Security features 28
- Security, BIOS Setup 28
- Self-test, settings 14, 15
- Serial port, baud Rate 37
- Serial ports 21
 - Serial 1, port 21
 - Serial 2, port 21
- Server Management 32
 - operating mode 32
 - setting 32
- Server Menu 32
- Server Number 36
- ServerMan 35
 - program 33
- Set Server Management 32
- Set Setup Password 29
- Set System Password 29
- Setting
 - BIOS Setup 9, 28
 - BIOS-Update 42
 - Cache Memory 17
 - configuration data 27
 - controller 20
 - date 10
 - hard disk access 27
 - hard disk drive 13
 - IDE Hard Disk Controller 22
 - IDE hard disk drive 11
 - interfaces 20
 - jumper 41
 - monitor type 15
 - mouse controller 22
 - PCI slot 23, 24, 25
 - peripherals 20
 - Plug&Play 26
 - ports 20
 - processor type 42
 - saving 40
 - security features 28
 - self-test 15
 - serial ports 21
 - Setup Password 29
- Setting
 - System BIOS recovery 42
 - system board 41
 - system startup 14, 15
 - System Password 30
 - time 10
 - type of floppy disk drive 11
 - Video Subsystem 26
 - write protection floppy disk drive 43
 - write protection system BIOS 43
- Setup 9
- Setup Password 28
 - Lock 29
 - setting 29
- Setup Prompt 30
- Shadow Memory 19
- Shadow Memory Regions 20

- Slots 3
 - PCI configuration 23
 - Sockets 3
 - Soft Power Off 31
 - Specifications 2
 - Starting
 - Diagnostic System 34
 - operating system 30
 - Status, CPU 35
 - Switch 1, System BIOS recovery 42
 - Switch 3 43
 - Switch 4 43
 - Switch 5
 - write protection system BIOS 43
 - Switch 6
 - write protection floppy disk drive 43
 - Switch 7 43
 - Switch 8 43
 - Switch block S600 42, 43
 - location 41
 - SWOFF 31
 - System BIOS
 - recovery 42
 - recovery, switch 1 42
 - write protection 31, 43
 - System board 3
 - add-on modules 45
 - settings 41
 - System booting 33
 - System settings
 - additional 25
 - BIOS Setup 10
 - Main menu 10
 - System startup, settings 14, 15
 - System BIOS 19
 - System BIOS Area 18
 - System Date 10
 - System Load 30
 - System Password 28
 - Mode 30
 - setting 29
 - System Shadow 19
- T**
- Technical
 - information 9
 - specifications 2
 - Terminal 38
 - Terminating BIOS Setup 40
 - Test routine, settings 14, 15
 - Time, setting 10
 - Timeout, O/S Boot 33
 - Transfer Mode 13
 - setting 21
 - Transfer rates 21
 - Transmission of errors 35
 - Type
 - floppy disk drive 11
 - Hard Disk drive 12
 - monitor 15
- U**
- Update, BIOS 42
 - Upgrading
 - main memory 45
 - processor 47
 - Second-level cache 49
 - Upgrading, Second-level cache 49
 - Using cache 18
- V**
- Values, default 40
 - VGA Interrupt 24
 - Video
 - Display 15
 - Shadow 19
 - subsystem 26
 - Video BIOS 19
 - Video BIOS Area 18
 - Voltage converter, location 45

- VT100 38
 - Address 39
 - Baud Rate 39
 - Com. Setting 39
 - Configuration 38
 - Interface Addr 39
 - Interrupt 39
 - IRQ 39
 - operating mode 38
- W**
- Watchdog 34
- X**
- Windows NT 33
 - Write Back 18
 - Write Precomp 12
 - Write protection
 - floppy disk 31
 - floppy disk drive 43
 - system BIOS 31, 43
 - Write Through 18