


# G5G330-P

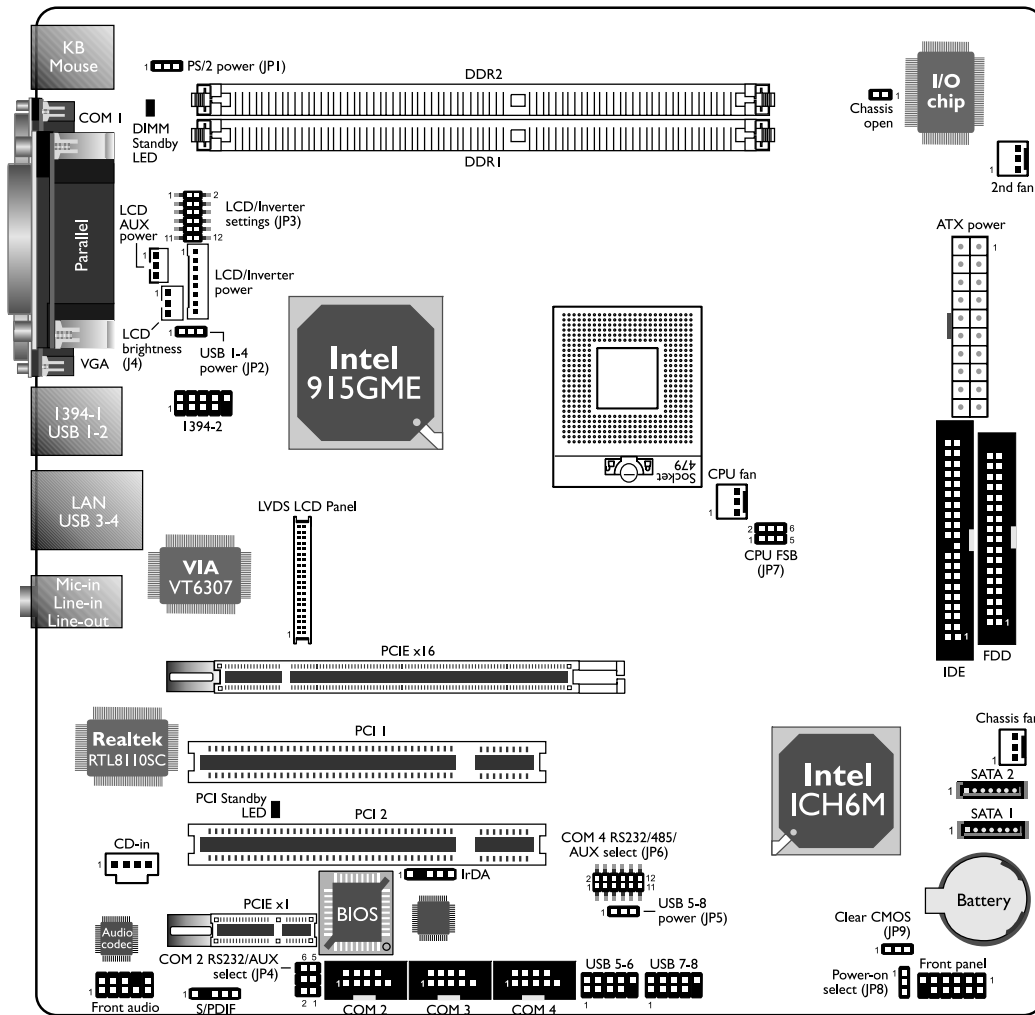

COM 2 RS232/AUX Select	JP4
RS232	1-3, 2-4 On
Auxiliary power	3-5 (5V), 4-6 (12V) On

LCD Brightness Control (Voltage Level Adjust)	J4
Increases the voltage level	1-2 On
Decreases the voltage level	2-3 On

COM 4 RS232/RS485/AUX Select	JP6
RS232	1-3, 2-4, 7-9, 8-10 On
RS485	3-5, 4-6, 7-9, 8-10 On
Auxiliary power	1-3, 2-4, 9-11 (12V), 10-12 (5V) On

**Note:** Increasing or decreasing the voltage to control the LCD panel's brightness varies among Inverters. You must refer to the Inverter's specification to make the appropriate adjustment to the brightness of the LCD panel.

Power-on Select	JP8
Power-on via AC power	1-2 On
Power-on via power button	2-3 On

USB Power: 1-4 (JP2), 5-8 (JP5)	
5V (default)	1-2 On
5VSB	2-3 On

LCD/Inverter Settings - JP3					
Panel Power		Inverter On Level		Inverter On/Off Select	
5V	1-3 On	5V	2-4 On	Active Low	8-10 On
3.3V	3-5 On	12V	4-6 On	Active High	10-12 On
12V	7-9 On				

**Note:** Before powering-on the system, make sure JP3's setting matches the LCD panel's specification. Selecting the incorrect voltage will seriously damage the LCD panel.

Pentium M Processor FSB Select	JP7
Dothan-A step FSB400	4-6 On
Dothan-A step FSB533	3-5, 4-6 On
Dothan-B step	1-3, 2-4 On

Clear CMOS Data	JP9	PS/2 Power	JP1
Normal (default)	1-2 On	5V (default)	1-2 On
Clear CMOS Data	2-3 On	5VSB	2-3 On