


G5M100-N

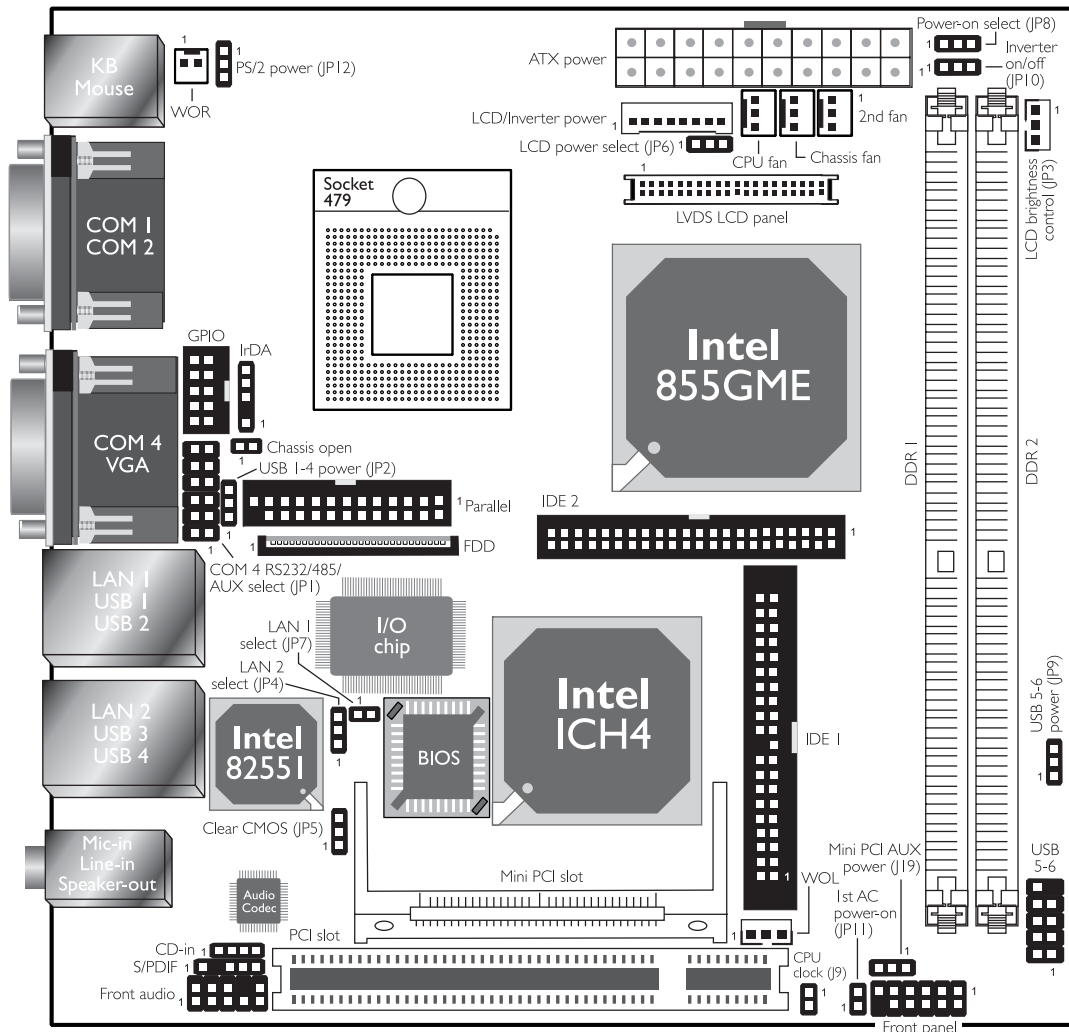

1st AC Power-on	JP11	PS/2 Power Select	JP12
Auto power-on only on 1st AC in	On	5V (default)	1-2 On
Power-on via power button	Off	5VSB	2-3 On

LAN 1 Select	JP7	LCD Power Select	JP6	USB Power: 1-4 (JP2), 5-6 (JP9)	
Disabled	On	5V	1-2 On	5V (default)	1-2 On
Enabled (default)	Off	3.3V (default)	2-3 On	5VSB	2-3 On

LAN 2 Select	JP4	Power-on Select	JP8	Mini PCI AUX Power	JP19
Enabled (default)	1-2 On	AC in: power is always on	1-2 On	3.3V (default)	1-2 On
Disabled	2-3 On	Power-on via power button	2-3 On	3VSB	2-3 On

Inverter On/Off Select	JP10	COM 4 RS232/RS485/AUX Select	JP1
Active Low	1-2 On	RS232 (default)	1-3, 2-4, 7-9, 8-10 On
Active High	2-3 On	RS485	3-5, 4-6, 7-9, 8-10 On
		Auxiliary power	9-11 (12V), 10-12 (5V) On

CPU Clock Select	JP9
100MHz (400MHz FSB) (default)	On
133MHz (533MHz FSB)	Off

Clear CMOS Data	JP5
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

JP3	LCD Brightness Control (Voltage Level Adjust)
1-2 On	Increases the voltage level
2-3 On	Decreases the voltage level

Note: Increasing or decreasing the voltage to control the LCD panel's brightness varies among Inverters. You must refer to the Inverter's specification to make the appropriate adjustment to the brightness of the LCD panel.