


G5M150-N06C

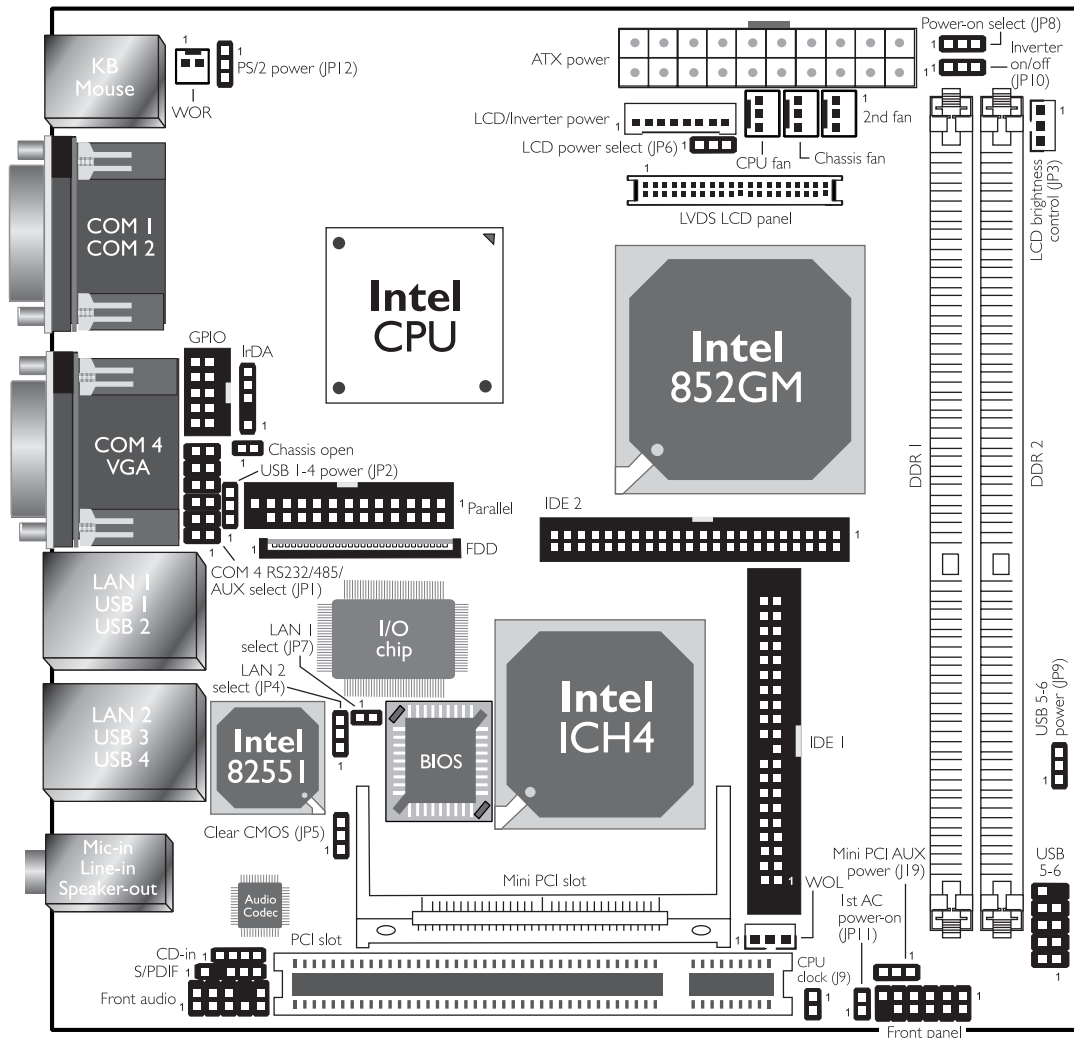

| | | | |
|--------------------------|-------------|---------------------------------|-------------|
| PS/2 Power Select | JP12 | 1st AC Power-on | JP11 |
| 5V (default) | 1-2 On | Auto power-on only on 1st AC in | On |
| 5VSB | 2-3 On | Power-on via power button | Off |

| | | | | |
|---------------------|------------|-------------------------|------------|--|
| LAN 1 Select | JP7 | LCD Power Select | JP6 | USB Power: 1-4 (JP2), 5-6 (JP9) |
| Enabled (default) | On | 5V | 1-2 On | 5V (default) 1-2 On |
| Disabled | Off | 3.3V (default) | 2-3 On | 5VSB 2-3 On |

| | | | | | |
|---------------------|------------|---------------------------|------------|---------------------------|------------|
| LAN 2 Select | JP4 | Power-on Select | JP8 | Mini PCI AUX Power | J19 |
| Enabled (default) | 1-2 On | AC in: power is always on | 1-2 On | 3.3V (default) | 1-2 On |
| Disabled | 2-3 On | Power-on via power button | 2-3 On | 3VSB | 2-3 On |

| | | | |
|-------------------------------|-------------|-------------------------------------|------------------------------|
| Inverter On/Off Select | JP10 | COM 4 RS232/RS485/AUX Select | JP1 |
| Active Low | 1-2 On | RS232 (default) | 1-3, 2-4, 7-9, 8-10 On |
| Active High | 2-3 On | RS485 | 3-5, 4-6, 7-9, 8-10 On |
| | | Auxiliary power | 9-11 (12V), 10-12 (5V) On |

| | |
|-------------------------------|-----------|
| CPU Clock Select | J9 |
| 100MHz (400MHz FSB) (default) | On |
| 133MHz (533MHz FSB) | Off |

| | |
|------------------------|------------|
| Clear CMOS Data | JP5 |
| Normal (default) | 1-2 On |
| Clear CMOS Data | 2-3 On |

| | |
|------------|--|
| JP3 | LCD Brightness Control (Voltage Level Adjust) |
| 1-2 On | Increases the voltage level |
| 2-3 On | Decreases the voltage level |

Note: Increasing or decreasing the voltage to control the LCD panel's brightness varies among Inverters. You must refer to the Inverter's specification to make the appropriate adjustment to the brightness of the LCD panel.