


mini ITX i945Gct


Enable the Power of mini ITX Form Factor

Accessories List

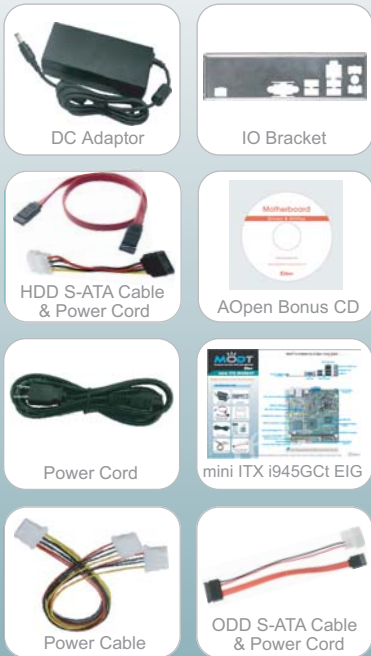

AOpen reserves the right to revise all the specifications and information contained in this document, which are subject to change without notice.

MoDT is initiated by AOpen since 2004

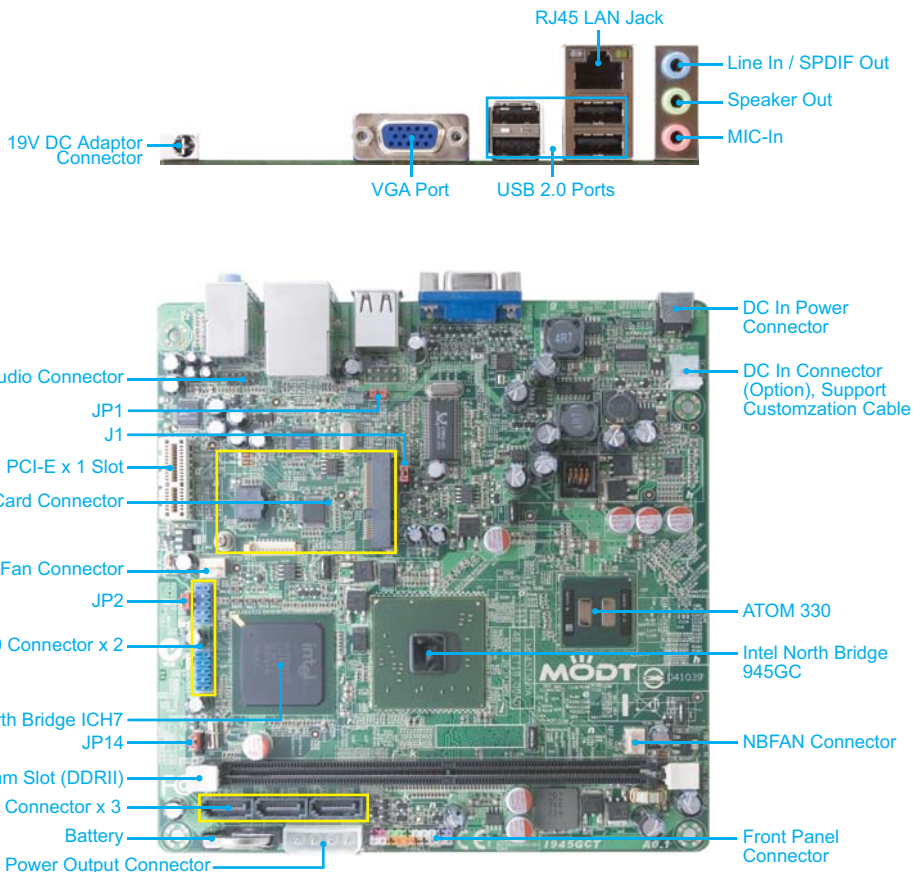

Note: The images might look different according to the product.

Installing Memory Module


The motherboard provide long DIMM type memory support. The installation of memory module as below.

1. Put the memory module with correct direction. Notice there's one stick to make sure direction is correct.
2. There're tabs which located in the side of long DIMM holder. Use finger to push memory module vertically until the tabs lock memory module tightly.
3. Now, the memory modules have been plugged properly with horizontal flat.




Installing ODD & HDD Device

The mother board provides three SATA connectors. Connect SATA cable to the on board SATA connector. You can find SATA cable in our package. (this is SATA signal cable) And please also connect 5V power connector with SATA power cable.

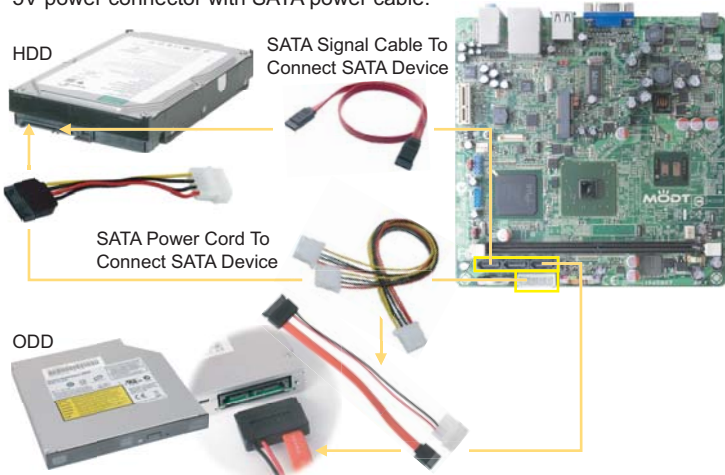


Jumper Setting

 - JP1:
Mini card support wack up from S3.
1-2 Enable wack up from S3 (Default)
2-3 Disable wack up from S3




 - JP1 JP2:
USB port support wack up from S3.
1-2 Disable wack up from S3 (Default)
2-3 Enable wack up from S3



Mini Card Installation

The motherboard provides one Mini Card slot for users to upgrade his PC functions. Now, the Mini Card can have digital TV tuner and Video MPEG4 decoder card ...etc. for expansion. The PCI cards have SATA II and Firewire and USB cards ... etc. for expansion.


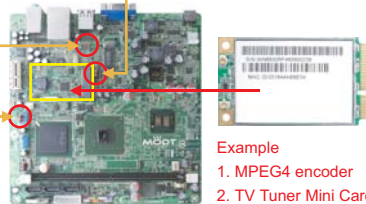


JP14 Clear CMOS

You can clear CMOS to restore system default settings. To clear the CMOS, follow the procedure below.

1. Turn off the system and unplug the DC Adaptor from Connector.
2. Locate JP14 and short pins 2-3 for a few seconds.
3. Return JP14 to its normal setting by connecting it to Pin 1-2 again.
4. Connect DC Adaptor back to connector.

JP14 Clear CMOS Jumper

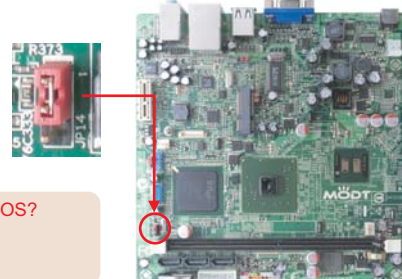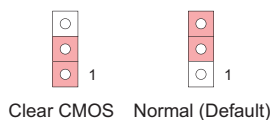

Tip: When should I clear CMOS?

1. Boot fail
2. Forget password
3. Trouble shooting

Power - on and Loading BIOS Setup

Del

After finish the setting of jumpers and connect correct cables. Power on and enter the BIOS Setup, then press during POST (Power On Self Test). Choose "Load Optimized Defaults" for recommended optimal performance.



Warning:
Please avoid of using "Load Optimized Defaults", unless you are certain your system components (CPU, SDRAM, HDD, etc.) have been proven acceptable for use.


Aopen EzInstall and Bonus Pack CD

You can use the autorun menu of Bonus CD disc. Choose the utility and driver from the icons at left side, and then click on the "GO" button to complete installation automatically.



Trouble Shooting

If you encounter any trouble to boot your system, follow the procedures accordingly to resolve the problem.

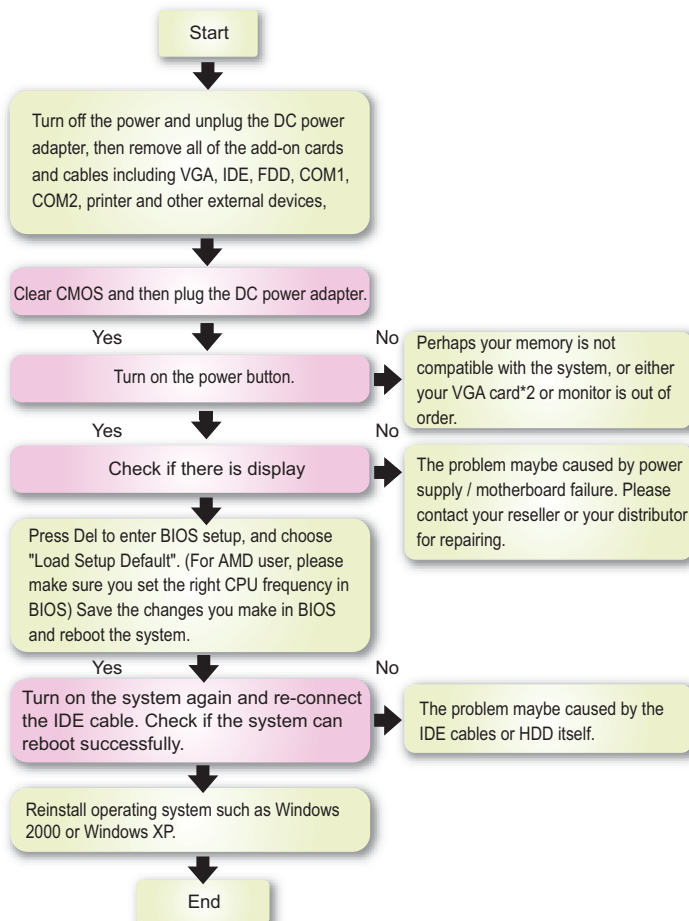

BIOS Version

BIOS version can be found when you enter BIOS setting pattern. For example,

Phoenix - AwardBIOS v6.00PG, An Energy Star Ally
Copyright (C) 2004, Phoenix Technologies, LTD.
i945GcT R1.00 Sep. 02. 2007 AOpen Inc.

Register Your Motherboard

You can find this bar code label on the outside packing or on component side of PCB. For example:



Part No. Serial No.
P/N: 91881102010 is part number.
S/N: 91949378KN73 is serial number.

Power Consumption

The power consumption — 90 W provides basic system configuration as below.

- i945GcT mini iTX Motherboard
- Intel® ATOM CPU 330 x 1
- 1GB long DIMM memory module x 1
- IDE 3.5" hard disk x 1
- USB keyboard x 1
- USB Mouse x 1
- North Bridge Fan + Heatsink x 1

The motherboard had bundle one 90W AC to DC power adaptor, it's specification as
- INPUT AC100-240V ~ 1.5A
- OUTPUT DC 19V ~ 4.74A



Note:

Please notice on the power, AOpen mother board provided, is 90W AC-DC adaptor. And the board can offer 145W to connect different peripherals. But it needs to be careful while connecting many peripherals and cause power over 90W. It will causes the system cannot boot-up or cannot work smoothly base on the loading your system has. If your system over 90W please change it to larger power supply: 19V AC-DC adaptor.



Technical Support

Dear Customer,

Thanks for choosing AOpen products. In order to maintain the best service to every customer of us, we recommend you to follow the procedures below and seek help from our branches according to the region you buy the product. With your help, we can then continue to provide efficient and the best quality service to every customer. Thanks very much for your understanding!

AOpen Technical Supporting Team

Europe AOpen Computer b.v. Email: Support@AOpen.NL	China 艾爾聯國際貿易(上海)有限公司 Tel: 86-21-6225-8622 Fax: 86-21-6225-7926	America AOpen America Inc. Tel: 1-408-586-1201 Fax: 1-408-586-1210
Germany AOpen Computer GmbH. Mail: support@aopen.de	Pacific Rim AOpen Inc. Tel: 886-2-7710-1195 Fax: 886-2-7710-1187	Japan AOpen Japan Inc. Fax: +81-048-288-0955

Europe	Email: Support@AOpen.NL
Pacific Rim	http://www.aopen.com.tw
China	http://www.aopen.com.cn
Germany	http://www.aopen.de
America	http://usa.aopen.com
Japan	http://aopen.jp

Online Manual: To download manual, please log on and then select your preferred language. Under "Type" directory, choose "Manuals" to go to our manual database. You can also find the manual and EIG in AOpen Bonus Pack.
<http://www.aopen.com> > Chose Territory > Download

RCL: We recommend you to choose board/card/device from the compatibility recommend component list for assembling your PC. It may prevent incompatibility problems.
<http://www.aopen.com> > Chose Territory > RCL

FAQ: Here we list problems that users often encounter and FAQ (Frequently Asked Questions). You may select your preferred language after log on, and may be able to find a solution to your problem.
<http://www.aopen.com> > Chose Territory > Tech.FAQ

Download Software: After log on and having language selected, you may get the latest updated BIOS/utility and drivers you need under "Type" directory. In most case, newer versions of drivers and BIOS have solved earlier bugs or compatibility problems.
<http://www.aopen.com> > Chose Territory > Download