


ITX-E19

Intel® Atom N270 Mini-ITX Main-Board

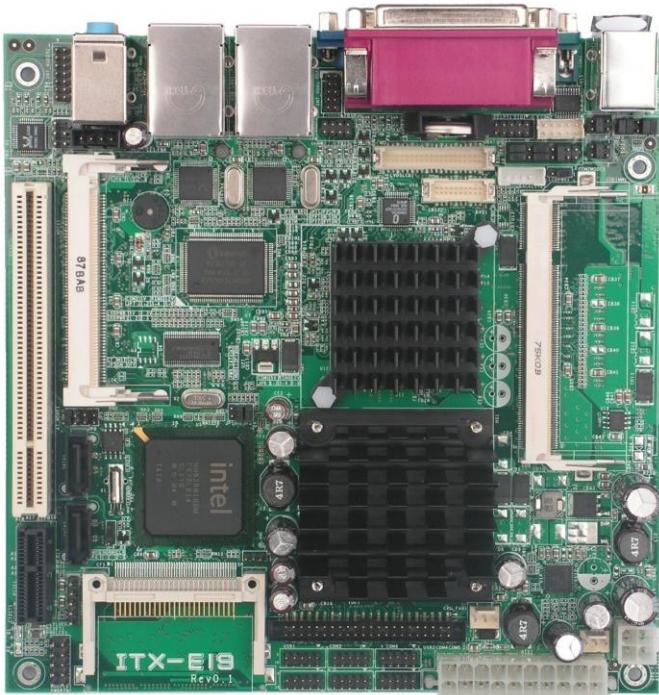

User's Manual

Version 1.0

Copyright Notice

This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent of the original manufacturer.

The information in this document has been carefully checked and is believed to be accurate. However, the original manufacturer assumes no responsibility for any inaccuracies that may appear in this manual. In no event will the original manufacturer be liable for direct, indirect, special, exemplary, incidental, incidental or consequential damages resulting from any defect or omission in this manual, even if advised of possibility of such damages. The material contained herein is for informational purposes only.

Acknowledgments

Award is a registered trademark of Award Software International, Inc.

IBM, PS/2 is trademarks of International Business Machines Corporation.

Intel Pentium M is registered trademarks of Intel Corporation.

Microsoft Windows is a registered trademark of Microsoft Corporation.

All other product names or trademarks are properties of their respective owners.

Contents

INTRODUCTION	1
CHAPTER 1 FEATURES & SPECIFICATIONS	2
FEATURES	3
SPECIFICATIONS	4
CHAPTER 2 JUMPER SETTING & CONNECTORS.....	7
 2.1 JUMPERS ON THE E19.....	8
Jumper Locations on the E19	9
JP1, JP2, JP3: FSB SPD Selection	10
JP4: Clear CMOS RAM Data	10
JP5: CF Card Mode Selection	11
JP6, JP7: COM Power Selection	11
JP8: COM6 Power Pin (Pin9)	11
JP9, JP10: LAN Interface Type Selection	12
AT MODE: AT Mode Selection	12
LCDPWR: LCD PANEL Power Selection	12
COM2MODE: RS232/RS422/RS485.....	13
 2.2 CONNECTORS ON THE E19	14
Connector Locations on the E19	15
AUDIO Connector.....	16
INT_AUDIO Connector	16
SPDIF Connector.....	17
CD_IN Connector	17
DIO1 Connector	18
USB12, 34 Connectors	18
INT_VGA1 Connector.....	19
SATA1.2 Connectors.....	19
VGA1 Connector	20
LAN GbE+USBx2 Connectors	20
LAN1, 2 GbE Connectors	21
System FAN1 Connector	21
CPU FAN1 Connector	21
LAN1, 2 GbE LEDs	22
ATX_12V Power Connector	22
ATX-20P Connector	23
INT_KBMS1 Connector	23
PS/2 Keyboard & Mouse Connector.....	24
IrDA Connector.....	24
FRONT_PANEL Connector	25
TVOUT1	26
LVDS LCD Connector	27

Contents

DVI1 Connector	28
LPT1 Port.....	28
CF-II Connector.....	29
COM1 Serial Port	30
COM2, 6 Serial Ports	31
COM3, 4, 5 Serial Ports	32
IDE Connector	33
CHAPTER 3 BIOS SETUP	35
BIOS Introduction	36
Starting Setup	36
3.1 MAIN MENU	37
Setup Items	37
Standard CMOS Features	37
Advanced BIOS Features	37
Advance Chipset Features	37
Integrated Peripherals.....	38
Power Management Setup.....	38
PnP/PCI Configurations.....	38
PC Health Status.....	38
Frequency/Voltage Control	38
Load Fail-Safe Defaults.....	38
Load Optimized Defaults	38
Set Supervisor/ User Password	38
Save & Exit Setup	38
Exit Without Saving.....	39
3.2 STANDARD CMOS FEATURES	40
IDE Channel 0, 1 Master/ Slave	42
Drive A/B.....	44
Video	44
Halt On.....	44
3.3 ADVANCED BIOS FEATURES	45
CPU Feature	46
Delay Prior to Thermal.....	46
Limit CPUID Max Val	46
C1E Function	46
Execute Disabled Bit	46
Hard Disk Boot Priority	47
Bootable Add-in Cards	47
Virus Warning.....	48
CPU L1 & L2 Cache	48
CPU L3 Cache	48
Quick Power On Self Test	48
First/Second/Third Boot Device	49
Boot Other Device.....	49
Swap Floppy Drive	49
Boot Up Floppy Seek	49

Boot Up Num Lock Status	49
Gate A20 Option	49
Typematic Rate Setting	50
Typematic Rate (Chars/Sec).....	50
Typematic Delay (Msec).....	50
Security Option.....	51
APIC Mode	51
MPS Version Control For OS	51
OS Select For DRAM > 64MB	51
Report No FDD For WIN 95.....	51
3.4 ADVANCED CHIPSET FEATURES	52
DRAM Timing Selectable	53
CAS Latency Time	53
DRAM RAS# to CAS# Delay	53
DRAM RAS# Precharge	53
Precharge dealy (tRAS).....	53
System Memory Frequency	53
SLP_S4#Assertoin Width.....	54
System BIOS Cacheable.....	54
Video BIOS Cacheable	54
Memory Hole At 15M-16M	54
On-Chip Frame Buffer Size	54
DVMT Mode	54
DVMT / FIXED Memory Size.....	55
Boot Display.....	55
Panel Number.....	55
TV Standard	55
Video Connector	55
TV Format.....	55
3.5 INTEGRATED PERIPHERALS	56
On Chip IDE Device	57
(Figure 9)	57
IDE HDD Block Mode	57
On-Chip Primary PCI IDE	58
IDE Primary/Secondary, Master/Slave PIO	58
IDE Primary/Secondary, Master/ Slave UDMA	58
On-Chip Secondary PCI IDE	58
On-Chip Serial ATA.....	59
SATA Mode	61
PATA IDE Mode.....	61
SATA Mode	62
SATA Port Speed Settings	62
SATA Mode	63
On board Device	64
USB Controller.....	64
USB 2.0 Controller	64
USB Keyboard Support	64

Contents

Azalia/AC97 Audio Select	64
Super IO Device	65
Onboard Serial Port 1	65
Onboard Serial Port 2	65
UART Mode Select.....	66
RxD, TxD Active	66
IR Transmission Delay	66
UR2 Duplex Mode	66
Onboard Parallel Port	67
Parallel Port Mode	67
EPP Mode Select	68
ECP Mode Use DMA.....	69
EPP Mode Select	70
ECP Mode Use DMA.....	70
PWRON After PWR-Fail	70
Onboard Serial Port 3	71
Serial Port 3 Use IRQ	71
Onboard Serial Port 4	71
Serial Port 4 Use IRQ	71
Onboard Serial Port 5	71
Serial Port 5 Use IRQ	71
Onboard Serial Port 6	71
Serial Port 6 Use IRQ	72
Watch Dog Timer Select	72
3.6 POWER MANAGEMENT SETUP	73
PCI Express PM Function.....	74
PCI Express PME.....	74
Power-Supply Type	74
ACPI Function.....	74
Power Management.....	74
Video off Method.....	75
Video Off In Suspend	75
Suspend Type	75
MODEM Use IRQ	75
Suspend Mode.....	76
HDD Power Down	76
Soft-Off by PWR-BTTN.....	76
CPU THRM-Throttling.....	76
Wake-Up by PCI card	76
Power On by Ring	76
Resume by Alarm.....	77
Date (of Month) Alarm.....	77
Time (hh: mm: ss) Alarm	77
Primary/ Secondary IDE 0/1.....	77
FDD, COM, LPT Port	78
PCI PIRQ [A-D] #	78
3.7 PNP/PCI CONFIGURATION	79

Contents

Init Display First	79
Reset Configuration Data	80
Resources Controlled By	80
IRQ Resource	81
IRQ-3,4,5,7,9,10,11,12,14,15 assigned to	81
PCI/VGA Palette Snoop	82
INT Pin 1/2/3/4/5/6/7/8 Assignment	82
Maximum Payload Size	82
3.8 PC HEALTH STATUS	83
CPU Warning Temperature	83
Current System Temp.....	83
Current CPU Temperature	83
CPU FAN Speed.....	84
CHASSIS Fan Speed	84
Shutdown Temperature	84
3.9 FREQUENCY/VOLTAGE CONTROL.....	85
Spread Spectrum	85
3.10 LOAD FAIL-SAFE DEFAULTS	85
3.11 LOAD OPTIMIZED DEFAULTS	86
3.12 SET SUPERVISOR/USER PASSWORD	86
3.13 SAVE & EXIT SETUP	88
3.14 EXIT WITHOUT SAVING	88
CHPTER 4 APPENDIX	89
A. I/O PORT ADDRESS MAP.....	90
B. INTERRUPT REQUEST LINES (IRQ)	91
C. POST BEEP	92

This page is intentionally left blank

Introduction

This manual is designed to give you information on the E19 Industrial Main Board.

The topics covered in this manual are as follows:

- ✓ **Features**
- ✓ **Specification**
- ✓ **Jumper setting and Connectors**
- ✓ **BIOS Setup**
- ✓ **Appendix**

Chapter 1 Features & Specifications

FEATURES	3
SPECIFICATIONS	4

❖Features

- Intel Atom processor N270 on board.
- Low power consumption for fan-less operation.
- Multiple I/O functions: 8 x USB2.0, 6 x COM ports, 2 x SATA, 1 x IRDA, 1x PIDE, 1x CF, 1x LPT.
- Multiple Display technology: CRT, Dual 24-bits LVDS LCD, TV-OUT and DVI (option).
- Supports Mini-PCI, PCI/32-bits and PCI-Express slot for flexible add-on cards expansion.
- Dual Gigabit LANs on board for maximum networking bandwidth.
- Two SO-DIMM sockets support up to 2GB DDR2-533 memory capacity.

❖ *Specifications*

Processor Support

- Intel Atom processor N270 on board.
- 1.6GHz Core Speed with Hyper-threading support.
- 533MHz front side bus speed.

BIOS

- Award Standard PnP Flash BIOS 6.0.
- 8Mbit FlashROM with BootBlock for Fail-safe.

System Memory

- Two DDR2 SO-DIMM Sockets.
- Supports DDR2-533 non-ECC memory up to 2.0 GB.

Chipset

- Intel 945GSE and ICH7M chipset.

Video

- Intel 945GSE Integrated GMA950 graphic engine.
- One D-Sub Female connector for CRT displays.
- One 40-pins connector for Dual 18/24-bits LVDS LCD displays.
- One 20-pins connector for DVI displays(option).
- One 8-pins connector to support TV-OUT

10/100M/1000M Ethernet

- Two Realtek RT8111C on board for Dual GbE LAN support.

On Board I/O

- Winbond 83627HF LPC I/F Super I/O chip.
- Six serial ports as COM1~COM6. COM2 is RS232/422/485 selectable by jumper.
- COM1 and COM2 are D-Sub 9-pins male on rear panel. Pin9 is powered with either +5V or +12V by jumper.
- COM3~COM6 are pin-headers for internal connections.
- One Parallel port supports SPP/ECP/EPP mode.
- 1 x IrDA port.

PIDE and SATA

- PIDE controller built in ICH7M supports up to ATA100 speed.
- One standard 44-pins box header to supports 2.5" HDD or DOM.
- Two SATA connectors from ICH7M support SATA-I and SATA-II devices.
- One 50-pins CF-II socket for Compact Flash Card.

Watchdog Timer

- Programmable watchdog timer for 1~255 seconds.

CMOS

- On-board RTC with 242 bytes of Battery-back CMOS RAM.

Audio

- RealTek ALC888 High-Definition Audio chip on-board.
- Three Audio Jacks on rear for Audio Line-IN, Line-OUT and MIC.
- Internal audio connector supports surrounding and SPDIF.

PCI/PCI-EXPRESS

- One standard 5V/32-bits PCI slot.
- One Standard PCI-Express x1 slot.
- One Mini-PCI 124pins Type-B socket.

Power

- Standard ATX20P and ATX12V connector for System power.
- Support both AT and ATX mode operation.

Software Compatibility

- Microsoft windows: Win2K, Win XP 32/64-bits, Vista 32/64-bits.
- Linux 32-bits/64-bits and DOS 6.22.

Cooling

- Two cooling FAN connectors close to CPU for CPU cooler and System FAN.

Dimensions

- 170mm (W) x 170mm (L).
- Standard Mini-ITX form factor.

Operating Temperature

- 0 to 60 °C operating Range.
- -40~70°C storage.

This page is intentionally left blank

Chapter 2 Jumper setting & Connectors


2.1 JUMPERS ON THE E19.....	8
2.2 CONNECTORS ON THE E19	14

2.1 Jumpers on the E19

The jumpers on the E19 allow you to configure your Main Board according to the needs of your applications. If you have doubts about the best jumper configuration for your needs, contact your dealer or sales representative. The following table lists the jumpers on E19 and their respective functions.

Jumper Locations on the E19	9
JP1, JP2, JP3: FSB SPD Selection	10
JP4: Clear CMOS RAM Data	10
JP5: CF Card Mode Selection	11
JP6, JP7: COM Power Selection	11
JP8: COM6 Power Pin (Pin9)	11
JP9, JP10: LAN Interface Type Selection.....	12
AT MODE: AT Mode Selection	12
LCDPWR: LCD PANEL Power Selection	12
COM2MODE: RS232/RS422/RS485.....	13

Jumper Locations on the E19

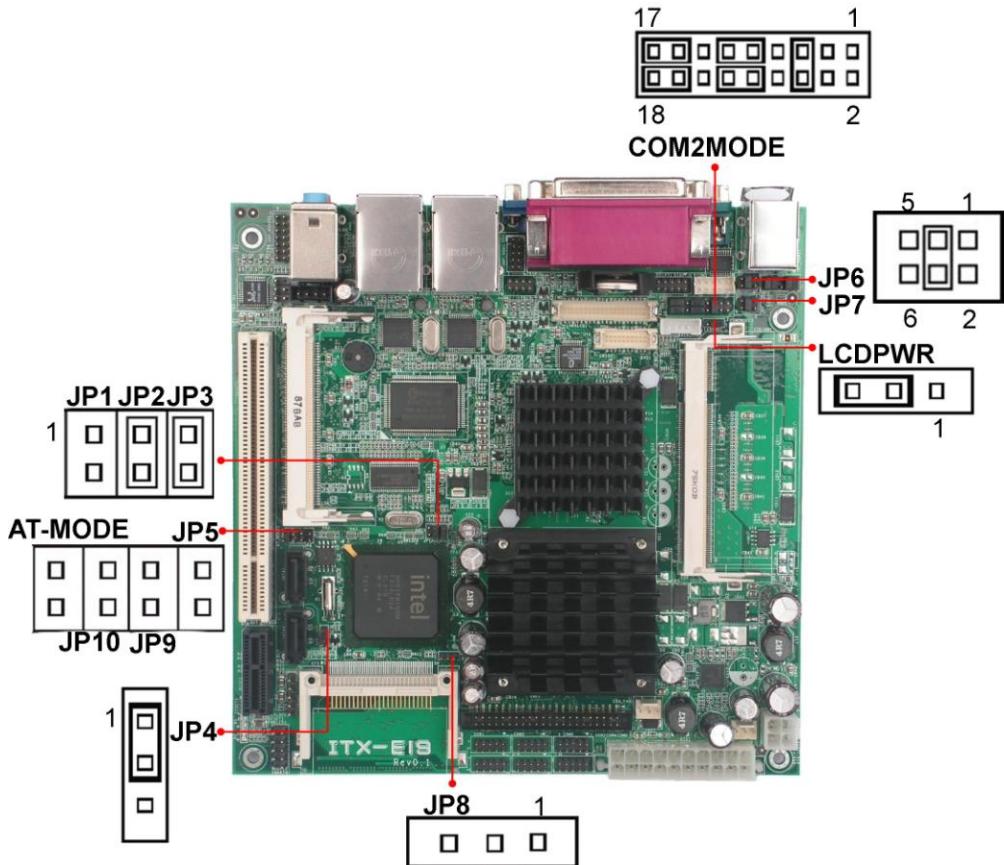

JP1, JP2, JP3: FSB SPD Selection

JP1 and JP2 and JP3 allow users to select the CPU FSB speed. It can be 533M or 667M. User should select the correct FSB speed to make their CPU run on correct speed and ensure the system runs stably.

FSB SPD	JP1~JP3		
533M	JP1	JP2	JP3
667M	JP1	JP2	JP3

The diagram shows two rows of three jumpers each. In the top row (533M), all three jumpers (JP1, JP2, JP3) have their top pins connected. In the bottom row (667M), the middle jumper (JP2) has its top pin disconnected from the others.

JP4: Clear CMOS RAM Data

This 3-pin Jumper allows the user to disconnect the built-in 3V battery power to clear the information stored in the CMOS RAM. To clear the CMOS data:


- (1) Turn off the system power.
- (2) Remove Jumper cap from pin1&2.
- (3) Short the pin2 and pin3 for three seconds.
- (4) Put Jumper cap back to pin1 & 2.
- (5) Turn on your computer.
- (6) Hold Down <Delete> during boot up and enter BIOS setup to enter your preferences.

COMS	NORMAL	CLEAR
JP4	1-2	2-3

The diagram shows two configurations for a 3-pin jumper labeled JP4. In the 'NORMAL' position, the top and bottom pins are connected. In the 'CLEAR' position, the middle pin is connected to the top and bottom pins.

JP5: CF Card Mode Selection

This Jumper is to select the CF works as Secondary Channel Master device or Slave device.

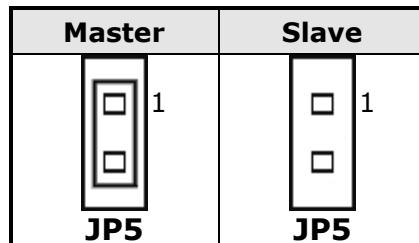


JP6, JP7: COM Power Selection

JP6, JP7 can be used to select the COM supple power:
+5V, Ring-IN or +12V.


JP6: COM1 Pin9 power or Ring-IN

JP7: COM2 pin9 power or Ring-IN

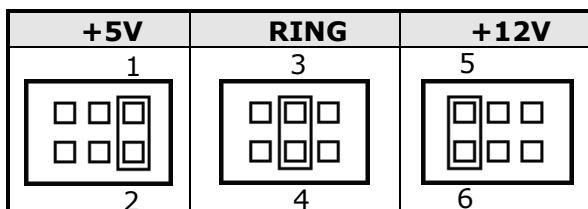

JP8: COM6 Power Pin (Pin9)

JP8: COM6 Pin9 power.

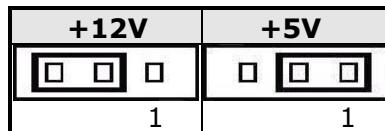

JP9, JP10: LAN Interface Type Selection

On-Board Fast Ethernet LAN chips can be disabled by shorting the JP9 or/and JP10 jumper.



Port #	Enabled	Disabled
LAN 1	 1 JP9	 1 JP9
LAN 2	 1 JP10	 1 JP10

AT MODE: AT Mode Selection

AT Mode	ATX Mode
 1	

LCDPWR: LCD PANEL Power Selection

  LCDPWR can be used to select the Panel LCD supple power: +3.3V or +5V. The default setting is on +3.3V. User need to check the LCD panel spec and adjust this jumper to make Panel work in specified power rail. This Jumper serves LVDS LCD connector.



LCDPWR	+5V	+3.3V
 1	 1	 1

COM2MODE: RS232/RS422/RS485

COM2 support multi-protocols include RS232, RS422 and RS485, while COM3, COM4, COM5 and COM6 support diffused RS232 protocol.

The Protocols of COM2 can be set up through jumpers.
COM2MODE: COM2 Protocols selection.

  The pin-out for each mode is illustrated on next chapter.



COM2MODE	I/F TYPE
17 1 	RS-232
18 2 	RS-422
18 2 17 1 	RS-485
18 2	

2.2 Connectors on the E19

The connector on the E19 allows you to connect external devices such as keyboard, floppy disk drives, hard disk drives, printers and etc. The following table lists the connectors on E19 and their respective page number.


Connector Locations on the E19	15
AUDIO Connector	16
INT_AUDIO Connector.....	16
SPDIF Connector	17
CD_IN Connector.....	17
DIO1 Connector	18
USB12, 34 Connectors	18
INT_VGA1 Connector	19
SATA1.2 Connectors	19
VGA1 Connector	20
LAN GbE+USBx2 Connectors.....	20
LAN1, 2 GbE Connectors.....	21
System FAN1 Connector	21
CPU FAN1 Connector.....	21
LAN1, 2 GbE LEDs	22
ATX_12V Power Connector.....	22
ATX-20P Connector.....	23
INT_KBMS1 Connector	23
PS/2 Keyboard & Mouse Connector	24
IrDA Connector	24
FRONT_PANEL Connector.....	25
TVOUT1.....	26
LVDS LCD Connector.....	27
DVI1 Connector.....	28
LPT1 Port.....	28
CF-II Connector.....	29
COM1 Serial Port	30
COM2, 6 Serial Ports	31
COM3, 4, 5 Serial Ports	32
IDE Connector.....	33

Connector Locations on the E19

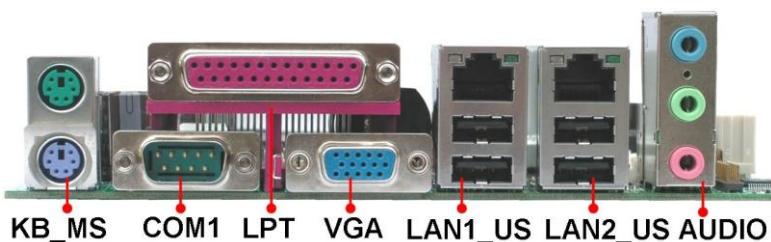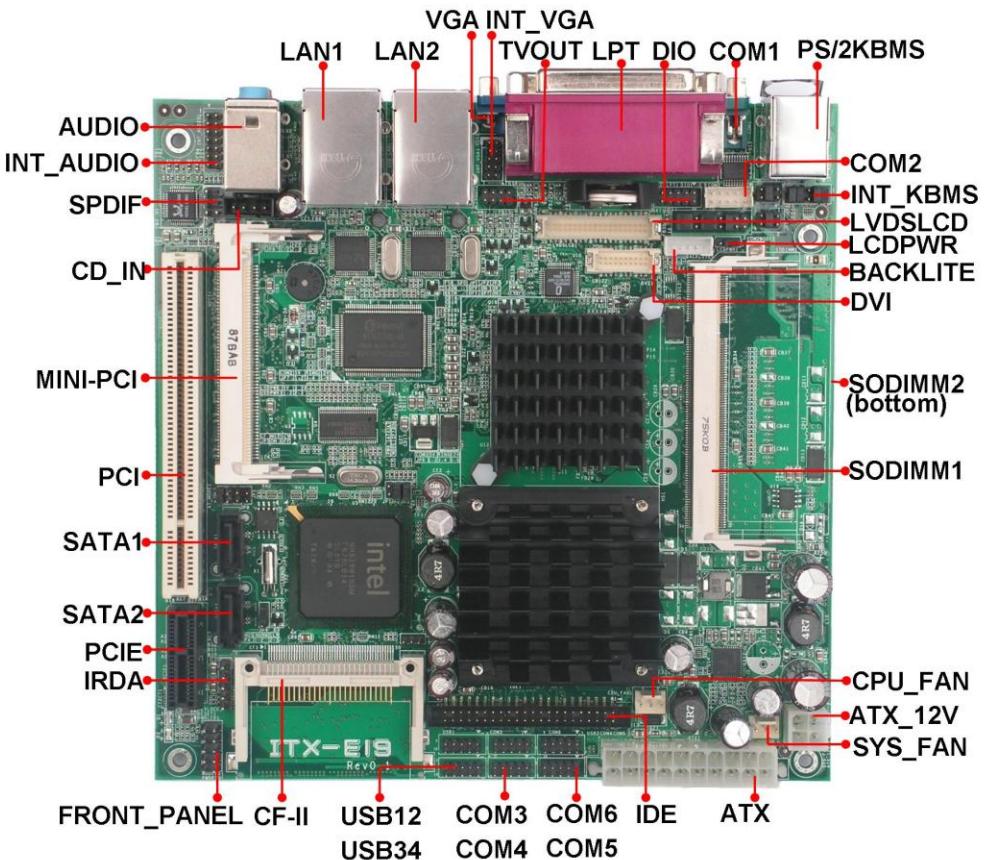

AUDIO Connector

After install onboard audio driver, you may connect speaker to Lin Out jack, microphone to MIC In jack. Audio sources devices like CD-ROM, walkman and etc can be connected to Lin-In jack.

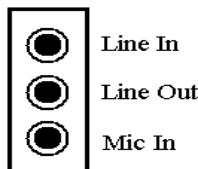


INT_AUDIO Connector

1	2	Signal Name	Pin #	Pin #	Signal Name
13	14	LINE-IN-L	1	2	LINE-IN-R
		GND	3	4	GND
		LINEOUT-L	5	6	LINEOUT-R
		GND	7	8	GND
		MIC1-IN-L	9	10	MIC1-IN-R
		LFE OUT	11	12	CENTER OUT
		SURR OUTL	13	14	SURR OUTR

SPDIF Connector


SPDIF connector is for S/PDIF audio modules that allow digital instead of analog sound input or output.

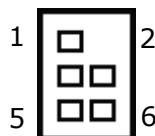

Signal Name	Pin	Pin	Signal Name
VCC	1	2	NC
SPDIFO	3	4	SPDIFI
GND	5	6	GND

CD_IN Connector

 
CD_IN connector is designed for wire the CD_ROM audio signals to the on-board Audio CODEC.



Pin #	Signal Name
1	CD_L
2	CD_GND
3	CD_GND
4	CD_R

DIO1 Connector


DIO ports support 8 digital I/O bits. Each bit can be configured as Input or output individually. All bits are 5V tolerant.

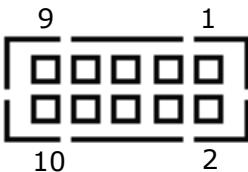

Signal Name	Pin #	Pin #	Signal Name
GND	1	2	+5V
DIO_0	3	4	DIO_4
DIO_1	5	6	DIO_5
DIO_2	7	8	DIO_6
DIO_3	9	10	DIO_7

USB12, 34 Connectors


The following table shows the pin outs of the USB12, USB34, USB56 connectors.

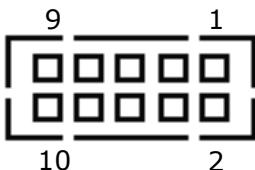

Signal Name	Pin #	Pin #	Signal Name
N.C.	1	2	VCC
GND	3	4	USB-
USB+	5	6	USB+
USB-	7	8	GND
VCC	9	10	N.C.


INT_VGA1 Connector

NT_VGA is for internal Video A/D board connection. The pin out is listed as below:

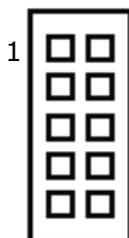


Signal Name	Pin #	Pin #	Signal Name
RED	1	2	GND
GREEN	3	4	GND
BLUE	5	6	GND
HSYNC	7	8	DDC_DATA
VSYNC	9	10	DDC_CLK

 SATA1.2 Connectors



Pin #	Signal Name
1	GND
2	SATARX+
3	SATARX-
4	GND
5	SATATX-
6	SATATX+
7	GND

 
VGA1 Connector



Signal Name	Pin #	Pin #	Signal Name
Red	1	2	Green
Blue	3	4	N.C.
GND	5	6	GND
GND	7	8	GND
N.C.	9	10	GND
N.C.	11	12	DDC_DATA
H SYNC	13	14	V SYNC
DDC_CLK	15		

LAN GbE+USBx2 Connectors

Below pictures show the location of LAN RJ45 ports and USB Type-A ports on the Combo RJ45+ USB connector.

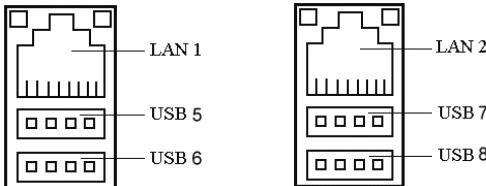


Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker and etc., Have a standard USB interface. Also make sure your OS supports USB controller.

If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

LAN1, 2 GbE Connectors


This connector is for the 10/100/1000Mbps Ethernet capability. The figure below shows the pin out assignments of this connector and its corresponding input jack.

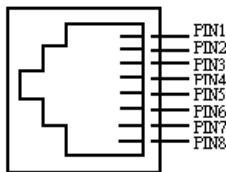

Pin #	Signal Name
1	MDI0+
2	MDI0-
3	MDI1+
4	MDI1-
5	MDI2+
6	MDI2-
7	MDI3+
8	MDI3-

System FAN1 Connector

 
This is a 3-pin header for the system fan.



Pin #	Signal Name
1	Ground
2	FANPWR2
3	VCC

CPU FAN1 Connector

 
This is a 3-pin header for the CPU fan.




Pin #	Signal Name
1	Ground
2	FANPWR1
3	VCC

LAN1, 2 GbE LEDs

 The LAN_LEDs on top of RJ45 are to display the current network connection status. The green color LED on the right-hand side shows the link status and TX/RX activity. The Orange/Green Dual color LED on the left-hand side indicates the operation mode, i.e. 10Base-T, 100Base-T or 1000Base-T.



LNK/ACT	STATUS
GREEN	Link
OFF	Disconnected
FLASH	Packets TX/RX

 


SPEED	MODE
ORANGE	1000 Mbps
GREEN	100 Mbps
OFF	10 Mbps

ATX_12V Power Connector

The ATX_12V power connector mainly supplies power to the CPU.

Caution!

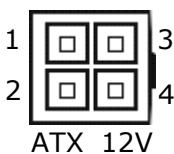


Pin #	Signal Name
1	GND
2	GND
3	+12V
4	+12V

ATX-20P Connector

The ATX power connector supplies power to the whole Main board.


10

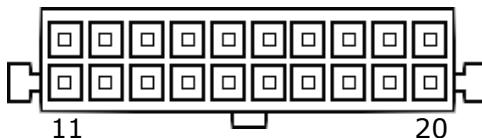

Pin #	Signal Name	Pin #	Signal Name
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	5V	14	PSON
5	GND	15	GND
6	5V	16	GND
7	GND	17	GND
8	POK	18	-5V
9	5VSB	19	5V
10	+12V	20	5V

INT_KBMS1 Connector


INT_KBMS is for internal input devices or MSR connection. The pin out is listed as below:

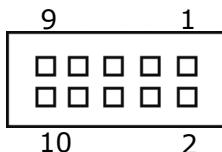

Signal Name	Pin #	Pin #	Signal Name
JPKBDAT	1	2	KBDAT
JPKBCLK	3	4	KBCLK
BKBVCC	5	6	GND
JPMSDAT	7	8	MSDAT
JPMCLK	9	10	MSCLK

PS/2 Keyboard & Mouse Connector

 The following table describes the pin assignment of PS/2 Keyboard and Mouse connector, which is mount on button of bracket. To attach PS/2 Keyboard and mouse, users need to connect through a PS/2 1-to-2 Y-cable and plug into this Mini-Din connector. All the ITX-E16 boards come with a Y-cable. Contact with your dealer if the Y-cable is missing.



Pin #	Signal Name
1	Keyboard/Mouse data
2	NC
3	GND
4	5V
5	Keyboard/Mouse clock
6	GND

IrDA Connector


This connector is used for an IrDA connector for wireless communication.



IrDA Pin #	Signal Name
1	+5V
2	CIRRX
3	IRTX
4	Ground
5	IRRX


FRONT PANEL Connector

The front panel of the case has a control panel, which provides light indication of the computer activities and switches to change the computer status.

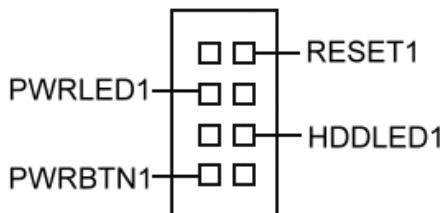

➤ **ATX Power ON/OFF Button**


This 2-pin connector acts as the “Power Supply On/Off Switch” on the E16 main board. When pressed, the switch will force the Main board to power on. When pressed again, it will force the main board to power off.

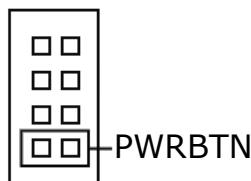

PWR BTN Pin #	Signal Name
1	PWR-BTN
5	GND

➤ **IDE Hard Disk LED Connector**


This connector connects to the hard drive activity LED on control panel. This LED will flash when the HDD is being accessed.

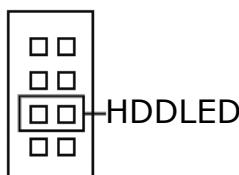

IDE LED Pin #	Signal Name
2	VCC
6	HDDLED

➤ **Power-On LED**


This connector allows users to connect to Front Panel Power indicator.

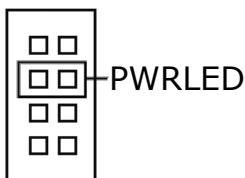

PWR LED Pin #	Signal Name
3	VCC
7	Ground


➤ **RESET Switch**

The reset switch allows the user to reset the system without turning the main power switch off and then on. Orientation is not required when making a connection to this header.

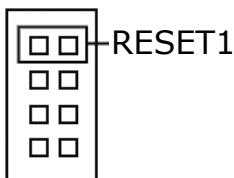

RESET Pin #	Signal Name
4	Reset
8	Ground

TVOUT1

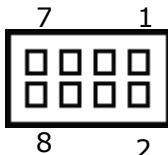

Signal Name	Pin #	Pin #	Signal Name
LUMA	1	2	CVBS
TVGND	3	4	TVGND
CHOMA	5	6	NC
GND	7	8	NC

LVDS LCD Connector

The LCD panel, inverter for LCD LAMP, Touch-screen Serial Interface must be connected to this LVDS header, using the below described connector:



Signal Name	Pin #	Pin #	Signal Name
+12V	2	1	+12V
GND	4	3	GND
LCDVDD 5V/3.3V	6	5	LCDVDD 5V/3.3V
GND	8	7	GND
BCKLITE_ON	10	9	BRIGHTNES
LVDS_GND	12	11	LVDS_GND
CHB_TX0+	14	13	CHA_TX0+
CHB_TX0-	16	15	CHA_TX0-
LVDS_GND	18	17	LVDS_GND
CHB_TX1+	20	19	CHA_TX1+
CHB_TX1-	22	21	CHA_TX1-
LVDS_GND	24	23	LVDS_GND
CHB_TX2+	26	25	CHA_TX2+
CHB_TX2-	28	27	CHA_TX2-
LVDS_GND	30	29	LVDS_GND
CHB_TXC+	32	31	CHA_TXC+
CHB_TXC-	34	33	CHA_TXC-
LVDS_GND	36	35	LVDS_GND
CHB_TX3+	38	37	CHA_TX3+
CHB_TX3-	40	39	CHA_TX3-


DVI1 Connector



Signal Name	Pin #	Pin #	Signal Name
TCLK+	1	2	TDC1+
TCLK-	3	4	TDC1-
GND	5	6	GND
TDC0+	7	8	TDC2+
TDC0-	9	10	TDC2-
GND	11	12	GND
NC	13	14	NC
CLOCK	15	16	DATA
DVI_PLUG	17	18	GND
VCC	19	20	VCC


LPT1 Port

 The LPT parallel port is a standard DSUB 26-pins Female connector. It can be configured as EPP or ECP or SPP mode.



Signal Name	Pin #	Pin #	Signal Name
Strobe	1	2	DATA0
DATA1	3	4	DATA2
DATA3	5	6	DATA4
DATA5	7	8	DATA6
DATA7	9	10	/ACK
BUSY	11	12	PE
SLCT	13	14	/AUTOFD
/ERROR	15	16	/INIT
SELIN	17	18	GND
GND	19	20	GND
GND	21	22	GND
GND	23	24	GND
GND	25		


CF-II Connector

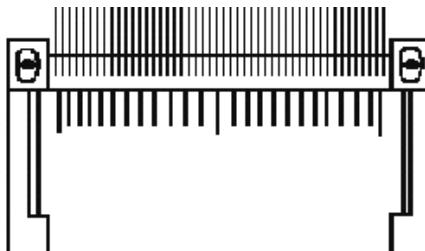

Signal Name	Pin #	Pin #	Signal Name
GND	1	2	PDD3
PDD4	3	4	PDD5
PDD6	5	6	PDD7
PCS1-	7	8	GND
GND	9	10	GND
GND	11	12	GND
VCC	13	14	GND
GND	15	16	GND
GND	17	18	PDA2
PDA1	19	20	PDA0
PDD0	21	22	PDD1
PDD2	23	24	N.C.
N.C.	25	26	N.C.
PDD11	27	28	PDD12
PDD13	29	30	PDD14
PDD15	31	32	PCS3-
N.C.	33	34	PDIOR-
PDIOW-	35	36	VCC
IRQ14	37	38	VCC
MST#_SLV	39	40	N.C.
PST1-	41	42	PIORDY
PDDREQ	43	44	PDDACK-
CF_LED-	45	46	N.C.
PDD8	47	48	PDD9
PDD10	49	50	GND

COM1 Serial Port


COM1 is a 9-pin D-Sub male connector. The following table shows its pin assignments.

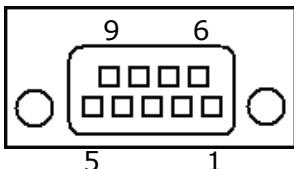

Pin #	RS232 Mode Signal Name
1	DCD, Data carrier detect
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	GND, ground
6	DSR, Data set ready
7	RTS, Request to send
8	CTS, Clear to send
9	+5V, Ring-IN or +12V

COM2, 6 Serial Ports


COM2, COM6 a 10-pins header connector, is the onboard COM2, COM6 serial port of the E16. The following table shows its pin assignments.

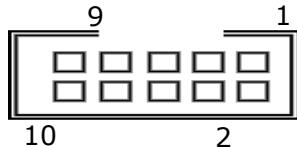

Pin #	RS232 Mode Signal Name
1	DCD, Data carrier detect
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	GND, ground
6	DSR, Data set ready
7	RTS, Request to send
8	CTS, Clear to send
9	+5V,Ring-IN or +12V
10	N.C.


COM3, 4, 5 Serial Ports

COM3, COM4, COM5 a 10-pin header connector, is the onboard COM3, COM4, COM5 serial port of the E16. The following table shows its pin assignments.

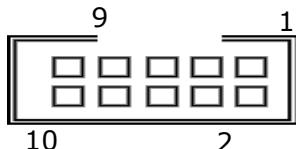

Pin #	RS232 Mode Signal Name
1	DCD, Data carrier detect
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	GND, ground
6	DSR, Data set ready
7	RTS, Request to send
8	CTS, Clear to send
9	Ring-IN
10	N.C.

IDE Connector

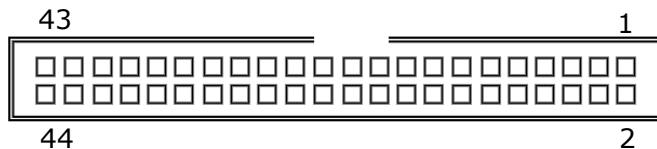

Signal Name	Pin #	Pin #	Signal Name
Reset IDE	1	2	Ground
Host data 7	3	4	Host data 8
Host data 6	5	6	Host data 9
Host data 5	7	8	Host data 10
Host data 4	9	10	Host data 11
Host data 3	11	12	Host data 12
Host data 2	13	14	Host data 13
Host data 1	15	16	Host data 14
Host data 0	17	18	Host data 15
Ground	19	20	Key
DRQ	21	22	Ground
Host IOW	23	24	Ground
Host IOR	25	26	Ground
IOCHRDY	27	28	Host PU 0
DACK	29	30	Ground
IRQ14	31	32	NC
Address 1	33	34	P66DET
Address 0	35	36	Address 2
Chip select 1	37	38	Chip select 3
Activity	39	40	Ground
+5V	41	42	+5V
GND	43	44	No connect

This page is intentionally left blank

Chapter 3 BIOS Setup

This chapter describes the different settings available in the Award BIOS that comes with the E19 CPU card. The topics covered in this chapter are as follows:

3.1 MAIN MENU.....	37
3.2 STANDARD CMOS FEATURES.....	40
3.3 ADVANCED BIOS FEATURES.....	45
3.4 ADVANCED CHIPSET FEATURES	52
3.5 INTEGRATED PERIPHERALS	56
3.6 POWER MANAGEMENT SETUP.....	73
3.7 PNP/PCI CONFIGURATION	79
3.8 PC HEALTH STATUS.....	83
3.9 FREQUENCY/VOLTAGE CONTROL	85
3.10 LOAD FAIL-SAFE DEFAULTS	85
3.11 LOAD OPTIMIZED DEFAULTS.....	86
3.12 SET SUPERVISOR/USER PASSWORD	86
3.13 SAVE & EXIT SETUP	88
3.14 EXIT WITHOUT SAVING.....	88

BIOS Introduction

This manual describes AMI's Setup program, which is built into the ROM BIOS. The Setup program allows users to modify the basic system configuration. This special information is then stored in battery-backed RAM so that it retains the Setup information when the power is turned off.

Starting Setup

The following pages are meant to give you a better insight into the options you have to setup your system. Many options depend on the choice of type of memory, memory speed, peripherals and the programs that you will be running. The effective of these settings are related to system performance that can destabilize operation. We urge you to proceed with caution.

When the system is powered on, use the bios set program when you start up your system, reconfiguring your system, or press "Delete" promptly to run setup. This section will explain how to configure your system using this utility. And this change will be recognized and record them in the CMOS RAM of the SPI chip.

When you start up the computer, the system provides you the opportunity to set the program. Press the "del" during the P.O.S.T (Power-on Self-Test) to enter the program setting. And the POST will continue with the test routines. And the firmware chip will store the setup utility on the board. However, if you want to enter the setup after the POST, you can press Ctrl + Alt + Del simultaneously or turn off the power then back on.

3.1 Main Menu

Phoenix-AwardBIOS CMOS Setup	
Utility	
▶ Standard CMOS Features	▶ Frequency/Voltage Control
▶ Advanced BIOS Features	Load Fail-Safe Defaults
▶ Advance Chipset Features	Load Optimized Defaults
▶ Integrated Peripherals	Set Supervisor Password
▶ Power Management Setup	Set User Password
▶ PnP/PCI Configurations	Save & Exit Setup
▶ PC Health Status	Exit Without Saving
Esc :Quit ↑ ↓ ← → : Select Item F10:Save & Exit Setup	
Load Optimized Defaults	

(Figure 1)

Note that a brief description of each highlighted selection appears at the bottom of the screen.

Setup Items

The main menu includes the following main setup categories.

➤ Standard CMOS Features

Use this menu for basic system configuration.

➤ Advanced BIOS Features

Use this menu to set the Advanced Features available on your system.

➤ Advance Chipset Features

Use this menu to change the values in the chipset registers and optimize your system's performance.

➤ **Integrated Peripherals**

Use this menu to specify your settings for integrated peripherals.

➤ **Power Management Setup**

Use this menu to specify your settings for power management.

➤ **PnP/PCI Configurations**

Use this menu to set up the PnP/PCI configuration.

➤ **PC Health Status**

Use this menu to display the CPU temperature, FAN speed and voltages.

➤ **Frequency/Voltage Control**

Use this menu to specify your settings for frequency/voltage control.

➤ **Load Fail-Safe Defaults**

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate.

➤ **Load Optimized Defaults**

Use this menu to load the BIOS default values that are factory settings for optimal performance system operations. While Award has designed the custom BIOS to maximize performance, the factory has the right to change these defaults to meet their needs.

➤ **Set Supervisor/ User Password**

Use this menu to set User and Supervisor Passwords.

➤ **Save & Exit Setup**

Save CMOS value changes to CMOS and exit setup.

➤ **Exit Without Saving**

Abandon all CMOS value changes and exit setup.

3.2 Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <Pg Dn> keys to select the value you want in each item.

Phoenix-Award BIOS CMOS Setup Utility Standard CMOS Features		
Date (mm :dd: yy)	Mon, Apr 28 2008	Item Help
Time (hh: mm: ss)	15 : 35 : 35	Menu Level ►
►IDE Channel 0 Master	[None]	Change the day,
►IDE Channel 0 Slave	[None]	month, year,
►IDE Channel 1 Master	[None]	and century
►IDE Channel 1 Slave	[None]	
Drive A	[None]	
Drive B	[None]	
Video	[EGA/VGA]	
Halt On	[All , But Disk/Key]	
Base Memory	639K	
Extend Memory	1038336K	
Total Memory	1039360K	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General
Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

(Figure 2)

This table shows the selections that you can make on the Standard CMOS Menu

Item	Options	Description
Date	Month DD YYYY	Set the system date. Note that the 'Day' automatically changes when you set the date
Time	HH : MM : SS	Set the system time
IDE Channel 0 Master	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
IDE Channel 0 Slave	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
IDE Channel 1 Master	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
IDE Channel 1 Slave	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
Drive A Drive B	None 360K, 5.25 in 1.2M, 5.25 in 720K, 3.5 in 1.44M, 3.5 in 2.88M, 3.5 in	Select the type of floppy disk drive installed in your system
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device
Halt On	All Errors No Errors All, but Keyboard All, but Diskette All, but Disk/Key	Select the situation in which you want the BIOS to stop the POST process and notify you
Base Memory	N/A	Displays the amount of conventional memory detected during boot up
Extended Memory	N/A	Displays the amount of extended memory detected during boot up
Total Memory	N/A	Displays the total memory available in the system

IDE Channel 0, 1 Master/ Slave

The IDE adapters control the hard disk drive. Use a separate sub menu to configure each hard disk drive. Figure 3 shows the IDE Channel 0 / Channel 1 master sub menu.

Phoenix-Award BIOS CMOS Setup Utility IDE Channel 0 Master		
IDE HDD	[Press Enter]	Item Help
Auto-Detection		Menu Level ►
IDE Channel 0 Master	[Auto]	To auto-detect the
Access Mode	[Auto]	HDD's size, head...on
Capacity	0 MB	this channel
Cylinder	0	
Head	0	
Precomp	0	
Landing Zone	0	
Sector	0	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit
F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

(Figure 3)

Use the legend keys to navigate through this menu and exit to the main menu. Use the Table listed below to configure the hard disk.

Item	Options	Description
IDE HDD Auto-detection	Press Enter	Press Enter to auto-detect the HDD on this channel. If detection is successful, it fills the remaining fields on this menu.
IDE Channel 0 Master	None Auto Manual	Selecting 'manual' lets you set the remaining fields on this screen. Selects the type of fixed disk. "User Type" will let you select the number of cylinders, heads, etc. Note: PRECOMP=65535 means NONE !
Access Mode	CHS LBA Large Auto	Choose the access mode for this hard disk
Capacity	Auto Display your disk drive size	Disk drive capacity (Approximated). Note that this size is usually slightly greater than the size of a formatted disk given by a disk checking program.
The following options are selectable only if the 'IDE Channel 0 Master' item is set to 'Manual'		
Cylinder	Min = 0 Max = 65535	Set the number of cylinders for this hard disk.
Head	Min = 0 Max = 255	Set the number of read/write heads
Precomp	Min = 0 Max = 65535	**** Warning: Setting a value of 65535 means no hard disk
Landing zone	Min = 0 Max = 65535	****
Sector	Min = 0 Max = 255	Number of sectors per track

Drive A/B

These fields identify the types of floppy disk drive A or drive B that has been installed in the computer. The available specifications are:

None(default)	360K	1.2M	720K	1.44M	2.88M
	5.25 in.	5.25 in.	3.5 in.	3.5 in.	3.5 in.

Video

This field selects the type of video display card installed in your system. You can choose the following video display cards:

EGA/VGA: For EGA, VGA, SEGA, SVGA or PGA monitor adapters. (**default**)

CGA 40: Power up in 40 column mode.

CGA 80: Power up in 80 column mode.

MONO: For Hercules or MDA adapters.

Halt On

This field determines whether the system will halt if an error is detected during power up.

All errors	Whenever the BIOS detects a non-fatal error, the system will stop and you will be prompted.
No errors	The system boot will not be halted for any error that may be detected.
All, But Keyboard	The system boot will not be halted for a keyboard error; it will stop for all other errors
All, But Diskette	The system boot will not be halted for a disk error; it will stop for all other errors.
All, But Disk/Key	The system boot will not be halted for a key- board or disk error; it will stop for all others. (default)

3.3 Advanced BIOS Features


This section allows you to configure your system for basic operation. You have the opportunity to select the system's default speed, boot-up sequence, keyboard operation, shadowing and security.

Phoenix-Award BIOS CMOS Setup Utility Advanced BIOS Features		
►CPU Features	[Press Enter]	Item Help
►Hard Disk Boot Priority	[Press Enter]	Menu Level
Virus Warning	[Disabled]	►
CPU L1 & L2 Cache	[Enabled]	
CPU L3 Cache	[Enabled]	
Quick Power On Self Test	[Enabled]	
First Boot Device	[Hard Disk]	
Second Boot Device	[CDROM]	
Third Boot Device	[LS120]	
Boot Other Device	[Enabled]	
Swap Floppy Drive	[Disabled]	
Boot Up Floppy Seek	[Enabled]	
Boot UP Num Lock Status	[Off]	
Gate A20 Option	[Fast]	
Typematic Rate Setting	[Disabled]	
x Typematic Rate (Chars/Sec)	6	
x Typematic Delay (Msec)	250	
Security Option	[Setup]	
APIC Mode	[Enabled]	
MPS Version Control For OS	[1.4]	
OS Select For DRAM > 64MB	[Non-OS2]	
Report No FDD For WIN 95	[No]	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General
Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

(Figure 4)

➤CPU Feature

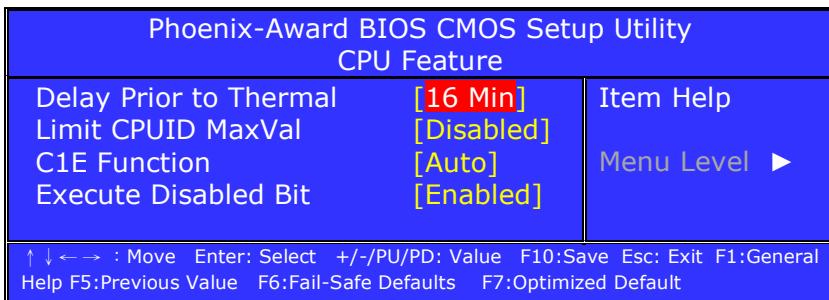

(Figure 5)

Delay Prior to Thermal

Delay Prior To Thermal is set at 16 minutes as default, which means the board will wait 16 minutes before it activates the processor's integrated thermal control circuit.

The choice: 4 Min , 8 Min, 16 Min (**default**), 32 Min.

Limit CPUID Max Val

The choice: Enabled, Disabled (**default**).


C1E Function

The choice: Auto (**default**), Disabled

Execute Disabled Bit

The choice: Enabled (**default**), Disabled

➤Hard Disk Boot Priority

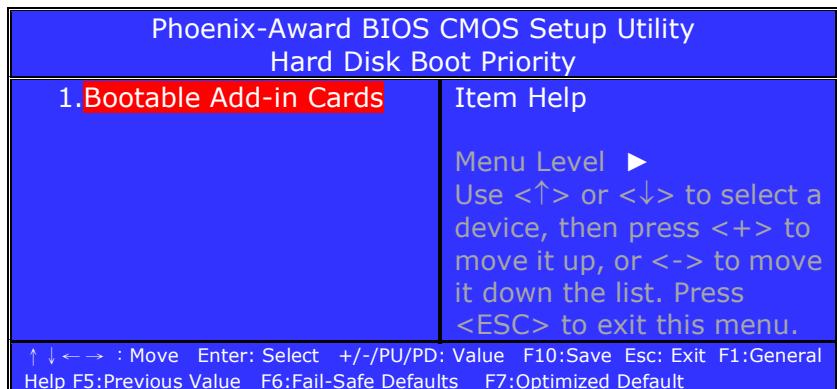

(Figure 6)

Bootable Add-in Cards

This is for setting the priority of the hard disk boot order when the "Hard Disk" option is selected in the "[First/Second/Third] Boot Device" menu item.

Virus Warning

Allows you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection.

If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

Enabled	Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector or hard disk partition table.
Disabled	No warning message will appear when anything attempts to access the boot sector or hard disk partition table. (default)

CPU L1 & L2 Cache

These two categories speed up memory access.
However, it depends on CPU/chipset design.

Enabled	Enable cache (default)
Disabled	Disable cache

CPU L3 Cache

This field is used to enable or disable the CPU's L3 cache.
The choice: Enabled **(default)**, Disabled.

Quick Power On Self Test

Allows the system to skip certain tests while booting.
This will decrease the time needed to boot the system.

Enabled	Enable quick POST (default)
Disabled	Normal POST

First/Second/Third Boot Device

The BIOS attempts to load the operating system from the devices in the sequence selected in these items.
The Choice: Floppy, LS120, Hard-Disk, ZIP100, CDROM, Disabled, USB-FDD, USB-ZIP, USB-CDROM, Legacy LAN.

Item	Default
First Boot Device	Hard-Disk
Second Boot Device	CDROM
Third Boot Device	LS120

Boot Other Device

When enabled, BIOS will try to load the operating system from other device when it failed to load from the three devices above.

The choice: Enabled (**default**), Disabled.

Swap Floppy Drive

If the system has two floppy drives, choose "Enabled" to assign physical drive B to logical drive A and vice-versa.
The choice: Enabled, Disabled (**default**).

Boot Up Floppy Seek

Selection of the command 'Disabled' will speed the boot up. Selection of 'Enabled' Searches disk drives during boot up.

The choice: Enabled (**default**), Disabled

Boot Up Num Lock Status

Selects power on state for Num Lock.

The choice: On, Off (**default**).

Gate A20 Option

The choice:

Normal: A pin in the keyboard controller controls GateA20.

Fast (**default**): Lets chipset control GateA20.

TypeMatic Rate Setting

Keystrokes repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be selected.

The choice: Enabled, Disabled (**default**).

If TypeMatic Rate Setting is [Enabled], can choice Rate and Delay:

TypeMatic Rate (Chars/Sec)

Sets the number of times a second to repeat a keystroke when you hold the key down.

The choice: 6 (**default**), 8, 10, 12, 15, 20, 24, 30

TypeMatic Rate (Chars/Sec)	
6 [█]
8 []
10 []
12 []
15 []
20 []
24 []
30 []

↑↓: Move Enter: Accept ESC:Abort

TypeMatic Delay (Msec)

Sets the delay time after the key is held down before it begins to repeat the keystroke.

The choice: 250 (**default**), 500, 750, and 1000.

TypeMatic Delay (Msec)	
250 [█]
500 []
750 []
1000 []

↑↓: Move Enter: Accept ESC:Abort

Security Option

Select whether the password is required every time the system boots or only when you enter setup.

System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt. (default)

Note: To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.

APIC Mode

This setting allows to enable the APIC mode.

The choice: Enabled (**default**), Disabled

MPS Version Control For OS

The BIOS supports version 1.1 and 1.4 of the Intel multiprocessor specification.

Select version supported by the operation system running on this computer.

The choice: 1.1, 1.4 (**default**).

OS Select For DRAM > 64MB

Select OS2 only if you are running OS/2 operating system with greater than 64MB of RAM on the system.

The choice: Non-OS2 (**default**), OS2.

Report No FDD For WIN 95

The choice: No (**default**), Yes.

3.4 Advanced Chipset Features

This section allows you to configure the system based on the specific features of the installed chipset. This chipset manages bus speeds and access to system memory resources, such as DRAM and the external cache. It also coordinates communications between the conventional ISA bus and the PCI bus. It must be stated that these items should never need to be altered. The default settings have been chosen because they provide the best operating conditions for your system. The only time you might consider making any changes would be if you discovered that data was being lost while using your system.

Phoenix-Award BIOS CMOS Setup Utility		
Advanced Chipset Features		
DRAM Timing	Selectable	[By SPD]
x CAS Latency Time	[Auto]	Item Help
x Dram RAS# to CAS# Delay	[Auto]	Menu Level
x DRAM RAS# Precharge	[Auto]	►
x Precharge dealy (tRAS)	[Auto]	
x System Memory Frequency	[Auto]	
SLP_S4#Assertoin Width	[4 to 5 Sec]	
System BIOS Cacheable	[Enabled]	
Video BIOS Cacheable	[Disabled]	
Memory Hole At 15M-16M	[Disabled]	
VGA Setting		
On-Chip Frame Buffer Size	[8MB]	
DVMT Mode	[DVMT]	
DVMT / FIXED Memory Size	[128MB]	
Boot Display	[CRT+LFP]	
Panel Number	[3]	
TV Standard	[Off]	
Video Connector	[Automatic]	
TV Format	[Auto]	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help
F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

(Figure 7)

DRAM Timing Selectable

The choice: Manual, By SPD (**default**).

If DRAM Timing Selectable is [Manual], can choice these Items:

- ▶ CAS Latency Time
- ▶ Dram RAS# to CAS# Delay
- ▶ DRAM RAS# Precharge
- ▶ Precharge dealy (tRAS)
- ▶ System Memory Frequency

CAS Latency Time

This controls the latency between DDR RAM read command and the time that the data actually becomes available.

Leave this on the default setting.

The choice: 5, 4, 3, 6, Auto (**default**).

DRAM RAS# to CAS# Delay

In order to improve performance, certain space in memory is reserved for PISA cards.

This memory must be mapped into the memory space below 16MB.

The choice: 2, 3, 4, 5, 6, Auto (**default**).

DRAM RAS# Precharge

This controls the idle clocks after issuing a precharge command to DRAM.

Leave this on the default setting.

The choice: Auto (**default**), 2, 3, 4, 5, 6.

Precharge dealy (tRAS)

The choice: Auto (**default**),
4,5,6,7,8,9,10,11,12,13,14,15.

System Memory Frequency

The choice: Auto (**default**), 533MHz, 667MHz

SLP_S4#Assertoin Width

Set SLP_S4# pin.

The choice: 4 to5 Sec (**default**), 3 to 4Sec, 2to 3Sec, 1to2Sec.

System BIOS Cacheable

Selecting the “Enabled” option allows caching of the system BIOS ROM at F0000h-FFFFFh, which is able to improve the system performance. However, any programs that attempts to write to this memory block will cause conflicts and result in system errors.

The choice: Enabled (**default**), Disabled.

Video BIOS Cacheable

Selecting Enabled allows caching of the video BIOS, resulting in better system performance. However, if any program writes to this memory area, a system error may occur.

The choice: Enabled, Disabled (**default**)

Memory Hole At 15M-16M

Enabling this feature reserves 15 MB to 16 MB memory address space for ISA expansion cards that specifically require this setting. This makes memory from 15 MB and up unavailable to the system. Expansion cards can only access memory up to 16 MB.

The choice: Enabled, Disabled (**default**)

On-Chip Frame Buffer Size

User can select frame buffer size.

The choice: 1MB, 8MB (**default**).

DVMT Mode

This field shows the current DVMT mode.

The choice: FIXED, DVMT (**default**), BOTH

DVMT / FIXED Memory Size

This field is used to select the graphics memory size used by DVMT/ Fixed mode.

The choice: 64MB, 128MB (**default**), 224MB

Boot Display

This field is used to select the type of display to use when the system boots.

The choice:

Auto	CRT	TV	EFP
LFP	CRT+LFP (default)	EFP+LFP	

Panel Number

The choice: 1,2,3

(default),4,5,6,7,8,9,10,11,12,13,14,15,16

TV Standard

The choice: Off (**default**), NTSC, PAL, SECAM.

Video Connector

The choice: Automatic (**default**), Composite, Component, Both.

TV Format

The choice:

Auto(default)	NTSC_M	NTSC_M_J
NTSC_433	NTSC_N	PAL_B
PAL_G	PAL_D	PAL_H
PAL_I	PAL_M	PAL_N
PAL_60	SECAM_L	SECAM_L1
SECAN_B	SECAN_D	SECAN_G
SECAN_H	SECAN_K	SECAN_K1

3.5 Integrated Peripherals

Phoenix-Award BIOS CMOS Setup Utility Integrated Peripherals		
► On Chip IDE Device	[Press Enter]	Item Help
► Onboard Device	[Press Enter]	Menu Level
► Super IO Device	[Press Enter]	►
Onboard Serial Port 3	[3E8]	
Serial Port 3 Use IRQ	[IRQ3]	
Onboard Serial Port 4	[2E8]	
Serial Port 4 Use IRQ	[IRQ4]	
Onboard Serial Port 5	[4F8]	
Serial Port 5 Use IRQ	[IRQ5]	
Onboard Serial Port 6	[4E8]	
Serial Port 6 Use IRQ	[IRQ7]	
Watch Dog Timer Select	[Disabled]	

↑ ↓ ← → : Move Enter: Select +-/PU/PD: Value F10:Save Esc: Exit F1:General
Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

(Figure 8)

➤On Chip IDE Device

Phoenix-Award BIOS CMOS Setup Utility On Chip IDE Device		
IDE HDD Block Mode	[Enabled]	Item Help
On-Chip Primary PCI IDE	[Enabled]	Menu Level
IDE Primary Master PIO	[Auto]	► If your IDE hard drive supports block mode select
IDE Primary Slave PIO	[Auto]	Enabled for automatic detection of the optimal number of block read/writes per sector where the drive can support
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
On-Chip Secondary PCI IDE	[Enabled]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
*** On-Chip Serial ATA Setting***		
x SATA Mode	IDE	
On-Chip Serial ATA	[Auto]	
x SATA PORT Speed Settings	Disable	
x PATA IDE Mode	Secondary	
x SATA Port	PO, P2 is Primary	

↑ ↓ ← → : Move Enter: Select +/-PU/PD: Value F10:Save Esc: Exit F1:General Help
F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

(Figure 9)

IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sectors read / write.

If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block mode (most new drives do), select

Enabled for automatic detection of the optimal number of block read /write per sector where the drive can support. The choice: Enabled (**default**), Disabled

On-Chip Primary PCI IDE

This field allows you to enable or disable the primary and secondary IDE controller.

Select disabled if you want to add a different hard drive controller.

The choice: Enabled (**default**), Disabled

IDE Primary/Secondary, Master/Slave PIO

The choice: Auto (**default**), Mode0, Mode1, Mode2, Mode3, Mode4

 Caution: Do not use the wrong setting or you will have drive errors

PIO means Programmed Input/output.

Rather than have the BIOS issue a series of commands to effect a transfer to or from the disk drive, PIO allows the BIOS to tell the controller what it wants and then let the controller and the CPU perform the complete task by themselves.

Your system supports five modes, 0 (default) to 4, which primarily differ in timing.

When Auto is selected, the BIOS will select the best available mode after checking your drive.

Auto	The BIOS will automatically set the system according to your hard disk drive's timing (default).
Mode 0-4	You can select a mode that matches your hard disk drive's timing.

IDE Primary/Secondary, Master/ Slave UDMA

The choice: Disabled, Auto (**default**)

On-Chip Secondary PCI IDE

These fields allow you to enable or disable the primary and secondary IDE controller.

Select disabled if you want to add a different hard drive controller.


The choice: Enabled (**default**), Disabled.

On-Chip Serial ATA

Choose the status of serial ATA, the default setting is "Auto" which let system to arrange all parallel and serial ATA resource automatically.

Disabled	Will disable SATA controller. (Figure 11)
Combined Mode	Will combine PATA and SATA, and max of 2 IDE drives in each channel. (Figure 12)
Enhanced Mode	Will enable both SATA and PATA, and max of 6 IDE drives is supported. (Figure 13)
SATA Only	Means SATA is operating in legacy mode. (Figure 14)
Auto	This is the default setting.

The choice: Disabled, Auto (**default**), Combined Mode, Enhanced Mode, SATA Only.

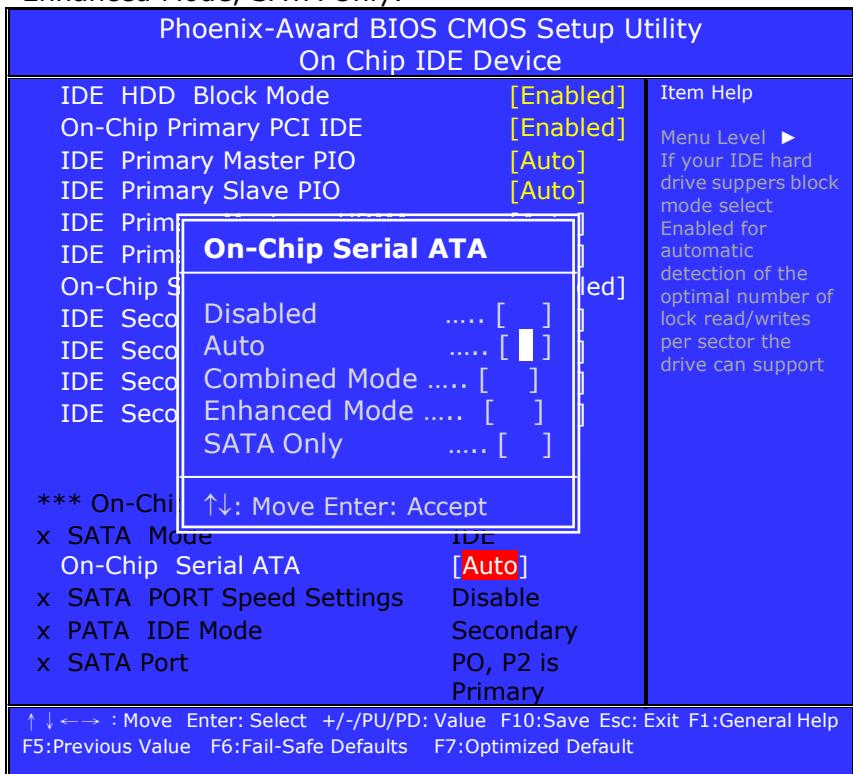

(Figure 10)

**When you press [Disabled] or [Auto] on this item
will show:
[Auto] is the default choice.**

Phoenix-Award BIOS CMOS Setup Utility On Chip IDE Device		
IDE HDD Block Mode	[Enabled]	Item Help
On-Chip Primary PCI IDE	[Enabled]	Menu Level ► If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of lock read/writes per sector the drive can support
IDE Primary Master PIO	[Auto]	
IDE Primary Slave PIO	[Auto]	
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
On-Chip Secondary PCI IDE	[Enabled]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
*** On-Chip Serial ATA Setting***		
x SATA Mode	IDE	
On-Chip Serial ATA	[Auto]	
x SATA PORT Speed Settings	Disable	
x PATA IDE Mode	Secondary	
x SATA Port	PO, P2 is Primary	
↑ ↓ ← → : Move Enter: Select +/-PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

(Figure11)

When you press [Combined Mode] on this item will show:

Phoenix-Award BIOS CMOS Setup Utility On Chip IDE Device		
		Item Help
IDE HDD Block Mode	[Enabled]	
On-Chip Primary PCI IDE	[Enabled]	
IDE Primary Master PIO	[Auto]	
IDE Primary Slave PIO	[Auto]	
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
On-Chip Secondary PCI IDE	[Enabled]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
*** On-Chip Serial ATA Setting***		
SATA Mode	[IDE]	
On-Chip Serial ATA	[Combined Mode]	
x SATA PORT Speed Settings	Disable	
PATA IDE Mode	[Secondary]	
x SATA Port	PO, P2 is Primary	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help
F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

(Figure12)

SATA Mode

Controls the SATA controller's operating mode.

The choice: IDE (**default**), RAID, AHCI.

PATA IDE Mode

This field is used to select the function mode of the IDE connector.

The only choice:

Secondary: IDE serves as Secondary Master and Secondary Slave channel. SATA 1 and SATA 2 serve as Primary Master and Primary Slave channel.

When you press [Enhanced Mode] on this item will show:

Phoenix-Award BIOS CMOS Setup Utility On Chip IDE Device		
IDE HDD Block Mode	[Enabled]	Item Help
On-Chip Primary PCI IDE	[Enabled]	Menu Level ►
IDE Primary Master PIO	[Auto]	If your IDE hard drive supports block mode select
IDE Primary Slave PIO	[Auto]	Enabled for automatic detection of
IDE Primary Master UDMA	[Auto]	the optimal number of lock
IDE Primary Slave UDMA	[Auto]	read/writes per sector the drive can support
On-Chip Secondary PCI IDE	[Enabled]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
*** On-Chip Serial ATA Setting***		
SATA Mode	[IDE]	
On-Chip Serial ATA	[Enhanced Mode]	
SATA PORT Speed Settings	[Disable]	
x PATA IDE Mode	Secondary	
x SATA Port	PO, P2 is Primary	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help
F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

(Figure13)

SATA Mode

Controls the SATA controller's operating mode.

The choice: IDE (**default**), RAID, AHCI.

SATA Port Speed Settings

Select SATA speed.

The choice: Disabled (**default**), Force GEN I, Force GEN II.

When you press [SATA Only] on this item will show:

Phoenix-Award BIOS CMOS Setup Utility On Chip IDE Device		
IDE HDD Block Mode	[Enabled]	Item Help
On-Chip Primary PCI IDE	[Enabled]	Menu Level ►
IDE Primary Master PIO	[Auto]	If your IDE hard
IDE Primary Slave PIO	[Auto]	drive supports block
IDE Primary Master UDMA	[Auto]	mode select
IDE Primary Slave UDMA	[Auto]	Enabled for
On-Chip Secondary PCI IDE	[Enabled]	automatic
IDE Secondary Master PIO	[Auto]	detection of the
IDE Secondary Slave PIO	[Auto]	optimal number of
IDE Secondary Master UDMA	[Auto]	lock read/writes
IDE Secondary Slave UDMA	[Auto]	per sector the
drive can support		
*** On-Chip Serial ATA Setting***		
SATA Mode	[IDE]	
On-Chip Serial ATA	[SATA Only]	
x SATA PORT Speed Settings	Disable	
x PATA IDE Mode	Secondary	
x SATA Port	PO, P2 is Primary	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help		
F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

(Figure14)

SATA Mode

Controls the SATA controller's operating mode.

The choice: IDE (**default**), RAID, AHCI.

➤On board Device

Phoenix-Award BIOS CMOS Setup Utility Onboard Device		
USB Controller	[Enabled]	Item Help
USB 2.0 Controller	[Enabled]	Menu Level ►
USB Keyboard Support	[Disabled]	
Azalia/AC97 Audio Select	[Auto]	
↑ ↓ ← → : Move Enter: Select +/-PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

USB Controller

Select enabled if your system contains a Universal Serial Bus (USB) controller and you have USB peripherals.

The choice: Enabled (**default**), Disabled.

USB 2.0 Controller

This entry is for disable/enable USB2.0 controller only.

The BIOS itself may/may not have high speed USB support.

If the BIOS has high speed USB support built in, the support will be automatically turn on when high speed device were attached.

The choice: Enabled (**default**), Disabled

USB Keyboard Support

Select enabled if user plan to use an USB keyboard.

The choice: Enabled, Disabled (**default**).

Azalia/AC97 Audio Select

The choice: Auto (**default**), Azalia, AC97 Audio and Modem, AC97 Audio only, AC97 Modem only, ALL Disabled.

➤Super IO Device

Phoenix-Award BIOS CMOS Setup Utility Super IO Device		
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	Menu Level
UART Mode Select	[Normal]	▶
x RxD , TxD Active	Hi, Lo	
x IR Transmission Delay	Enabled	
x UR2 Duplex Mode	Half	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
x EPP Mode Select	EPP1.7	
x ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit
F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

Onboard Serial Port 1

Select an address and corresponding interrupt for the first serial ports.

The choice: Disable, 3F8/IRQ4 (**default**), 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, Auto.

Onboard Serial Port 2

Select an address and corresponding interrupt for the second serial ports.

The choice: Disable, 3F8/IRQ4, 2F8/IRQ3 (**default**), 3E8/IRQ4, 2E8/IRQ3, Auto.

UART Mode Select

This item allows you to select which mode for the Onboard Serial Port 2.

The choice: IrDA, ASKIR, Normal (**default**)


If **UART Mode Select is IrDA and ASKIR will show:**

Phoenix-Award BIOS CMOS Setup Utility		
Super IO	Device	
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	Menu Level
UART Mode Select	[IrDA]	►
RxD , TxD Active	[Hi, Lo]	
IR Transmission Delay	[Enabled]	
UR2 Duplex Mode	[Half]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
x EPP Mode Select	EPP1.7	
x ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	

↑↓←→ : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit
F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

RxD, TxD Active

The choice:

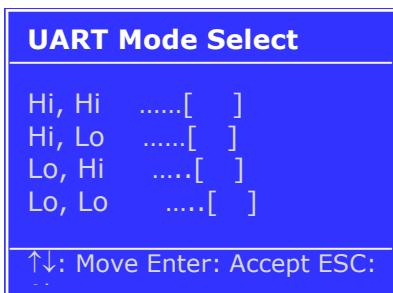

IR Transmission Delay

The choice: Disabled, Enabled (**default**).

UR2 Duplex Mode

The choice: Full, Half (**default**).

Onboard Parallel Port

This item allows you to determine onboard parallel port controller I/O address setting.

The choice: 378/IRQ7 (**default**), 278/IRQ5, 3BC/IRQ7, Disabled.

Parallel Port Mode

The choice: SPP (**default**), EPP, ECP, ECP+EPP, Normal.

SPP	Sets the parallel port to function as a Standard Parallel Port. This is the default (and slowest) option.
EPP	Sets the parallel port to Enhanced Parallel Port mode. Sometimes also called "Bi-directional"
ECP	Sets the parallel port up as an Enhanced Capabilities Port. This setting requires the use of a DMA channel

If Parallel Port Mode Select is [SPP] and [Normal] will show:

Phoenix-Award BIOS CMOS Setup Utility		
Super IO	Device	
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	Menu Level
UART Mode Select	[IrDA]	►
RxD , TxD Active	[Hi, Lo]	
IR Transmission Delay	[Enabled]	
UR2 Duplex Mode	[Half]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
x EPP Mode Select	EPP1.7	
x ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General
Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

If Parallel Port Mode Select is [EPP] will show:

Phoenix-Award BIOS CMOS Setup Utility		
Super IO Device		
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	Menu Level
UART Mode Select	[IrDA]	▶
RxD , TxD Active	[Hi, Lo]	
IR Transmission Delay	[Enabled]	
UR2 Duplex Mode	[Half]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[EPP]	
EPP Mode Select	[1.7]	
x ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	

↑ ↓ ← → :Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General
Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

EPP Mode Select

Select EPP port type 1.7 or 1.9.

The choice: 1.7 (**default**), 1.9.

If Parallel Port Mode Select is [ECP] will show:

Phoenix-Award BIOS CMOS Setup Utility		
Super IO Device		
		Item Help
Onboard Serial Port 1	[3F8/IRQ4]	Menu Level ►
Onboard Serial Port 2	[2F8/IRQ3]	
UART Mode Select	[IrDA]	
RxD , TxD Active	[Hi, Lo]	
IR Transmission Delay	[Enabled]	
UR2 Duplex Mode	[Half]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[ECP]	
x EPP Mode Select	1.7	
ECP Mode Use DMA	[3]	
PWRON After PWR-Fail	[Off]	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit
F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

ECP Mode Use DMA

If your system supports ECP parallel port mode and you have the port set to use ECP, you must use this setting to assign a DMA channel for use by the port.

The choice: DMA1, DMA3 (**default**).

If Parallel Port Mode Select is [ECP+EPP] will show:

Phoenix-Award BIOS CMOS Setup Utility Super IO Device		
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	Menu Level
UART Mode Select	[IrDA]	▶
RxD , TxD Active	[Hi, Lo]	
IR Transmission Delay	[Enabled]	
UR2 Duplex Mode	[Half]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[ECP+EPP]	
EPP Mode Select	[1.7]	
ECP Mode Use DMA	[3]	
PWRON After PWR-Fail	[Off]	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit
F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

EPP Mode Select

Select EPP port type 1.7 or 1.9.

The choice: 1.7 (**default**), 1.9.

ECP Mode Use DMA

If your system supports ECP parallel port mode and you have the port set to use ECP, you must use this setting to assign a DMA channel for use by the port.

The choice: DMA1, DMA3 (**default**).

PWRON After PWR-Fail

When power fails, you can select power ON or Off or Former status.

The choice: Off (**default**), On, Former-Sts.

Onboard Serial Port 3

This is used to select an I/O address for the onboard serial port 3.

The choice: Disabled, 3F8, 2F8, 3E8 (**default**), 2E8

Serial Port 3 Use IRQ

This is used to select an IRQ for the onboard serial port 3.

The choice: IRQ3 (**default**), IRQ4, IRQ5, IRQ7, IRQ10, IRQ11.

Onboard Serial Port 4

This is used to select an I/O address for the onboard serial port 4.

The choice: Disabled, 3F8, 2F8, 3E8, 2E8 (**default**).

Serial Port 4 Use IRQ

This is used to select an IRQ for the onboard serial port 4.

The choice: IRQ3, IRQ4 (**default**), IRQ5, IRQ7, IRQ10, IRQ11.

Onboard Serial Port 5

This is used to select an I/O address for the onboard serial port 5

The choice: Disabled, 4F8 (**default**), 4E8.

Serial Port 5 Use IRQ

This is used to select an IRQ for the onboard serial port 5.

The choice: IRQ3, IRQ4, IRQ5 (**default**), IRQ7, IRQ10, IRQ11.

Onboard Serial Port 6

This is used to select an I/O address for the onboard serial port 6.

The choice: Disabled, 4F8, 4E8 (**default**).

Serial Port 6 Use IRQ

This is used to select an IRQ for the onboard serial port 6.
The choice: IRQ3, IRQ4, IRQ5, IRQ7 (**default**), IRQ10,
IRQ11

Watch Dog Timer Select

The choice: Disabled (**default**), Enable

3.6 Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy while operating in a manner consistent with your own style of computer use.

Phoenix-Award BIOS CMOS Setup Utility Power Management Setup		Item Help
►PCI Express PM Function	[Press Enter]	Item Help
Power-Supply Type	[AT]	Menu Level ►
ACPI Function	[Enabled]	
Power Management	[User Define]	
Video Off Method	[DPMS]	
Video Off In Suspend	[Yes]	
Suspend Type	[Stop Grant]	
MODEM Use IRQ	[3]	
Suspend Mode	[Disabled]	
HDD Power Down	[Disabled]	
Soft-Off by PWR-BTTN	[Instant-Off]	
CPU THRM-Throttling	[50.0%]	
Wake-Up by PCI card	[Enabled]	
Power On by Ring	[Enabled]	
Resume by Alarm	[Disabled]	
x Data(of Month)Alarm	0	
x Time(hh: mm: ss)Alarm	0 : 0 : 0	
Reload Global Timer Events		
Primary IDE 0	[Disabled]	
Primary IDE 1	[Disabled]	
Secondary IDE 0	[Disabled]	
Secondary IDE 1	[Disabled]	
FDD , COM , LPT Port	[Disabled]	
PCI PIRQ[A-D]#	[Disabled]	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General
Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

➤PCI Express PM Function

Phoenix-Award BIOS CMOS Setup Utility PCI Express PM Function		
PCI Express PME	[Enabled]	Item Help Menu Level ▶
↑ ↓ ← → : Move Enter: Select +/−/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

PCI Express PME

The choice: Enabled (**default**), Disabled.

Power-Supply Type

The choice: AT (**default**), ATX

ACPI Function

This item allows you to enable/disable the Advanced Configuration and Power Management (ACPI).

The choice: Enabled (**default**), Disabled.

Power Management

The choice: User Define (**default**), Min Saving, Max Saving.

Max Saving	Maximum power savings. Only Available for SL CPUs. Inactivity period is 1 minute in each mode.
User Define	Set each mode individually. Select time-out periods in the section for each mode, below.
Min Saving	Minimum power savings. Inactivity period is 1 hour in each mode (except the hard drive).

Video off Method

This determines the manner in which the monitor is blanked.

This specifies the power saving state that the VGA video subsystem enters after the specified period of display inactivity has expired.

The choice: Blank Screen, V/H SYNC+ Blank, DPMS (**default**).

Blank Screen	The BIOS will only black the screen when the system gets into power management mode and writes blanks to the video buffer.
V/H SYNC + Blank	Writes blanks to the video buffer, and turns off the vertical and horizontal scanning.
DPMS	Allows the BIOS to control the video display card if it supports the DPMS feature (default).

Video Off In Suspend

This field is used to activate the video off feature when the system enters the Suspend mode.

The choice: No, Yes (**default**).

Suspend Type

The choice: Stop Grant (**default**), PwrOn Suspend

MODEM Use IRQ

This field is used to set an IRQ channel for the modem installed in your system.

The choice: NA, 3 (**default**), 4, 5, 7, 9, 10, 11.

Suspend Mode

This field specifies the length of time of system inactivity while in full power on state before the computer enters suspend mode and motivates the enable 'Wake up Events in Doze & Standby' / 'PM Events'.
The choice: 1Min, 2Min, 4Min, 8Min, 12Min, 20Min, 30Min, 40Min, 1Hour, Disable (**default**).

HDD Power Down

When enable and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

The choice: 1Min, 2Min, 3Min, 4Min, 5Min, 6Min, 7Min, 8Min, 9Min, 10Min, 11Min, 12Min, 13Min, 14Min, 15Min, Disable (**default**).

Soft-Off by PWR-BTTN

This field defines the power off mode when using an ATX power supply.

The choice: Instant-Off, Delay 4 Sec.

Instant-Off	Press power button then Power off instantly .(default)
Delay 4 Sec	Press power button 4 sec. to Power off. Enter suspend if button is pressed less than 4 sec.

CPU THRM-Throttling

This field allows you to select the CPU THRM-Throttling rate.

The choice: 75.0%, 50.0% (**default**), 25.0%.

Wake-Up by PCI card

Enable/Disable PCI PME wake up function.

The choice: Enabled (**default**), Disabled.

Power On by Ring

Enable/Disable Power on by Ring function.

The choice: Enabled (**default**), Disabled.

Resume by Alarm

You can set "Resume by Alarm" item to enabled and key in Date/time to power on system.

The choice: Enabled, Disabled (**default**)

If Resume by Alarm is [Enabled], can choice Date Alarm and Time Alarm:

Date (of Month) Alarm

Every day, 1~31

Date(of Month)Alarm	
Min= 0	
Max= 31	
Key in a DEC number: <input type="text"/>	
↑↓: Move Enter: Accept ESC:Abort	

Time (hh: mm: ss) Alarm

(0~23): (0~59): (0~59)

Time (hh: mm: ss) Alarm	
Min= 0	
Max= 23	
Key in a DEC number: <input type="text"/>	
↑↓: Move Enter: Accept ESC:Abort	

Primary/ Secondary IDE 0/1

When Enabled, the system will resume from suspend mode if Primary IDE 0 (1) or Secondary IDE 0 (1) is active.

The choice: Enabled, Disabled (**default**)

FDD, COM, LPT Port

When Enabled, the system will resume from suspend mode if FDD, COM port, or LPT port is active.

The choice: Enabled, Disabled (**default**).

PCI PIRQ [A-D] #

When Enabled, the system will resume from suspend mode if interrupt occurs.

The choice: Enabled, Disabled (**default**).

3.7 PnP/PCI Configuration

This section describes configuring the PCI bus system. PCI, or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

Phoenix-Award BIOS CMOS Setup Utility PnP/PCI Configuration		
Init Display First	[PCI Slot]	Item Help
Reset Configuration Data	[Disabled]	Menu Level ▶
Resources Controlled By x IRQ Resources	[Auto(ESCD)] Press Enter	
PCI/VGA Palette Snoop	[Disabled]	
INT Pin 1 Assignment	[Auto]	
INT Pin 2 Assignment	[Auto]	
INT Pin 3Assignment	[Auto]	
INT Pin 4 Assignment	[Auto]	
INT Pin 5 Assignment	[Auto]	
INT Pin 6 Assignment	[Auto]	
INT Pin 7 Assignment	[Auto]	
INT Pin 8 Assignment	[Auto]	
PCI Express relative items		
Maximum Payload Size	[128]	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General
Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

Init Display First

This item allows you to choose which one to activate first, PCI Slot or onboard VGA.

The choice: PCI Slot (**default**), Onboard, PCIE.

Reset Configuration Data

Default is disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the OS cannot boot.

The choice: Enabled, Disabled (**default**).

Resources Controlled By

BIOS can automatically configure all the boot and Plug and Play compatible devices. If you choose Auto, you cannot select IRQ DMA and memory base address fields, since BIOS automatically assigns them.

The choice: Auto (ESCD) (**default**), Manual.

If Resources Controlled By is [Manual], can choice IRQ Resource:

Phoenix-Award BIOS CMOS Setup Utility PnP/PCI Configuration		
Init Display First	[PCI Slot]	Item Help
Reset Configuration Data	[Disabled]	Menu Level
Resources Controlled By	[Manual]	▶
►IRQ Resources	[Press Enter]	
PCI/VGA Palette Snoop	[Disabled]	
INT Pin 1 Assignment	[Auto]	
INT Pin 2 Assignment	[Auto]	
INT Pin 3Assignment	[Auto]	
INT Pin 4 Assignment	[Auto]	
INT Pin 5 Assignment	[Auto]	
INT Pin 6 Assignment	[Auto]	
INT Pin 7 Assignment	[Auto]	
INT Pin 8 Assignment	[Auto]	
PCI Express relative items		
Maximum Payload Size	[128]	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General

Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

➤IRQ Resource

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt. This item allows you to determine the IRQ assigned to the ISA bus and is not available to any PCI slot.

Phoenix-Award BIOS CMOS Setup Utility IRQ Resource		
IRQ-3 assigned to	[PCI Device]	Item Help
IRQ-4 assigned to	[PCI Device]	Menu Level ►
IRQ-5 assigned to	[PCI Device]	Legacy ISA for
IRQ-7 assigned to	[PCI Device]	devices compliant
IRQ-9 assigned to	[PCI Device]	with the original PC
IRQ-10 assigned to	[PCI Device]	AT bus specification,
IRQ-11 assigned to	[PCI Device]	PCI/ISA PnP for
IRQ-12 assigned to	[PCI Device]	devices compliant
IRQ-14 assigned to	[PCI Device]	with the Plug and
IRQ-15 assigned to	[PCI Device]	Play standard
		whether designed for
		PCI or ISA bus
		architecture
<p>↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default</p>		

IRQ-3,4,5,7,9,10,11,12,14,15 assigned to

IRQ-3 assigned to	
PCI Device [<input checked="" type="checkbox"/>]
Reserved [<input type="checkbox"/>]
<p>↑↓: Move Enter: Accept</p>	

The choice: PCI Device, Reserved.

PCI/VGA Palette Snoop

This BIOS feature determines if your graphics card should allow VGA palette snooping by a fixed function display card.

The choice: Enabled, Disabled (**default**).

INT Pin 1/2/3/4/5/6/7/8 Assignment

The choice: Auto (**default**),3,4,5,7,9,10,11,12,14,15.

Maximum Payload Size

The choice: 128 (**default**), 256,512,1024,2048,4096.

3.8 PC Health Status

This section helps you to get more information about your system including CPU temperature, FAN speed and voltages. It is recommended that you contact with your motherboard supplier to get proper value about your setting of the CPU temperature.

Phoenix-Award BIOS CMOS Setup Utility PC Health Status		
CPU Warning Temperature	[Disabled]	Item Help
Current System Temp.	40°C / 107°F	Menu Level
Current CPU Temperature:	40°C / 100°F	►
CPU FAN Speed	0 RPM	
CHASSIS Fan Speed	7670 RPM	
Vcore	1.20V	
+1.5V	1.52V	
+3.3V	3.47V	
+5V	5.16V	
+12V	12.22V	
-12V	-12.44V	
VBAT(V)	3.32V	
5VSB(V)	5.04V	
Shutdown Temperature	[Disabled]	

↑ ↓ ← → : Move Enter: Select +/~/PU/PD: Value F10:Save Esc: Exit F1:General
Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

CPU Warning Temperature

Select the CPU over-heated warning temperature.

The choice: Disabled (**default**), 50°C/122°F, 53°C/127°F,
56°C/133°F, 60°C/140°F, 63°C/145°F, 66°C/151°F, 70°C/158°F.

Current System Temp

Show System Temperature.

Current CPU Temperature

Shows Board Temperature

CPU FAN Speed

Shows CPU Fan speed.

CHASSIS Fan Speed


Shows CHASSIS Fan speed

Shutdown Temperature

Select the CPU over-heated shutdown temperature.

The choice: Disabled (**default**), 60°C/140°F, 65°C/149°F,
70°C/158°F, 75°C/167°F

3.9 Frequency/Voltage Control

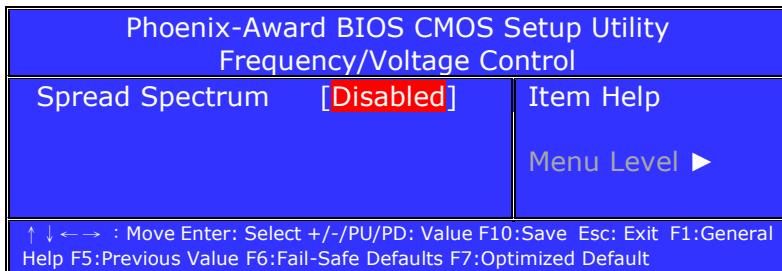


Spread Spectrum

Leave this field in its default setting. Do not alter this setting unless advised by an engineer or technician. The choice: Disabled (**default**), +/-0.1%, +/-0.2%, +/-0.3%, +/-0.4%, +/-0.5%, +/-0.6%, +/-0.7%, +/-0.8%, +/-0.9%.

3.10 Load Fail-Safe Defaults


When you press <Enter> on this item you get a confirmation dialog box with a message similar to:

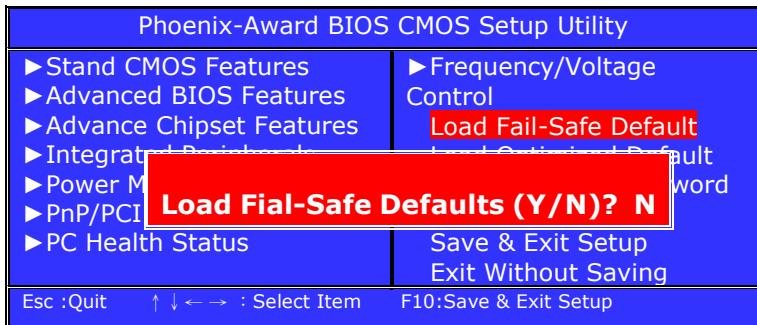

Pressing '**Y**' loads the BIOS default values for the most stable, minimal-performance system operations.

3.11 Load Optimized Defaults

When you press <Enter> on this item you get a confirmation dialog box with a message similar to:

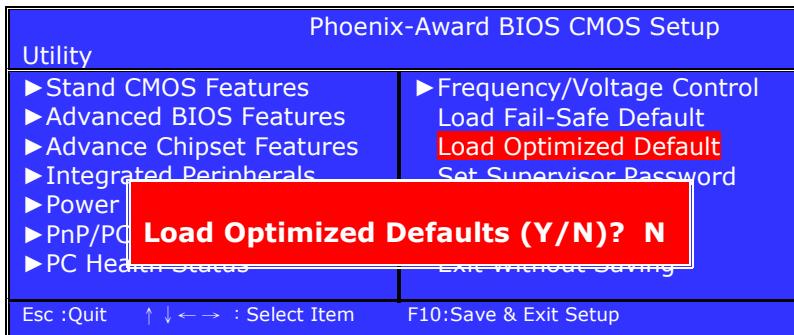


Pressing 'Y' loads the default values that are factory settings for optimal performance system operations.

3.12 Set Supervisor/User Password

You can set either supervisor or user password, or both of them. The differences between are:

Supervisor password: can enter and change the options of the setup menus.


User password: just can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

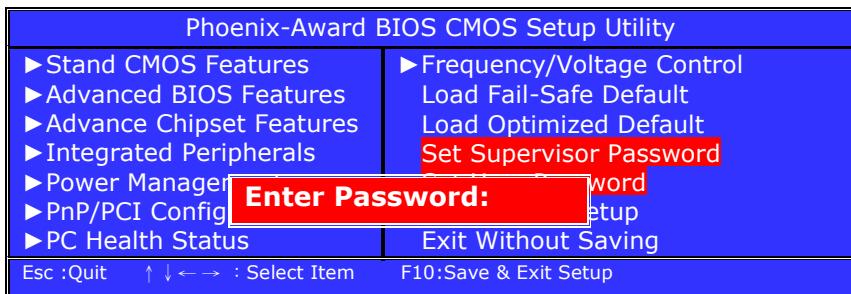

ENTER PASSWORD:

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

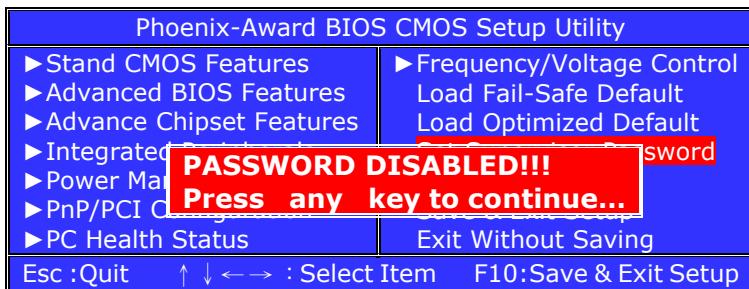

PASSWORD DISABLED:


When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option. If the Security option is set to "System", the password will be required both at boot and at entry to Setup. If set to "Setup", prompting only occurs when trying to enter Setup.

3.13 Save & Exit Setup


Pressing <Enter> on this item asks for confirmation:

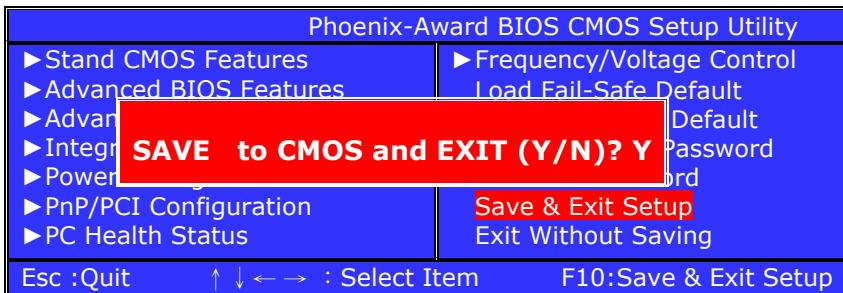

Pressing "Y" stores the selections made in the menus in CMOS – a special section of memory that stays on after you turn your system off. The next time you boot your computer, the BIOS configures your system according to the Setup selections stored in CMOS. After saving the values the system is restarted again.

3.14 Exit Without Saving

Pressing <Enter> on this item asks for confirmation:

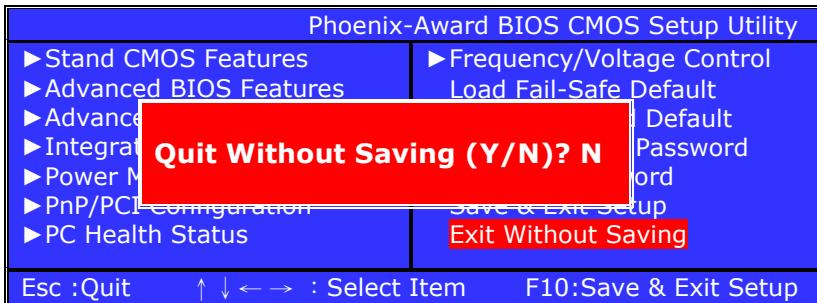

This allows you to exit Setup without storing in CMOS any change. The previous selections remain in effect. This exits the Setup utility and restarts your computer.

CHPTER 4 Appendix

A. I/O PORT ADDRESS MAP	90
B. INTERRUPT REQUEST LINES (IRQ).....	91
C. POST BEEP	92

A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. There is a total of 1K port address space available. The following table lists the I/O port addresses used on the Industrial CPU Card.

Address	Device Description
000h - 01Fh	DMA Controller #1
020h - 03Fh	Interrupt Controller #1
040h - 05Fh	Timer
060h - 06Fh	Keyboard Controller
070h - 07Fh	Real Time Clock, NMI
080h - 09Fh	DMA Page Register
0A0h - 0BFh	Interrupt Controller #2
0C0h - 0DFh	DMA Controller #2
0F0h	Clear Math Coprocessor Busy Signal
0F1h	Reset Math Coprocessor
1F0h - 1F7h	IDE Interface
278 - 27F	Parallel Port #2(LPT2)
2F8h - 2FFh	Serial Port #2(COM2)
2B0 - 2DF	Graphics adapter Controller
378h - 3FFh	Parallel Port #1(LPT1)
360 - 36F	Network Ports
3B0 - 3BF	Monochrome & Printer adapter
3C0 - 3CF	EGA adapter
3D0 - 3DF	CGA adapter
3F0h - 3F7h	Floppy Disk Controller
3F8h - 3FFh	Serial Port #1(COM1)

B. Interrupt Request Lines (IRQ)

There are a total of 15 IRQ lines available on the Industrial CPU Card. Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on the Industrial CPU Card.

Level	Function
IRQ0	System Timer Output
IRQ1	Keyboard
IRQ2	Interrupt Cascade
IRQ3	Serial Port #2
IRQ4	Serial Port #1
IRQ5	Reserved
IRQ6	Floppy Disk Controller
IRQ7	Parallel Port #1
IRQ8	Real Time Clock
IRQ9	Software Redirected to Int 0Ah
IRQ10	Reserved
IRQ11	Reserved
IRQ12	PS/2 Mouse
IRQ13	80287
IRQ14	Primary IDE
IRQ15	Secondary IDE

C. POST Beep

Currently there are two kinds of beep codes in BIOS. This code indicates that a **video error** has occurred and the BIOS cannot initialize the video screen to display any additional information.

This beep code consists of a single long beep followed by two short beeps.

The other code indicates that your **DRAM error** has occurred.

This beep code consists of a single long beep repeatedly.