

Front Panel Connectors

Keylock Connector PL17

This connects to the lock on the front panel, so that the keyboard can be disabled with a key.

Power L.E.D. Connector PL17

This connects to the front panel to display the power status of the motherboard.

Turbo L.E.D. Connector PL12

This goes to the turbo LED on the front panel, which lights up when the computer is running in high speed (turbo) mode.

Turbo Switch Connector PL13

This goes to the turbo button on the front panel. When this button is pressed in the computer is running in high speed (turbo) mode.

Reset Switch Connector PL9

When this switch is pushed it will cause the computer to do a hard reboot.

Hard Disk L.E.D. Connector PL14

This goes to the Hard Disk L.E.D. on the front panel, which lights up when the IDE Hard Disk is in use.

Speaker Connector PL21

This goes to a speaker for the sound output.