


**CN1: Front Panel Header**

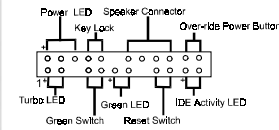

**CN2: CD-ROM Audio-in Conn.**



**CN3: Auxiliary CD-ROM Audio-in Conn.**




**CN4: Audio Mono-in/out Conn.**



**CN6: WOL (Wake-on-LAN) Conn.**



 **CN7: Chassis Intrusion Monitoring Conn.**



**CN13: S/PDIF Conn.**

**FAN1/FAN2: CPU/SYS Colling Fan Conn.**



**IR1: Infrared Conn.**



**PW1: ATX Power Supply Conn.**

**JP1/JP2: Audio Line out / Speaker out Jumpers**

1-2 => Speaker out  
2-3 => Line out

**JP3: Power-on Keyboard Jumper**

1-2 => Disable  
2-3 => Enable

**JP4: Optional CMedia Audio**

1-2 => Enable  
2-3 => Disable

**JP5/JP6: CPU External Bus Frequency**

CPU Freq.	JP5	JP6
AUTO (default)	1 - 2	1 - 2
66 MHz	2 - 3	2 - 3
100MHz	2 - 3	Open
133MHz	Open	Open

**JP7: Clear CMOS Data Jumper**

1-2 => Normal (default)  
2-3 => Clear CMOS data

**JP8: Optional BIOS Boot Jumper**

1-2 => Boot BIOS select (default)  
2-3 => BIOS1(Power on only)/  
BIOS2(Power on+ Reset)

6BJM V.2 Jumper Setting Label