

Jumper settings.

CPU Vcc			
J5	JV1	JV2	CPU Vcc
2-3,4-5,7-8	1-3,2-4	1-3,2-4	3,3
1-2,4-5,7-8	1-3,2-4	1-3,2-4	3,45
2-3,5-6,10-11	1-2,3-4	1-2,3-4	3,3 & 2,8
2-3,5-6,9-10	1-2,3-4	1-2,3-4	3,3 & 3,0
2-3,5-6,7-8	1-2,3-4	1-2,3-4	3,3 & 3,2
1-2,5-6,10-11	1-2,3-4	1-2,3-4	3,45 & 2,8
1-2,5-6,9-10	1-2,3-4	1-2,3-4	3,45 & 3,0
1-2,5-6,7-8	1-2,3-4	1-2,3-4	3,45 & 3,2

CPU SPEED	
J9	Clock
3-4,5-6	50Mhz
	55Mhz
5-6	60Mhz
3-4	66Mhz
1-2	75Mhz

CPU Clock multiplier			
JP2	JP3	JP5	Multiplier
2-3	2-3	1-2	2,5X
1-2	2-3	1-2	3X
2-3	1-2	1-2	2X
1-2	1-2	1-2	1,5X

JVBAT1	CMOS
1-2	Standard
2-3	Clear CMOS

PS/2 Mouse	Enab.	Disab.
JMS1	1-2	2-3
JPS1	1-2	2-3