


# M599 v3.2 QUICK MANUAL

To help you to set/connect the jumpers/connectors on the mainboard to boot the system.

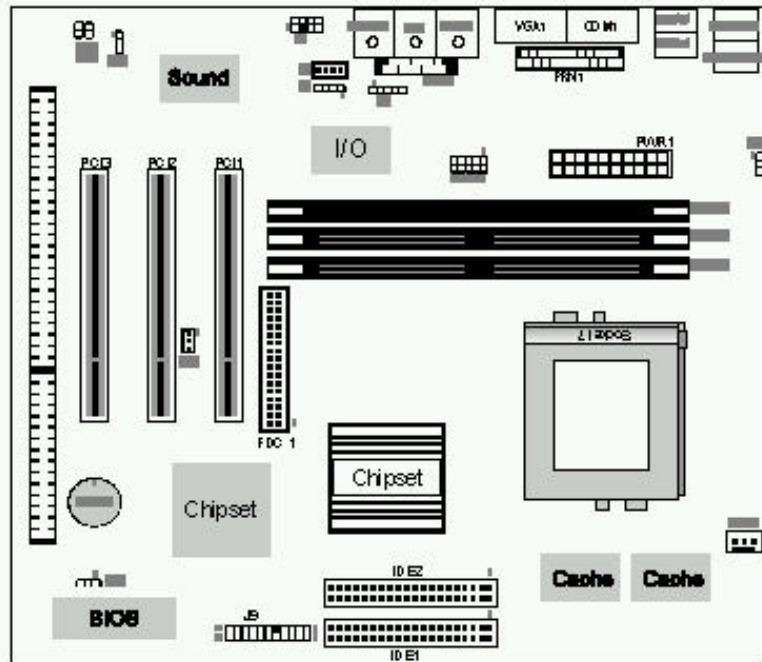

Mainboard Component Locations

## Special Features

- SiS 530 Super7 - PC100
- CPU Plug and Play
- Onchipset AGP VGA
- Onboard PCI Sound Pro

Table 1: Jumper Settings for CPU

This mainboard provides CPU Plug and Play technology, so there is no jumper setting for CPU setup. Please enter BIOS Setup to select the correct CPU speed.

Table 2: Memory Configurations

	DIMM1	DIMM2	DIMM3	Note!
RAM Type	3.3V SDRAM only			The SDRAM must be installed in DIMM1 first, if onboard VGA is being used.
Memory size =	DIMM1 + DIMM2 + DIMM3			

Table 3: Jumper Settings & ATX Functions

CMOS Clear: JP6*	ATX Power Button/Suspend Switch:		Keyboard Power On: JP1	
Normal	1-2	J9 (21, 22)	Disabled	1-2
Clear CMOS	2-3	Wake On LAN Connector: JP4	Enabled	2-3

\* Make sure this jumper is set to Normal before installing the mainboard.

Table 4: Special Connectors

Cooling fan Connector: FAN1	InfraRed Connector: J6
-----------------------------	------------------------

Table 5: PCI Sound Pro

Anal og Audio Connectors: J7/J8	SPDIFOUT Signal Level Selector: CD2		Sound Selector: JP3	
Internal SPDIF IN Connector: CD1	5V : short	0.5V : open	Enabled	2-3
Digital Audio Connectors: J5			Disabled	1-2