



Jumper Settings

P7 Replacement Battery Connector

P8 Processor

75MHz
 90MHz, 120MHz, 150MHz
 100MHz, 133MHz, 166MHz, 200MHz

Clock Speed Select

Pins 1-2 50MHz
 Pins 2-3 60MHz
 Pins 3-4 66MHz

P9 Processor

75MHz, 90MHz, 100MHz
 120MHz, 133MHz
 150MHz, 166MHz,
 200MHz

CPU Clock Multiplier

A1-A2, B1-B2 1.5X
 A2-A3, B1-B2 2.0X
 A2-A3, B2-B3 2.5X
 A1-A2, B2-B3 3.0X

P11 CMOS Erase/Password Clear

CAUTION

Do not operate the computer
 with the system unit
 cover removed.

WARNING:

Drive and Component
 Surfaces may be hot. Allow
 to cool before touching.

