



# User's Manual

VIA *KM400* mainboard  
for AMD Socket A processor

## **TRADEMARK**

All products and company names are trademarks or registered trademarks of their respective holders.

*These specifications are subject to change without notice.*

*Manual Revision 1.0  
June 06, 2003*

## **DISCLAIMER OF WARRANTIES:**

**THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE OF THE MANUFACTURER LIMITED WARRANTY. THE MANUFACTURER EXPRESSLY EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING ITS PRODUCTS; INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT. THIS DISCLAIMER OF WARRANTIES SHALL APPLY TO THE EXTENT ALLOWED UNDER LOCAL LAWS IN THE COUNTRY PURCHASED IN WHICH LOCAL LAWS DO NOT ALLOW OR LIMIT THE EXCLUSION OF THE IMPLIED WARRANTIES.**

---

# Table of Contents

	<i>Page</i>
<b><i>Section 1</i></b>	<b><i>Introduction</i></b>
	Package Contents ..... 1-1
	<b><i>Overview</i></b>
	Athlon™ Processors ..... 1-2
	Accelerated Graphics Port ..... 1-3
	Ultra ATA66/100/133 ..... 1-3
	Hardware Monitoring ..... 1-3
	LAN (Optional) ..... 1-3
	Serial ATA (Optional) ..... 1-3
	Mainboard Form-Factor ..... 1-4
	I/O Shield Connector ..... 1-5
	Power-On/Off (Remote) ..... 1-5
	System Block Diagram ..... 1-6
<b><i>Section 2</i></b>	<b><i>Features</i></b>
	Mainboard Features ..... 2-1
<b><i>Section 3</i></b>	<b><i>Installation</i></b>
	Mainboard Layout ..... 3-2
	<b><i>Easy Installation Procedure</i></b>
	CPU Insertion ..... 3-3
	Jumper Settings ..... 3-5
	System Memory Configuration ..... 3-6
	Expansion Slots ..... 3-8
	Device Connectors ..... 3-10
	STR (Suspend To RAM) Function ..... 3-15
	CPU Overheating Protection ..... 3-16

---

---

<b>Section 4</b>	<b><i>Award BIOS Setup</i></b>	
	BIOS Instructions .....	4-1
	Standard CMOS Setup .....	4-2
	Advanced BIOS Features .....	4-3
	Advanced Chipset Features .....	4-8
	Integrated Peripherals .....	4-13
	Power Management Setup .....	4-18
	PNP/PCI Configuration Setup .....	4-23
	PC Health Status .....	4-25
	Power BIOS Features .....	4-27
	Defaults Menu .....	4-28
	Supervisor/User Password Setting .....	4-29
	Exit Selecting .....	4-30
<b>Section 5</b>	<b><i>Driver Installation</i></b>	
	Easy Driver Installation .....	5-1
	Realtek Sound Manager Quick User-guide .....	5-2
<b>Appendix</b>	<b><i>Appendix A</i></b>	
	Realtek Media Player User's Guide .....	A-1
	<b><i>Appendix B</i></b>	
	Update Your System BIOS .....	B-1
	<b><i>Appendix C</i></b>	
	EEPROM BIOS Remover .....	C-1
	<b><i>Appendix D</i></b>	
	GHOST 7 Quick User's Guide (Optional) .....	D-1

---

## Section 1 INTRODUCTION

### Package Contents

#### Contents

- A. Mainboard
- B. User's manual
- C. Floppy drive cable
- D. HDD ribbon cable
- E. CD and diskette (drivers and utilities)
- F. I/O Shield


#### Deluxe Pack Items

- G. S-ATA data and power cables

#### Other Optional Items

- H. Extra USB2.0 port cable
- I. S/PDIF Module

If you need the other optional item, please contact your dealer for assistance.

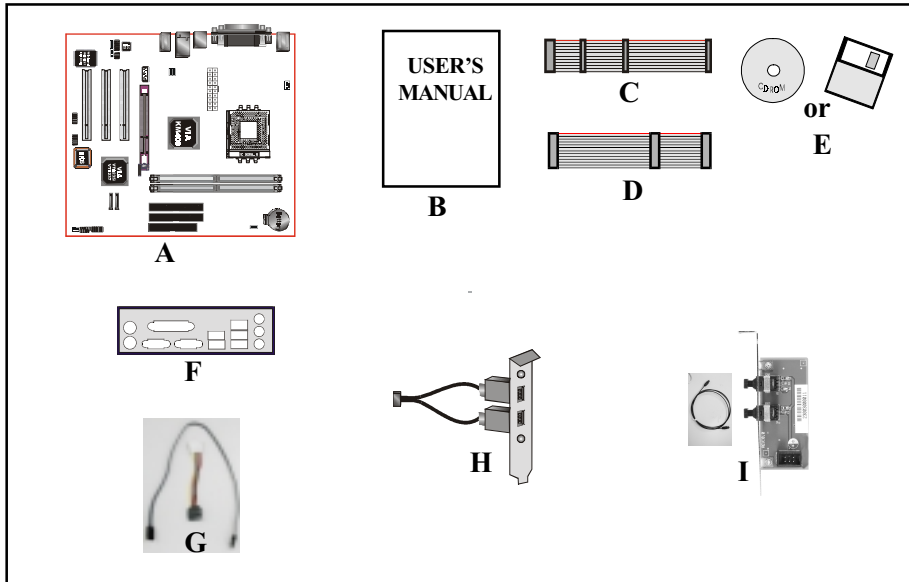

# Introduction

---

## Athlon™ Processors

The AMD Athlon™ is a seventh-generation micro architecture with an integrated L2 cache, which is powerful enough to support the bandwidth requirements of a large range of applications, hardware, graphics, and memory technologies. These processors implement advanced design techniques such as:

- ◆ Socket A (PGA 462)
- ◆ 266/333MHz system interface based on the Alpha™ EV6 bus protocol.
- ◆ Three out-of-order, superscalar, pipelined Multimedia Units.
- ◆ Three out-of-order, superscalar, pipelined Integer Units.
- ◆ Fixed-sized internal instruction formats (MacroOPs).
- ◆ 72-entry Instruction Control Units.
- ◆ AMD enhanced 3DNow!™ technology
- ◆ L1 and L2 caches.
- ◆ Dynamic branch prediction.

Socket A is the name for AMD's new socketed interface designed to support AMD Athlon™ processors. This innovation is made possible by integrating the L2 cache memory on chip with the processor. Socket A will help enable smaller enclosures, and ultimately result in a wider variety of solutions in the market.

The Athlon™ processors in the Socket A format continue to deliver the ultimate performance for cutting-edge applications. They bring to desktop systems running industry-standard x86 software superscalar RISC performance. Being provided in the Socket A format they are the world's most powerful x86 processors. They easily deliver the highest integer, floating-point, and 3D multimedia performance for applications running on x86 platforms around.

It features full-speed, on-chip cache memory, a 266/333MHz front side system bus, and enhanced 3DNow!™ technology. The AMD Athlon™ processor is targeted at the performance segment, and as such will have more cache memory and higher clock speeds.

### Accelerated Graphics Port (AGP)

The AGP slot on the board is compliant with the new AGP 3.0 specification. This new specification enhances the functionality of the original AGP specification by allowing 8X data transfers ( 8 data samples per clock) resulting in maximum bandwidth of 2.1GB/s. In addition, it defines 1.5 volt power supply operation. Complying with this specification, this board supports external AGP-8X/4X cards with Fast Write Transactions. Only 1.5V AGP cards are supported.

### Ultra ATA/66/100/133

This mainboard provides two independent ATA133 IDE controllers, supporting standard programmable input/output (PIO) and Direct Memory Access (DMA) mode operations, as well as UltraDMA-133/100/66/33 standards for a maximum data transfer rate of 133MB/sec per channel.

### Hardware Monitoring

Hardware monitoring enables you to monitor various aspects of the system operation and status. The features include CPU temperature, voltage and fan speed in RPMs.

### LAN (Optional)

This mainboard is optionally mounted with a LAN chipset. It allows the mainboard to connect to a local area network by means of a network hub.

### Serial ATA (Optional)

The evolutionary serial ATA interface replaces the standard parallel ATA physical storage interface. The serial ATA specification provides scalability and allows future enhancements to the computing platform. Serial technology overcomes performance limits of parallel interface architecture, meeting the escalating need for faster data throughput in servers and storage devices.

Serial ATA is completely software compatible with parallel ATA, requiring no modification to your operating system. The serial ATA interface cable requires lower voltages and uses smaller cable connectors, providing ease of installation. You can easily upgrade storage devices that are compatible with the serial ATA interface specification.

# Introduction

## Mainboard Form-Factor

This board is designed with M-ATX form factor - the latest industry standard for chassis design. The M-ATX form factor is essentially a Baby-AT baseboard rotated 90 degrees within the chassis enclosure and a new mounting configuration for the power supply. With these changes the processor is relocated away from the expansion slots, allowing them all to hold full length add-in cards. M-ATX defines a double height aperture to the rear of the chassis which can be used to host a wide range of onboard I/O. Only the size and position of this aperture is defined, allowing PC manufacturers to add new I/O features (e.g.; TV input, TV output, joystick, modem, LAN, audio, etc.) to systems. This will help systems integrators differentiate their products in the marketplace, and better meet your needs.

- By integrating more I/O down onto the board and better positioning the hard drive and floppy connectors, material cost of cables and add-in cards are reduced.
- By reducing the number of cables and components in the system, manufacturing time and inventory holding costs are reduced and reliability will increase.
- By using an optimized power supply, it's possible to reduce cooling costs and lower acoustical noise. An ATX power supply, which has a side-mounted fan, allows direct cooling of the processor and add-in cards making a secondary fan or active heatsink unnecessary in most system applications.

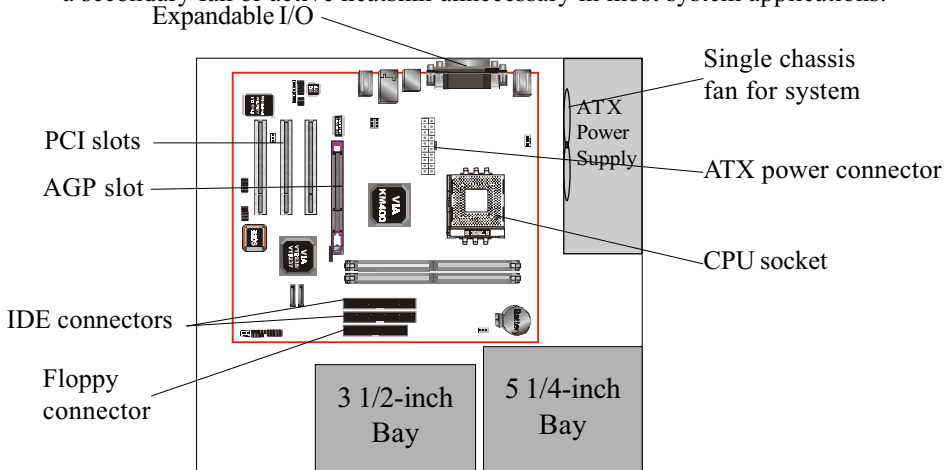


Figure 2: Summary of ATX chassis features



## I/O Shield Connector

The board is equipped with an I/O back panel (Figure 3). Ensure that your computer case has the appropriate I/O cutout.

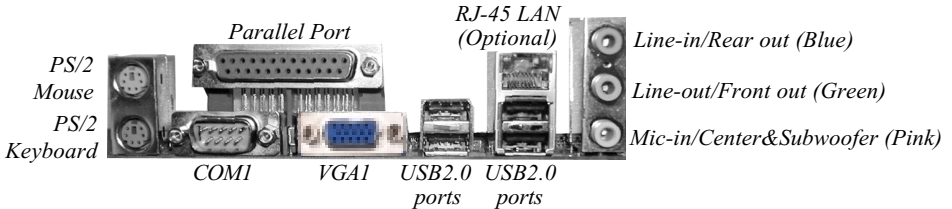



Figure 3: I/O ports

## Power-On/Off (Remote)

This board has a 20-pin ATX power supply connector (Figure 4). For power supplies that support the **Remote On/Off** feature, this should be connected to the mainboard front panel PW\_ON connector for the computer power On/Off button. This board has been designed with "Soft Off" function. You can turn off the system in two ways: by pressing the front panel power On/Off button or using the "Soft Off" function that can be controlled by an operating system such as Windows®XP/ME/2000/98.

**Note:** For maintaining the DDR SDRAM power during STR (ACPI S3) function, it is strongly recommended to use power supplies that have a +5VSB current of (> =) 2A. Please check the 5VSB's specification printed on the power supply's outer case.

**Note:** The board requires a minimum of 250 Watt power supply to operate. Your system configuration (amount of memory, add-in cards, peripherals, etc.) may exceed the minimum power requirement but to ensure that adequate power is provided, use a 300 Watt (or greater) power supply.

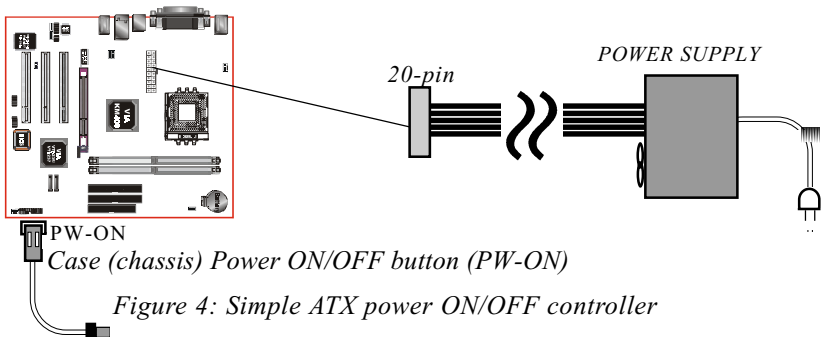

# Introduction

## System Block Diagram

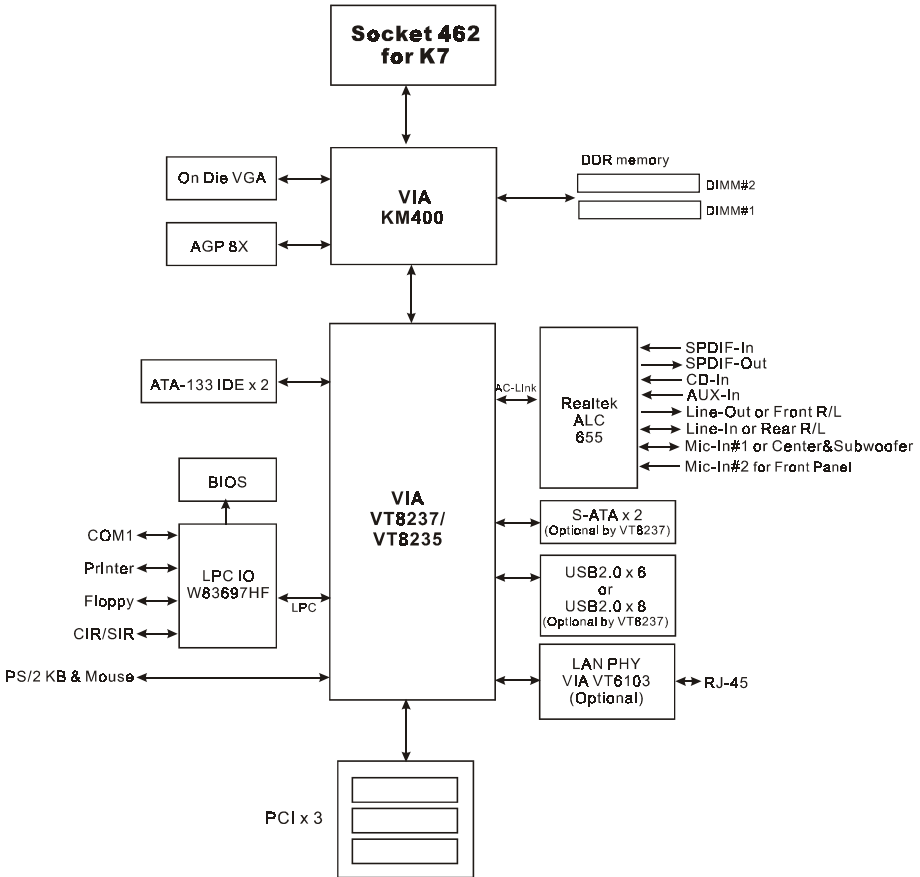


Figure 5: System Block Diagram

### Mainboard Features

#### ● **Processor**

- ◆ Supports 462-pin Socket A for AMD Athlon XP processors with 266/333MHz Front Side Bus
  - Athlon XP (1500+ to 3000+) with 266/333MHz Front Side Bus,

#### ● **Chipset**

- ◆ VIA KM400 AGPset : VIA KM400 + VT8235 or VT8237
  - Embedded VIA Unichrome graphics core

#### ● **Main Memory**

- ◆ **Two** 184-pin DDR DIMM sockets for 64-bit, Unbuffered, Single/Double-side and Non-ECC DDR-266/333 DIMMs
- ◆ Supports up to **2GB** memory size

#### ● **BIOS**

- ◆ Flash EEPROM with Award BIOS
  - ACPI v2.0 compliant
  - S3 (Suspend to DRAM) sleep-state support
  - SMBIOS (System Management BIOS) v2.2 compliant
  - Supports Power failure recovery
  - Capable to wake the computer from specific states by LAN, Power switch, PME#, RTC alarm, USB, PS2 KB&Mouse, Modem ring on COM#1...

#### ● **Onboard PCI Devices**

- ◆ LAN--> Embedded 10/100Mbps Fast Ethernet controller with onboard (Optional) **VIA 6103** PHY
- ◆ IDE--> Embedded IDE controller with 2 ordinary IDE ports up to 4 IDE devices, supports ATA-133 with up to 133MB/sec bandwidth

# Features

---

## ● Legacy IO Controller

- ◆ [Winbond W83697HF](#) LPC IO controller for floppy, printer, serial and CIR/SIR interface

## ● Audio

- ◆ [Six](#) channel audio with analog and digital output using [Realtek ALC655 AC'97 CODEC](#)
  - AC'97 v2.3 compliant
  - In 2-CH mode, supports Line-In (Blue), Line-Out (Green) and Mic-In (Pink) at rear panel
  - In 6-CH mode, supports Rear speaker out (Blue), Front speaker out (Green) and Center&Subwoofer speaker out (Pink) at rear panel
  - Supports CD-In, Aux-In and S/PDIF-in/out interface
  - Supports Line-out and Mic-In for front panel
  - Supports automatic “jack-sensing”

## ● Peripheral Interfaces

### ☞ At Rear Panel

- ◆ PS/2 keyboard and mouse ports
- ◆ [One](#) Parallel (printer) port
- ◆ [One](#) Serial port
- ◆ [One](#) VGA port
- ◆ [One](#) RJ45 LAN connector (Optional)
- ◆ [Four](#) USB2.0 ports
- ◆ [Three](#) Audio jacks

### ☞ Onboard connector and pin-header

- ◆ [One](#) floppy drive connector
- ◆ [Two](#) IDE connectors
- ◆ [Two](#) extra USB2.0 ports (Optional four extra USB2.0 ports by VIA VT8237)
- ◆ [One](#) CD-IN and [One](#) AuX-IN connector

- ◆ **One** S/PDIF in/out connector
- ◆ **One** IR connector
- ◆ **One** Front Panel Audio connector
- ◆ **Two** S-ATA connectors by VIA VT8237 chip (Optional)
- ◆ **Two** Fan connectors

### ● **Front Panel Controller**

- ◆ Supports Reset & Soft-Off switches
- ◆ Supports HDD & Power LEDs
- ◆ Supports PC speaker

### ● **Expansion Slots**

- ◆ **One** AGP slot supporting 1.5v **4X/8X** AGP cards
  - AGP v3.0 compliant
- ◆ **Three** PCI slots with Bus Master support
  - PCI v2.2 compliant

### ● **Other Features**


- ◆ Magic Health – a BIOS H/W monitoring utility for voltage, temperature and fan-speed sensing displayed during POST
- ◆ EZ Boot – A simple shortcut to select the boot device, e.g. hard drive, CD-ROM or floppy without entering CMOS setup
- ◆ Supports exclusive KBPO (Keyboard Power On) function
- ◆ Excellent Over clocking capabilities through
  - subtle frequency tuning on FSB
  - supports complete Asynchronous FSB/Memory for overclocking
- ◆ CPU Overheating Protection

### ● **Form Factor**

- ◆ 244mm x 220 mm Micro ATX size



Section 3  
INSTALLATION

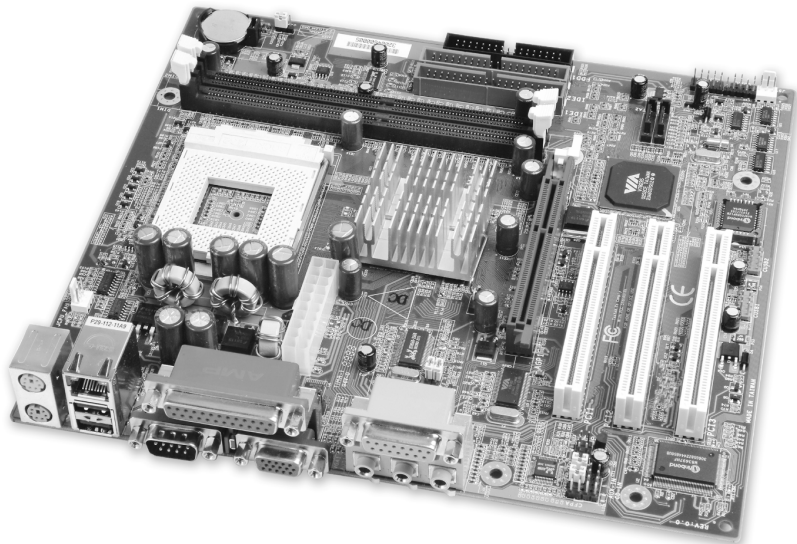

## Mainboard Layout

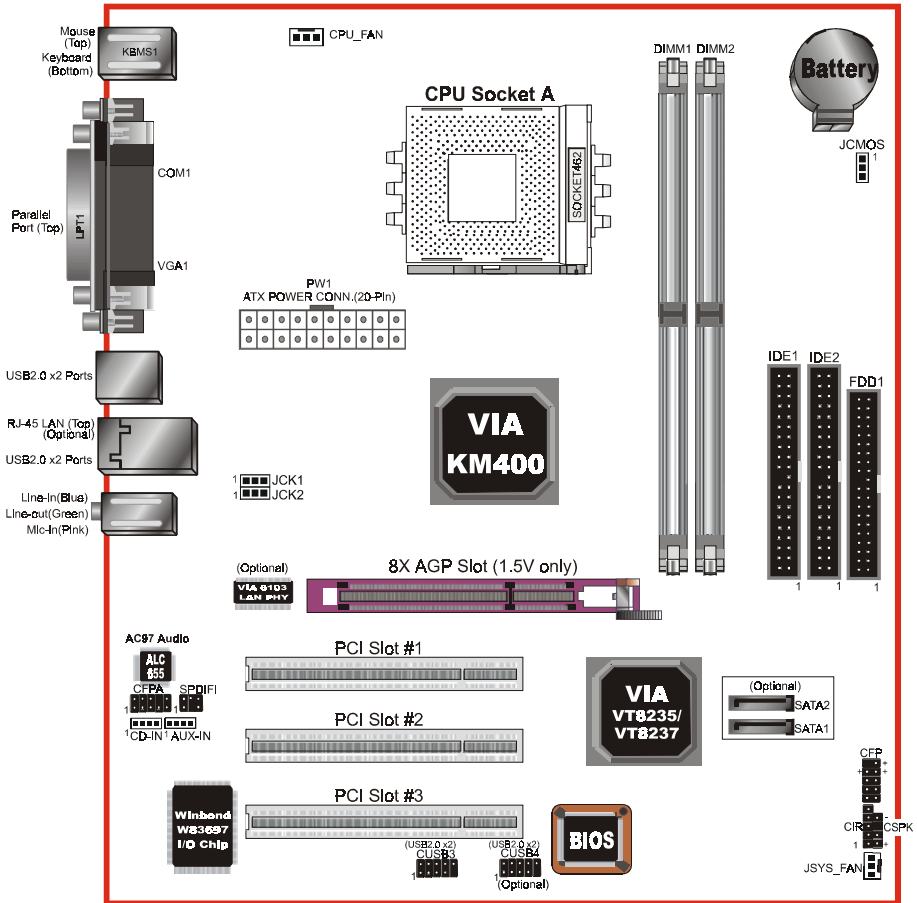


Figure 1




## Easy Installation Procedure

The following must be completed before powering on your new system:

- 3-1. CPU Installation**
- 3-2. Jumper Settings**
- 3-3. System Memory Configuration**
- 3-4. Expansion Slots**
- 3-5. Device Connectors**

### 3-1 CPU Installation


CPU Insertion: (use AMD Athlon™ as reference)

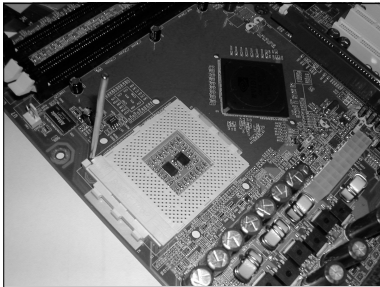

*Figure 2*

#### **Step 1**

Open the socket by raising the actuation lever.

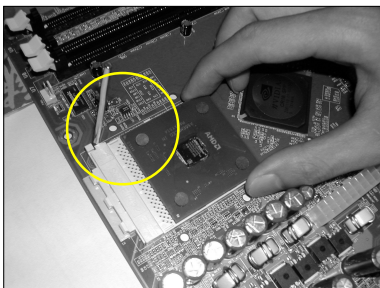

*Figure 3*

#### **Step 2**

Insert the processor.


Ensure proper pin 1 orientation by aligning the FC-PGA corner marking with the socket corner closest to the actuation arm tip. The pin field is keyed to prevent mis-oriented insertion.

Don't force processor into socket. If it does not go in easily, check for mis-orientation and debris.

Make sure the processor is fully inserted into the socket on all sides.

## Installation

---

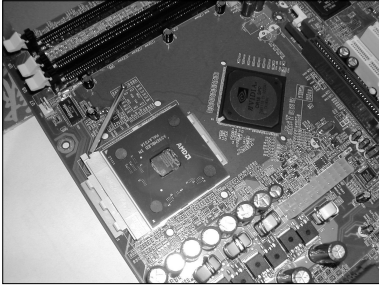


*Figure 4*

### Step 3

Close the socket by lowering and locking the actuation lever.


### Step 4

Thermal compound and qualified heatsink recommended by AMD are a must to avoid CPU overheating damage. For more information about installing your CPU, please refer to the AMD website article “Socket A AMD processor and Heatsink Installation Guide” <http://www.amd.com/products/cpg/athlon/pdf/23986.pdf>.

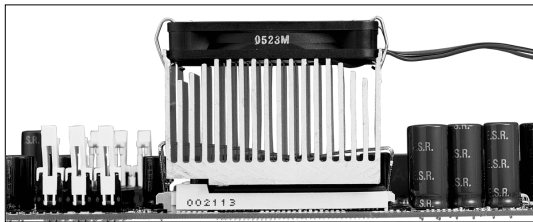

*Figure 5*

## 3-2 Jumper Settings

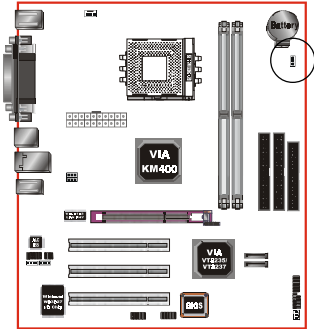


### JCMOS: Clear CMOS data Jumper

If the CMOS data becomes corrupted or you forgot the supervisor or user password, clear the CMOS data to reconfigure the system back to the default values stored in the ROM BIOS.

- Settings:
- 1-2: Normal (Default)
  - 2-3: Clear CMOS

To CMOS Clear data, please follow the steps below.

1. Turn off the system.
2. Change the jumper from “1-2” to “2-3” position for a few seconds.
3. Replace the jumper on to the “1-2” position.
4. Turn on the system and hold down the <Del> key to enter BIOS setup.

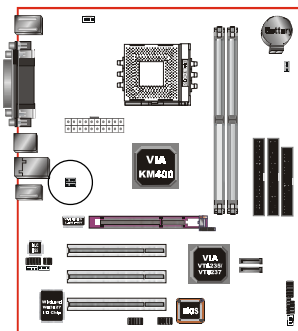

### JCK1/ CPU FSB Select Jumper

**JCK2:** This jumper is used to select the front side bus of the CPU installed on the mainboard.

JCK1	JCK2	Settings:
1-2	1-2	100MHz (Default)
2-3	1-2	133MHz
2-3	2-3	166MHz

Note: Overclocking may result to the CPU's or system's instability and are not guaranteed to provide better system performance.

# Installation

---

## 3-3 System Memory Configuration

### Memory Layout

The mainboard accommodates two PC2100/PC2700 184-pin DIMMs (Dual In-line Memory Modules):

- Supports up to 2.0GB of 266/333MHz DDR SDRAM
- Supports up to 2 DDR DIMMs (refer to Table 1)
- Supports unbuffered and non-ECC DIMMs
- Supports configurations defined in the JEDEC DDR DIMM specification

Figure 6 and Table 1 show two possible memory configurations.

<Figure 6>



<Table 1>

Total Memory	DDR DIMM 1	DDR DIMM 2
= 1GB Maximum	DDR SDRAM* 64MB, 128MB, 256MB, 512MB, 1GB* X 1	None
= 2GB Maximum	DDR SDRAM* 64MB, 128MB, 256MB, 512MB, 1GB* X 1	DDR SDRAM* 64MB, 128MB, 256MB, 512MB, 1GB* X 1


#### NOTES:

- Using non-compliant memory with higher bus speeds (overclocking) may severely compromise the integrity of the system.


## DIMM Module Installation

Figure 7 displays the notch on the DDR DIMM memory module.


DIMMs have 184 pins and one notch that matches with the DDR DIMM socket. DIMM modules are installed by placing the chip firmly into the socket and pressing straight down as shown in figure 8 until the white clips close and the module fits tightly into the DIMM socket (figure 9).

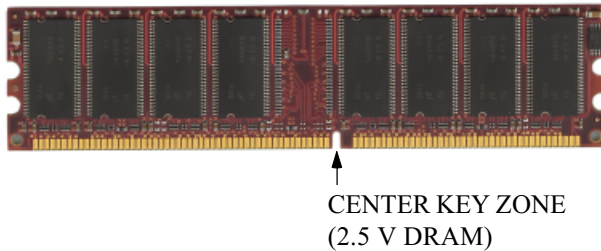

*Figure 7 - DIMM notch*

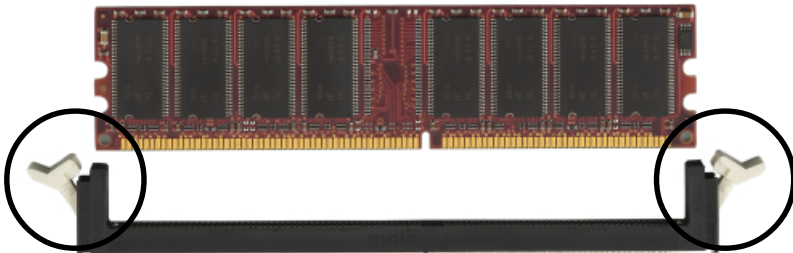

*Figure 8 - DIMM module clips before installation*

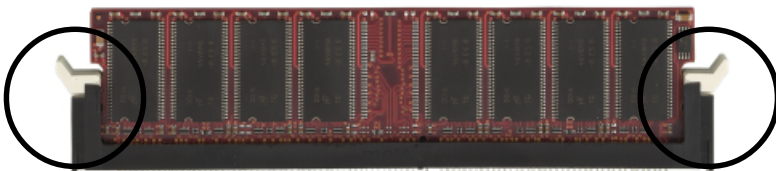


*Figure 9 - DIMM module clip after installation*

To remove the DIMM module press down the white clips and the module is ejected from the socket.

# Installation

---

## 3-4 Expansion Slots

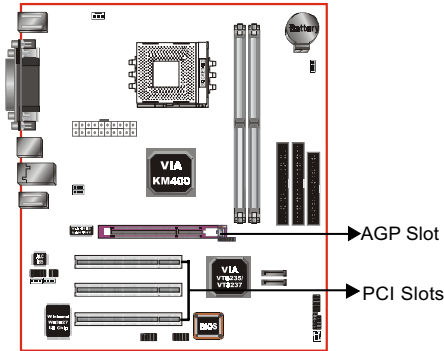

### AGP Slot

The mainboard is equipped with an AGP slot. Make sure you install a card that supports the 1.5V specification.

### PCI Slots


The mainboard is equipped with 3 PCI slots.

## Installing an Expansion Card


The steps below assume that the mainboard is already installed in the system chassis.

1. Make sure the PC and all other peripheral devices connected to its has been powered down.
2. Disconnect all power cords and cables.
3. Remove the system unit cover.
4. Remove the bracket of the slot that you intend to use. (You need to remove the screw in order to remove the bracket.)
5. Align the card above the slot then press it down firmly until it is completely seated in the slot.
6. Secure the card to the chassis with the screw you removed in step 4.
7. Replace the system unit cover.
8. Power on the PC.
9. Enter the BIOS step program to make the necessary settings.
10. Save the settings and restart the PC.
11. Install the software drivers of the expansion cards, if necessary.


## AGP Card Installation Caution

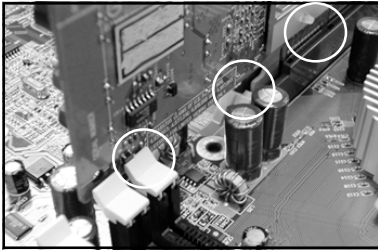


1. AGP card component is blocked by DIMM socket lock.
2. AGP slot clicker is not locked.
3. AGP card edge connector is not inserted properly.

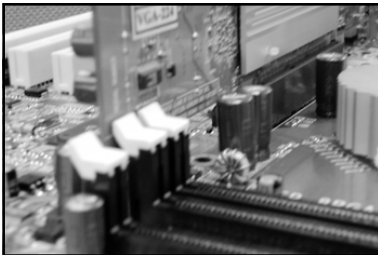

1. AGP card component is not blocked by DIMM socket lock.
2. AGP slot clicker is locked.
3. AGP card edge connector is inserted properly.

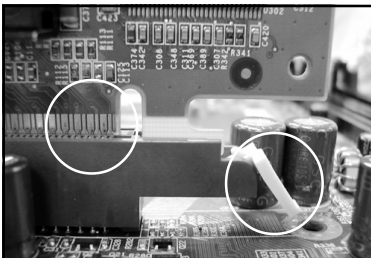

1. AGP slot clicker is not locked.
2. AGP card edge connector is not inserted properly.

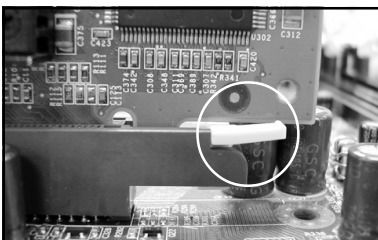

1. AGP slot clicker is locked.
2. AGP card edge connector is inserted properly.



# Installation

## 3-5 Device Connectors


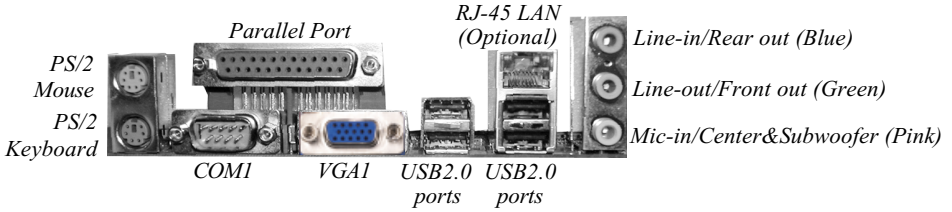


Figure 10 - I/O Ports

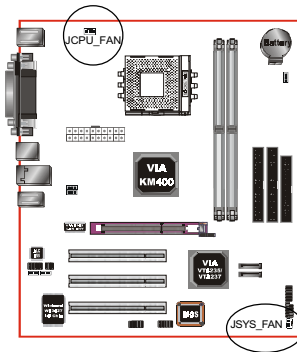


### JCPU\_FAN / JSYS\_FAN:

CPU/Chassis Fan Power Connectors



JCPU\_FAN: The CPU must be kept cool by using a fan with heatsink.

JSYS\_FAN: The chassis fan will provide adequate airflow throughout the chassis to prevent overheating the CPU.

 JCPU\_FAN




JSYS\_FAN

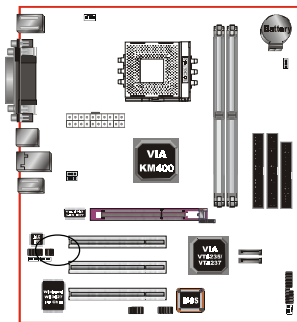 


### S/PDIF: Sony/Philips Digital InterFace connector

This connector links digital audio between the mainboard and your audio devices, such as CD player, sampler or DAT recorder. It allows the digital transmission of audio data in S/PDIF format.

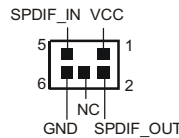



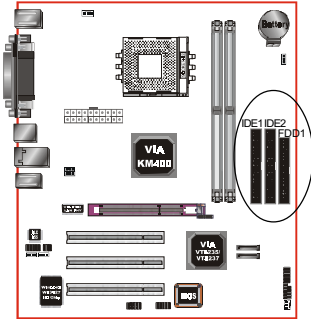


**FDD1:** Floppy drive Connector


This mainboard is equipped with a floppy disk drive connector for connecting up to 2 floppy disk drives.

**IDE1/IDE2:** Ultra DMA-66/100/133 Primary/Secondary IDE Connector

This mainboard is equipped with 2 IDE disk connectors for connecting up to 4 ATA-133 IDE drives. It supports PIO and DMA mode operations for maximum data transfer rate of 133MB/sec per channel.

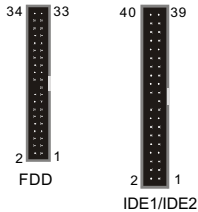


When use two IDE drives, one must be set to Master mode and the other to Slave mode. Refer to your disk drive user's manual for information about selecting the proper drive switch settings.

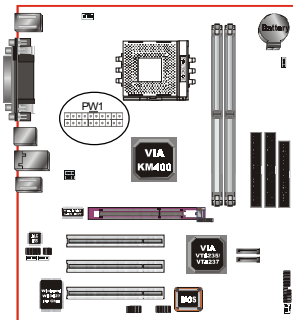


**PW1:** 20-pin ATX Power Connector

The mainboard is equipped with a standard 20-pin ATX main power connector for connecting power supply. The plugs of the power cables are designed to fit in only one orientation. Find the proper orientation then insert the plugs into the connectors until they fit in place.

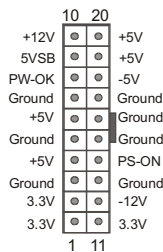


# Installation

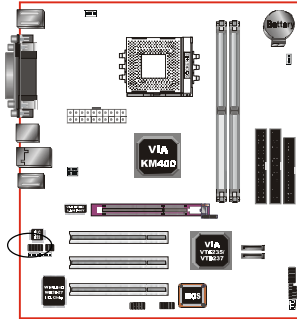

## CFPA: Front Panel Audio Connector

When the jumpers are removed this connector can be used for front panel audio.

The front panel line-out phone jack should have a “normal close” switch. Without a phone-plug inserted, the rear panel audio is enabled. With phone plug inserted, the rear panel audio will be disabled.

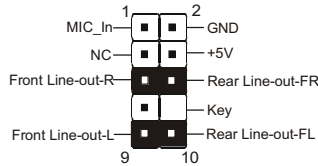


### Settings

*Pins (5-6) & (9-10) Short (default):* Only the onboard rear panel audio jack can be used.

*Pins (5-6) & (9-10) Open:* Only front panel audio jack can be used.






In 2-Channel audio mode, Mic-In is shared for both front panel and rear panel. In 6-Channel audio mode, the Mic-In is dedicated for front panel use, and rear panel Mic-In function will switch to Center and Subwoofer support.

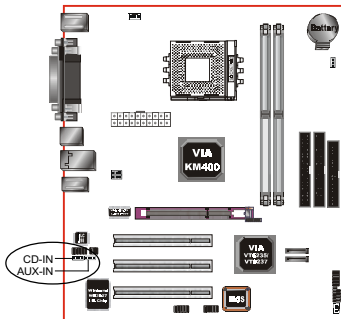

## CD-IN/AUX-IN: CD Audio\_IN Connector

  

The CD-IN and AUX-IN connectors are used to receive audio from a CD-ROM drive, TV tuner or MPEG card.



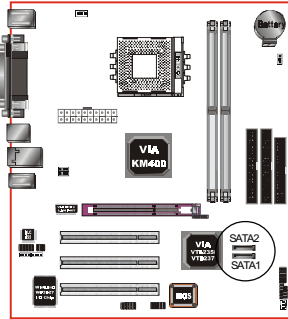

## SATA1 / SATA2: Serial ATA Connectors (Optional by VIA VT8237 chip)

 These connectors enable you to connect two Serial ATA devices that conform to the Serial ATA specification.

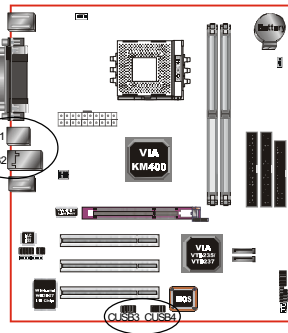

## USB1/USB2/CUSB3:

Six USB 2.0 ports with VIA VT8235 Chip

## USB1/USB2/CUSB3/CUSB4:

Eight USB 2.0 ports with VIA VT8237 Chip


It is equipped with a 10-pin connector for connecting additional external USB 2.0/1.1 ports. If you wish to use the additional USB ports, install the card-edge bracket to the system chassis then insert its cables to this 10-pin connector.

USB2.0 allows data transfer speed up to 480Mbps.


### CAUTION!

Please make sure the USB cable has the same pin assignment. A different pin assignment may cause damage to the system.


If you need the USB cable, please contact our retailer.

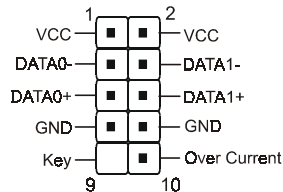

# Installation

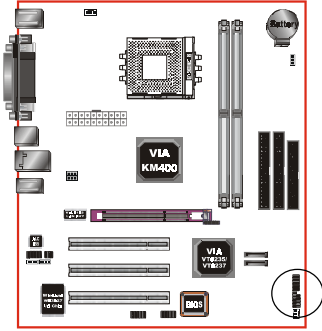

## CFP / CIR / CSPK

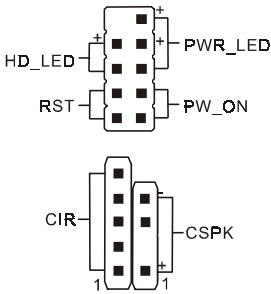

### CFP: Front Panel Connector

#### ◆ HD\_LED

This LED will light up whenever the hard drive is being accessed.

#### ◆ PWR\_LED

This connects to the power button of the system chassis

#### ◆ RST

This switch allows you to reboot without having to power off the system thus prolonging the life of the power supply or system.

#### ◆ PW\_ON

This is connected to the power button on the case. Using the Soft-Off by Pwr-BTTN feature, you can choose either Instant Off (turn off system immediately) or 4 sec delay (push the button for 4 seconds to turn off the system). When the system is in 4 sec delay mode, suspend mode is enabled by pushing the button momentarily.

### CIR: IR connector

Connect your IrDA cable to the IR connector.

- |          |         |
|----------|---------|
| 1. VCC   | 4. GND  |
| 2. CIRRX | 5. IRTX |
| 3. IRRX  |         |

### CSPK: Speaker

Connect to the system's speaker for beeping

- |        |            |
|--------|------------|
| 1. VCC | 3. GND     |
| 2. NC  | 4. Speaker |

### 3-6 STR (Suspend To RAM) Function

This mainboard supports the STR (Suspend To RAM) power management scheme by maintaining the appropriate power states in the DDR SDRAM interface signals. The power source to the DDR SDRAM is kept active during STR (ACPI S3). Advanced Configuration Power Interface (ACPI) provides many Energy Saving Features for operating systems that support Instant ON and QuickStart™ function.

1. To enable STR functionality to save system power :
  - a. Install ACPI certified add-on cards (such as AGP, LAN, and modem cards).
  - b. In BIOS, under Power Management Setup (refer to Section 4), select “ACPI Suspend Type: S3(STR)” and “USB Port Wake Up Control” (if you have a USB mouse or keyboard device).
  - c. Install Windows® XP/2000/ME/98SE.
  - d. Restart the system.
  - e. Open the Control Panel Power Management application, and click the Advanced tab. In the Power buttons section, select “Stand By” from the drop-down lists.
2. To activate the STR function, click the START button and choose Shut Down. In the Shut Down Windows dialog box, select the Stand By option to enter STR mode.

The following are the differences between STR power saving mode and Green (or Suspend) mode:

- a. STR is the most advanced Power Management mode.
- b. STR cuts all the power supplied to peripherals except to memory - max. power saving.
- c. STR saves and keeps all on-screen data including any executed applications to DDR SDRAM.
- d. In STR mode, you must push the power button (connected to the onboard PW-On of CFP pin), click your USB mouse buttons, or press your USB keyboard keys to wake up your system to the last display.

## Installation

---

### 3-7 CPU Overheating Protection

---

This mainboard is equipped with CPU Overheating Protection. It will automatically remove power to shutdown the system when CPU temperature reaches approximately 110°C. This is to prevent long term damage to the CPU from overheating. When this happens, the speaker produces a sustained beep sound and the system will not be able to power on. This protection is designed through hardware and no BIOS setup is required

To power on your system again normally,

- Step 1:** Unplug the ATX power cord (or turn off the ATX power supply switch)
- Step 2:** Wait a few minutes for the CPU to cool.
- Step 3:** Check that the CPU heatsink and cooling fan assembly is properly installed. **Be careful when touching the heatsink as it may be hot.**
- Step 4:** Plug back the ATX power cord (or turn on the ATX power supply switch) and power -on the system.

If the beeping sound persists, repeat Step 1 to remove the power source.

**Note: The CPU Overheating Protection will function only if the CPU is designed with an internal thermal diode. AMD Athlon XP or later CPUs is equipped with internal thermal diode.**

Section 4  
BIOS SETUP


Main Menu

The ROM BIOS provides a built-in Setup program which allows user to modify the basic system configuration and hardware parameters. The modified data is stored in a battery-backed CMOS, so that data will be retained even when the power is turned off. In general, the information saved in the CMOS RAM will stay unchanged unless there is a configuration change in the system, such as hard drive replacement or a device is added.

It is possible for the CMOS battery to fail causing CMOS data loss. If this happens you will need install a new CMOS battery and reconfigure your BIOS settings.

**To enter the Setup Program :**

Power on the computer and press the <Del> key during the POST (Power On Self Test). The BIOS CMOS SETUP UTILITY opens.

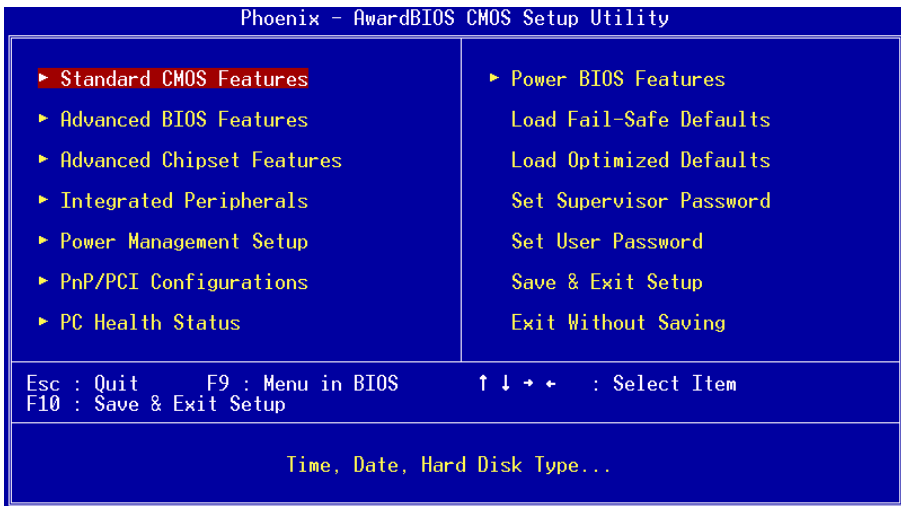

*Figure 1: CMOS Setup Utility*

# BIOS

The main menu displays all the major selection items. Select the item you need to reconfigure. The selection is made by moving the cursor (press any direction (arrow key) ) to the item and pressing the 'Enter' key. An on-line help message is displayed at the bottom of the screen as the cursor is moved to various items which provides a better understanding of each function. When a selection is made, the menu of the selected item will appear so that the user can modify associated configuration parameters.

## 4-1 Standard CMOS Setup

Choose "STANDARD CMOS FEATURES" in the CMOS SETUP UTILITY Menu (Figure 2). Standard CMOS Features Setup allows the user to configure system settings such as the current date and time, type of hard disk drive installed, floppy drive type, and display type. Memory size is auto-detected by the BIOS and displayed for your reference. When a field is highlighted (use direction keys to move the cursor and the <Enter> key to select), the entries in the field can be changed by pressing the <PgDn> or the <PgUp> key.

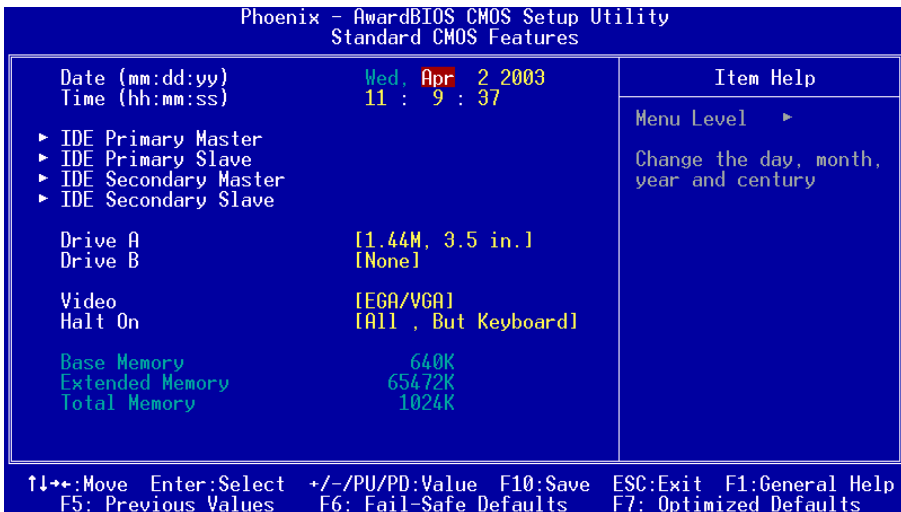


Figure 2: Standard CMOS Setup



**Notes:**

- If the hard disk Primary Master/Slave and Secondary Master/Slave are set to Auto, the hard disk size and model will be auto-detected.
- The “Halt On:” field is used to determine when the BIOS will halt the system if an error occurs.
- Floppy 3 Mode support is a mode used to support a special 3.5-inch drive used in Japan. This is a 3.5-inch disk that stores 1.2 MB. The default setting for this is disabled.

## 4-2 Advanced BIOS Features

Selecting the “ADVANCED BIOS FEATURES” option in the CMOS SETUP UTILITY menu allows users to change system related parameters in the displayed menu. This menu shows all of the manufacturer’s default values for the board.

Pressing the [F1] key displays a help message for the selected item.



Figure 3: BIOS Features Setup

# BIOS

---

## Virus Warning

During and after system boot up, any attempt to write to the boot sector or partition table of the hard disk drive halts the system and an error message appears.

You should then run an anti-virus program to locate the virus. Keep in mind that this feature protects only the boot sector, not the entire hard drive. The default is Disabled.

**Enabled:** Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector.

**Disabled:** No warning message appears when anything attempts to access the boot sector.

**Note:** Many disk diagnostic programs that access the boot sector table can trigger the virus warning message. If you plan to run such a program, we recommend that you first disable the virus warning.

## CPU Internal Cache

This controls the status of the processor's internal cache area. The default is Enabled.

Options: Enabled, Disabled.

## External Cache

This controls the status of the external (L2) cache area. The default is Enabled.

Options: Enabled, Disabled.

## CPU L2 Cache ECC Checking

This item allows you to enable/disable CPU L2 Cache ECC checking.

Options: Enabled, Disabled.

## Quick Power On Self Test

This category speeds up the Power On Self Test (POST). The default is Enabled.

**Enabled:** This setting will shorten or skip of the items checked during POST.

**Disabled:** Normal POST.

## ATA RAID & SCSI Card Boot

Setup the boot up priority either form onboard ATA RAID connector or SCSI Card, if you select SCSI as the first boot at the option below item.

Options: S-ATA, SCSI.

**First /Second/Third/Other Boot Device**

The BIOS attempts to load the operating system from the devices in the sequence selected in these items.

Options: Floppy, LS120, HDD-0, SCSI, CDROM, HDD-1, HDD-2, HDD-3, ZIP100, USB-FDD, USB-ZIP, USB-CDROM, USB-HDD, LAN, Disabled.

**Boot Other Device**

When enabled, the system searches all other possible locations for an operating system if it fails to find one in the devices specified under the first, second, and third boot devices. The default is Enabled.

Options: Enabled, Disabled.

**Swap Floppy Drive**

This will swap your physical drive letters A & B if you are using two floppy disks.

Options: Enabled, Disabled.

**Boot Up Floppy Seek**

If this item is enabled, it checks the size of the floppy disk drives at start-up time. You don't need to enable this item unless you have a legacy diskette drive with 360K capacity. The default is Disabled.

Options: Enabled, Disabled.

**Boot Up NumLock Status**

This controls the state of the NumLock key when the system boots. The default is On.

**On:** The keypad acts as a 10-key pad.

**Off:** The keypad acts like cursor keys.

**Gate A20 Option**

This refers to the way the system addresses memory above 1 MB (extended memory).

**Normal:** The A20 signal is controlled by the keyboard controller or chipset hardware.

**Fast:** The A20 signal is controlled by Port 92 or chipset specific method.

**Typematic Rate Setting**

This determines the keystrokes repeat rate. The default is Disabled.

**Enabled:** Allows typematic rate and typematic delay programming.

**Disabled:** The typematic rate and typematic delay will be controlled by the keyboard controller in your system.

# BIOS

---

## **Typematic Rate (Chars/Sec)**

This is the number of characters that will be repeated by a keyboard press.

The default is 6.

Options: 6 ~ 30 characters per second.

## **Typematic Delay (msec)**

This setting controls the time between the first and the second character displayed by typematic auto-repeat. The default is 250.

Options: 250/500/750/1000 msec.

## **Security Option**

This category allows you to limit access to the System and Setup, or just to Setup.

The default is Setup.

**System:** The system will not boot and the access to Setup will be denied if the correct password is not entered at the prompt.

**Setup:** The system will boot; but the access to Setup will be denied if the incorrect password is not entered at the prompt.

## **APIC Mode**

This item allows you to enable APIC (Advanced Programmable Interrupt Controller) functionality. APIC is an Intel chip that provides symmetric multiprocessing (SMP) for its Pentium systems. The default is Disabled.

Options: Enabled, Disabled.

## **MPS Version Control For OS**

Specifies the Multiprocessor Specification (MPS). Version 1.4 supports multiple PCI bus configurations by incorporating extended bus definitions. Enable this for Windows NT or Linux. For older operating systems, select Version 1.1.

Options: 1.1, 1.4.

## **OS Select For DRAM > 64 MB**

Some operating systems require special handling. Use this option only if your system has greater than 64 MB of memory. The default is Non-OS2.

**OS2:** Select this if you are running the OS/2 operating system with greater than 64 MB of RAM.

**Non-OS2:** Select this for all other operating systems and configurations.

## **Video BIOS Shadow**

This option allows video BIOS to be copied into RAM. Video Shadowing will increase the video performance of your system.

Options: Enabled, Disabled.

## **Small Logo (EPA) Show**

If the BIOS contains an internal bitmap picture, this option sets the bitmap display at the top right corner of the screen.

Options: Enabled, Disabled.

## 4-3 Advanced Chipset Features

Choose the “ADVANCED CHIPSET FEATURES” option in the CMOS SETUP UTILITY menu to display following menu.

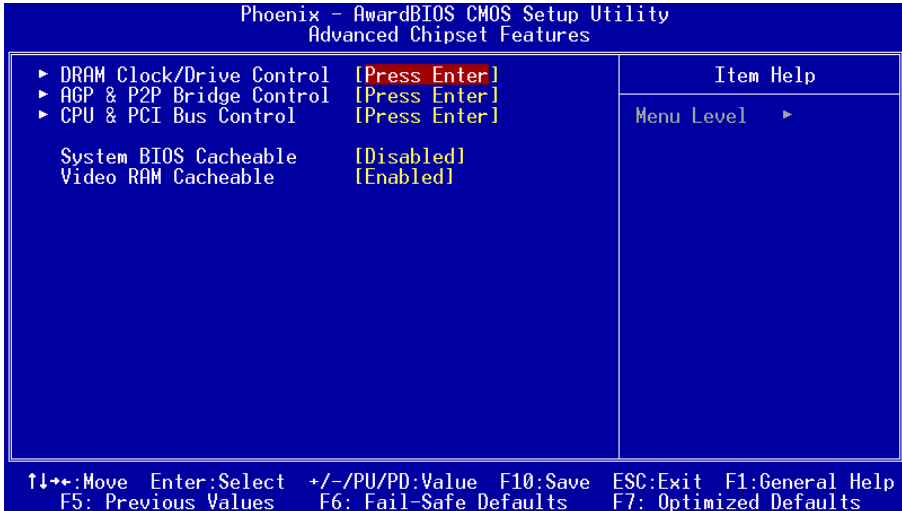


Figure 4: Chipset Features Setup

### System BIOS Cacheable

This item allows the system to be cached in memory for faster execution. The default is Enabled.

Options: Disabled, Enabled.


### Video RAM Cacheable

This option allows the CPU to cache read/writes of the video RAM. The default is Enabled.

Options: Disabled, Enabled.

► **DRAM Clock / Drive Control**

Scroll to DRAM Clock/Drive Control and press <Enter>. The following screen appears:

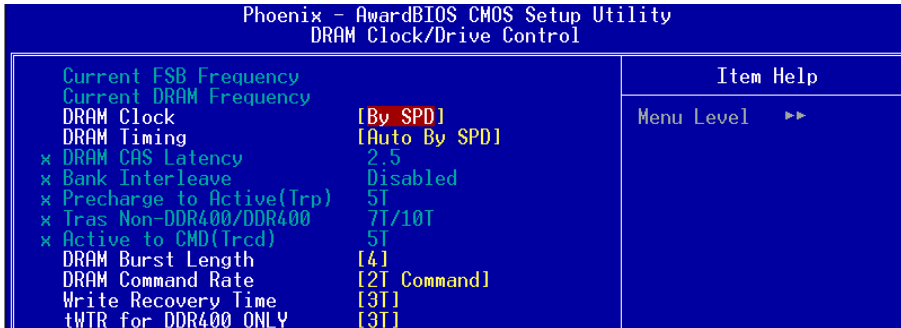

**Current FSB Frequency**

Display the current CPU front side bus frequency information.

**Current DRAM Frequency**

Display the current DRAM frequency information.

**DRAM Clock**

This item allows you to select DRAM clock.

Options: By SPD, 100MHz, 133MHz, 166MHz, 200MHz.

**DRAM Timing**

For setting DRAM Timing select By SPD to follow SDRAM Serial Presence Detect Specification.

Options: Manual, Auto by SPD, Turbo, Ultra.

**DRAM CAS Latency**

Enables you to select the CAS latency time. The value is set at the factory depending on the DRAM installed. Do not change the values in this field unless you change specifications of the installed DRAM and DRAM clock from DRAM Timing Selectable. The default is set by SPD (see ‘DRAM Timing’).

Options: 1.5, 2, 2.5, 3.

**Bank Interleave**

The item allows you to set how many banks of SDRAM support in your mainboard. Default is by SPD.

Options: 2 Bank, 4 Bank, Disabled.

# BIOS

---

## **Precharge to Active (Trp)**

This item refers to the number of cycles required to return data to its original location to close the bank or the number of cycles required to page memory before the next bank activate command can be issued. The default is by DRAM SPD.

Options: 3T, 2T, 4T, 5T.

## **Tras Non-DDR400/DDR400**

This item sets Tras Non-DDR400/DDR400 timing. The default is by DRAM SPD.

Options: 6T/8T, 7T/10T, 5T/6T, 8T/12T.

## **Active to CMD (Trcd)**

This item sets the timing parameters for the system memory such as the CAS (Column Address Strobe) and RAS (Row Address Strobe). The default is by DRAM SPD.

Options: 3T, 2T, 4T, 5T.

## **DRAM Burst Length**

This item sets the DRAM Burst Length.

Options: 4, 8.

## **DRAM Command Rate**

Setup the timing at each cycle.

Options: 1T Command, 2T Command.

## **Write Recovery Time**

This item sets the DRAM Write Recovery Time.

Options: 2T, 3T.

## **tWTR for DDR400 ONLY**

TWTR Timing Control for DDR400 only.

Options: 1T, 3T, 2T.



## ► AGP & P2P Bridge Control

Scroll to AGP & P2P Bridge Control and press <Enter>. The following screen appears:

Phoenix - AwardBIOS CMOS Setup Utility		Item Help
AGP & P2P Bridge Control		Menu Level ▶▶
AGP Aperture Size	[128M]	
AGP Mode	[4X]	
AGP Driving Control	[Auto]	
* AGP Driving Value	DA	
AGP Fast Write	[Disabled]	
AGP Master 1 WS Write	[Disabled]	
AGP Master 1 WS Read	[Disabled]	
AGP 3.0 Calibration cycle	[Enabled]	
VGA Share Memory Size	[32M]	
CPU Direct Access FB	[Enabled]	

### AGP Aperture Size (MB)

This item defines the size of the aperture if you use an AGP graphics adapter. It refers to a section of the PCI memory address range used for graphics memory.

Options: 4M, 8M, 16M, 32M, 64M, 128M, 256M, 512 M, 1G.

### AGP Mode

Chipset AGP Mode support.

Options: 1X, 2X, 4X.

### AGP Driving Control

This item allows you to adjust the AGP driving force. Choose Manual to key in a AGP Driving Value in the next selection. This field is recommended to set in **Auto** for avoiding any error in your system.

Options: Auto, Manual.

### AGP Fast Write

Selecting Enabled allows to use Fast Write Protocol for 4X AGP card.

Options: Enabled, Disabled.

### AGP Master 1 WS Write

When Enabled, Writes to the AGP (Accelerated Graphics Port) are executed with one wait states.

Options: Enabled, Disabled.

### AGP Master 1 WS Read

When Enabled, Reads to the AGP (Accelerated Graphics Port) are executed with one wait states.

Options: Enabled, Disabled.

# BIOS

---

## AGP 3.0 Calibration cycle

This item allows you to select AGP 3.0 Calibration cycle function.

Options: Enabled, Disabled.

## VGA Share Memory Size

This item allows you to select the VGA share memory size for video.

Options: 16M, 32M, 64M, Disabled.


## CPU Direct Access FB

This item allows you to select the CPU Direct Access FB.

Options: Enabled, Disabled.

## ▶ CPU & PCI Bus Control

Scroll to CPU & PCI Bus Control and press <Enter>. The following screen appears:

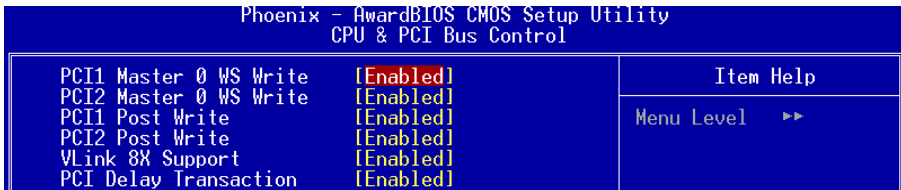

## PCI1/2 Master 0 WS Write

When Enabled, Writes to the PCI bus are commanded with zero wait states.

Options: Enabled, Disabled.

## PCI1/2 Post Write

Enables CPU to PCI bus POST write.

Options: Enabled, Disabled.

## VLink 8X Support

Enables VLink 8X support.

Options: Enabled, Disabled.

## PCI Delay Transaction

The chipset has an embedded 32-bit posted write buffer to support delay transactions cycles. Select Enabled to support compliance with PCI specification version 2.3.

Options: Enabled, Disabled.

## 4-4 Integrated Peripherals

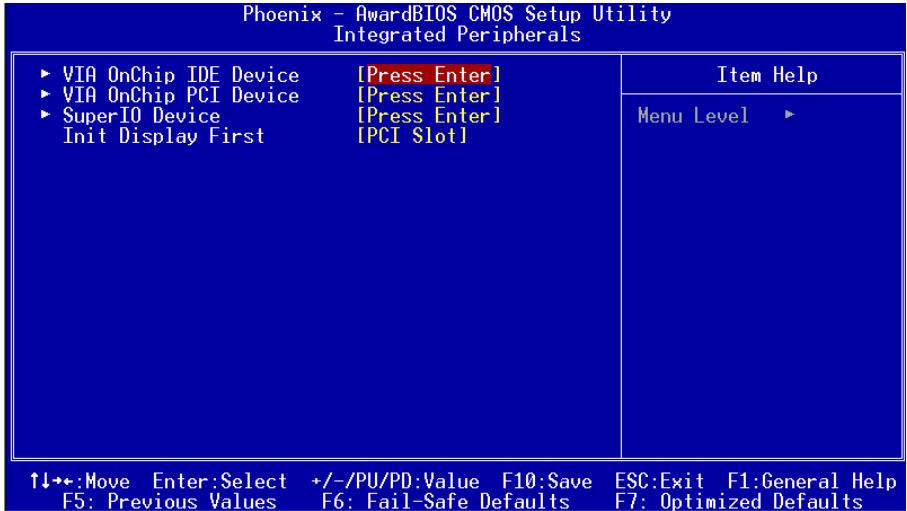


Figure 5: Integrated Peripherals


### Init Display First

If two video cards are used (1 AGP and 1 PCI) this specifies which one will be the primary display adapter. The default is PCI Slot.

Options: PCI Slot, AGP.

### ▶ VIA OnChip IDE Device

Scroll to VIA Onchip IDE Device and press <Enter>. The following screen appears:

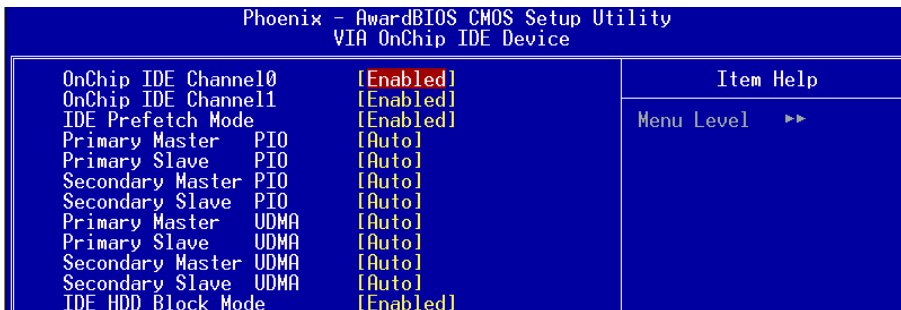

# BIOS

---

## **OnChip IDE Channel0/1**

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select *Enabled* to activate each channel separately.

Options: Enabled, Disabled.

Note: If you do not use the onboard IDE connector, then you will need to set the Onboard Primary PCI IDE and Onboard Secondary PCI IDE to Disabled.

## **IDE Prefetch Mode**

Selecting Enabled reduces latency between each drive read/write cycle, but may cause instability in IDE subsystems that cannot support such fast performance. If you are getting disk drive errors, try setting this value to Disabled. This field does not appear when the Internal PCI/IDE field, above, is Disabled.

Options: Enabled, Disabled.

## **Primary/Secondary Master/Slave PIO**

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 to 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

Options: Auto, Mode 0 ~ 4.

## **Primary/Secondary Master/Slave UDMA**

This allows you to select the mode of operation for the IDE drive. Ultra DMA-33/66/100/133 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver. If your hard drive and your system software both support Ultra DMA-33/66/100/133, select Auto to enable UDMA mode by BIOS or you can manually disable it.

Options: Auto, Disabled.

## **IDE HDD Block Mode**

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support.

Options: Enabled, Disabled.

► **VIA Onchip PCI Device**

Scroll to VIA Onchip PCI Device and press <Enter>. The following screen appears:

Phoenix - AwardBIOS CMOS Setup Utility		Item Help
VIA OnChip PCI Device		Menu Level ▶▶
VIA-3058 AC97 Audio	[Auto]	
VIA-3043 OnChip LAN	[Enabled]	
Onboard Lan Boot ROM	[Disabled]	
OnChip USB Controller	[Enabled]	
OnChip EHCI Controller	[Enabled]	
USB Device Function	[Disabled]	
USB Keyboard Support	[Disabled]	
USB Mouse Support	[Disabled]	

**VIA-3058 AC97 Audio**

This item allows you to disable the chipset on-chip support for AC97 Audio.

Options: Auto, Disabled.

**VIA-3043 Onchip LAN (Optional)**

Enables the onboard LAN feature. The default is Enabled.

Options: Enabled, Disabled.

**Onboard Lan Boot ROM (Optional)**

Enable/disable the onboard LAN Boot ROM. The default is Disabled.

Options: Enabled, Disabled.

**Onchip USB Controller**

Enables the USB controller.

Options: Enabled, Disabled.

**Onchip EHCI Controller**

Enables the EHCI (USB2.0) controller.

Options: Enabled, Disabled.

**USB Device Support**

Enable/disable support for USB device.

Options: Enabled, Disabled.

**USB Keyboard Support**

Enable/disable support for USB keyboard.

Options: Enabled, Disabled.

# BIOS

---

## USB Mouse Support

Enable/disable support for USB mouse.

Options: Enabled, Disabled.

## ► Super IO Chip Setup

Scroll to Super IO Chip Setup and press <Enter>. The following screen appears:

The screenshot shows the Phoenix - AwardBIOS CMOS Setup Utility SuperIO Device screen. It features a list of settings on the left and an Item Help section on the right. The settings are as follows:

Setting	Value
Onboard FDC Controller	[Enabled]
Onboard Serial Port 1	[3F8/IRQ4]
Infrared Port Select	[2F8/IRQ3]
RxD , TxD Active	[Hi,Lo]
IR Transmission Delay	[Enabled]
UR2 Duplex Mode	[Half]
Use IR Pins	[IR-Rx2Tx2]
Onboard Parallel Port	[378/IRQ7]
Parallel Port Mode	[SPP]
EPP Mode Select	[EPP1.7]
ECP Mode Use DMA	[3]

The Item Help section on the right shows "Menu Level" with a right-pointing arrow.

### Onboard FDC Controller

Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install add-in FDC or the system has no floppy drive, select Disabled in this field.

Options: Enabled, Disabled.

### Onboard Serial Port 1

Select an address and corresponding interrupt for the first serial ports.

Options: 3F8/IRQ4, 2E8/IRQ3, 3E8/IRQ4, 2F8/IRQ3, Disabled, Auto.

### Infrared Port Select

Select an address for Infrared port.

Options: 3F8/IRQ4, 2E8/IRQ3, 3E8/IRQ4, 2F8/IRQ3, Disabled, Auto.

### RxD, TxD Active

This field configures the receive and transmit signals generated from the IR port. The default is Hi Lo (when UART Mode Select is not set to Normal).

Options: Hi Hi, Hi Lo, Lo Hi, and Lo Lo.

### IR Transmission delay

This item allows you to enable/disable IR transmission delay.

Options: Enabled, Disabled.

**UR2 Duplex Mode**

This item allows you to select IR half/full duplex function.

Options: Half, Full.

**Use IR Pins**

This item allows you to select IR transmission routes, one is RxD2, TxD2 (COM Port) and the other is IR-Rx2Tx2.

Options: IR-Rx2Tx2; RxD2, TxD2.

**Onboard Parallel Port**

This field allows the user to configure the LPT port.

Options: 378/IRQ7, 278/IRQ5, 3BC/IRQ7, Disabled.

**Parallel Port Mode**

This field allows the user to select the parallel port mode.

Options: SPP, EPP, ECP, ECP+EPP, Normal.

**EPP Mode Select**

This item allows you to determine the IR transfer mode of onboard I/O chip. Options: EPP1.9, EPP1.7.

**ECP Mode USE DMA**

This field allows the user to select DMA1 or DMA3 for the ECP mode.

Options: DMA1, DMA3.

# BIOS

## 4-5 Power Management Setup

Choose the “POWER MANAGEMENT SETUP” in the CMOS SETUP UTILITY to display the following screen. This menu allows the user to modify the power management parameters and IRQ signals. In general, these parameters should not be changed unless it’s absolutely necessary.

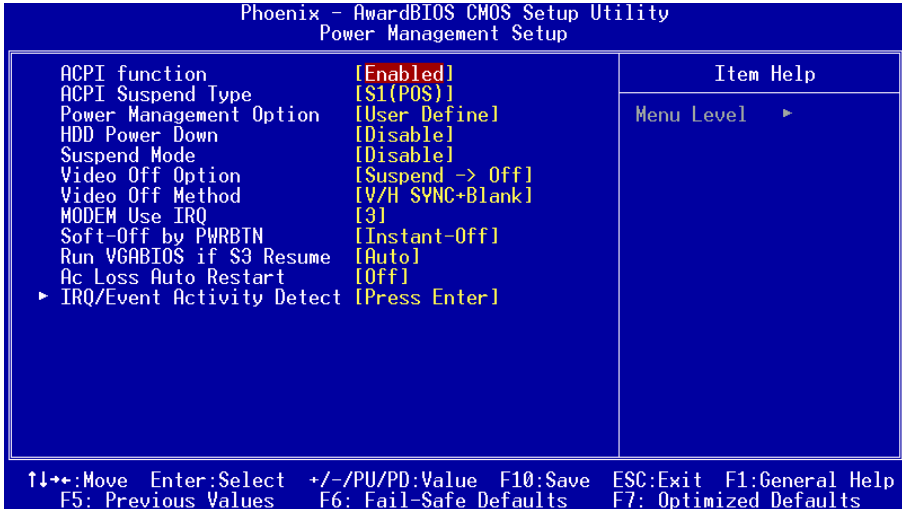


Figure 6: Power Management

### ACPI Function

This option allows you to select ACPI Function. The default is Enabled.

Options: Enabled, Disabled.

### ACPI Suspend Type

This item allows you to select S1(POS) or S3(STR) function.

Options: S1(POS), S3(STR), S1&S3.

### Power Management Option

Use this to select your Power Management selection. The default is User define.

**Max. saving:** Maximum power savings. Inactivity period is 1 minute in each mode.

**Min. saving:** Minimum power savings. Inactivity period is 1 hour in each mode.

**User define:** Allows user to define PM Timers parameters to control power saving mode.



**HDD Power Down**

When enabled and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

Options: Enabled, 1Min ~ 15Min.

**Suspend Mode**

enabled and after the set time of system inactivity, all devices except the CPU will be shut off.

Options: Enabled, 1 , 2, 4 ,6, 8, 10, 20, 30, 40Min and 1Hour .

**Video Off Option**

When enabled, this feature allows the VGA adapter to operate in a power saving mode.

Always On: Monitor will remain on during power saving modes.

Suspend->Off: Monitor blanked when the systems enters the suspend mode.

**Video Off Method**

This option allows you to select how the video will be disabled by the power management. The default is V/H Sync + Blank

V/H Sync + Blank: System turns off vertical and horizontal synchronization ports and writes blanks to the video buffer.

DPMS Support: Select this option if your monitor supports the Display Power Management Signaling (DPMS) standard of the Video Electronics Standards Association (VESA). Use the software supplied for your video subsystem to select video power management values.

Blank Screen: System only writes blanks to the video buffer.

**MODEM Use IRQ**

Name the interrupt request (IRQ) line assigned to the modem (if any) on your system. Activity of the selected IRQ always awakens the system. Default is IRQ 3.

Options: N/A, 3, 4, 5, 7, 9, 10, 11

**Soft-Off by PWRBTN**

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state when the system has “hung.” The default is Instant-off.

Options: Delay 4 Sec, Instant-Off.

# BIOS

---

## Run VGABIOS if S3 Resume

This determines whether or not to enable the system to run the VGA BIOS when resuming from S3(STR) or S1&S3.

Options: Auto, Yes, No.

## AC Loss Auto Restart

Configures the system to auto-restart or remain off after a power interrupt.


Off: System remains off after a power interrupt.

On: System always restarts after a power interrupt.

Auto: Depends on whether the system was safely shutdown during power failure.

## ► IRQ/Event Activity Detect

Scroll to IRQ/Event Activity Detect and press <Enter>. The following screen appears:

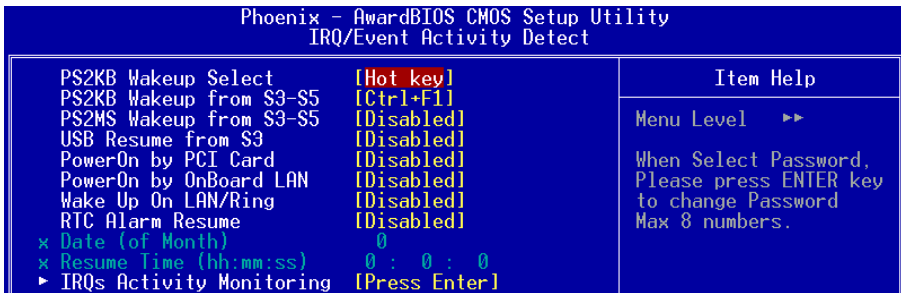

## PS2KB Wakeup Select

This item allows you to select Hot Key or Password to wake-up the system by PS2 Keyboard. When select Password, please press ENTER key to change password max 8 numbers.

Options: Hot key, Password.

## PS2KB Wakeup form S3/S4/S5

This item allows you to set a Hot Key to wake-up the system by PS2 Keyboard.

Options: Disabled, Ctrl+F1, Ctrl+F2, Ctrl+F3, Ctrl+F4, Ctrl+F5, Ctrl+F6, Ctrl+F7, Ctrl+F8, Ctrl+F9, Ctrl+F10, Ctrl+F11, Ctrl+F12, Power, Wake, Any key.

Note: Power and Wake are Windows98 Keyboard button.

**PS2MS Wakeup form S3/S4/S5**

This item allows you to wake-up the system by PS2 Mouse.

Options: Enabled, Disabled.

**USB Resume from S3**

This item allows you to wake-up the system by USB device when you save the computer power at S3.

Options: Enabled, Disabled.

**PowerOn by PCI Card**

An input signal form PME on the PCI card awakens the system from a soft off state.

Options: Enabled, Disabled.

**Modem Ring Resume**

When set to *Enabled*, any event occurring to the Modem Ring will awaken a system which has been powered down.

Options: Enabled, Disabled.

**RTC Alarm Resume**

When set to *Enable rtc alarm resume*, you could set the date (of month) and timer (hh:mm:ss), any event occurring at will awaken a system which has been powered down.

► **IRQs Activity Monitoring**

Scroll to IRQs Activity Monitoring and press <Enter>. The following screen appears:

Phoenix - AwardBIOS CMOS Setup Utility		Item Help
IRQs Activity Monitoring		Menu Level >>>
Primary INTR	[ON]	
IRQ3 (COM 2)	[Enabled]	
IRQ4 (COM 1)	[Enabled]	
IRQ5 (LPT 2)	[Enabled]	
IRQ6 (Floppy Disk)	[Enabled]	
IRQ7 (LPT 1)	[Enabled]	
IRQ8 (RTC Alarm)	[Disabled]	
IRQ9 (IRQ2 Redir)	[Disabled]	
IRQ10 (Reserved)	[Disabled]	
IRQ11 (Reserved)	[Disabled]	
IRQ12 (PS/2 Mouse)	[Enabled]	
IRQ13 (Coprocessor)	[Enabled]	
IRQ14 (Hard Disk)	[Enabled]	
IRQ15 (Reserved)	[Disabled]	

# BIOS

---

## **Primary INTR**

When set to *On* (default), any event occurring at will awaken a system which has been powered down.

## **IRQs 3-15**

Allows you to set system to monitor IRQs 3-15 for activity to awaken system form a power management mode.

## 4-6 PNP/PCI Configuration

The PNP/PCI configuration program is for the user to modify the PCI/ISA IRQ signals when various PCI/ISA cards are inserted in the PCI or ISA slots.

**WARNING: Conflicting IRQ's may cause the system to not find certain devices.**

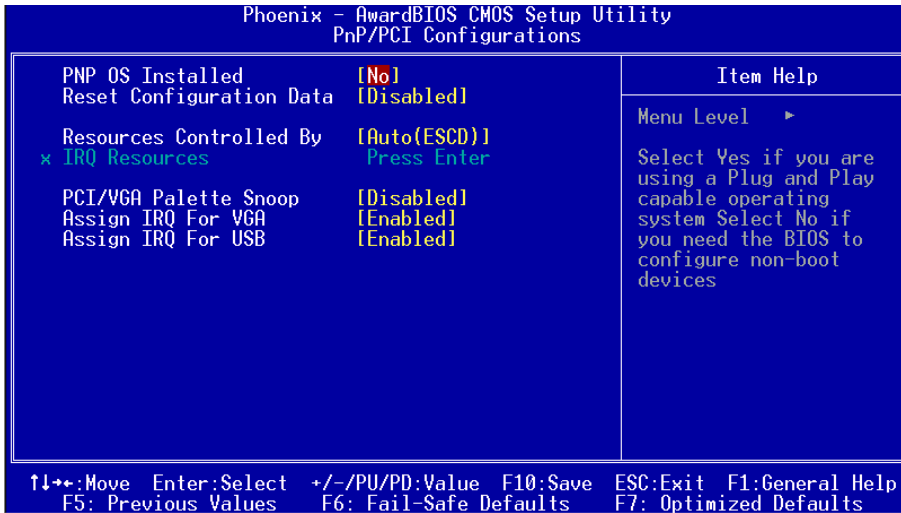


Figure 7: PNP/PCI Configuration Setup

### PNP OS Installed

Select “Yes” if you have a PNP OS installed on your system. The default is No.

Options: Yes, No.

### Reset Configuration Data

This setting allows you to clear ESCD data. The default is Disabled

**Disabled:** Normal Setting.

**Enabled:** If you have plugged in some Legacy cards to the system and they were recorded into ESCD (Extended System Configuration Data), you can set this field to Enabled in order to clear ESCD.

### Resources Controlled By

Determines what controls system PNP/PCI resources. The default is Auto (ESCD).

**Manual:** PNP Card’s resources are controlled manually. The “IRQ Resources” field becomes available and you can set which IRQ-X and DMA-X are assigned to PCI/ISA PNP or Legacy ISA Cards.

# BIOS

---

**Auto:** If your ISA card and PCI cards are all PNP cards, BIOS assigns the interrupt resource automatically.

## PCI/VGA Palette Snoop

This item is designed to overcome problems that may be caused by some nonstandard VGA cards. This board includes a built-in VGA system that does not require palette snooping therefore you must leave this item disabled.

Options: Enabled, Disabled.

## Assign IRQ For VGA

This item requests BIOS to assign an IRQ for the VGA. Selecting “Disabled” will free the IRQ for use by other devices.

Options: Enabled, Disabled.

## Assign IRQ For USB

This item requests BIOS to assign an IRQ for the USB port. If you have not connected any USB device, selecting “Disabled” will free the IRQ for use by other devices.

Options: Enabled, Disabled.

### Interrupt requests are shared as shown below:

	INT A	INT B	INT C	INT D
PCI 1		v		
PCI 2			v	
PCI 3				v
AGP Slot	v			
AC97			v	
Onboard USB1	v			
Onboard USB2		v		
Onboard USB3			v	
USB2.0				v
Onboard LAN (Optional)	v			
S-ATA (Optional by VIA VT8237)	v			

#### **IMPORTANT!**

If using PCI cards on shared slots, make sure that the drivers support “Shared IRQ” or that the cards don’t need IRQ assignments. Conflicts will arise between the two PCI groups that will make the system unstable or cards inoperable.

## 4-7 PC Health Status

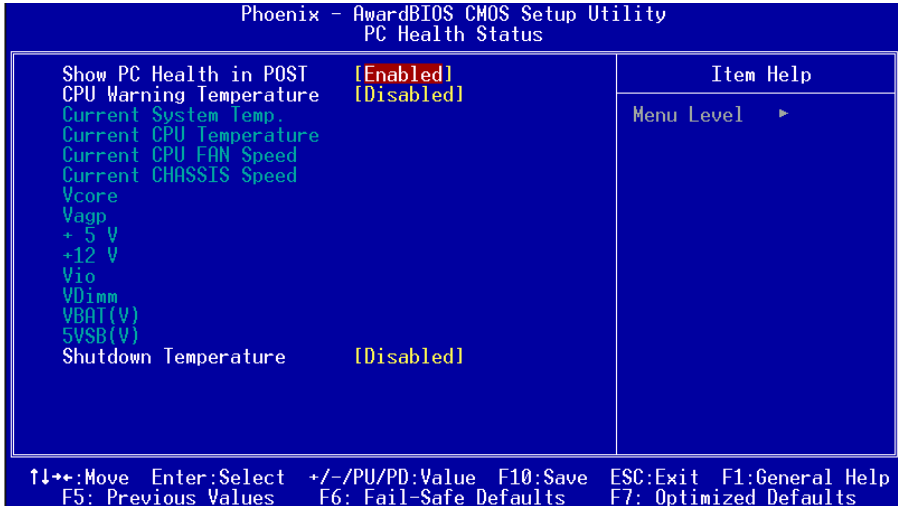


Figure 8: PC Health Status

### Show PC Health in POST

When this function is enabled the PC Health information is displayed during the POST (Power On Self Test).

Options: Disabled, Enabled.

### CPU Warning Temperature

Sets the temperature at which the computer will respond to an overheating CPU.

Options: Disabled, 50°C/122°F ~ 70°C/158°F.

### Current System/CPU Temperature

Displays the current system/CPU temperature.

### Current CPU/Chassis FAN Speed

Displays the current speed of the CPU and chassis fan speed in RPMs.

### Vcore

The voltage level of the CPU(Vcore).

### Vagp

The voltage level of Power supplied to AGP card.

# BIOS

---

## **VDIMM**

The voltage level of the DRAM.

## **VBAT(V)**

The voltage level of the battery.

## **+ 5V, +12V, Vio, 5VSB(V)**

The voltage level of the switching power supply.

## **Shutdown Temperature**

This is the temperature that the computer will turn off the power to combat the effects of an overheating system. (requires ACPI to be enabled in Power Management BIOS and ACPI compliant operating system.) The default is Disabled.

Options available are 60°C/140°F to 75°C/167°F in increments of 5°C.



## 4-8 Power BIOS Features

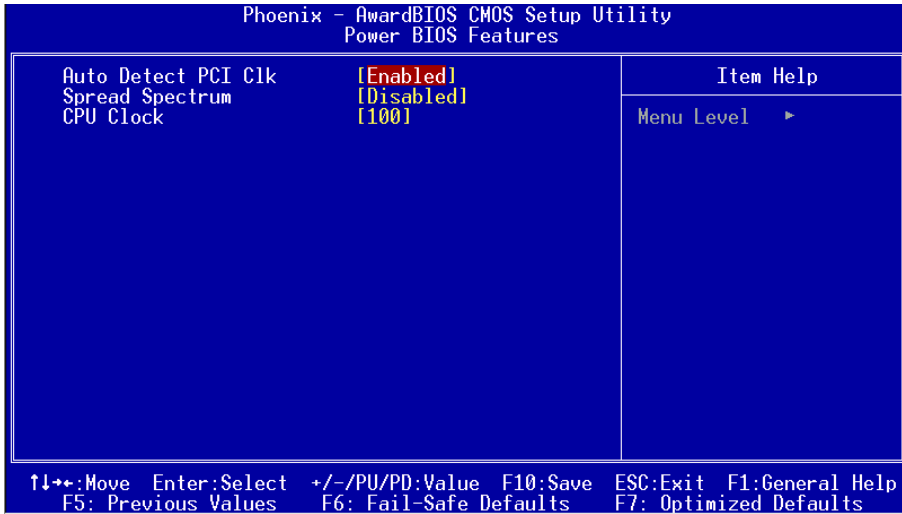


Figure 9: Frequency/Voltage Control

### Auto Detect PCI Clk

When enabled the mainboard automatically disables the clock source for a PCI slot which does not have a module in it, reducing EMI (ElectroMagnetic Interference).

Options: Enabled, Disabled.


### Spread Spectrum

If you enable spread spectrum, it can significantly reduce the EMI (ElectroMagnetic Interference) generated by the system.

Options: Disabled, Enabled.

### CPU Clock

Enables you to set the CPU front side bus speed at increments of 1MHz step. The default is 100 MHz. Press <Enter> to display the following screen:

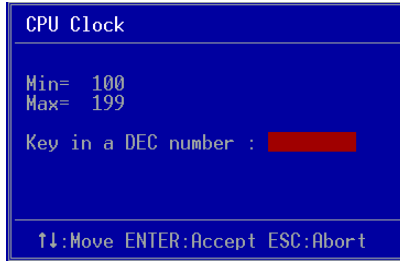

Key in the DEC (decimalism) number for the CPU clock.

**Note: Overclocking failure will cause no display on monitor. At this moment, please press “*Insert*” key to revert back to the initial or default setting to boot up your system.**

## 4-9 Defaults Menu

Selecting “Defaults” from the main menu shows you two options which are described below

### **Load Fail-Safe Defaults**

When you press <Enter> on this item you get a confirmation dialog box:

Load Fail-Safe Defaults (Y/N) ? N

Pressing ‘Y’ loads the BIOS default values for the most stable, minimal-performance system operations.

### **Load Optimized Defaults**

When you press <Enter> on this item you get a confirmation dialog box:

Load Optimized Defaults (Y/N) ? N

Pressing ‘Y’ loads the default values that are factory settings for optimal performance system operations.

## 4-10 Supervisor/User Password Setting

---

You can set either supervisor or user password, or both of them. The differences between are:

**supervisor password** : can enter and change the options of the setup menus.

**user password** : just can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

### ENTER PASSWORD:

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

### PASSWORD DISABLED.

When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option. If the Security option is set to “System”, the password will be required both at boot and at entry to Setup. If set to “Setup”, prompting only occurs when trying to enter Setup.

# BIOS

---

## 4-11 Exiting BIOS

### **Save & Exit Setup**

Pressing <Enter> on this item asks for confirmation:

**Save to CMOS and EXIT (Y/N)? Y**

Pressing “Y” stores the selections made in the menus in CMOS – a special section of memory that stays on after you turn your system off. The next time you boot your computer, the BIOS configures your system according to the Setup selections stored in CMOS. After saving the values the system is restarted again.

### **Exit Without Saving**


Pressing <Enter> on this item asks for confirmation:

**Quit without saving (Y/N)? Y**

This allows you to exit Setup without storing in CMOS any change. The previous selections remain in effect. This exits the Setup utility and restarts your computer.

## Section 5 Driver Installation

### Easy Driver Installation

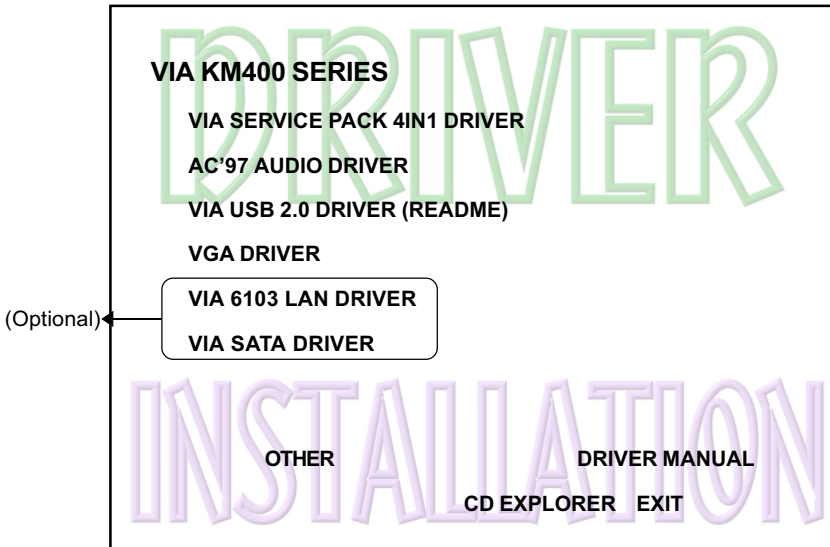

Insert the bundled CD-disk, the main menu screen will appear. The main menu displays buttons that link you to the supported drivers, utilities and software.


- Step 1 :** Click **“SERVICE PACK 4IN1 DRIVER”** to install all components recommended.
- Step 2 :** Click **“AC'97 AUDIO DRIVER”** to install audio driver.
- Step 3 :** Click **“VIA USB V2.0 DRIVER”** to install USB2.0 driver under Windows XP system , for Windows 9x/ME operation system refer to README.HTM file introduction to install USB V2.0 driver.
- Step 4 :** Click **“VGA DRIVER”** to install graphical driver.
- Step 5 :** Click **“VIA 6103 LAN DRIVER”** to install LAN driver. (Optional)
- Step 6 :** Click **“VIA SATA RAID DRIVER”** to install Serial ATA driver. (Optional)

# Drivers Installation

## Realtek Sound Manager Quick User-guide


### ◆ Introduction

To obtain the best performance from your audio system, run the "Sound Manager" utility to adjust the settings to suit your needs. This section of the manual is intended to provide a quick user-guide to setup "Sound Manager". For more detailed information, refer to "Sound Manager manual" in the CD.

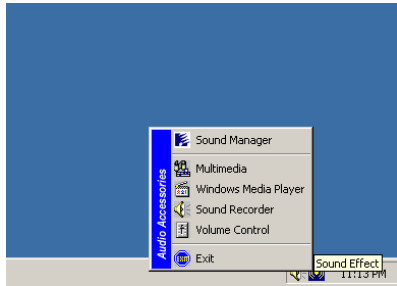

<Figure 1>


1. Right-click "Sound Effect" button on the task bar and select "Sound Manager".

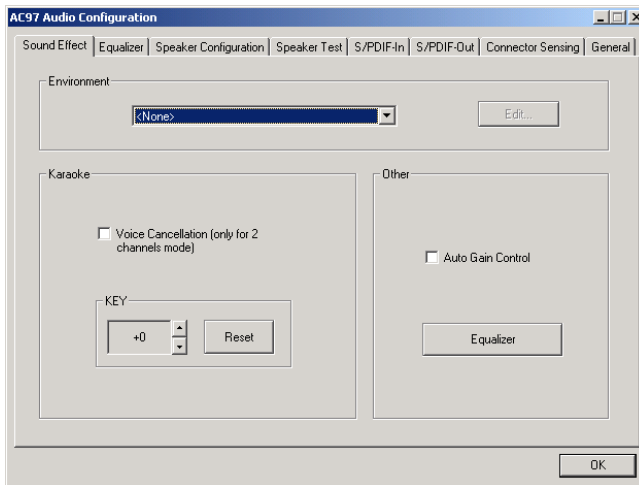

**Sound Effect:**

<Figure 2>


2. Select "Sound Effect" page to set the desired audio environment from the pull-down menu. There are in total 23 kinds of sound effect.
  - a. For Karaoke function, "Voice Cancellation (only for 2 channels mode)" removes the human voice. "Key" lets you adjust the key pitch.
  - b. "Auto Gain Control" avoids saturation when adjusting the equalizer.

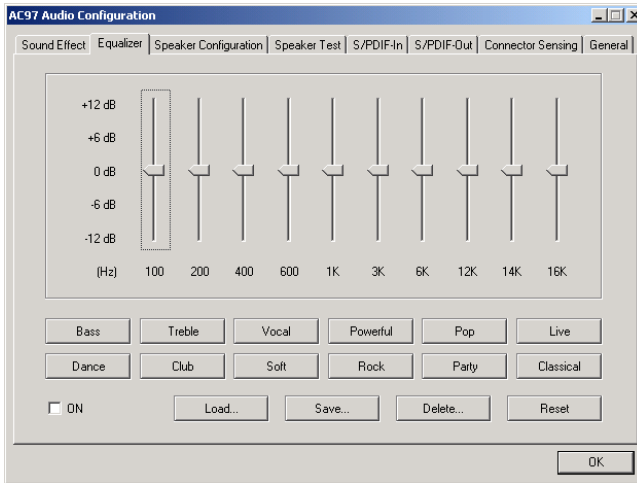

**Equalizer:**

<Figure 3>

3. There are 10 bands of equalizer control, check "ON" when you want to adjust the equalizer.

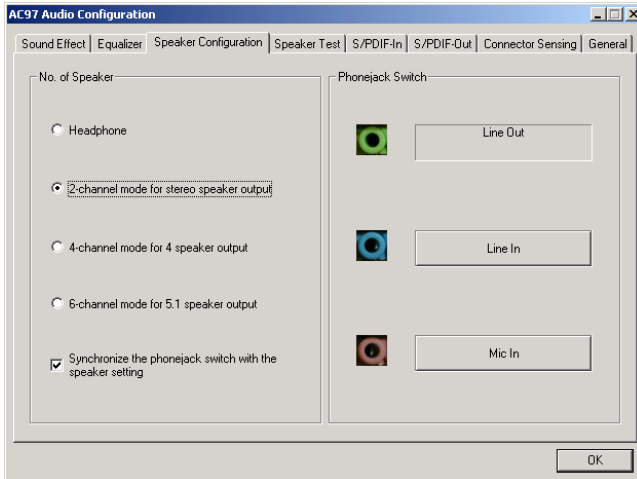


**Speaker Configuration:**

<Figure 4>

4. This page displays the mainboards's phone jack function when a corresponding audio mode (no. of speaker) is selected.

Figure 4 above shows the phone jack setup for 2 channel mode.


# Drivers Installation

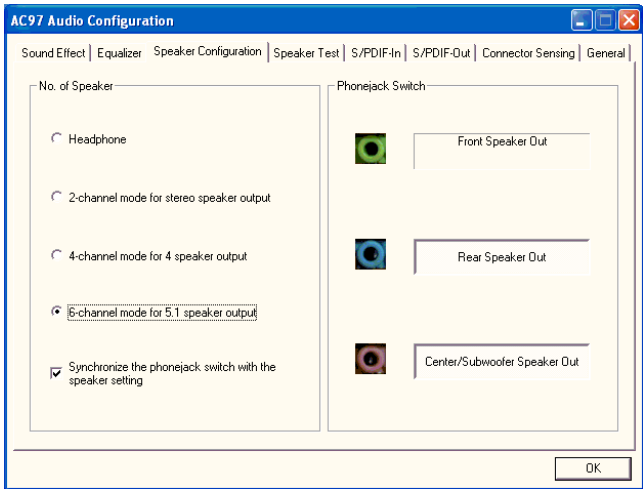

**Speaker Configuration:**

<Figure 5>

5. For 6 channel mode, the audio combination is shown above.

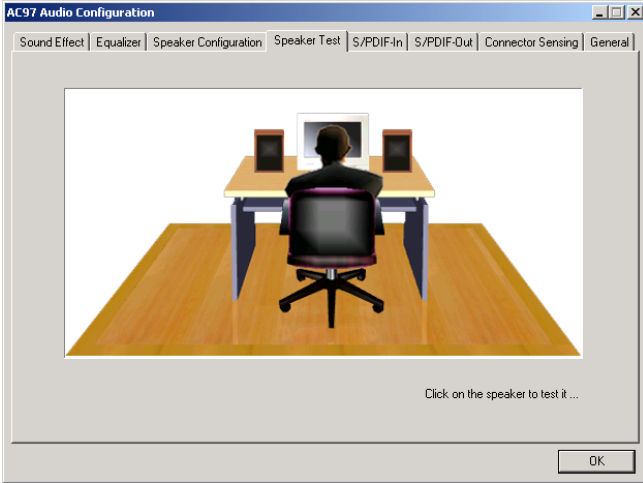


**Speaker Test:**

<Figure 6>

6. To test the speaker , select the “**Speaker Test**” page and click directly on the speakers shown on the screen.




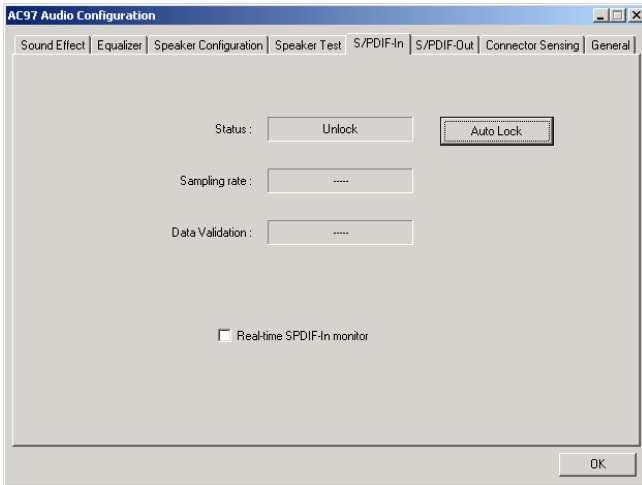

**SPDIF-In:**

*<Figure 7>*

7. This page shows S/PDIF IN function on your system.
  - a. Click "Auto Lock" to detect S/PDIF input and display its information.
  - b. Check "Real-time S/PDIF-In monitor" to listen to the S/PDIF IN signal through Line-out connector.

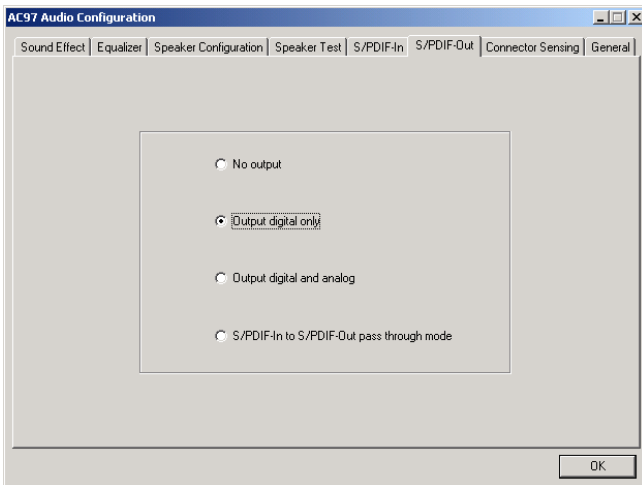


**SPDIF-Out:**

*<Figure 8>*

8. This page lets you choose the type of audio source that will appear on the S/PDIF-out connector.

# Drivers Installation


This board is equipped with Jack Sensing capability. If an audio device is plugged into the wrong connector, a warning message will appear to remind users to check the connection.

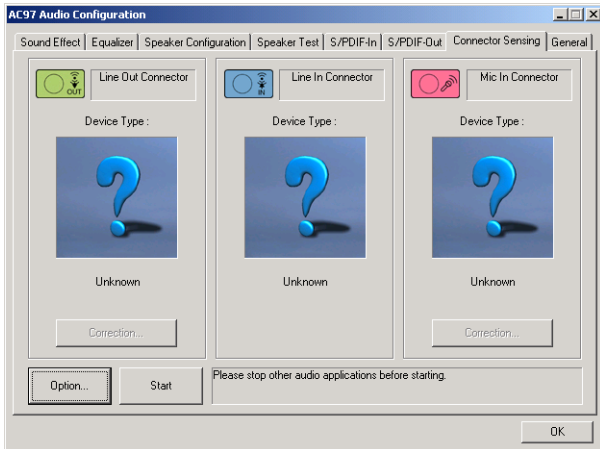

**Connector Sensing:**

<Figure 9>


9. Push "Start" button to start the sensing. Please remember to terminate all audio applications before starting the sensing.

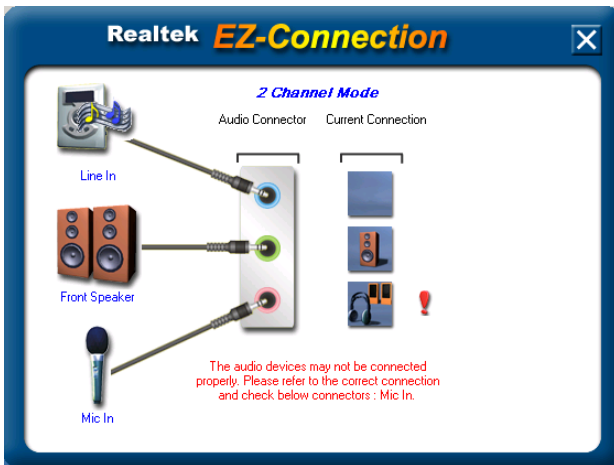

**Connector Sensing:**

<Figure 10>


10. EZ-Connection shows the result of the detection.  
“Audio Connector” column reflects the settings used in the "Speaker Configuration" page.  
“Current Connection” column shows the type of device detected. If the results do not match, an exclamation mark will appear on the right side.

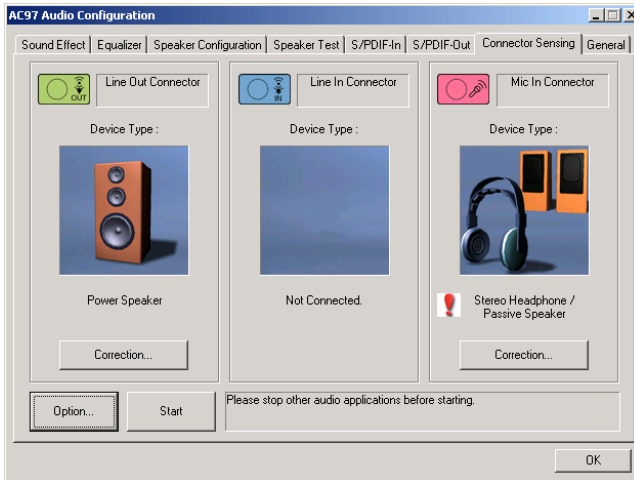

**Connector Sensing:**

<Figure 11>

11. After closing EZ-Connector, this page will show the latest connector status as above.

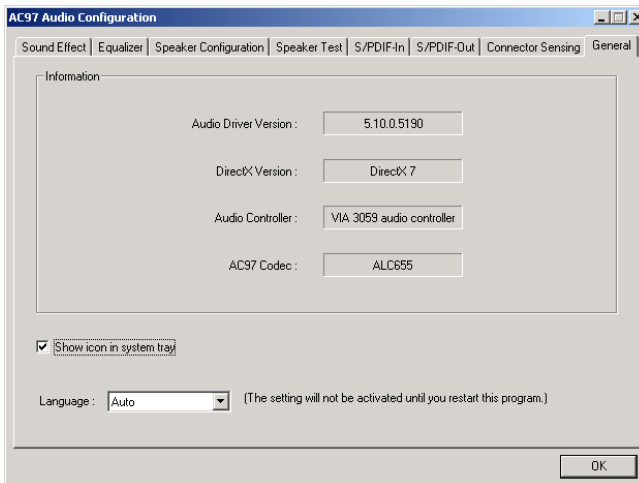

**General:**


<Figure 12>

12. This page displays information regarding the audio hardware and software. To remove "Sound Manager" icon from Windows Task bar, uncheck "Show icon in system tray".



## A-1 Realtek Media Player User's Guide

## Realtek Media Player Platform

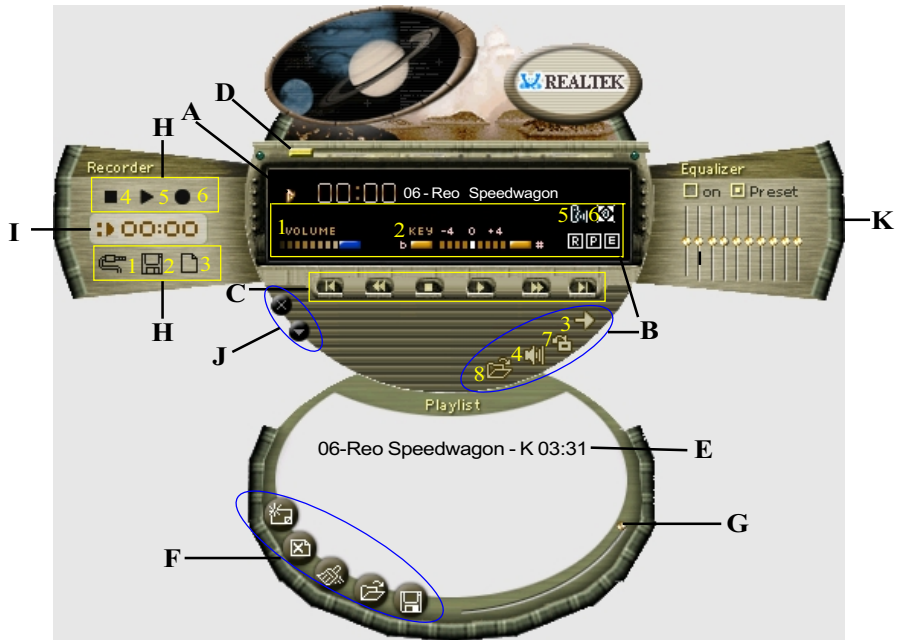

## Functional Descriptions

## A. Playback Windows Display

Playback windows displays the following mode information:

1. Playback Time Display
2. Voice Cancellation Mode Display
3. Pitch Mode Display
4. Surround Sound Mode Display

# Appendix

---

## B. Playback Function Controls

There are 8 selectable functions for the playback:

1. Volume control                    High/Low Adjustment Bar.
2. Pitch control                      4-step High/Low Adjustment Bar.
3. Repeat mode                        Choice of Repeat, All Repeat, Random or No Repeat Mode.
4. Mute                                 Mute On/Off Mode select.
5. Voice cancellation                Voice Cancellation On/Off Mode select for Karaoke.
6. Surround mode                    A total of 26 Surround Sound mode select as shown in the table below.

Surround mode	Surround mode
Generic	Stone corridor
Padded	Alley
Room	Forrest
Bathroom	City
Living room	Mountain
Stone	Quarry
Auditorium	Plain
Concert	Parking lot
Cave	Sewer pipe
Arena	Under water
Hangar	Drug
Carpet	Dizzy
Hallway	Psychological

7. Skin change                        Media Player Skin Type select.
8. Open                                 Open file formats including MP3, CDA, MDI, WAV & WMA support.

## C. Playback Controls

The playback controls include “Play”, “Pause”, “Stop”, “Previous”, “Backward”, “Forward”, & “Next”.

**D. Seeking bar**

Display Animated Playback Status

**E. Title/Play List Windows**

Display Currently Selected Title(s)

**F. Title/Play List Edit Controls**

These title/play list controls include “Add”, “Del”, “Clear”, “Load”, & “Store”.

1. Add                                    Add to the Title/Play List.
2. Del                                    Remove form the Title/Play List.
3. Clear                                Clear the Title/Play List.
4. Load                                Load Title/Play List.
5. Store                                Save Title/Play List.

**G. Title/Play List Scroll bar**

Scroll Up/Down the Title/Play List.

**H. Recording Function Controls**

The recording function controls include “Input”, “Save”, “New”, “Rec”, “Stop”, & “Play”.

1. Input                                Input soruce select.
2. Save                                Save to file.
3. New                                Open new file & select format includes Sampling Rate, Sampling bit, Mono or Stereo.
4. Rec                                Start Rec.
5. Stop                                Stop Rec.
6. Play                                Playback Rec file.

**I. REC/Playback Time Display**

Displays REC/Playback Time.

# Appendix

---

## J. Platform Display Panel Controls

The platform display panel control include “Minimize” & “Close”.

1. Minimize                      Minimize Platform Display Panel.
2. Close                            Close/Exit Platform Display Panel.

## K. Equalizer Control Panel

The Equalizer Control Panel include “On/Off” & “Preset”.

1. On/Off                          Enable/Disable Equalizer.
2. Preset                          Clear Equalizer setting to default value.




## Appendix B

### B-1 Update Your System BIOS

Download the xxxxx.EXE file corresponding to your model form the our website to an empty directory on your hard disk or floppy. Run the downloaded xxxxx.EXE file and it will self extract. Copy these extracted files to a bootable DOS floppy disk.

Note: The DOS floppy disk should contain NO device drivers or other programs.

1. Type "A:\AWDFLASH and press <Enter> Key.
2. You will see the following setup on screen.
3. Please key in the xxxxx.bin BIOS file name.

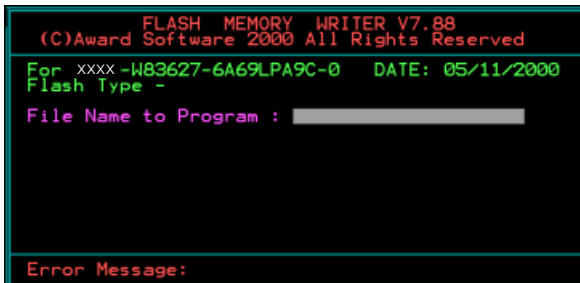


```
FLASH MEMORY WRITER V7.88
(C)Award Software 2000 All Rights Reserved

For xxxx-W83627-6A69LPA9C-0  DATE: 05/11/2000
Flash Type -
File Name to Program : _____

Error Message:
```

4. If you want to save the previous BIOS data to the diskette, please key in [Y], otherwise please key in [N].

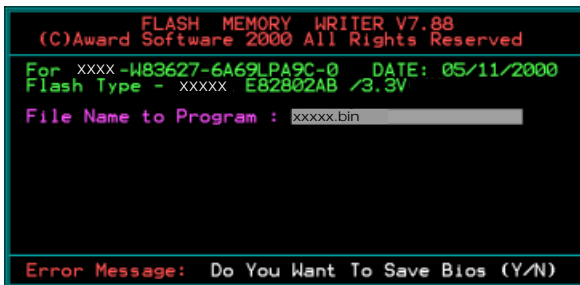

```
FLASH MEMORY WRITER V7.88
(C)Award Software 2000 All Rights Reserved


For xxxx-W83627-6A69LPA9C-0  DATE: 05/11/2000
Flash Type - xxxxx E82802AB /3.3V
File Name to Program : xxxxx.bin

Error Message: Do You Want To Save Bios (Y/N)
```


# Appendix

---


5. Key in File Name to save previous BIOS to file.

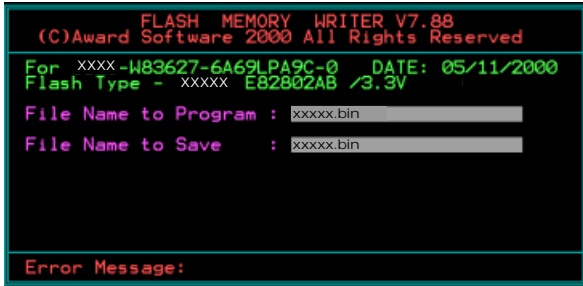

6. Are you sure to program (y/n), please key in [Y] to start the programming.


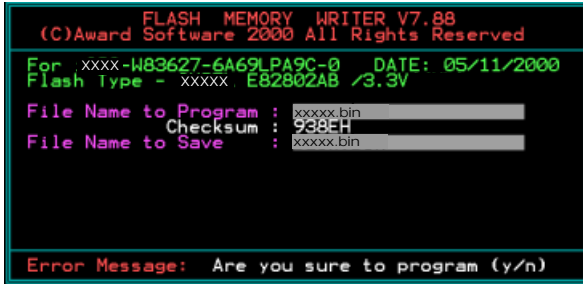


7. The programming is finished.

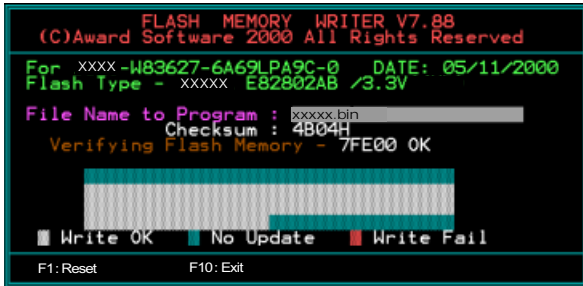

C-1 EEPROM BIOS Remover

Do not remove the BIOS chip, unless instructed by a technician and only with a PLCC IC extractor tool.

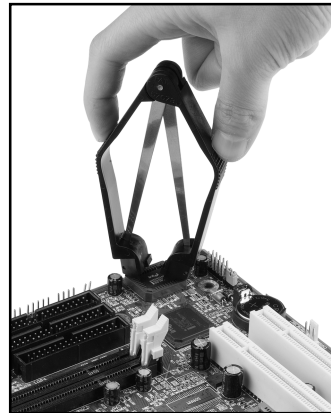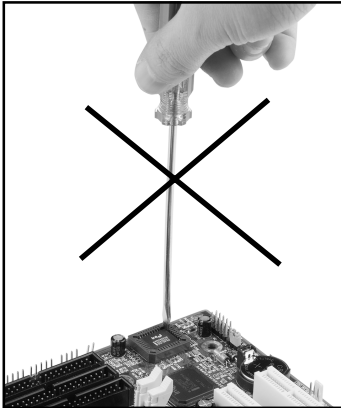

The BIOS socket may be damaged if using an improper method to replace the BIOS chip.




Appendix D

D-1 GHOST 7 Quick User's Guide (Optional)


Installation is very easy. You only need to copy the **Ghost7** folder or **Ghost.exe** to your hard disk.

Main Menu

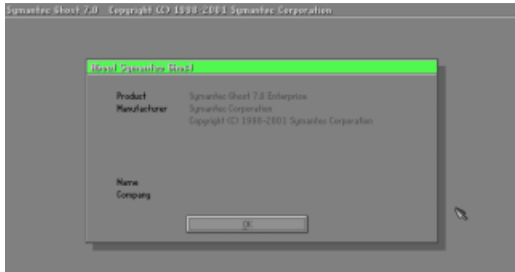


Description of Menu

**Ghost** clones and backs up **Disk** and **Partition**.

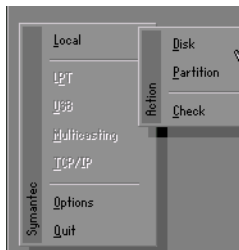

In which **Disk** indicates hard disk options  
**Partition** indicates partition options  
**Check** indicates check options

Disk

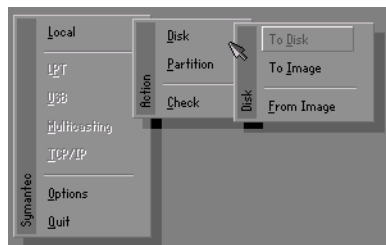

# Appendix

---

## There are 3 hard disk functions:


1. Disk To Disk (disk cloning)
2. Disk To Image (disk backup)
3. Disk From Image (restore backup)

## Important!

1. To use this function, the system must have at least 2 disks. Press the **Tab** key to move the cursor.
2. When restoring to a destination disk, all data in that disk will be completely destroyed.

## Disk To Disk (Disk Cloning)


1. Select the location of the **Source drive**.
2. Select the location of the **Destination drive**.

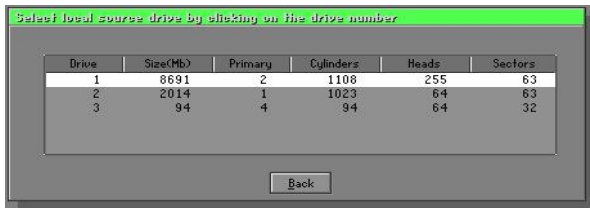

3. When cloning a disk or restoring the backup, set the required partition size as shown in the following figure.




 4. Click OK to display the following confirmation screen. Select **Yes** to start.




## Disk To Image (Disk Backup)


1. Select the location of the Source drive.

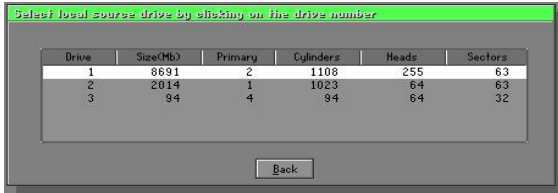

2. Select the location for storing the backup file.

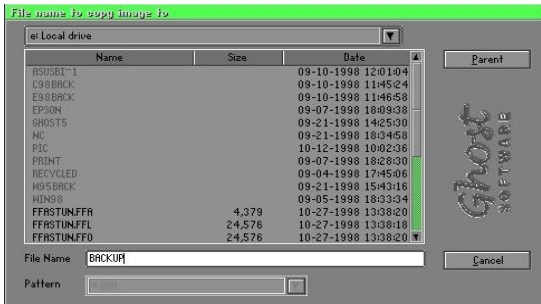


3. Click **OK** to display the following confirmation screen. Select **Yes** to start.

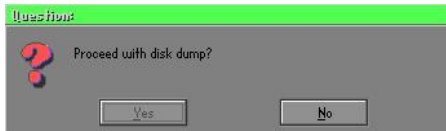

## Disk From Image (Restore Backup)


1. Select the Restoring file.

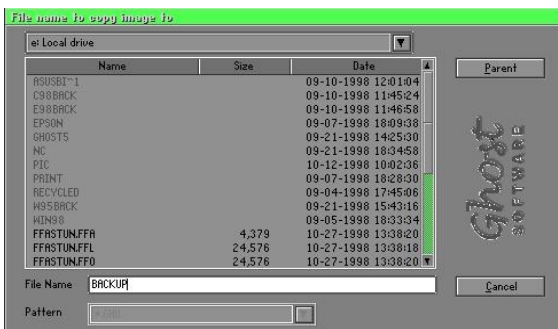

# Appendix

---


2. Select the **Destination drive** of the disk to be restored.

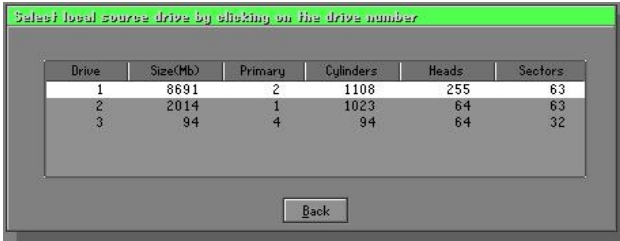


3. When restoring disk backup, set the required partition size as shown in the following figure.



4. Click **OK** to display the following confirmation screen. Select **Yes** to start.

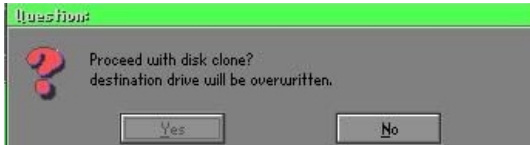

## Partition

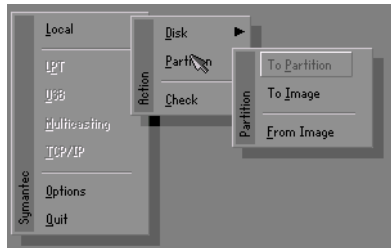



There are 3 partition functions:

1. **Partition To Partition** (partition cloning)
2. **Partition To Image** (partition backup)
3. **Partition From Image** (restore partition)

## Partition To Partition (Partition Cloning)


The basic unit for partition cloning is a “partition”. Refer to “disk cloning” for the operating method.

## Partition To Image (Partition Backup)


1. Select the disk to be backed up.



2. Select the first partition to be backed up. This is usually where the operating system and programs are stored.

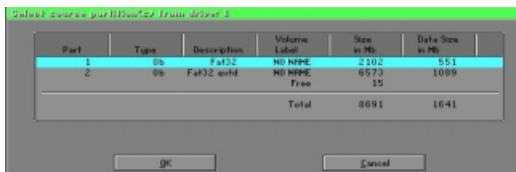


3. Select the path and file name to store the backup file.

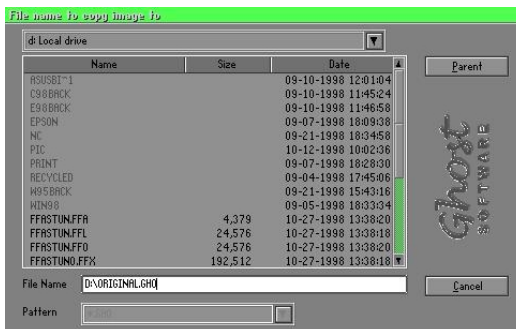

# Appendix

- Is the file compressed? There are 3 options:
  - No: do not compress data during backup
  - Fast: Small volume compression
  - High: high ratio compression. File can be compressed to its minimum, but requiring longer execution time.

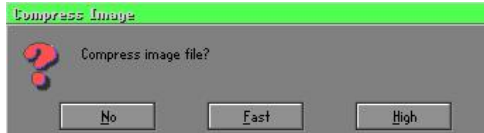


- Select Yes to start performing backup.




## Partition From Image (Restore Partition)

- Select the backup file to be restored.

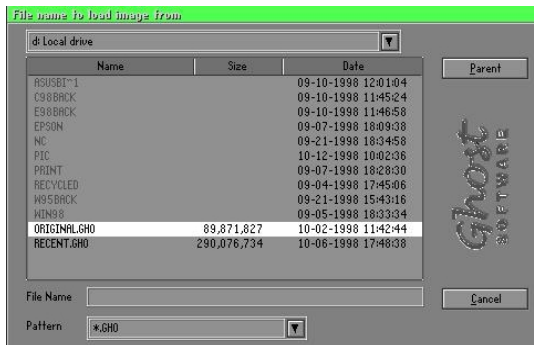

- Select the source partition.

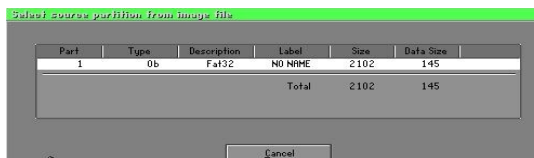


3. Select the disk to be restored.



4. Select the partition to be restored.



5. Select Yes to start restoring.

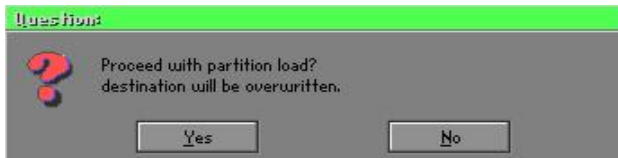

## Check

This function is to check possible error caused by defective FAT or track during backup or restoring.

### How to Reinstall Windows in 2 Minutes

**This chapter guides you how to setup your computer properly and, if necessary, reinstall Windows in 2 minutes. Ghost provides different methods to complete this task. The following two sections explain how to create an emergency Recover Floppy and Recover CD:**

#### Emergency Recover Floppy

Divide a hard disk into two partitions. The first partition is to store the operating system and application programs. The second partition is to back up the operating system and data. The size of the partition can be determined according to the backup requirements. For example, the **Windows** operating system needs 200MB of hard disk space, Plus complete **Office** programs require 360MB. The remaining space can be used to store data.

After installing **Windows**, use **Ghost** to create a backup area for the system and to store the file (Image file) in drive D. The file is named **Original.gho**. Then, create a recover floppy disk containing:

- ◆ Bootable files (Command.com, Io.sys, and MSDOS.SYS )
- ◆ Config.sys (configuration setup file)
- ◆ Autoexec.bat (auto-execution batch file)
- ◆ Ghost.exe (Ghost execution file)

There are two ways to create the content of the recover floppy for restoring:

- (1) To load **Windows** automatically after booting, store the **Autoexec.bat** file with a command line:

```
Ghost.exe clone, mode=pload, src=d:\original.gho:2,dst=1:1 -fx -sure -rb
```

Command Description: Runs the restore function automatically with the Image File. Stored in drive D. After execution, it will exit Ghost and boots the system.

Refer to the [Introducing Ghosts Functions] for details.

- (2) After booting, the screen displays the Menu. Select Backup or Restore: Since the user may install other applications in the future, he/she may alter **Autoexec.bat** file to back up or restore the user-defined Image file as follows:

### Backup

Back up Windows and application programs as a file (Recent.gho). Command is:

```
Ghost -clone,mode=pdump,src=1:1,dst=d:\Recent.gho -fx -sure -rb
```

### Restore

Restore types include [**General Windows**] and [**Windows and Application Programs**]. If you select [**General Windows**], the system is restored to the general **Windows** operation condition. The command is:

```
Ghost.exe -clone,mode=pload,src=d:\Original.gho,dst=1:1 -fx -sure -rb
```

If you select [**Windows and Application Programs**], the latest backup file (Recent.gho) is restored, skipping the installation and setup of application programs.

For description of related parameters, refer to [**Introducing Ghosts Functions**].

For more information about menu design, refer to Config.sys and Autoexec.bat under /Menu in the CD. You can also create a backup CD containing Ghost.exe and these two files.

### Recover CD

The following is a simple guide to create a recover CD:

1. First, create a recover floppy disk contains the following with any copy program such as “Easy CD Create” (Note 2) :

Bootable files (Command.com and Io.sys and MSDOS.SYS)

Config.sys (Configuration setup file)

Autoexec.bat (Auto-execution batch file)

Mscdex.exe (CD-Rom execution file)

Ghost.exe (Ghost execution file)

Oakcdrom.sys (ATAPI CD-ROM compatible driver)

The content of Config.sys is:

```
DEVICE=Oakcdrom.sys /d:idecd001
```

The content of Autoexec.bat includes:

```
MSCDEX.EXE /D:IDECD001 /L:Z
```

```
Ghost.exe clone,mode=load,src=z:\original.gho,dst=1 -sure -rb
```

2. Write the backup image file (original.gho) of the entire hard disk or partition into the recover CD. Use the Recover CD to boot up the system and restore the backup files automatically.

For description of related parameters, refer to **[Introducing Ghosts Functions]**.

Note: For more details about copy the creation program and method to create a recover CD, please refer to the related software and its associated operating manual.

Note: Ghost may be executed in interactive or in batch mode. Most of the Ghost switches are used to assist in batch mode operation. To list switches, type ghost.exe -h.