

User's Manual

**nVIDIA nForce4 SLI | nForce4 4X mainboard for
AMD Socket 939 based Athlon 64/X2 processor**

TRADEMARK

All products and company names are trademarks or registered trademarks of their respective holders.

These specifications are subject to change without notice.

*Manual Revision 1.0
September 08, 2005*

DISCLAIMER OF WARRANTIES:

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE OF THE MANUFACTURER LIMITED WARRANTY. THE MANUFACTURER EXPRESSLY EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING ITS PRODUCTS; INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT. THIS DISCLAIMER OF WARRANTIES SHALL APPLY TO THE EXTENT ALLOWED UNDER LOCAL LAWS IN THE COUNTRY PURCHASED IN WHICH LOCAL LAWS DO NOT ALLOW OR LIMIT THE EXCLUSION OF THE IMPLIED WARRANTIES.

Post Post Frequently Asked Questions

Below is a list of some basic POST Codes, possible problems and solutions. For more detailed information about POST Codes, refer to Appendix C in this manual.

POST CODE	Problem	Solution
FFh or CFh	<ol style="list-style-type: none">1. BIOS chip inserted incorrectly2. Incorrect BIOS update version3. Mainboard problem4. Add-on card inserted incorrectly.	<ol style="list-style-type: none">1. Reinsert the BIOS chip2. Download the correct BIOS version update from the manufacturer's Web site.3. Replace mainboard4. Remove and replace the add-on card
C1h - C5h	<ol style="list-style-type: none">1. Memory module inserted incorrectly2. Memory compatibility problem3. Memory module damaged	<ol style="list-style-type: none">1. Reinsert memory module2. Replace memory with correct type3. Replace memory module
2Dh	<ol style="list-style-type: none">1. Error occurred in VGA BIOS2. VGA card inserted incorrectly	<ol style="list-style-type: none">1. Replace VGA card2. Reinsert the VGA card
26h	Overclock error	Clear CMOS or press the insert key to power on the system
07h - 12h	<ol style="list-style-type: none">1. Initial Keyboard controller error2. RTC error	<ol style="list-style-type: none">1. Ensure that the keyboard and mouse are connected correctly.2. Replace the RTC battery.

Table of Contents

	<i>Page</i>
<i>Section 1</i>	<i>Introduction</i>
	Package Contents 1-1
	Mainboard Features 1-2
	System Block Diagram 1-6
<i>Section 2</i>	<i>Specification</i>
	Mainboard Specification 2-1
<i>Section 3</i>	<i>Installation</i>
	Mainboard Layout 3-1
	Easy Installation Procedure 3-2
	CPU Insertion 3-2
	Jumper Settings 3-4
	System Memory Configuration 3-5
	Rear I/O Fan Installation 3-6
	VGA Card Installation 3-7
	Device Connectors 3-8
	Thermo stick Function (Optional) 3-14
	Power-On/Off (Remote) 3-15
	External Modem Ring-in Power ON and Keyboard Power ON Function (KBPO) 3-15
	ACPI S3 (Suspend To RAM) Function 3-16
<i>Section 4</i>	<i>BIOS Setup</i>
	Main Menu 4-1
	Standard CMOS Setup 4-2
	Advanced BIOS Features 4-3
	Advanced Chipset Features 4-6
	Integrated Peripherals 4-10
	Power Management Setup 4-14

	PNP/PCI/PCI-E Configuration	4-16
	PC Health Status	4-17
	Power BIOS Features	4-20
	Defaults Menu	4-22
	Supervisor/User Password Setting	4-23
	Exit Selecting	4-24
Section 5	<i>RAID Configuration</i>	
	Introduction	5-1
	NVidia RAID Features	5-3
	Enable RAID Function	5-5
Section 6	<i>Driver Installation</i>	
	Easy Driver Installation	6-1
	Realtek Sound Manager Quick User guide	6-2
Appendix	<i>Appendix A</i>	
	Update Your System BIOS	A-1
	<i>Appendix B</i>	
	NVidia RAIDBIOS Utility	B-1
	<i>Appendix C</i>	
	POST Codes	C-1

Section 1

INTRODUCTION

1-1 Package Contents


Contents

- A. Mainboard
- B. User's manual
- C. Floppy drive cable
- D. HDD drive cable
- E. CD (drivers and utilities)
- F. I/O Shield
- G. SATA data and power cable
- H. SLI bridge
- I. Extra USB2.0 port cable

Optional items

- J. Thermo Stick cable

If you need the optional item, please contact your dealer for assistance.

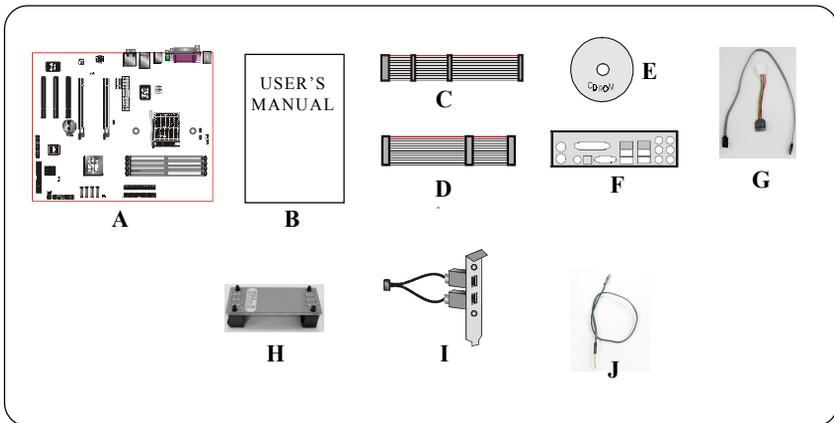

1-2 Mainboard Features

Brief Introduction

★ **Socket 939**

Socket 939-based motherboards are designed to provide performance enhancements for AMD Athlon 64/ Athlon 64 FX / Athlon X2 processor-based systems, and it also expected to be the next-generation of platform innovations.

For more information about all the new features Athlon™ Processor deliver, check out the AMD website at <http://www.amd.com>

★ **Chipset**

The board is designed with NVIDIA nForce4 SLI / nForce4 4X chipset, featuring performance and stability with the most innovative technology and features.

For more details about the NVIDIA nForce4, please visit the NVIDIA Web site at <http://www.nvidia.com>.

★ **NVIDIA SLI**



NVIDIA SLi™ technology revolutionizes PC performance by combining multiple PCI Express GPUs in a single and scalable system! Gamers and hardcore enthusiasts know that dual GPUs mean increased, supercharged 3D graphics and performance. Get unmatched PC security protection, reliable NVIDIA nForce Storage, and more. NVIDIA nForce4 SLI MCPs set the performance bar that other PCs can only dream of reaching

★ **PCI-Express (PCI-E)**

Next generation peripheral interface to succeed to current PCI bus for the next decade. With smaller slot size and 250MB/sec (PCI-E*1) or 4GB/sec(PCI-E*16) maximum transfer, PCI-Express overcomes PCI bus bottleneck.

★ **DDR400**

Supports dual channel of DDR400 memory to give you twice the memory bandwidth for greater system performance.

★ **Hardware Monitoring**

Hardware monitoring enables you to monitor various aspects of the system operation and status. This includes CPU temperature, voltage and fan speed in RPMs.

★ GbE LAN

The new Gigabit Ethernet LAN allows data transmission at 1,000 megabits per second (Mbps), which runs 10 times faster than conventional 10/100BASE-T Ethernet LANs.

★ Serial ATA (Supported in the NVIDIA nForce 4 4X chipset)

Support Serial ATA, an evolutionary replacement for Parallel ATA IDE storage interface. Increases the peak data transfer speed up to 150MB/sec and allows future enhancements to the computing platform.

★ Serial ATA II (Supported in the NVIDIA nForce 4 SLI chipset)

S-ATA II is the second generation SATA interface with double the transferring speed up to 300MB/sec. It supports NCQ to provide faster reading speed for your storage devices.

★ SATA RAID

RAID function available on chipset's SATA/ SATA II ports.

★ USB2.0

A popular USB standard for plugging in peripherals with up to 480Mbps transfer speed while maintaining backward compatibility with older USB1.1 device.

★ 6ch (Optional)

Mainboard is equipped with 6 channel of audio to support Dolby Digital 5.1 audio for DVD-playback. The onboard audio jacks can be configured for normal 2 channel mode or 6 channel mode.

★ 8ch (Optional)

Delivers 8 channel audio to bring you the latest in audio realism from DVD movies and games. Perfect for your home theatre system.

★ AMD Cool'n'Quiet™ Technology

AMD's Cool'n'Quiet™ Technology lowers CPU operating voltage when the system is in idle mode. This helps to reduce heat dissipation and in effect lowers the fan speed to noise from your PC.

★ NVIDIA ActiveArmor™ (Supported in the NVIDIA nForce 4 SLI chipset)

Enhances networks security while delivers the highest system performance by off-loading CPU-intensive packet filtering tasks in hardware, providing users with a PC networking environment that is both fast and secure.

★ **NV Firewall**

An unprecedented addition design for nForce product, provide high performance & enhanced reliability of PC security solution to the users. The features would be more advanced than many stand-alone firewalls can provide!

★ **NVIDIA nTune™ Utility**

Easy, safe, and high performance over-clocking available for NVIDIA nForce. Performance wizards allow automatic tuning for optimal performance or the quietest operation.

Special Features

BIOS Features:

 **Magic Health**

Reports your system hardware status for every boot-up to help detect faults early. Monitor hardware status including CPU temperature, CPU/Memory/ Chipset voltage, fan RPM speed for chassis fan, CPU fan & Power supply fan.

 **EZ-Boot**

Simply press “ESC” to select your bootable device. No more hassle to search the BIOS menu, change and re-start.

 **PowerBIOS**

Supporting a full range of overclocking setting via BIOS. Various adjustable feature include FSB/Chipset/Memory voltage tweaking.

H/W Features:

 **Post Port**

An onboard LED-display trouble-shooting device, facilitating user to detect boot-up problems.

 **QuickSPDIF**

On board SPDIF-out connector for quick connection to multi-channel speakers. Not only removes cable cluttering but also delivers loss-free digital audio to let you enjoy DVD movies and games with crystal clear sound.

 **EZ-Button**

A handy power-on button located onboard to turn on/off the system easily, especially while debugging or testing the system.


 **LEDION**

Onboard LED indicators to show the power status CPU, Chipset and DRAM. You know immediately where to look if the system fails to start.

 **Thermo Stick (Optional)**

Flexible thermometer to let you measure any temperature by software. Ideal for monitoring VGA card, chipset or even disk drives temperatures. Refer to page 3-14 for details.

1-3 System Block Diagram

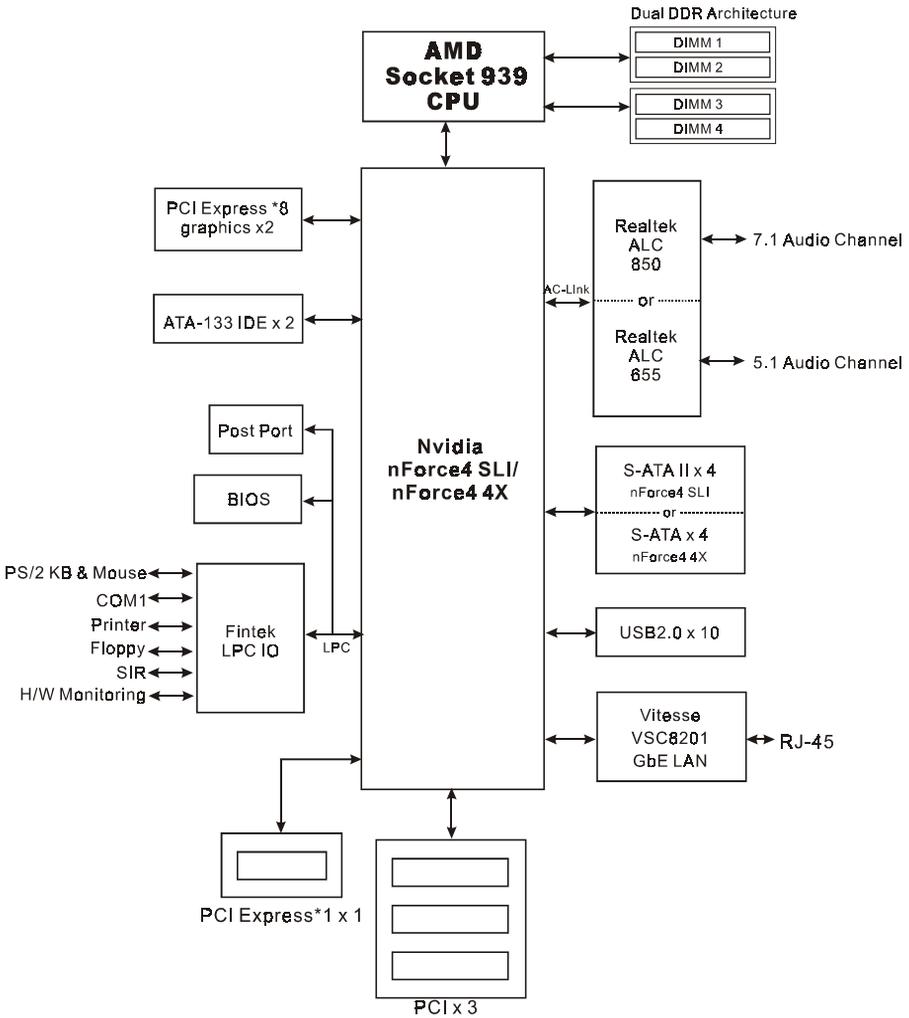

Section 2

SPECIFICATION

Mainboard Specification

● **Processor**

- ◆ Support Socket-939 based AMD Athlon™ 64/Athlon™ 64 FX/Athlon™ X2 up to 4800+ with 2.0GTs Hyper Transport processors

● **Chipset**

- ◆ nVidia nForce4 SLI / nForce4 4X Chipset

● **Main Memory**

- ◆ Four 184-pin DDR SDRAM DIMM sockets
- ◆ Support single-sided or double-sided 2.5v DDR-266/333/**400** DIMMs with dual channel architecture in 128/256/512Mb technologies
- ◆ Supports up to 4GB memory size

● **Expansion Slots**

- ◆ Three PCI connectors compliant with PCI v2.2
- ◆ One PCI-E x1 connectors compliant with PCI Express 1.0a
- ◆ Two PCI-E x16 connectors compliant with PCI Express 1.0a to support SLi technology

● **USB**

- ◆ **Ten** USB connectors compliant with USB2.0 from embedded USB controller (4 connectors at rear panel)

● **P-ATA IDE**

- ◆ **Two** IDE interface (up to 4 IDE devices) with UDMA-33, ATA-66/100/**133** support from embedded IDE controller

● **LAN**

- ◆ 1Gbps Fast Ethernet with onboard Vitesse VSC8201 LAN chip
 - nVidia Fireware
 - nVidia ActiveArmor Secure Network Engine (Optional)

Specification

● S-ATA RAID

- ◆ **S-ATA II** ---> **Four** S-ATA II ports with up to 3Gbps bandwidth from nForce4 SLi with RAID 0, 1, 0+1, JBOD support, or
- ◆ **S-ATA** ---> **Four** S-ATA ports with up to 1.5Gbps bandwidth from nForce 4 4X with RAID 0, 1, 0+1, JBOD support

● Audio

- ◆ 6 channel audio from onboard ALC655 AC'97 v2.3 compliant CODEC, or 8 channel audio from onboard ALC850 AC'97 v2.3 compliant CODEC (for high-end model only)
 - Support CD-In, AUX-in
 - Support **Jack detection** for fool-proof audio device installation
 - Rear panel audio jacks configuration, please refer to one of the following table:

For ALC655 Configuration		
Phone Jack Color	2 channel	6 channel
Light Blue	Line-in	Rear stereo-out
Lime	Line-out	Front stereo-out
Pink	Mic-in	Center&Subwoofer



For ALC850 Configuration			
Phone Jack Color	2 channel	6 channel	8 channel
Light Blue	Line-in	Line-in	Line-in
Lime	Line-out	Front stereo-out	Front stereo-out
Pink	Mic-in	Mic-in	Mic-in
Gray			Side stereo-out
Black		Rear stereo-out	Rear stereo-out
Orange		Center&Subwoofer	Center&Subwoofer



● I/O

- ◆ Onboard Fintek LPC bus I/O controller
- ◆ Legacy peripheral interface for PS/2 keyboard & mouse, FDD, Parallel, Serial, and IrDA (v1.0 compliant)
- ◆ Support Hardware Monitoring for fan speed monitoring and CPU temperature sensing
- ◆ Support Smart FAN Control

● **BIOS**

- ◆ Flash EEPROM with Award Plug&Play BIOS
- ◆ Support ACPI S3 (Suspend To RAM) mode in ACPI compliant O/S
- ◆ Support **EZ Boot** for fast bootable device selection
- ◆ Support **Magic Health** for system hardware status report during system boot-up

● **Peripheral Interfaces**

☞ **At Rear Panel**

- ◆ PS/2 keyboard and mouse ports
- ◆ One Parallel (printer) port
- ◆ One S/PDIF-Out Coaxial jack
- ◆ One S/PDIF-Out Optical (Optional)
- ◆ One Serial port
- ◆ One RJ45 LAN connector
- ◆ Four USB2.0 ports
- ◆ Three Audio jacks or Six Audio jacks

☞ **Onboard connector and pin-header**

- ◆ One floppy drive connector
- ◆ Two ATA-100/133 IDE connector
- ◆ Six extra USB2.0 ports
- ◆ One CD-IN and AUX-IN connector
- ◆ One IR connector
- ◆ Four S-ATA II connectors from nVidia nForce4 SLI or Four S-ATA connectors from nVidia nForce4 4X
- ◆ Three Fan connectors

● **Front Panel Controller**

- ◆ Supports Reset & Soft-Off switches
- ◆ Supports HDD & Power LEDs
- ◆ Supports PC speaker
- ◆ Supports Front Panel Audio connector

Specification

● **Special Features**

- ◆ Support KBPO function – Keyboard power on, turn on the computer from keyboard
- ◆ Support Wake-On-LAN by PME
- ◆ Support USB resume in S3
- ◆ Onboard Post Port LED display for system debugging
- ◆ **PowerBIOS** for excellent overclocking features:
 - Programmable FSB and PCI Clock output frequency with 1MHz fine tuning
 - Support BIOS adjustable CPU multiplier, FSB clock, PCI-E x16 clock, DIMM frequency
 - Support BIOS adjustable CPU Core voltage, Chipset voltage and DIMM voltage
- ◆ Support LEDION – onboard LED power indicator for CPU, DDR and chipset
- ◆ Support EZ-Button – A handy power-on button onboard to turn on/off the system easily
- ◆ Support Thermo Stick temperature (Optional)

● **Form Factor**

- ◆ 305mm x 245 mm ATX size


Installation

Easy Installation Procedure

The following must be completed before powering on your new system:

- 3-1. CPU Installation
- 3-2. Jumper Settings
- 3-3. System Memory
- 3-4. VGA card installation
- 3-5. Device Connectors


3-1 CPU Installation

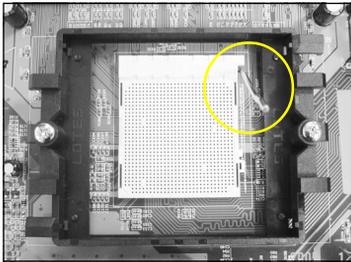

<Figure 1>

Step 1

Open the socket by raising the actuation lever.

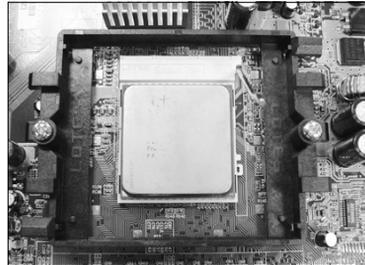

<Figure 2>


Step 2

Align pin 1 on the CPU with pin 1 on the CPU socket and gently insert the CPU. The CPU is keyed to prevent incorrect insertion. Do not force the processor into the socket. If it does not go in easily, check for mis-orientation and reinsert the CPU.

Make sure the processor is fully inserted into the socket.

Note:


Thermal compound and qualified heatsink recommended by AMD are a must to avoid CPU overheat damage.

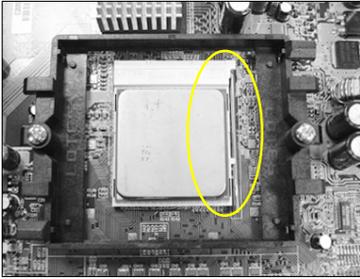

<Figure 3>

Step 3


Close the socket by lowering and locking the actuation lever.
Apply thermal compound to the top of the CPU.

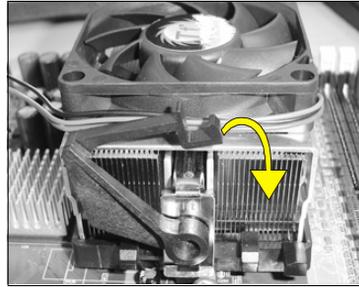

<Figure 4>

Step 4

Insert the heatsink as shown above.
Press the clips in the direction of the arrows shown in Figure 4 to secure the assembly to the CPU socket.

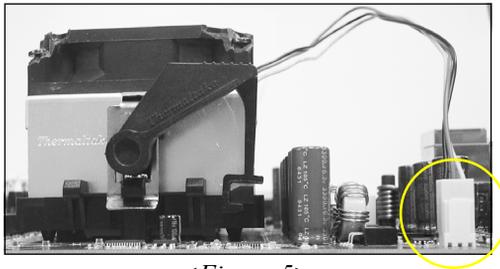


<Figure 5>

Step 5

Plug the CPU fan power into the mainboard's CPU fan connector.

The installation is complete.

3-2 Jumper Settings

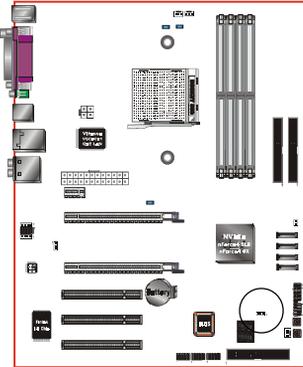


JCMOS:

Clear CMOS data Jumper
If the CMOS data becomes corrupted or you forgot the supervisor or user password, clear the CMOS data to reconfigure the system back to the default values stored in the ROM BIOS.



- Settings:
1-2: Normal (Default)
2-3: Clear CMOS

-
- To CMOS Clear data, please follow the steps below.
1. Turn off the system.
 2. Change the jumper from “1-2” to “2-3” position for a few seconds.
 3. Replace the jumper back to the “1-2” position.
 4. Turn on the system and hold down the key to enter BIOS setup.
-

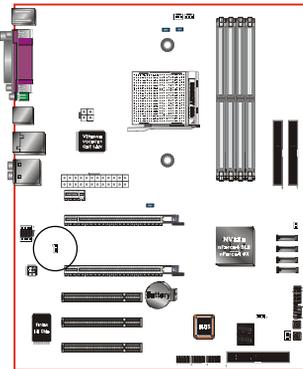

JUSB:

USB S3 Wake up Jumper
This jumper disconnects 5V standby voltage to USB devices. This means USB devices will not be able to wake-up the system from S3 (Suspend to RAM) power saving mode.



- Settings:
1-2: Enabled (S3 enabled)
2-3: Disabled (No S3)

3-3 System Memory Configuration

The mainboard accommodates Four PC2100/PC2700/PC3200 184-pin DIMMs (Dual In-line Memory Modules):

- Supports up to 4.0GB of 266/333/400MHz DDR SDRAM.
- Supports unbuffered DIMM configurations defined in JEDEC DDR DIMM specification.

Dual Channel interface:

- Dual channel memory access offers increased system performance.
- For dual channel to operate, both channel must be populated with same amount of memory, preferably of the same type.
- The four DIMM sockets are divided into two colors to help you identify the channel pairs <Figure 6>. Each dual channel pair has the same color, e.g. DIMM1 and DIMM2. **To obtain best performance, simply mount DIMM sockets of the same color.**



Memory configurations supported:


	1 DIMM (64-bit)		2 DIMM (64-bit)		2 DIMM (128-bit)		4 DIMM (128-bit)	
DIMM#1	SS/DS		SS/DS	SS/DS			SS/DS	
DIMM#2				SS/DS			SS/DS	
DIMM#3		SS/DS	SS/DS			SS/DS	SS/DS	
DIMM#4						SS/DS	SS/DS	

* SS: Single-Sided DIMM, DS: Double-Sided DIMM

Note: Using non-compliant memory with higher bus speeds (overclocking) may severely compromise the integrity of the system.


3-4 VGA Card Installation

Important: Please read through the instruction below before you start installing the VGA card.

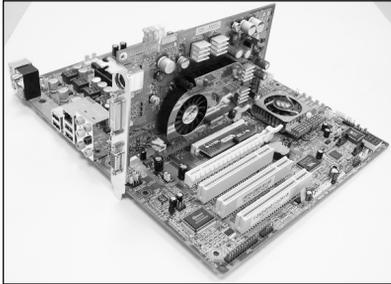


<Figure 7>

- ◆ To install a single VGA card in Single Mode, insert the VGA into the "Primary" VGA slot. (labeled on the board)
- ◆ In Single mode the "Secondary" VGA slot will become inactive.

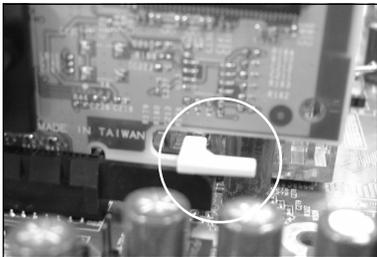


<Figure 8>

- ◆ When installing the VGA card, make sure the card edge connector is fully inserted into the slot and the clicker is locked properly.

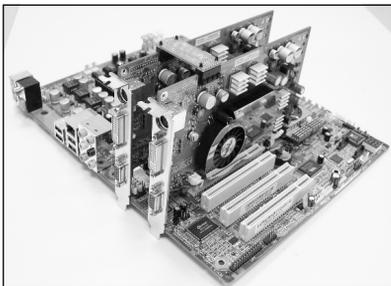

<Figure 9>


- ◆ To install the dual VGA card in SLI Mode mode, insert into both "Primary" and "Secondary" VGA slot.

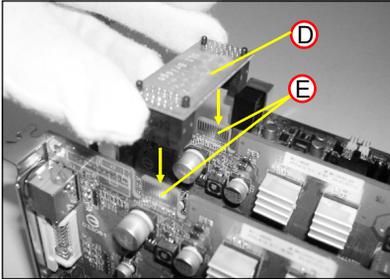

<Figure 10>

- ◆ For SLI Mode, an "SLI Bridge" card (D) must be installed to the golden fingers (E) on the top of both VGA cards in order to link the cards together.
- ◆ For a single VGA in Single Mode, the "SLI Bridge" card is not necessary.



- ◆ After installing VGA driver, enable the Multi-Graphics Processor Unit (GPU) feature in the NVIDIA nView properties as shown below.

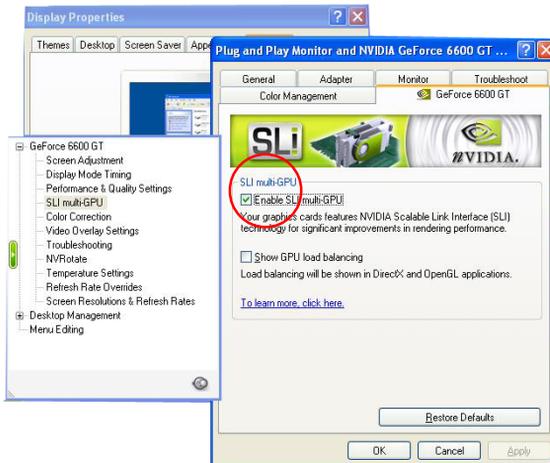

Installation


3-5 Device Connectors

The I/O back panel for this mainboard is shown below. When installing the mainboard into the computer case, use the bundled I/O shield to protect this back panel.

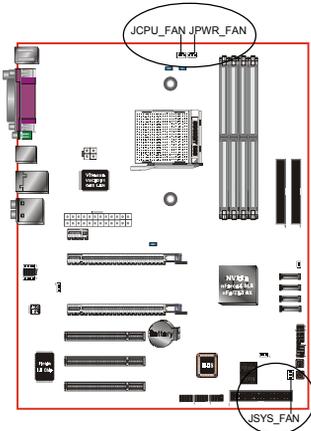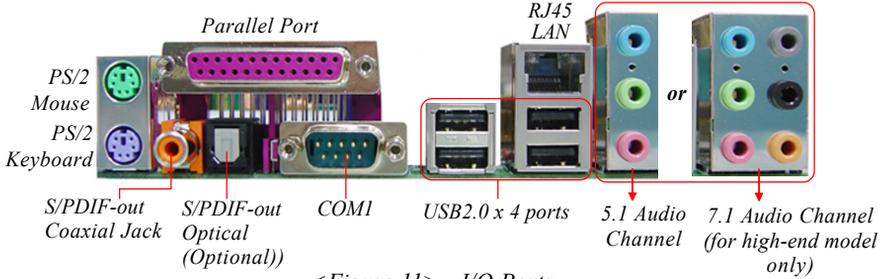


JCPU_FAN / JPWR_FAN / JSYS_FAN / JFAN2: CPU/Power/Chassis Fan Power Connectors

- JCPU_FAN: The CPU must be kept cool by using a heatsink with fan assembly.
- JPWR_FAN: If you are installing an additional fan in the unit, connect to this fan connector.
- JSYS_FAN: The chassis fan will provide adequate airflow throughout the chassis to prevent overheating the CPU.

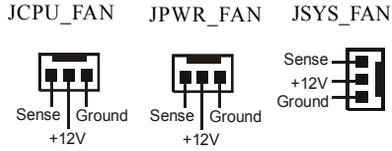


This mainboard is equipped with intelligent fan speed control. Refer to the PC Health Status submenu of the BIOS.

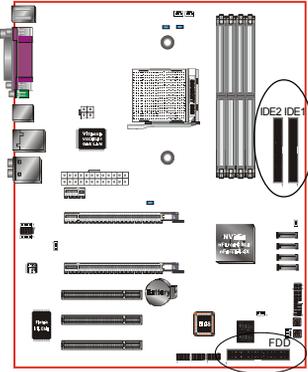


FDD: Floppy Controller Connector
This connects to the floppy disk drive.

IDE1/IDE2: Ultra DMA-100/133 Primary/Secondary IDE Connector

This mainboard is equipped with 2 IDE connectors to support up to 4 ATA-100/133 IDE drives. It supports PIO and DMA mode operations for maximum data transfer rate of 133MB/sec per channel.

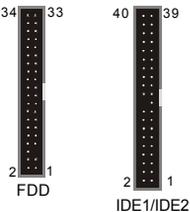

When using two IDE drives on the same connector, one must be set to Master mode and the other to Slave mode. Refer to your disk drive user's manual for details.

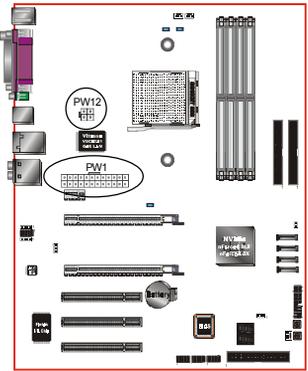


PW1: 24-pin ATX Power Connector

PW12: 4-pin ATX12V Power Connector


The mainboard is equipped with a standard 24-pin ATX main power connector and a 4-pin +12V power connector for connecting an ATX12V power supply. The plugs of the power cables are designed to fit in only one orientation. Insert the plugs into the connectors until they fit in place.

Caution:
The PW1 and PW12 Power Connector must be used simultaneously.

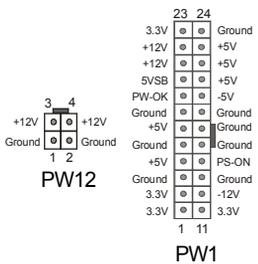


The board requires a minimum of 400 Watt power supply to operate. Your system configuration (amount of memory, add-in cards, peripherals, etc.) may exceed this minimum power requirement. To ensure adequate power, for SLi mode use a 550 Watt or greater power supply.

Installation

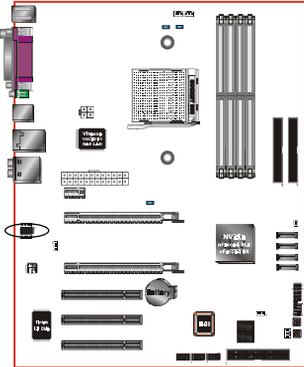

CFPA: Front Panel Audio Connector

When the jumpers are removed this connector can be used for front panel audio. The front panel phone jack should have “normal close” switch. Without phone plug inserted, the rear panel audio is enabled. With phone plug inserted, the rear panel audio will be disabled.

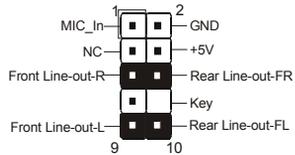


Settings:

Pins (5-6) & (9-10) Short (default): Only the onboard rear panel audio jack can be used.

Pins (5-6) & (9-10) Open:


Only front panel audio jack can be used.

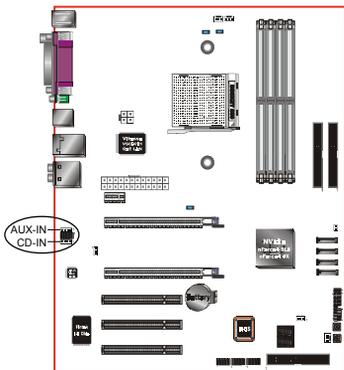


CD-IN/AUX-IN: CD Audio_IN Connector


The CD-IN and AUX-IN connectors are used to receive audio from a CD-ROM drive, TV tuner or MPEG card.

CD-IN

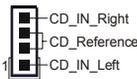

AUX-IN


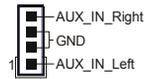


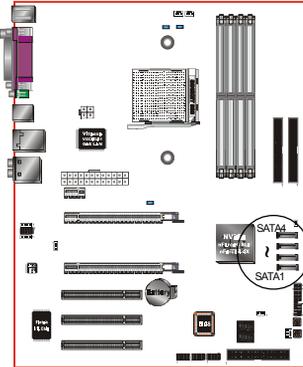

SATA1 ~ SATA4: Four S-ATAII or SATA Connectors
From nVidia nForce4 SLI chip supports S-ATA II up to 3Gbps transfer rate.

From nVidia nForce4 4X chip supports S-ATA up to 150Mbps transfer rate.


These connectors enable you to connect Serial ATA HDDs or optical drives type.

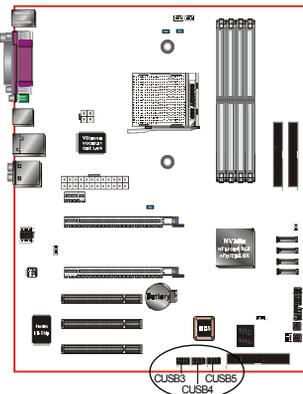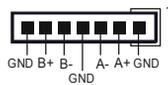

CUSB3/CUSB4/CUSB5: Six USB 2.0 ports

This mainboard includes additional USB2.0 ports, identified by 10-pin connector.


If you wish to use the additional USB ports, install the card-edge bracket to the system chassis then insert its cables to this 10-pin connector.

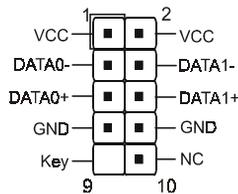

CAUTION!

If you purchased a separate USB cable make sure it has the same pin assignment. A different pin assignment may damage the system. If you need the USB cable, please contact our retailer.

Installation

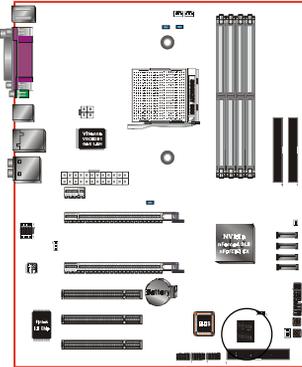


CP80P: Post Port Debug LED

Provides two-digit POST code to show why the system fail to boot. Allows quick and easy optimization.




Post Port Debug 7-segment LED display
(Refer to Appendix C for POST codes)

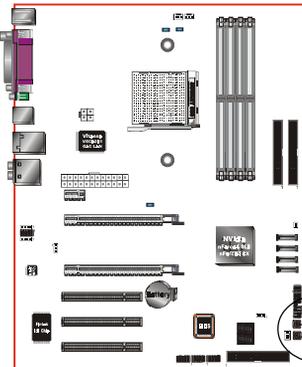


EZ-Button — RESET, PW-ON:

These onboard buttons lets you turn on/off the system easily, it is especially handy for debugging or testing the system.

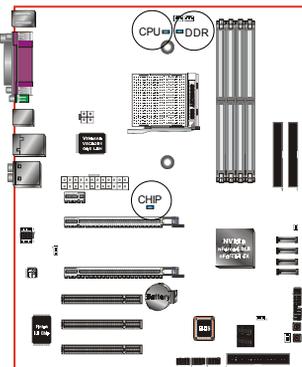

LEDION:


Onboard LED indicators to show the power status of CPU, Chipset and DRAM. You know immediately where to look if the system fails to start.

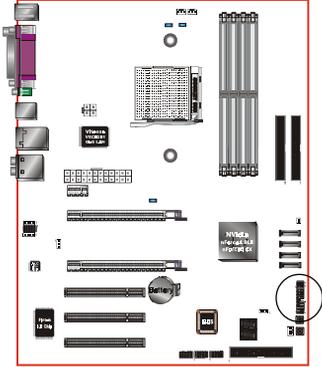

CFP: Front Panel Connector


- ◆ **HD_LED**
This LED will light up whenever the hard drive is being accessed.
- ◆ **PWR_LED**
This connects to the power button of the system chassis
- ◆ **RST**
This switch allows you to reboot without having to power off the system thus prolonging the life of the power supply or system.

CFP

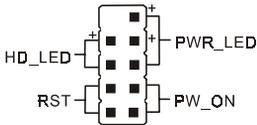

- ◆ **PW_ON**
This is connected to the power button on the case. To use the Soft-Off by PWR-BTTN feature, refer to the Power Management Setup in the BIOS setup section of this manual.


CIR

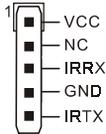

CIR: IR connector

Connect the IrDA cable (if available) to this IR connector.

CSPK

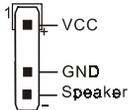

CSPK: Speaker


Connect to the system's speaker for beeping

3-6 Thermo Stick Function (Optional)

This mainboard is equipped with a digital thermometer capability to monitor any temperature. This is useful for measuring heat on peripherals such as VGA cards, hard disk drives, DIMMs or even on-board components such as chipset, MOSFETS, etc.


Thermo Stick consists of:

- 1) THM_ST header located on the mainboard
- 2) Thermostick sensor cable with heat-tolerant adhesive sticker optionally bundled in the mainboard package
- 3) USDM software utility

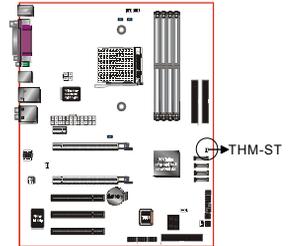

To setup Thermo Stick,

1. Insert the sensor cable to THM_ST header on the mainboard
2. Using the adhesive sticker, affix the sensor head of the cable to your desired point of measure. e.g. the chipset as in the picture below. Trim the adhesive sticker to a suitable size so that it will not affect the heat dissipation of any heatsink.

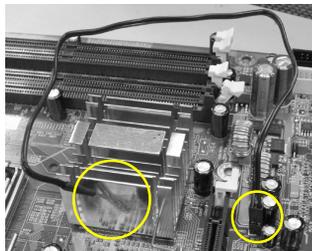

3. Ensure the cable is neatly tucked away from fans or other moving parts.
4. Install and run the Thunder Probe software. The temperature will be shown as below.




3-7 Power-On/Off (Remote)

This board has a 24-pin ATX and a 4-pin ATX12V power supply connector to support power supplies with **Remote On/Off** feature. The 4-pin ATX12V connector must be plugged in for the system to operate safely. The chassis power button should be connected to the mainboard front panel PW_ON header.

You can turn off the system in two ways: by pressing the front panel power On/Off button or using the "Soft Off" function that can be controlled by an operating system such as Windows®XP/ME/2000/98.

Note: For maintaining the DDR SDRAM power during STR (ACPI S3) function, it is strongly recommended to use power supplies that have a +5VSB current of (\geq) 2A. Please check the 5VSB's specification printed on the power supply's outer case.

Note: The board requires a minimum of 400 Watt power supply to operate. Your system configuration (amount of memory, add-in cards, peripherals, etc.) may exceed this minimum power requirement. To ensure that adequate power, use a 550 Watt (or higher) power supply and recommend to use PSU that have 12V current total of (\geq) 20A.

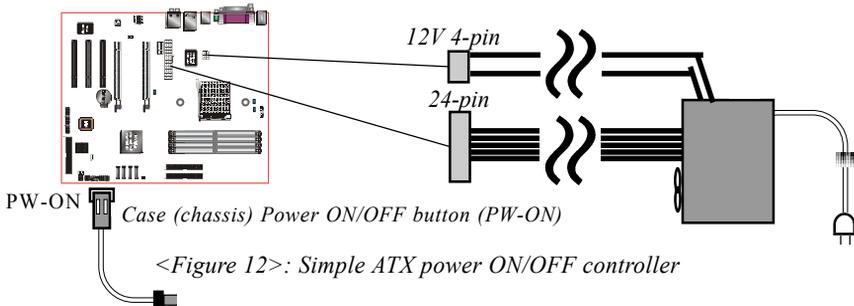

3-8 External Modem Ring-in Power ON

Modem-Ring Power ON Function

The mainboard supports External Modem Ring-in Power ON function. Once you connect an external modem to COM port, you can turn on the system through remote and host dial-up control.

3-9 ACPI S3 (Suspend To RAM) Function

This mainboard supports the STR (Suspend To RAM) power management scheme by maintaining the appropriate power states in the DDR SDRAM interface signals. The power source to the DDR SDRAM is kept active during STR (ACPI S3). Advanced Configuration Power Interface (ACPI) provides many Energy Saving Features for operating systems that support Instant ON and QuickStart™ function.

1. To enable STR functionality to save system power :
 - a. Install ACPI certified add-on cards (such as VGA, LAN, and modem cards).
 - b. In BIOS, under Power Management Setup (refer to Section 4), select “ACPI Suspend Type: S3(STR)”. If you have a USB mouse or keyboard, set “USB Resume from S3/S4” to “Enabled”.
 - c. When in Windows, open the Control Panel Power Management application, and click the Advanced tab. In the Power buttons section, select “Stand By” from the drop-down lists.
2. To activate the STR function:
 - a. Click the START button and choose Shut Down.
 - b. In the Shut Down Windows dialog box, select the Stand By option to enter STR mode.

 The following are the differences between STR power saving mode and Suspend (Power On Suspend) mode:

- a. STR is the most advanced Power Management mode.
 - b. STR cuts all the power supplied to peripherals except to memory - max. power saving.
 - c. STR saves and keeps all on-screen data including any executed applications to DDR SDRAM.
 - d. In STR mode, you must push the power button (connected to the onboard PW-On of CFP pin), click your USB mouse buttons, or press your USB keyboard keys to wake up your system to the last display.
-

Section 4

BIOS SETUP

Main Menu

The ROM BIOS contains a built-in Setup program which allows user to modify the basic system configuration and hardware parameters. The modified data is stored in a battery-backed CMOS, so that data will be retained even when the power is turned off. In general, the information saved in the CMOS RAM will stay unchanged unless there is a configuration change in the system, such as hard drive replacement or a device is added.

It is possible for the CMOS battery to fail causing CMOS data loss. If this happens you will need install a new CMOS battery and reconfigure your BIOS settings.



The BIOS setup screen and description are for reference only, and may not exactly match what you see on your screen. The contents of BIOS are subject to change without notice. Please visit our website for BIOS updates.

To enter the Setup Program :

Power on the computer and press the key during the POST (Power On Self Test). The BIOS CMOS SETUP UTILITY opens. (Figure 1)



Figure 1: CMOS Setup Utility

BIOS

The main menu displays all the major selection items. Select the item you need to reconfigure. The selection is made by moving the cursor (press any direction (arrow key)) to the item and pressing the 'Enter' key. An on-line help message is displayed at the bottom of the screen as the cursor is moved to various items which provides a better understanding of each function. When a selection is made, the menu of the selected item will appear so that the user can modify associated configuration parameters.

4-1 Standard CMOS Setup

Choose "STANDARD CMOS FEATURES" in the CMOS SETUP UTILITY Menu (Figure 2). Standard CMOS Features Setup allows the user to configure system settings such as the current date and time, type of hard disk drive installed, floppy drive type, and display type. Memory size is auto-detected by the BIOS and displayed for your reference. When a field is highlighted (use direction keys to move the cursor and the <Enter> key to select), the entries in the field can be changed by pressing the <PgDn> or the <PgUp> key.

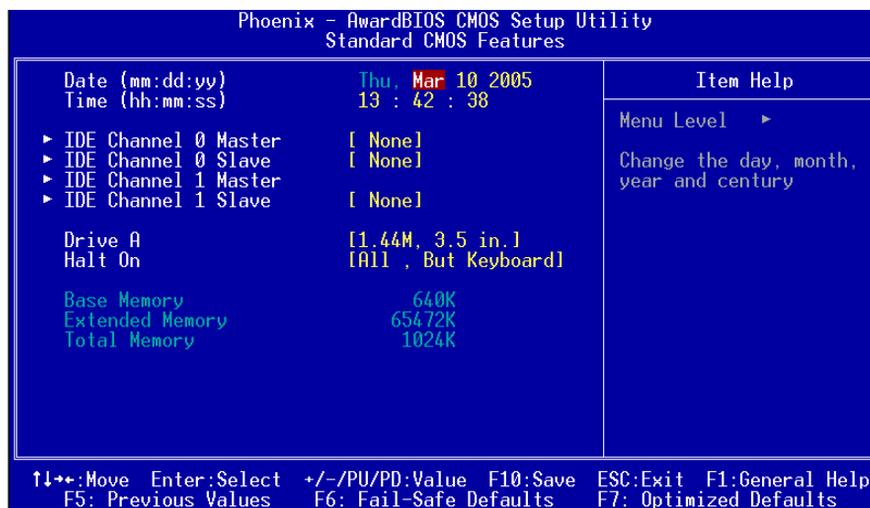


Figure 2: Standard CMOS Setup

Notes:

- If the hard disk Primary Master/Slave and Secondary Master/Slave are set to Auto, the hard disk size and model will be auto-detected.
- The "Halt On:" field is used to determine when the BIOS will halt the system if an error occurs.

4-2 Advanced BIOS Features

Selecting the “ADVANCED BIOS FEATURES” option in the CMOS SETUP UTILITY menu allows users to change system related parameters in the displayed menu. This menu shows all of the manufacturer’s default values for the board.

Pressing the [F1] key displays a help message for the selected item.

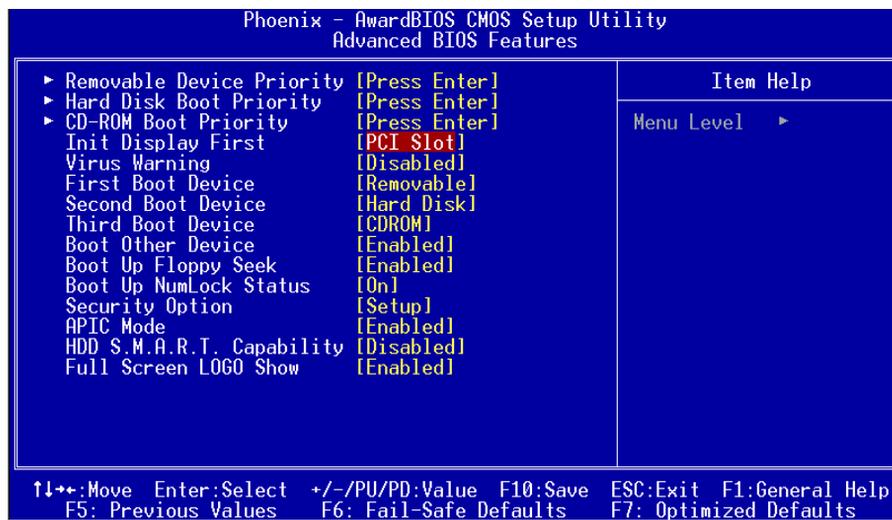


Figure 3: BIOS Features Setup

▶ Removable Device Priority

This item allows you to select the hard disk boot priority.

Options: Floppy, LS120, ZIP100, USB-FDD0, USB-FDD1, USB-ZIP0, USB-ZIP1.

▶ Hard Disk Boot Priority

This item allows you to select the hard disk boot priority.

Options: Pri. Master, Sec. Slave, Sec. Master, Sec. Slave, USBHDD0, USBHDD1, USBHDD2, Bootable Add-in card.

▶ CD ROM Boot Priority

This item allows you to select the CD ROM boot priority.

Options: Pri. Master, Sec. Slave, Sec. Master, Sec. Slave, USB-CDROM0, USB-CDROM1.

BIOS

Init Display First

This item is used to select whether to initialize the PCI-E or PCI first when the system boots.

Options: PCI Slot, PCIEx.

Virus Warning

During and after system boot up, any attempt to write to the boot sector or partition table of the hard disk drive halts the system and an error message appears. You should then run an anti-virus program to locate the virus. Keep in mind that this feature protects only the boot sector, not the entire hard drive.

Enabled: Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector.

Disabled: No warning message appears when anything attempts to access the boot sector.

Note: Many disk diagnostic programs that access the boot sector table can trigger the virus warning message. If you plan to run such a program, we recommend that you first disable the virus warning.

First /Second/Third Boot Device

The BIOS attempts to load the operating system from the devices in the sequence selected in these items.

Options: Removable, Hard Disk, CDROM, Legacy LAN, Disabled.

Boot Other Device

When enabled, the system searches all other possible locations for an operating system if it fails to find one in the devices specified under the first, second, and third boot devices.

Options: Enabled, Disabled.

Boot Up Floppy Seek

If this item is enabled, it checks the size of the floppy disk drives at start-up time. You don't need to enable this item unless you have a legacy diskette drive with 360K capacity.

Options: Enabled, Disabled.

Boot Up NumLock Status

This controls the state of the NumLock key when the system boots.

On: The keypad acts as a 10-key pad.

Off: The keypad acts like cursor keys.

Security Option

This category allows you to limit access to the System and Setup, or just to Setup.

System: The system will not boot and access to Setup will be denied unless the correct password is entered at the prompt.

Setup: The system will boot, but access to Setup will be denied unless the correct password is entered at the prompt.

APIC Mode

This item allows you to enable APIC (Advanced Programmable Interrupt Controller) functionality.

Options: Enabled, Disabled.

HDD S.M.A.R.T. Capability

The S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology) system is a diagnostics technology that monitors and predicts device performance. S.M.A.R.T. Software resides on both the disk drive and the host computer. If a device failure is predicted, the host software, through the Client WORKS S.M.A.R.T applet, warns the user of the impending condition and advises appropriate action to protect the data.

Options: Enabled, Disabled.

Full Screen LOGO Show

This item allows you determine Full Screen LOGO display during POST.

Options: Enabled, Disabled.

4-3 Advanced Chipset Features

Choose the “ADVANCED CHIPSET FEATURES” option in the CMOS SETUP UTILITY menu to display following menu.

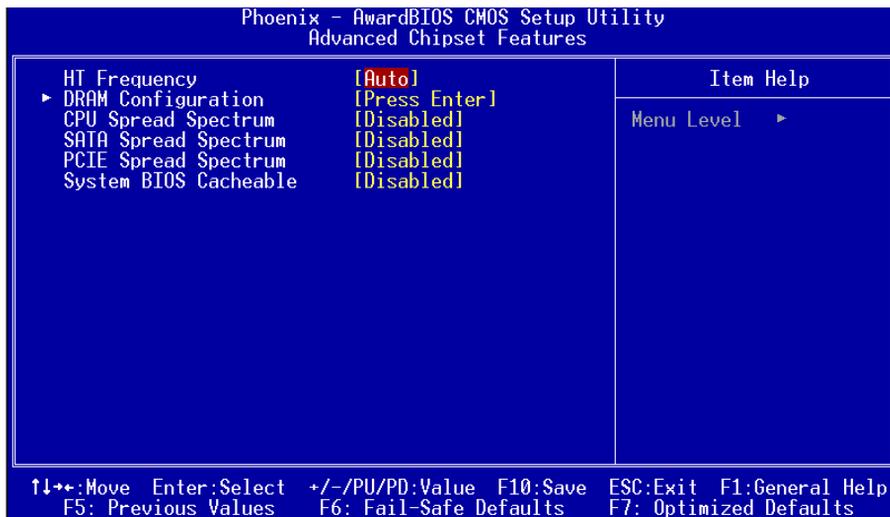


Figure 4: Chipset Features Setup

HT Frequency

This item allows you select the Hyper Transport Frequency.

Options: 1x, 2x, 3x, 4x, 5x. (1x-->200MHz, 2x-->400MHz, 3x-->600MHz, 4x-->800MHz, 5x-->1000MHz)

CPU Spread Spectrum

This option reduces the EMI (Electromagnetic Interference) generated by the CPU.

Options: Disabled, Center Spread.

SATA Spread Spectrum

This option reduces the EMI generated by the S-ATA.

Options: Disabled, Down Spread.

PCIE Spread Spectrum

This option reduces the EMI generated by the PCI-E.

Options: Disabled, Down Spread.

System BIOS Cacheable

This item allows the system to be cached in memory for faster execution.

Options: Disabled, Enabled.

► DRAM Configuration

Scroll to DRAM Configuration and press <Enter>. The following screen appears:

```

Phoenix - Award WorkstationBIOS CMOS Setup Utility
DRAM Configuration

***** Value/Current Status *****
1T/2T Memory Timing      [Auto/2T]
CAS# Latency (Tcl)      [Auto/Unknown]
RAS# to CAS# delay (Trcd) [Auto/2T]
Min RAS# active time (Tras) [Auto/15T]
Row precharge Time (Trp) [Auto/7T]
Row to Row delay (Trrd) [Auto/7T]
Write Recovery Time (Twr) [Auto/3T]
Write To Read Delay (Twt) [Auto/2T]
Row cycle time (Trc) [Auto/22T]
Row Refresh Cycle (Trfc) [Auto/24T]
Read-to-Write time (Trwt) [Auto/8T]
Refresh Rate (Tref) [Auto /3.9us]
Read Preamble value     [Auto /9.5ns]
Async Latency value     [Auto/15ns]
IdleCycle Limit        [Auto/256]
Dynamic IdleCycle Counter [Auto /Enabled]
R/W Queue Bypass Count [Auto/16]
Bypass Max             [Auto/ 7]
DQS Skew Contrl       [Auto /Increase]
x DQS Skew Value       [32/255]
S/W memory hole Remapping [Disabled]
H/W memory hole Remapping [Disabled]

Item Help
Menu Level  >>

↑↓←→:Move  Enter:Select  +/-/PU/PD:Value  F10:Save  ESC:Exit  F1:General Help
Fs: Previous Values  F6: Fail-Safe Defaults  F7: Optimized Defaults

```

1T/2T Memory Timing

For setting DRAM command rate timing.

Options: Auto, 1T, 2T.

CAS# Latency (Tcl)

Enables you to select the CAS latency time. The value is set at the factory depending on the DRAM installed. Do not change the values in this field unless you change specifications of the installed DRAM.

Options: Auto, 2.0, 2.5, 3.0

RAS# to CAS# delay (Trcd)

This field specifies the RAS# to CAS# delay to read/write command to the same bank.

Options: Auto, 2T ~ 7T.

Min RAS# active time (Tras)

This field specifies the minimum RAS# active time.

Options: Auto, 5T ~ 15T.

Row precharge Time (Trp)

This field specifies the Row Precharge Time. Precharge to active or Auto-refresh of the same bank.

Options: Auto, 2T ~ 7T.

Row cycle time (Trc)

This field specifies the Row Cycle Time. RAS# active to RAS# active or auto refresh of the same bank.

Options: Auto, 7T ~ 21T.

Row refresh cyc time (Trfc)

This field specifies the Row Refresh Cycle Time. Auto-refresh active to RAS# or RAS# to auto refresh.

Options: Auto, 9T ~ 23T.

Row to Row delay (Trrd)

This field specifies the Row to Row delay of different banks.

Options: Auto, 2T ~ 4T.

Write recovery time (Twr)

This bits specifies the Write Recovery Time. Called Trd1 by Samsung, measures when the last write datum is safely registered by the DRAM. It measures from the last data to precharge.

Options: Auto, 2, 3.

Write to Read delay (Twtr)

This bits specifies the Write to Read delay. Samsung Calls this Tcd1r (last data in to read command). It is measured from the rising edge following the last non-masked data strobe to the rising edge of the next Read Command. (Jedec spec this as exactly one clock).

Options: Auto, 1, 2.

Read to Write delay (Trwt)

This field specifies the Read to write delay. This is not a DRAM specified timing parameter but must be considered due to routing latencies on the clock forwarded bus. It is counted from first address but slot which was not associated with part of the read burst.

Options: Auto, 1 ~ 6.

Refresh Rate (Tref)

This field specifies the number of clock cycles between refresh.

Options: Auto, 15.6us, 7.8us, 3.9us.

Read Preamble Value

Options: Auto, 2.5ns to 9.5ns in 0.5ns increments.

Async Latency Value

Options: Auto, 1ns ~ 15ns.

IdleCycle Limit

Options: Auto, 4, 8, 16, 32, 64, 128, 256.

Dynamic IdleCycle Counter

Options: Auto, Disabled, Enabled.

R/W Queue Bypass Count

Options: Auto, 2, 4, 8, 16.

Bypass Max

Options: Auto, 0 ~ 7.

DQS Skew Control

Options: Auto, Increase, Decrease.

S/W memory hole Remapping

Options: Enabled, Disabled.

H/W memory hole Remapping

Options: Enabled, Disabled.

4-4 Integrated Peripherals

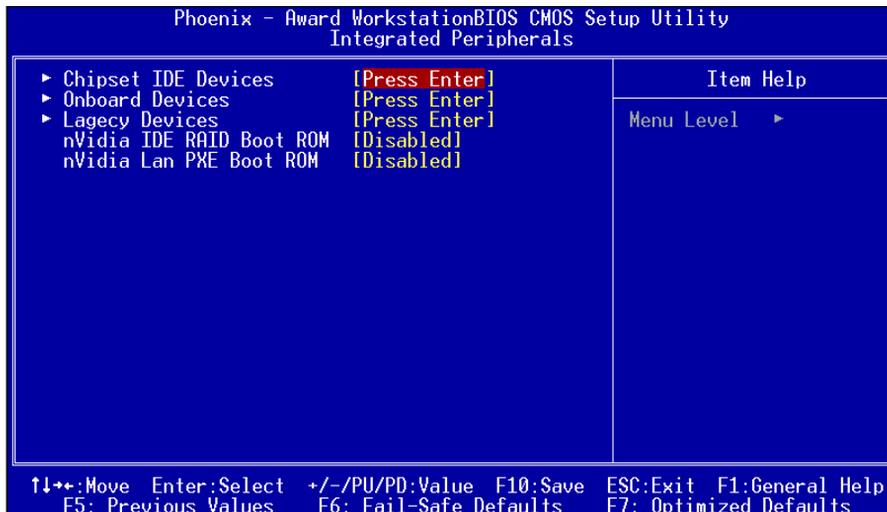


Figure 5: Integrated Peripherals

nVidia RAID Boot ROM

Set this to enabled to setup RAID for drives connected to nVidia chipset.

Options: Enabled, Disabled.

nVidia Lan PXE Boot ROM

Enables/disable the onboard nVidia Lan PXE Boot ROM for booting from LAN.

Options: Enabled, Disabled.

► Chipset IDE Devices

Scroll to Chipset IDE Devices and press <Enter>. The following screen appears:

Phoenix - AwardBIOS CMOS Setup Utility		
Chipset IDE Devices		
		Item Help
Delay For HDD (Secs)	[0]	
OnChip IDE Channel0	[Enabled]	
Primary Master	UDMA	[Auto]
Primary Slave	UDMA	[Auto]
OnChip IDE Channel1	[Enabled]	
Secondary Master	UDMA	[Auto]
Secondary Slave	UDMA	[Auto]
SATA 3/4	[Enabled]	
SATA 1/2	[Enabled]	
RAID Enable	[Disabled]	
SATA 3 RAID	[Disabled]	
SATA 4 RAID	[Disabled]	
SATA 1 RAID	[Disabled]	
SATA 2 RAID	[Disabled]	

Delay For HDD (Secs)

This item allows you to set longer time stand by before system Scan HDD at post screen. Some HDD may need a longer stand by time before it can be detected.

Options: 0 ~ 15.

OnChip IDE Channel 0/1

The mainboard supports two channel of ordinary IDE interface and one channel of serial ATA interface. Select “Enabled” to activate each channel separately.

 If you do not use the onboard IDE connector, set the Onboard Primary (Secondary) PCI IDE to “Disabled”.

Primary/Secondary Master/Slave UDMA

Select the mode of operation for the IDE drive. Ultra DMA-100/133 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver. If your hard drive and your system software both support Ultra DMA-100/133, select Auto to enable UDMA mode by BIOS. Options: Auto, Disabled.

SATA 3/4

This item enables/disables the S-ATA3/4 ports.

SATA 1/2

This item enables/disables the S-ATA1/2 ports.

RAID Enable

This item allows you to select the RAID mode. When set to “Enabled” the four fields become available to set RAID for each SATA.

Options: Enabled, Disabled.

► Onboard Device

Scroll to Onboard Device and press <Enter>. The following screen appears:



Onchip USB

Enables the USB controller.

Options: Disabled, V1.1+V2.0, V1.1.

USB Memory

Select used memory space to record USB device information

Options: Base memory, Shadow memory.

USB Mouse Support

Enable/Disable support for USB mouse under DOS.

Options: Enabled, Disabled.

AC97 Audio

This item allows you disable the chipset on-chip AC97 Audio.

Options: Auto, Disabled.

NV Lan Control

Enables the onboard Gigabit LAN feature.

Options: Auto, Disabled.

NV Lan MAC Address

Machine MAC (NV) address selection.

Options: Enabled, Disabled.

NV Lan Address Input

Allows you to input the MAC (NV) address.

Current NV Lan MAC Address

Display the current MAC (NV) address.

Onboard Debug LED

Enables the onboard Debug LED feature.

Options: Enabled, Disabled.

► Legacy Devices

Scroll to Legacy Devices and press <Enter>. The following screen appears:

Phoenix - Award WorkstationBIOS CMOS Setup Utility		Legacy Devices	
		Item Help	
Onboard FDC Controller	[Enabled]		
Onboard Serial Port 1	[3F8/IRQ4]		
Onboard IrDA Port	[Disabled]		
Onboard Parallel Port	[378/IRQ7]	Menu Level	▶▶
Parallel Port Mode	[SPP]		
EPP Mode Select	[EPP1.7]		
ECP Mode Use DMA	[3]		

Onboard FDC Controller

Select “Enabled” if you wish to use onboard floppy disk controller (FDC). If you install an external FDC or the system has no floppy drive, select “Disabled” in this field.

Options: Enabled, Disabled.

Onboard Serial Port 1

Select an address and corresponding interrupt for the first serial port.

Options: 3F8/IRQ4, 2E8/IRQ3, 3E8/IRQ4, 2F8/IRQ3, Disabled, Auto.

Infrared Port Select

Select an address and corresponding interrupt for the Infrared Port.

Options: 3F8/IRQ4, 2E8/IRQ3, 3E8/IRQ4, 2F8/IRQ3, Disabled, Auto.

Onboard Parallel Port

This field allows the user to configure the LPT port.

Options: 378/IRQ7, 278/IRQ5, 3BC/IRQ7, Disabled.

Parallel Port Mode

This field allows the user to select the parallel port mode.

Options: SPP, EPP, ECP, ECP+EPP.

EPP Mode Select

This field allows the user to select the EPP mode for parallel port mode.

Options: EPP1.9, EPP1.7.

ECP Mode USE DMA

This field allows the user to select DMA1 or DMA3 for the ECP mode.

Options: DMA1, DMA3.

4-5 Power Management Setup

Choose the “POWER MANAGEMENT SETUP” in the CMOS SETUP UTILITY to display the following screen. This menu allows the user to modify the power management parameters and IRQ signals. In general, these parameters should not be changed unless it’s absolutely necessary.

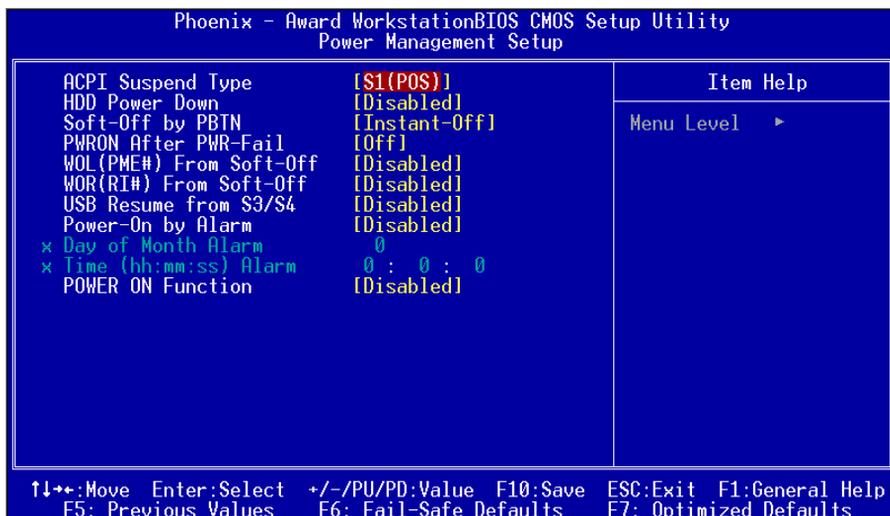


Figure 6: Power Management

ACPI Suspend Type

This item allows you to select S1(Power-On-Suspend) or S3(Suspend-To-RAM) function.

Options: S1(POS), S3(STR), S1&S3.

HDD Power Down

Powers down the hard disk drive after a preset period of system inactivity.

Options: Disabled, 1min ~ 15min.

Soft-Off by PBTN

Use this to select your soft-off function. The default is Instant Off.

Instant Off: Turns off the system instantly.

Delay 4 Second : Turns off the system after a 4 second delay. If momentary press of button, the system will go into Suspend Mode. Press the power button again to make system back to work.

PwerOn After Pwr-Fail

This item enables your computer to automatically restart or return to its last operating status after power returns from a power failure.

Off: The system stays off after a power failure.

Former-Sts: The system returns to the state it was in just prior to the power failure.

WOL (PME#) From Soft-Off

When enabled, NV LAN activity awakens the system from soft-off state.

Options: Enabled, Disabled.

WOR (RI#) From Soft-Off

An input Ring-In signal from the modem awakens the system from a soft-off state.

Options: Enabled, Disabled.

USB Resume from S3/S4

This item allows a USB device to wake-up the system from S3/S4 suspend state.

Options: Enabled, Disabled.

Power-On by Alarm

When set to Enable alarm resume, you can set the date (of month) and time (hh:mm:ss), that will awaken a system which has been powered down.

Options: Enabled, Disabled.

POWER ON Function

Enables computer power on by the keypress activity.

Options: Disabled, Any key, Mouse, Both (Any key+Mouse).

4-6 PNP/PCI/PCI-E Configuration

This page lets the user to modify the PCI/PCI-E IRQ signals when various PCI/PCI-E cards are inserted.

WARNING: Conflicting IRQ's may cause system unable to locate certain devices.

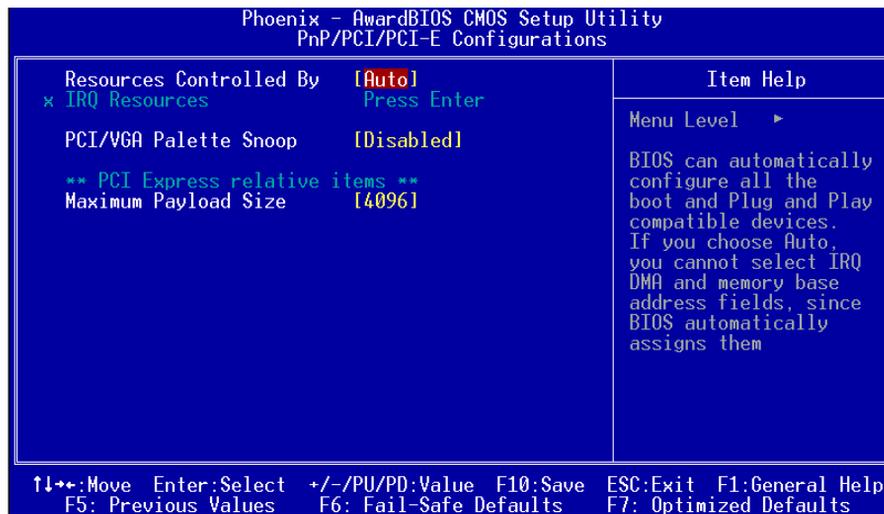


Figure 7: PNP/PCI/PCI-E Configuration Setup

Resources Controlled By

Determines what controls system PNP/PCI resources. The default is Auto (ESCD).

Manual: PNP Card's resources are controlled manually. The "IRQ Resources" field becomes available and you can set which IRQ-X and DMA-X are assigned to PCI and onboard devices.

Auto: BIOS assigns the interrupt resource automatically.

PCI/VGA Palette Snoop

This item is designed to overcome problems that may be caused by some nonstandard VGA cards.

Options: Enabled, Disabled.

*** PCI Express related items ***

Maximum Payload Size

Set maximum TLP payload size for the PCI Express devices. The unit is byte.

Options: 128, 256, 512, 1024, 2048, 4096.

Interrupt requests are shared as shown below:

	INT A	INT B	INT C	INT D
PCI1	v			
PCI2		v		
PCI3			v	
PE1 (x1)	v			
PE2 (x16)			v	
PE3 (x16)				v

IMPORTANT!

When using PCI cards on shared IRQ slots, make sure its drivers support “Shared IRQ”, or that the cards do not need IRQ assignments. IRQ conflicts between the two PCI groups will make the system unstable or cards inoperable.

4-7 PC Health Status

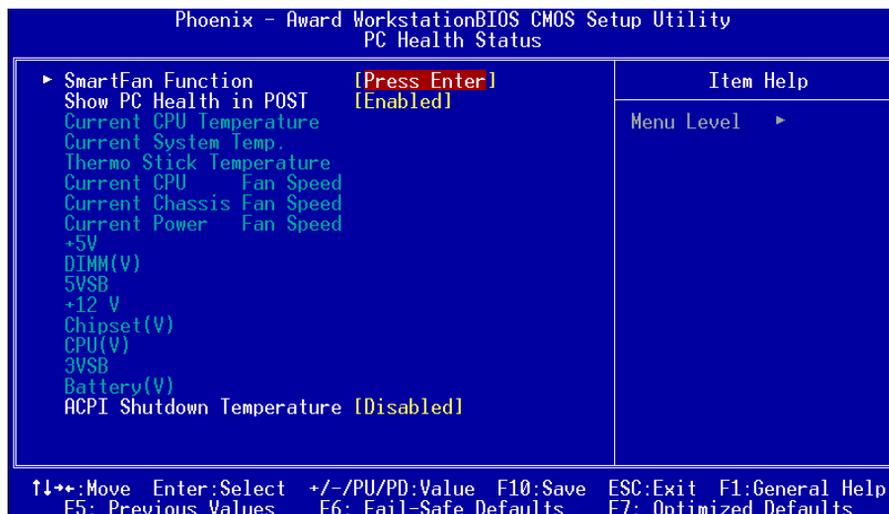


Figure 8: PC Health Status

Show PC Health in POST

When this function is enabled the PC Health information is displayed during the POST (Power On Self Test).

Options: Enabled, Disabled.

BIOS

Current System /CPU Temperature

Displays the current system /CPU temperature.

Thermo Stick Temperature

Displays the current Thermo Stick temperature.

Current CPU/Chassis/Power FAN Speed

Displays the current speed of the CPU, system, and power fan speed in RPMs.

DIMM (V)

The voltage level of the DRAM.

Chipset (V)

The voltage level of the Chipset.

CPU (V)

The voltage level of the CPU(Vcore).

+5V, +12V

The voltage level of the power supply.

5VSB

The voltage level of the 5V Standby.

3VSB

The voltage level of the 3V Standby.

Battery (V)

The voltage level of the battery.


ACPI Shutdown Temperature

This is the temperature that the computer will turn off the power to combat the effects of an overheating system. (requires ACPI to be enabled in Power Management BIOS and ACPI compliant operating system.) The default is Disabled.

Options available are 60°C/140°F to 75°C/167°F in increments of 5°C.

► **SmartFan Function**

Scroll to SmartFan Function and press <Enter>. The following screen appears:

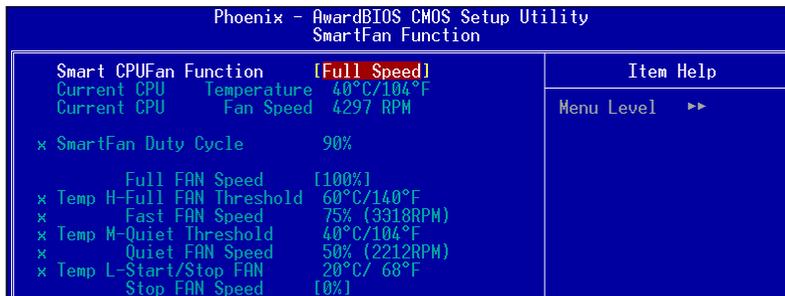

Smart CPU FAN Function


This item selects how the fan speed should be set. Full speed fixes fan speed at 100% duty cycle. Control the Fan by Duty-Cycle directly. By Temperature calculates the fan speed according to different temperature range.

To use By Temperature setting, refer to the example below to set the temperature and duty cycle.

Current CPU Temperature/Fan Speed

Display the current CPU Temperature/Fan speed.

Smart Fan example:

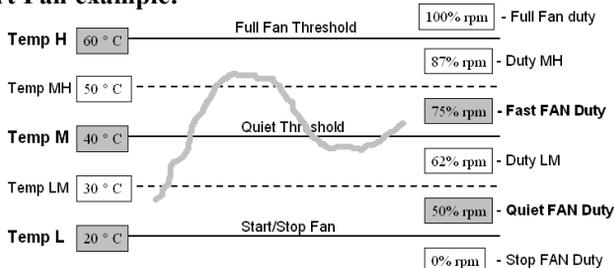

- ◆ Only need to set the items in gray. The system will automatically calculate intermediate temperature Temp LM and Temp MH and the corresponding Duty LM and Duty MH.
- ◆ How effective Smart CPU Fan is will depend on fan design. Most fans have built-in thermistor and may self adjust its speed. Some fans have very limited duty cycle range open to fan control.
- ◆ For best results use the bundled Thunder Probe Software to tune your fan.

4-8 POWER BIOS Features

This page lets you adjust various parameters to obtain improved performance for overclocking.

Warning:

Overclocking requires expert knowledge and risks permanent damage to system components. We recommend you leave these parameters at their default values for proper operation.

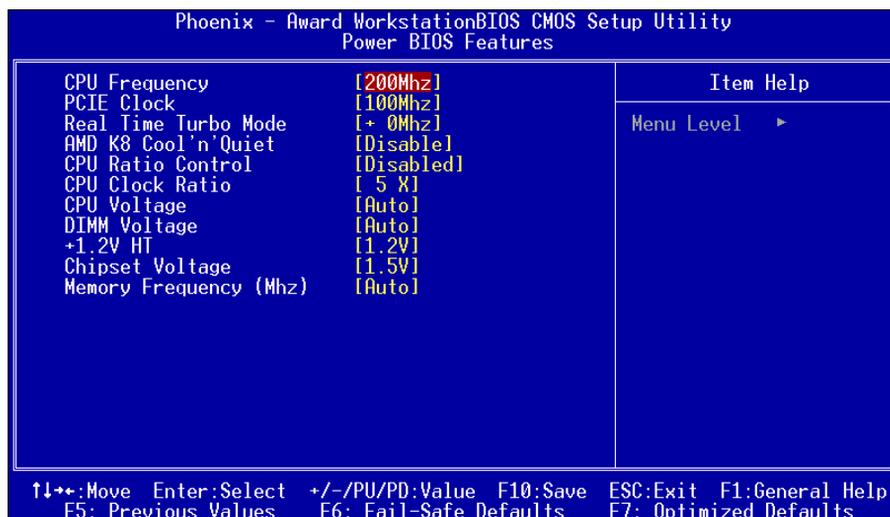


Figure 9: Frequency/Voltage Control

CPU Frequency

Enables you to increment the CPU’s clock generator at 1 MHz step. This works together with CPU Clock Ratio (below) to set the CPU operating frequency.

$$\text{CPU Clock Generator} \times \text{CPU Clock Ratio} = \text{CPU Frequency}$$

For example, if you have a processor that is rated at 2.4GHz and the clock generator is 200MHz, then $200\text{MHz} \times 12 = 2.4\text{GHz}$

Options: 200 to 400 in 1MHz increments.



Overclocking failure will cause no display on the monitor. To overcome this switch off the power supply and switch on again. Restart the system, press and hold <Insert> key. This will revert the BIOS to default or initial setting.

PCIE Clock

Enables you to subtly tune the PCIE frequency at increments of 1MHz step.

Options: 100 to 145 in 1MHz increments.

Real Time Turbo Mode

This sets a value CPU CLOCK generator will jump to when the system is experiencing a heavy load.

Options: 0 to 31 in 1MHz increments.

AMD K8 Cool'n'Quiet

Reduce the noise and heat from your PC when AMD's Cool'n'Quiet™ technology is enabled.

Options: Enabled, Disabled.

CPU Ratio Control

This item allows you to enable the CPU clock ratio control. Choose "Enabled" to key in a CPU clock Ratio in the next selection.

Options: Enabled, Disabled.

CPU Clock Ratio

Use this item to select a multiplier to set the CPU frequency. See CPU Frequency item above for explanation.

CPU Voltage

This item allows you to adjust the CPU Vcore voltage.

Options: Auto, Off, -0.200V to +0.350V in 0.025V increments. We recommend that you leave this at the default value.

DIMM Voltage

This item allows you to adjust the DIMM slot voltage.

Options: Auto, 2.5V to 3.1V in 0.1V increments. We recommend that you leave this at the default value.

+1.2V HT

This item allows you to adjust the Hyper Transport voltage.

Options: 1.2V to 1.5V in 0.1V increments. We recommend that you leave this at the default value.

Chipset Voltage

This item allows you to adjust the chipset voltage.

BIOS

Options: 1.5V to 1.9V in 0.1V increments. We recommend that you leave this at the default value.

Memory Frequency (Mhz)

This item sets the memory clock. By placing an artificial memory clock limit on the system, memory is prevented from running faster than this frequency.

Options: Auto, DDR200(100MHz), DDR266(133MHz), DDR333(166MHz), DDR400(200MHz), DDR433(216MHz), DDR466(233MHz), DDR500(250MHz).

4-9 Defaults Menu

Selecting “Defaults” from the main menu shows you two options which are described below

Load Fail-Safe Defaults

When you press <Enter> on this item you get a confirmation dialog box:

Load Fail-Safe Defaults (Y/N) ? N

Pressing ‘Y’ loads the BIOS default values for the most stable, minimal-performance system operations.

Load Optimized Defaults

When you press <Enter> on this item you get a confirmation dialog box:

Load Optimized Defaults (Y/N) ? N

Pressing ‘Y’ loads the default values that are factory settings for optimal performance system operations.

4-10 Supervisor/User Password Setting

This function lets you set either Supervisor or User Password, or both, to prevent unauthorized changes to BIOS menus.

supervisor password: full rights to enter and change options of the setup menus.

user password: only enter but no rights to change options of the setup menus.

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

ENTER PASSWORD:

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password. To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

PASSWORD DISABLED.

When a password has been enabled, you will be prompted to key in each time you enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You can determine when the password is required within the Advanced BIOS Features Menu and its Security option. If the Security option is set to “System”, the password will be required both at boot and at entry to Setup. If set to “Setup”, prompting only occurs when trying to enter Setup.

4-11 Exiting BIOS

Save & Exit Setup

Pressing <Enter> on this item asks for confirmation:

Save to CMOS and EXIT (Y/N)? Y

Pressing “Y” stores the selections made in the menus in CMOS – a special section of memory that stays on after you turn your system off. The next time you boot your computer, the BIOS configures your system according to the Setup selections stored in CMOS. After saving the values the system is restarted again.

Exit Without Saving

Pressing <Enter> on this item asks for confirmation:

Quit without saving (Y/N)? Y

This allows you to exit Setup without storing in CMOS any change. The previous selections remain in effect. This exits the Setup utility and restarts your computer.

Section 5

RAID CONFIGURATION


Introduction

This section gives a brief introduction on RAID-related background knowledge and a general procedure to setup RAID system on this mainboard.

RAID Basics

RAID (Redundant Array of Independent Disks) is a method of combining two or more hard disk drives into one logical unit known as a RAID array. The advantage of RAID is to provide better performance or data fault tolerance. Fault tolerance is achieved through data redundant operation, where if one drives fails, a mirrored copy of the data can be found on another drive. This can prevent data loss if the operating system fails or hangs.

Below is an example of a RAID array with 2 drives.

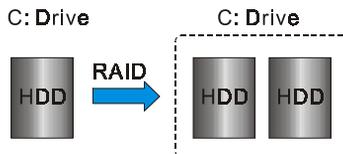

The individual disk drives in an array are called “members”. All disk members in a formed disk array are recognized as a single physical drive to the operating system. Hard disk drives can be combined together through a few different methods. The different methods are referred to as different RAID levels. Different RAID levels represent different performance levels, security levels and implementation costs. The table below briefly introduced these RAID levels.

RAID Level	No. of Drives	Capacity	Benefits
RAID 0 (Striping)	2	Number drivers *Smallest size	Highest performance without data protection
RAID 1 (Mirroring)	2	Smallest size	Data protection
JBOD (Spanning)	2	Sum of All drivers	No data protection and performance improving, but disk capacity fully used.

RAID Configuration

RAID 0 (Striping)

RAID 0 reads and writes sectors of data interleaved between multiple drives. If any disk member fails, it affects the entire array. The disk array data capacity is equal to the number of drive members times the capacity of the smallest member. The striping block size can be set from 4KB to 64KB. RAID 0 does not support fault tolerance.

RAID 1 (Mirroring)

RAID 1 writes duplicate data onto a pair of drives and reads both sets of data in parallel. If one of the mirrored drives suffers a mechanical failure or does not respond, the remaining drive will continue to function. Due to redundancy, the drive capacity of the array is the capacity of the smallest drive. Under a RAID 1 setup, an extra drive called the “spare drive” can be attached. Such a drive will be activated to replace a failed drive that is part of a mirrored array. Due to the fault tolerance, if any RAID 1 drive fails, data access will not be affected as long as there are other working drives in the array.

JBOD (Spanning)

A spanning disk array is equal to the sum of the all drives when the drives used are having different capacities. Spanning stores data onto a drive until it is full, then proceeds to store files onto the next drive in the array. When any disk member fails, the failure affects the entire array. JBOD is not really a RAID and does not support fault tolerance.

Others

Other RAID derivatives are RAID 10 and RAID 5. These RAID levels require more than 2 drives to operate, combining the benefits of RAID 0 and RAID 1.


nVidia RAID Features

The nVidia RAID solution uses the nForce4 series chip as a RAID controller, which is a 4-channel S-ATA solution. Listed below are the main features and benefits of nVidia RAID:

- Support four S-ATA hard disk drives.
- Supports hard disk drive larger than 137 GB (48-bits LBA).
- Supports RAID 0, 1, JBOD, 0+1
- Free Disk and Dedicated Spare Disk
A Free Disk or Dedicated Disk can be automatically used in case one drive of a mirrored array fails. A free disk can be used by any available mirrored array, while a dedicated disk can be used only by the array to which it is assigned.
- Bootable RAID
NVRAID can be configured in a way to make it bootable. For example, two hard drives can be configured as a bootable mirrored RAID array.
- RAID on Multiple Disk Controllers
Unlike other RAID solutions that limits the user to a dedicated RAID controller, NVRAID software can use a drive on one RAID controller and another drive on a second RAID controller.
- Disk Alert system
Disk Alert system informs user when a disk fails, indicating the location of failed port.

Enable RAID Function

For any RAID controller, the general procedure to enable RAID function are shown below:

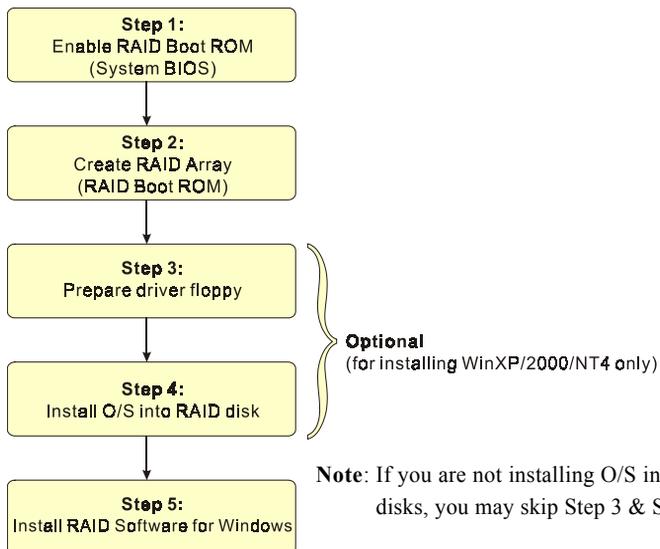

Step 1: Enable RAID ROM

The system BIOS may disable all RAID function by default. To enable any RAID controller you must enable its RAID Boot ROM. Enter the BIOS CMOS Setup and jump to Integrated Peripherals Page.

RAID Boot ROM **[Enabled]**


Select the controller's Boot ROM and set it to Enabled. Press "F10" to Save & Exit.

Step 2: Create RAID Array

RAID arrays are created using the RAID controller's BIOS Boot ROM utility.

► **NVIDIA nForce4 SLi / nForce4 4X**

Power-on the system and wait for the RAID BIOS Setting utility message on the screen. Press the "F10" key to enter its BIOS configuration utility.

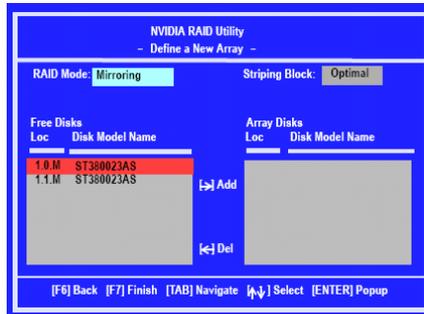

Refer to Appendix B-1 for details about creating RAID array using this utility. After the RAID array is created, press "F10" to exit.

Step 3: Prepare driver floppy

When installing Windows XP/2000/NT4.0 into any RAID disk, the O/S setup will require a floppy disk containing the RAID driver. This step will show you how to prepare this driver floppy. There are 2 methods to prepare this floppy:

► **Method 1**


1. Insert the bundled CD into the CD-ROM drive
2. Boot the system from the CD-ROM
3. A menu of driver for various RAID controllers will appear
4. Insert a blank floppy into the A:drive
5. Select the appropriate RAID controller to begin copy into the floppy

► **Method 2**

1. Locate another computer and insert the bundled CD into its CD-ROM drive.

RAID Configuration

2. A main menu screen will appear (Autorun feature)
3. Select the page “RAID floppy”

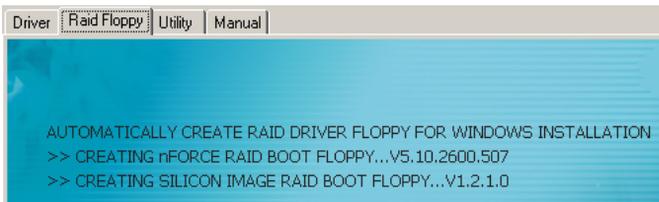

4. Insert a blank floppy into the A:drive
5. Click on the required driver to begin copy into the floppy

Step 4: Install O/S into RAID disk

Proceed to install Windows XP/2000/NT4.0. When installing the O/S from CD, press <F6> so that it will request for RAID driver. Insert the floppy created earlier in Step 3.

Step 5: Install Software utility for Windows

After the O/S has been installed, you may install the RAID driver and software. The RAID software is a Windows-based utility with graphical user interface that provides an easy operating tool to configure and manage RAID arrays.

- 1) Insert the bundled CD into the CD-ROM drive.
- 2) When the main menu appears, click on the RAID driver corresponding to the RAID controller you have configured in Step 2. See driver installation in section 6 for more details.

Note: For information on using the software utility, refer to the user guide in the bundled CD.

Section 6

DRIVER INSTALLATION

Easy Driver Installation

Once the operating system has been installed, you need to install the drivers for the mainboard.



Insert the bundled CD into the CD-ROM and the main menu screen will appear. The main menu displays links to the supported drivers, utilities and software.

► **Method 1**

This item can install all drivers automatically.

► **Method 2**

This item can allow you to install the drivers selectively.

Step 1 : Click “**nVIDIA nForce Driver**” to install chipset driver.

Step 2 : Click “**AC'97 AUDIO Driver**” to install audio driver.


Step 3 : Click “**USB V2.0 Driver**” to install USB 2.0 driver.

Step 4 : Click “**AMD Athlon 64 / AMD Sempron Series Processor Driver**” to install AMD series processor driver.

Realtek Sound Manager Quick User-guide for ALC655


◆ Introduction

To obtain the best performance from your audio system, run the "Sound Manager" utility to adjust the settings to suit your needs. This section of the manual is intended to provide a quick user-guide to setup "Sound Manager". For more detailed information, refer to "Sound Manager manual" in the CD.

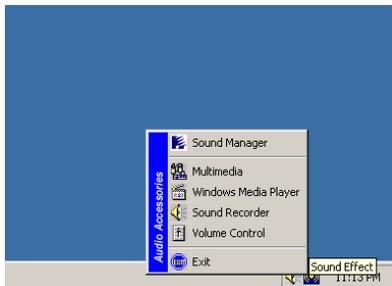

<Figure 1>


1. Right-click "Sound Effect" button on the task bar and select "Sound Manager".

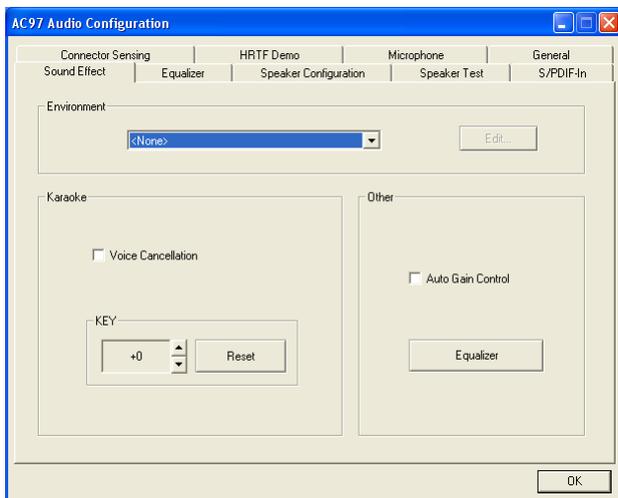

Sound Effect:

<Figure 2>

2. Select "Sound Effect" page to set the desired audio environment from the pull-down menu. There are in total 23 kinds of sound effect.
 - a. For Karaoke function, "Voice Cancellation (only for 2 channels mode)" removes the human voice. "Key" lets you adjust the key pitch.
 - b. "Auto Gain Control" avoids saturation when adjusting the equalizer.

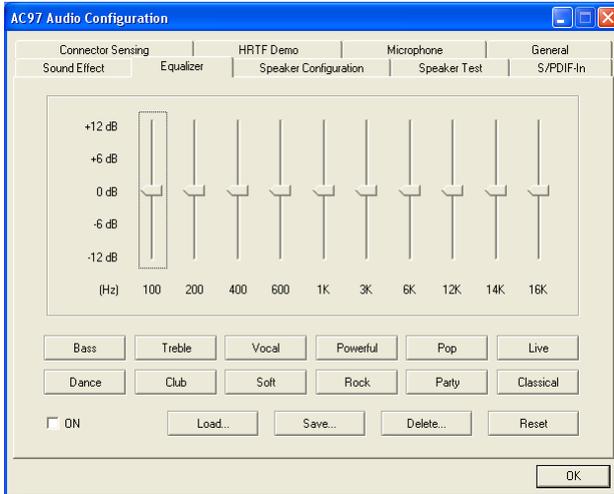

Equalizer:

<Figure 3>

3. There are 10 bands of equalizer control, check "ON" when you want to adjust the equalizer.




Speaker Configuration:

<Figure 4>

4. This page displays the mainboards's phone jack function when a corresponding audio mode (no. of speaker) is selected.

Figure 4 above shows the phone jack setup for 2 channel mode.

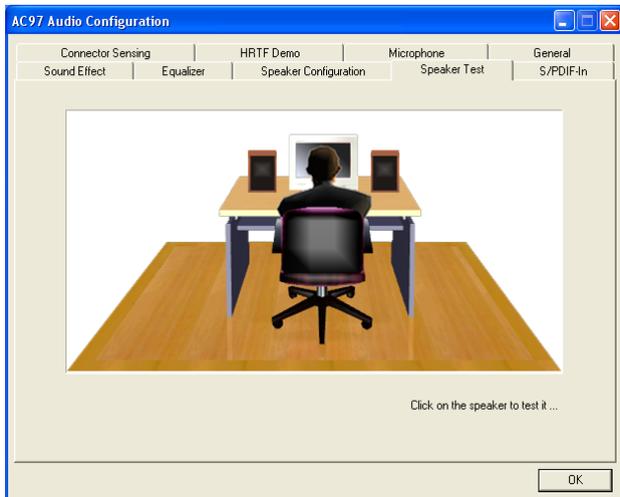


Speaker Test:

<Figure 5>

5. To test the speaker , select the “**Speaker Test**” page and click directly on the speakers shown on the screen.


This board is equipped with Jack Sensing capability. If an audio device is plugged into the wrong connector, a warning message will appear to remind users to check the connection.

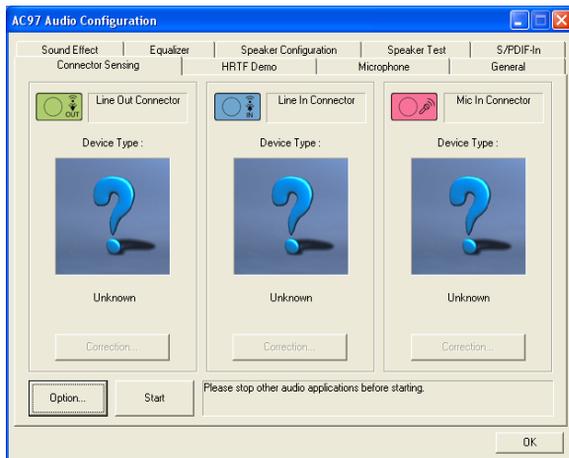

Connector Sensing:

<Figure 6>


6. Push "Start" button to start the sensing. Please remember to terminate all audio applications before starting the sensing.

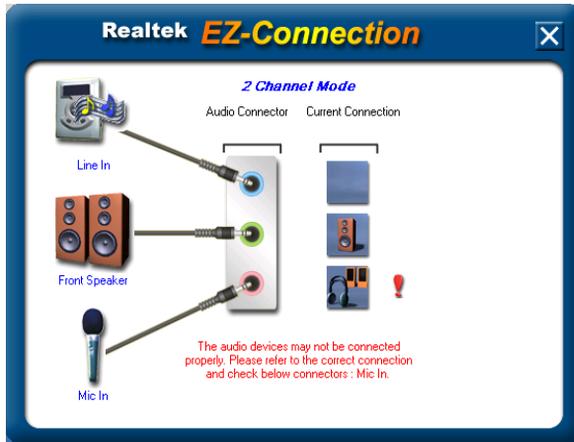

Connector Sensing:

<Figure 7>


7. EZ-Connection shows the result of the detection. "Audio Connector" column reflects the settings used in the "Speaker Configuration" page. "Current Connection" column shows the type of device detected. If the results do not match, an exclamation mark will appear on the right side.

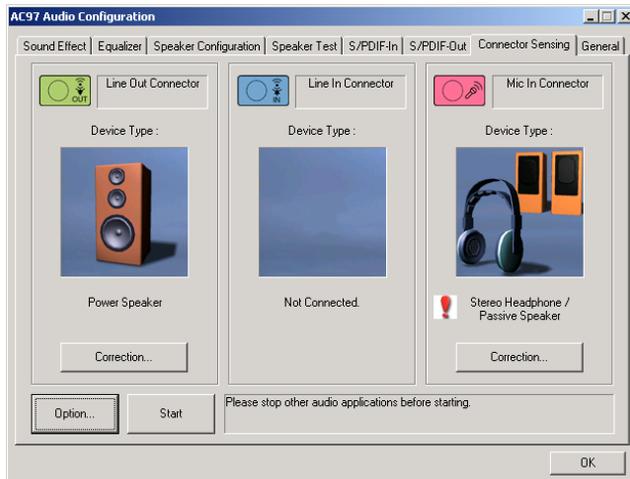

Connector Sensing:

<Figure 8>


8. After closing EZ-Connector, this page will show the latest connector status as above.

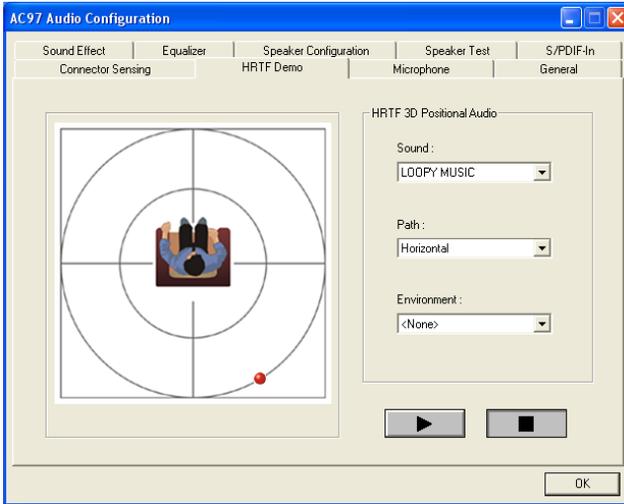

HRTF Demo:

<Figure 9>


9. This page lets you test the HRTF 3D Positional Audio features.

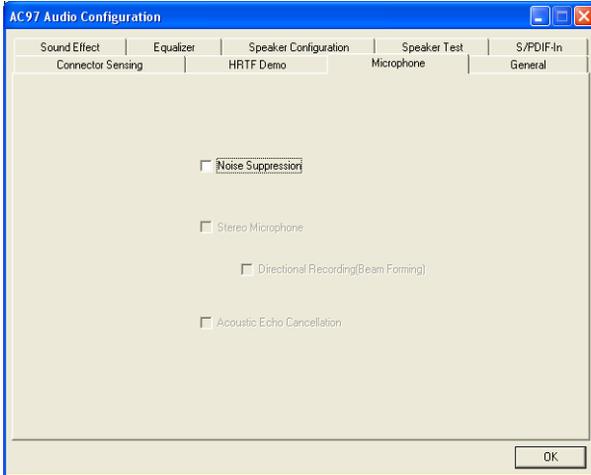

Microphone:

<Figure 10>

10. The “Noise Suppression” feature uses software to reduce background delay microphone recording.

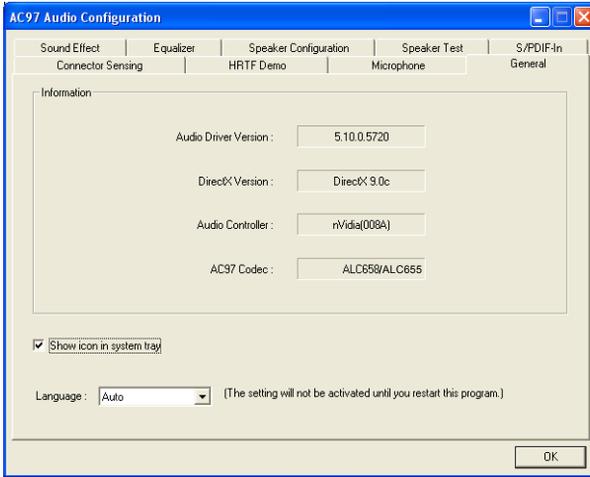

General:


<Figure 11>

11. This page displays information regarding the audio hardware and software. To remove "Sound Manager" icon from Windows Task bar, uncheck "Show icon in system tray".

Realtek Sound Manager Quick guide for ALC850 (for high-end model only)

◆ Introduction

To obtain the best performance from your audio system, run the "Sound Manager" utility to adjust the settings to suit your needs. This section of the manual is intended to provide a quick user-guide to setup "Sound Manager". For more detailed information, refer to "Sound Manager manual" in the CD.

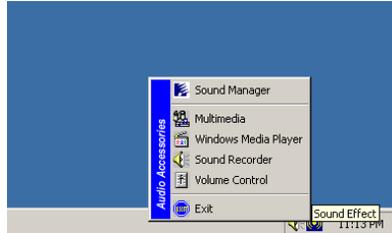

<Figure 12>


1. Right-click "Sound Effect" button on the task bar and select "Sound Manager".



Sound Effect :

<Figure 13>

2. Select "Sound Effect" page to set the desired audio environment from the pull-down menu.

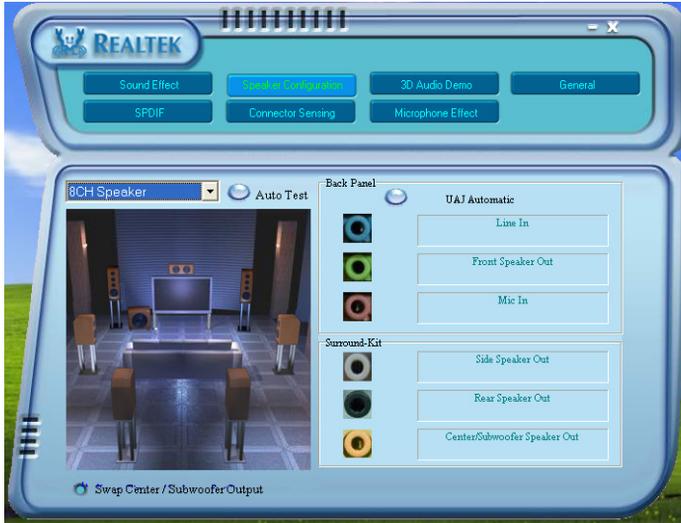


Speaker Configuration:

<Figure 14>

3. This page displays the mainboards's phone jack function when a corresponding audio mode is selected.

Figure 3 above shows the phone jack setup for 8 channel mode.

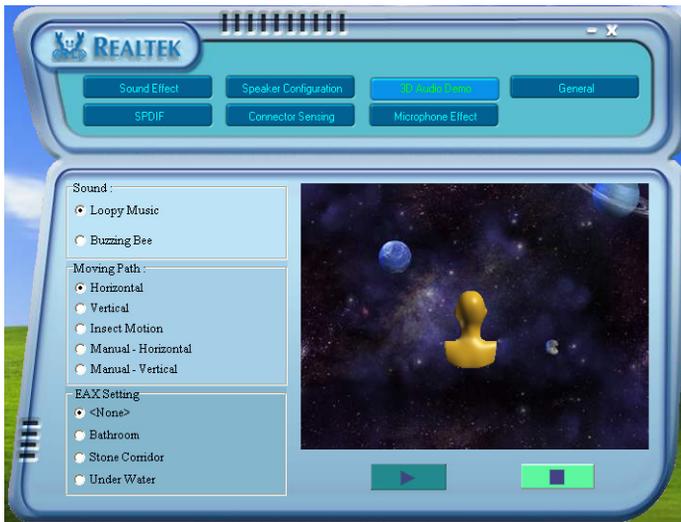

HRTF Demo:

<Figure 15>

4. This page lets you test the HRTF 3D Positional Audio features.



General:

<Figure 16>

5. This page displays information regarding the audio hardware and software. To remove "Sound Manager" icon from Windows Task bar, uncheck "Show icon in system tray".


This board is equipped with Jack Sensing capability. If an audio device is plugged into the wrong connector, a warning message will appear to remind users to check the connection.



Connector Sensing:

<Figure 17>

6. Push "Start" button to start the sensing. Please remember to terminate all audio applications before starting the sensing.

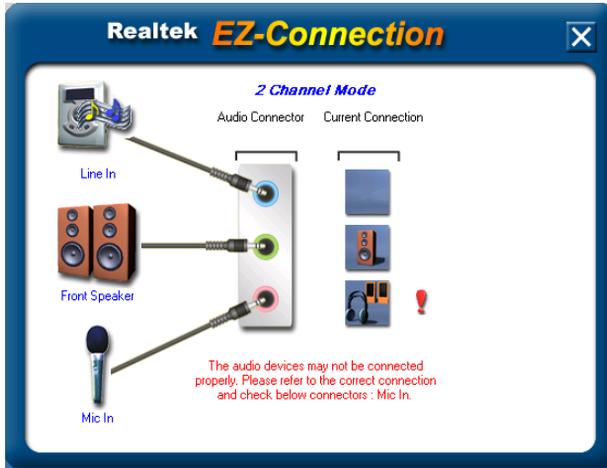

Connector Sensing:

<Figure 18>

7. EZ-Connection shows the result of the detection.
 - “Audio Connector” column reflects the settings used in the "Speaker Configuration" page.
 - “Current Connection” column shows the type of device detected. If the results do not match, an exclamation mark will appear on the right side.



Connector Sensing:

<Figure 19>

8. After closing EZ-Connector, this page will show the latest connector status as above.



Microphone Effect:

<Figure 20>

9. The “Noise Suppression” feature uses software to reduce background delay microphone recording.

Appendix A

A-1 Update Your System BIOS

Download the xxxxx.EXE file corresponding to your model from our website to an empty directory on your hard disk or floppy. Run the downloaded xxxxx.EXE file and it will self extract. Copy these extracted files to a bootable floppy disk.

Note: The floppy disk should contain NO device drivers or other programs.

1. Type "A:\AWDFLASH and press <Enter> Key.
2. You will see the following setup screen.
3. Please key in the xxxxx.bin BIOS file name.

```
FLASH MEMORY WRITER V7.88
(C)Award Software 2000 All Rights Reserved

For xxxx-W83627-6A69LPA9C-0   DATE: 05/11/2000
Flash Type -
File Name to Program : _____

Error Message:
```

4. If you want to save the previous BIOS data to the diskette, please key in [Y], otherwise please key in [N].

```
FLASH MEMORY WRITER V7.88
(C)Award Software 2000 All Rights Reserved


For xxxx-W83627-6A69LPA9C-0   DATE: 05/11/2000
Flash Type - xxxxx E82802AB /3.3V
File Name to Program : xxxxx.bin

Error Message: Do You Want To Save Bios (Y/N)
```


Appendix B

B-1 NVIDIA RAID BIOS Utility

Power-on the system and wait for the RAID BIOS Setting utility message on the screen. Press the "F10" key to enter its BIOS configuration utility.

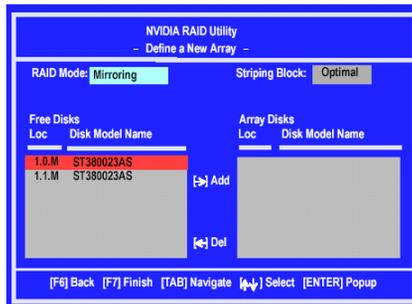

Using the Define a New Array Window

If necessary, press the tab key to move from field to field until the appropriate field is highlighted.

- Selecting the RAID Mode

By default, this is set to Mirroring. To change to a different RAID mode, press the down arrow key until the mode that you want appears in the RAID Mode box—either Mirroring, Striping, Spanning, or Stripe Mirroring.

- Selecting the Striping Block Size

Striping block size is given in kilobytes, and affects how data is arranged on the disk. It is recommended to leave this value at the default Optimal, which is 32KB, but the values can be between 4 KB and 128 KB.

- Assigning the Disks

The disks that you enabled from the RAID Config BIOS setup page appear in the Free Disks block. These are the drives that are available for use as RAID array disks.

Appendix

To designate a free disk to be used as a RAID array disk,

- 1) Tab to the Free Disks section.

The first disk in the list is selected


- 2) Move it from the Free Disks block to the Array Disks block by pressing the rightarrow key (->).

The first disk in the list is moved, and the next disk in the list is selected and ready to be moved.

- 3) Continue pressing the right-arrow key (->) until all the disks that you want to use as RAID array disks appear in the Array Disks block.


Completing the RAID BIOS Setup

After assigning your RAID array disks, press **F7**. The Clear disk data prompt appears.

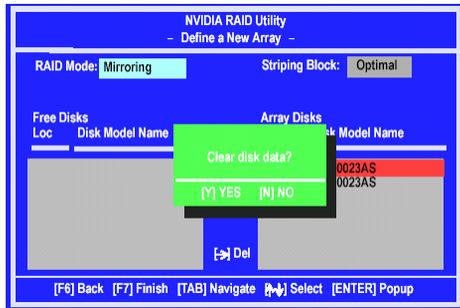

Press **Y** if you want to wipe out all the data from the RAID array, otherwise press **N**. You must choose **Yes** if the drives were previously used as RAID drives.

The **Array List** window appears, where you can review the RAID arrays that you have set up.

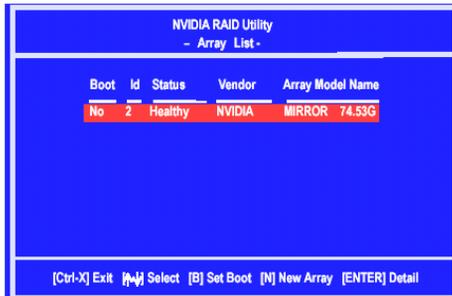

Use the arrow keys to select the array that you want to set up, then press **Enter**.
The **Array Detail** window appears.

```
Array 2 : NVIDIA MIRROR 74.56G
- Array Detail -

RAID Mode: Mirroring
Striping Width : 1          Striping Block 32K

Adapt  Channel  M/S  Index  Disk Model Name  Capacity
-----
  1      0      Master  0     ST380023AS      74.56GB
  1      1      Master  1     ST380023AS      74.56GB

[R] Rebuild [D] Delete [C] Clear Disk [Enter] Return
```

The Array Detail window shows information about the array that you selected, such as Striping Block used, RAID Mode, Striping Width, Disk Model Name, and disk capacity.

If you want to mark this disk as empty and wipe out all its contents then press **C**.

At the prompt, press **Y** to wipe out all the data, otherwise press **N**.

Press **Enter** again to go back to the previous window and then press **F10** to exit the RAID setup.

Appendix C**C-1 POST CODES**

POST (hex)	DESCRIPTION
CFh	Test CMOS R/W functionality.
C0h	Early chipset initialization: <ul style="list-style-type: none"> - Disable shadow RAM - Disable L2 cache (socket 7 or below) - Program basic chipset registers
C1h	Detect memory <ul style="list-style-type: none"> - Auto-detection of DRAM size, type and ECC. - Auto-detection of L2 cache (socket 7 or below)
C3h	Expand compressed BIOS code to DRAM
C5h	Call chipset hook to copy BIOS back to E000 & F000 shadow RAM.
01h	Expand the Xgroup codes locating in physical address 1000:0
02h	Reserved
03h	Initial Superio_Early_Init switch.
04h	Reserved
05h	<ol style="list-style-type: none"> 1. Blank out screen 2. Clear CMOS error flag
06h	Reserved
07h	<ol style="list-style-type: none"> 1. Clear 8042 interface 2. Initialize 8042 self-test
08h	<ol style="list-style-type: none"> 1. Test special keyboard controller for Winbond 977 series Super I/O chips. 2. Enable keyboard interface.
09h	Reserved
0Ah	<ol style="list-style-type: none"> 1. Disable PS/2 mouse interface (optional). 2. Auto detect ports for keyboard & mouse followed by a port & interface swap (optional). 3. Reset keyboard for Winbond 977 series Super I/O chips.
0B-0Dh	Reserved
0Eh	Test F000h segment shadow to see whether it is R/W-able or not. If test fails, keep beeping the speaker.
0Fh	Reserved
10h	Auto detect flash type to load appropriate flash R/W codes into the run time area in F000 for ESCD & DMI support.
11h	Reserved
12h	Use walking 1's algorithm to check out interface in CMOS circuitry. Also set real-time clock power status, and then check for override.
13h	Reserved
14h	Program chipset default values into chipset. Chipset default values are MODBINable by OEM customers.
15h	Reserved
16h	Initial Early_Init_Onboard_Generator switch.
17h	Reserved

Appendix

18h	Detect CPU information including brand, SMI type (Cyrix or Intel) and CPU level (586 or 686).
19-1Ah	Reserved
1Bh	Initial interrupts vector table. If no special specified, all H/W interrupts are directed to SPURIOUS_INT_HDLR & S/W interrupts to SPURIOUS_soft_HDLR.
1Ch	Reserved
1Dh	Initial EARLY_PM_INIT switch.
1Eh	Reserved
1Fh	Load keyboard matrix (notebook platform)
20h	Reserved
21h	HPM initialization (notebook platform)
22h	Reserved
23h	<ol style="list-style-type: none">1. Check validity of RTC value: e.g. a value of 5Ah is an invalid value for RTC minute.2. Load CMOS settings into BIOS stack. If CMOS checksum fails, use default value instead.3. Prepare BIOS resource map for PCI & PnP use. If ESCD is valid, take into consideration of the ESCD's legacy information.4. Onboard clock generator initialization. Disable respective clock resource to empty PCI & DIMM slots.5. Early PCI initialization: -Enumerate PCI bus number -Assign memory & I/O resource -Search for a valid VGA device & VGA BIOS, and put it into C000:0.
24-26h	Reserved
27h	Initialize INT 09 buffer
28h	Reserved
29h	<ol style="list-style-type: none">1. Program CPU internal MTRR (P6 & PII) for 0-640K memory address.2. Initialize the APIC for Pentium class CPU.3. Program early chipset according to CMOS setup. Example: onboard IDE controller.4. Measure CPU speed.5. Invoke video BIOS.
2A-2Ch	Reserved
2Dh	<ol style="list-style-type: none">1. Initialize multi-language2. Put information on screen display, including Award title, CPU type, CPU speed
2E-32h	Reserved
33h	Reset keyboard except Winbond 977 series Super I/O chips.
34-3Bh	Reserved
3Ch	Test 8254
3Dh	Reserved
3Eh	Test 8259 interrupt mask bits for channel 1.
3Fh	Reserved
40h	Test 8259 interrupt mask bits for channel 2.
41h	Reserved
42h	Reserved

43h	Test 8259 functionality.
44h	Reserved
45-46h	Reserved
47h	Initialize EISA slot
48h	Reserved
49h	<ol style="list-style-type: none">1. Calculate total memory by testing the last double word of each 64K page.2. Program writes allocation for AMD K5 CPU.
4A-4Dh	Reserved
4Eh	<ol style="list-style-type: none">1. Program MTRR of M1 CPU2. Initialize L2 cache for P6 class CPU & program CPU with proper cacheable range.3. Initialize the APIC for P6 class CPU.4. On MP platform, adjust the cacheable range to smaller one in case the cacheable ranges between each CPU are not identical.
4Fh	Reserved
50h	Initialize USB
51h	Reserved
52h	Test all memory (clear all extended memory to 0)
53-54h	Reserved
55h	Display number of processors (multi-processor platform)
56h	Reserved
57h	<ol style="list-style-type: none">1. Display PnP logo2. Early ISA PnP initialization -Assign CSN to every ISA PnP device.
58h	Reserved
59h	Initialize the combined Trend Anti-Virus code.
5Ah	Reserved
5Bh	(Optional Feature) Show message for entering AWDFLASH.EXE from FDD (optional)
5Ch	Reserved
5Dh	<ol style="list-style-type: none">1. Initialize Init_Onboard_Super_IO switch.2. Initialize Init_Onboard_AUDIO switch.
5E-5Fh	Reserved
60h	Okay to enter Setup utility; i.e. not until this POST stage can users enter the CMOS setup utility.
61-64h	Reserved
65h	Initialize PS/2 Mouse
66h	Reserved
67h	Prepare memory size information for function call: INT 15h ax=E820h
68h	Reserved
69h	Turn on L2 cache
6Ah	Reserved
6Bh	Program chipset registers according to items described in Setup & Auto-configuration table.
6Ch	Reserved
6Dh	<ol style="list-style-type: none">1. Assign resources to all ISA PnP devices.2. Auto assign ports to onboard COM ports if the corresponding item in Setup is set to "AUTO".

Appendix

6Eh	Reserved
6Fh	<ol style="list-style-type: none">1. Initialize floppy controller2. Set up floppy related fields in 40:hardware.
70-72h	Reserved
73h	(Optional Feature) Enter AWDFLASH.EXE if : -AWDFLASH is found in floppy drive. -ALT+F2 is pressed
74h	Reserved
75h	Detect & install all IDE devices: HDD, LS120, ZIP, CDROM.....
76h	Reserved
77h	Detect serial ports & parallel ports.
78h-79h	Reserved
7Ah	Detect & install co-processor
7B-7Eh	Reserved
7Fh	<ol style="list-style-type: none">1. Switch back to text mode if full screen logo is supported. -If errors occur, report errors & wait for keys -If no errors occur or F1 key is pressed to continue:<ul style="list-style-type: none">◆ Clear EPA or customization logo.
80h-81h	Reserved
82h	<ol style="list-style-type: none">1. Call chipset power management hook.2. Recover the text font used by EPA logo (not for full screen logo)3. If password is set, ask for password.
83h	Save all data in stack back to CMOS
84h	Initialize ISA PnP boot devices
85h	<ol style="list-style-type: none">1. USB final Initialization2. NET PC: Build SYSID structure3. Switch screen back to text mode4. Set up ACPI table at top of memory.5. Invoke ISA adapter ROMs6. Assign IRQs to PCI devices7. Initialize APM8. Clear noise of IRQs.
86-92h	Reserved
93h	Read HDD boot sector information for Trend Anti-Virus code
94h	<ol style="list-style-type: none">1. Enable L2 cache2. Program boot up speed3. Chipset final initialization.4. Power management final initialization5. Clear screen & display summary table6. Program K6 write allocation7. Program P6 class write combining
95h	<ol style="list-style-type: none">1. Program daylight saving2. Update keyboard LED & typematic rate
96h	<ol style="list-style-type: none">1. Build MP table2. Build & update ESCD3. Set CMOS century to 20h or 19h4. Load CMOS time into DOS timer tick5. Build MSIRQ routing table.
FFh	Boot attempt (INT 19h)