

## **P4VTC**

---

---

### **FCC Information and Copyright**

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation.

The vendor makes no representations or warranties with respect to the contents here of and specially disclaims any implied warranties of merchantability or fitness for any purpose. Further the vendor reserves the right to revise this publication and to make changes to the contents here of without obligation to notify any party beforehand. Duplication of this publication, in part or in whole, is not allowed without first obtaining the vendor's approval in writing.

The content of this user's manual is subject to be changed without notice and we will not be responsible for any mistakes found in this user's manual. All the brand and product names are trademarks of their respective companies.


**Content**

---

---


<b>LAYOUT OF P4VTC (FOR VERSIONS BELOW 1.2 ONLY) .....</b>	<b>1</b>
<b>LAYOUT OF P4VTC (FOR VERSIONS ABOVE 1.3 ONLY) .....</b>	<b>2</b>
<b>ENGLISH.....</b>	<b>3</b>
P4VTC Features.....	3
Package contents.....	5
How to setup Jumper .....	5
CPU Installation.....	6
DDR DIMM Modules: DIMM1/ DIMM2.....	7
Jumpers, Headers, Connectors & Slots.....	7
<b>FRANÇAIS .....</b>	<b>14</b>
Caractéristique de P4VTC .....	14
<b>WARPSPEEDER.....</b>	<b>16</b>
Introduction.....	16
System Requirement.....	16
Installation .....	17
Usage.....	18
<b>TROUBLE SHOOTING.....</b>	<b>26</b>
<b>DÉPANNAGE.....</b>	<b>27</b>

## Layout of P4VTC (for versions below 1.2 only)

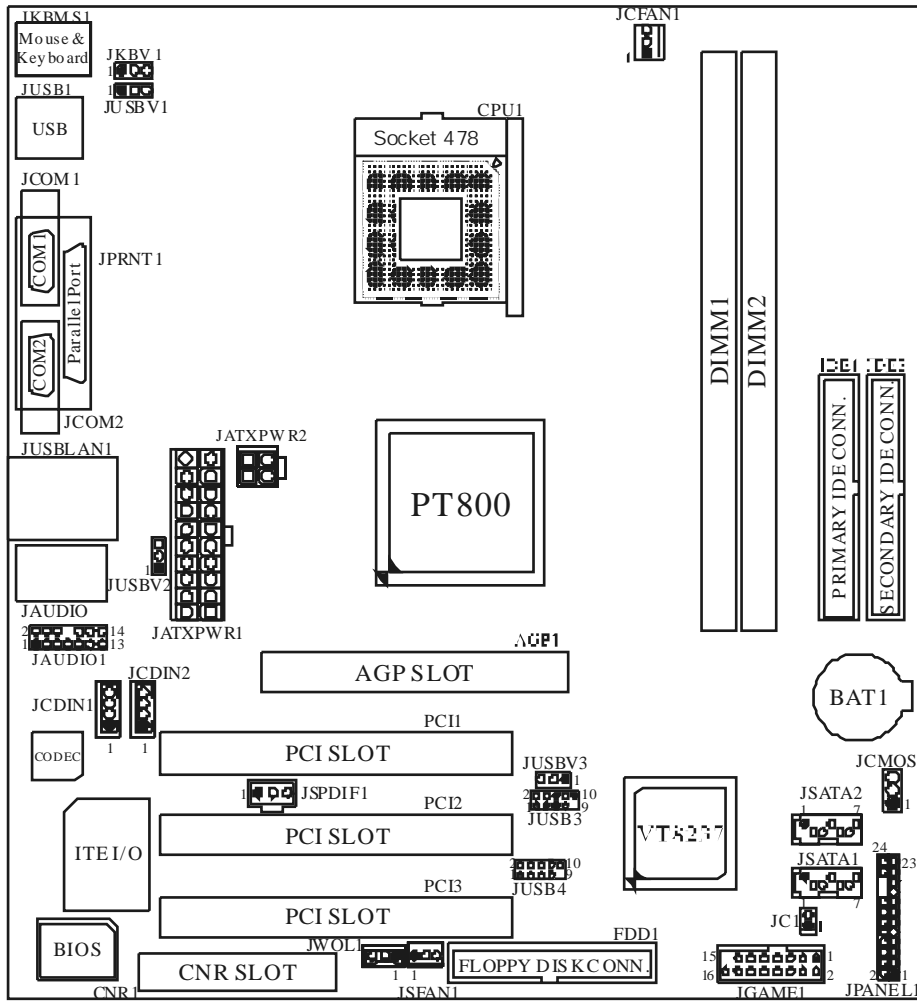

※ NOTE: ● represents the first pin.

## Layout of P4VTC (for versions above 1.3 only)

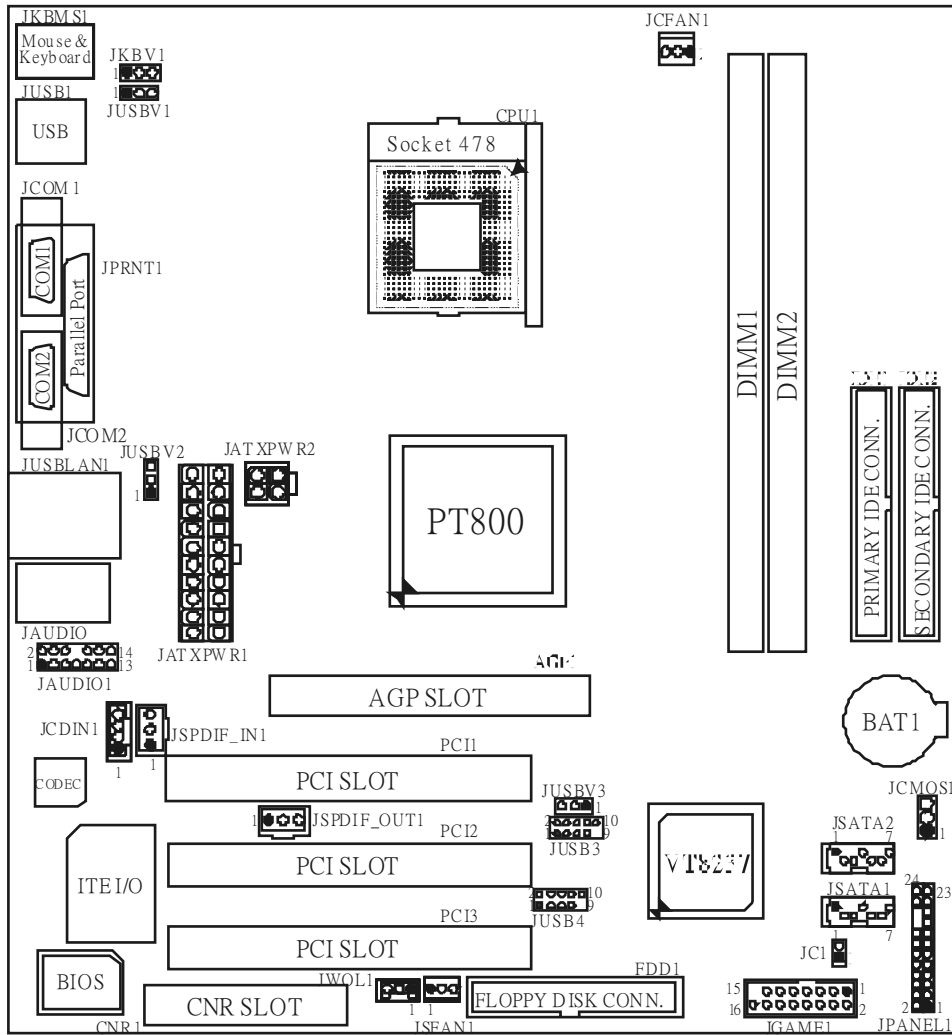

※ NOTE: ● represents the first pin.

---

---

## English

### P4VTC Features

#### A. Hardware

##### CPU

- Provides Socket 478
- Supports Intel® Pentium® 4 processor.
- Supports Intel® Pentium® 478 Prescott CPU. (for versions above 1.3 only)
- Supports Hyper-Threading Technology.
- Front Side Bus at 400/ 533/ 800 MHz.

##### Chipset

- North Bridge: VIA PT800.
- South Bridge: VIA VT8237.

##### Main Memory

- Supports up to 2 DDR devices.
- Supports 200/266/333/400 MHz DDR devices.
- Maximum memory size of 2GB.

##### Super I/O

- Chip: ITE IT8705.
- Low Pin Count Interface.
- Provides the most commonly used legacy Super I/O functionality.
- Environment Control initiatives
  - H/W Monitor
  - Fan Speed Controller
  - ITE's "Smart Guardian" software utility.

##### Slots

- Three 32-bit PCI bus masterslots.
- One AGP 4x/ 8x compatible slot.
- One CNR slot.

##### On Board IDE

- Supports four IDE disk drives.
- Supports PIO Mode 4 and Ultra DMA 33/66/100/133 Bus Master Mode.

##### Serial ATA

- Chip: integrated in VT8237
- Supports RAID 0, 1.
- Supports 2 Serial ATA (SATA) ports.
  - Compliant with SATA 1.0 specification.
  - Data transfer rates up to 1.5 Gb/s.

---

---

#### **LAN**

- Chip: VIA VT6103.
- Supports 10 Mb/s and 100 Mb/s auto-negotiation
- Half / Full duplex capability.

#### **On Board AC'97 Sound Codec (for versions below 1.2 only)**

- Chip: CMI9739A.
- Compliant with AC'97 specification.
- Supports 6 channels.

#### **On Board AC'97 Sound Codec (for version 1.3 and above only)**

- Chip: CMI9761A.
- Compliant with Intel® AC'97 Rev 2.3 specification.
- Meet with Microsoft® PC2001 requirements.
- Supports 6 channel
- Supports stereo microphone.
- Supports advanced power management and power saving capabilities.
- Supports S/PDIF I/O functions:
  - Output: 96/ 48 kHz with 24/ 20/ 16 bits
  - Input: 48/ 44.1/ 32kHz with 20/ 16 bits
  - S/PDIF In is featured with interrupt, auto-lock, anti-noise, and anti-distortion functionalities support.

#### **On Board Peripherals**

##### ***a. Rearside***

- 2 serial ports.
- 1 parallel port. (SPP/EPP/ECP mode)
- Audio ports in vertical position.
- 1 LAN jack
- PS/2 mouse and PS/2 keyboard.
- 4 USB2.0 ports.

##### ***b. FrontSide***

- 1 floppy port supports 2 FDDs with 360K, 720K, 1.2M, 1.44M and 2.88Mbytes.
- 4 USB2.0 ports
- 1 front audio header.
- 2 Serial ATA connectors.

#### **Dimensions**

- Micro ATX Form Factor: 24.5 X 22.5cm (W X L)

## **B. BIOS & Software**

#### **BIOS**

- Award legal Bios.
- APM1.2.
- ACPI.
- USB Function.

---

---

### Software

- Supports Warpspeeder™, 9th Touch™, FLASHER™, WinFlasher™.
- Offers the highest performance for Windows 98 SE, Windows 2000, Windows Me, Windows XP, UNIX series etc.

### Package contents

- HDD Cable
- FDD Cable
- User's Manual
- USB Cable (optional)
- Rear I/O Panel for Micro ATX Case (optional)
- Fully Setup Driver CD
- StudioFun! Application CD (optional)
- S/PDIF In/Out Cable (optional)
- Serial ATA Cable

### How to setup Jumper


The illustration shows how jumpers are setup. When the Jumper cap is placed on pins, the jumper is "**close**". If no jumper cap is placed on the pins, the jumper is "**open**". The illustration shows a 3-pin jumper whose pin 1 and 2 are "**close**" when jumper cap is placed on these 2 pins.



Jumper close



Jumper open

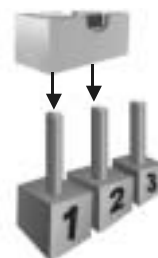

Pin 1-2 close

---



---


## CPU Installation

**Step1:** Pull the lever sideways away from the socket and then raise the lever up to a 90-degree angle.


**Step2:** Look for the white dot/cut edge. The white dot/cut edge should point towards the lever pivot. The CPU will fit only in the correct orientation.

**Step3:** Hold the CPU down firmly, and then close the lever.


**Step4:** Put the CPU fan on the CPU and buckle it. Connect the CPU fan power cable to the JCFAN1. This completes the installation.

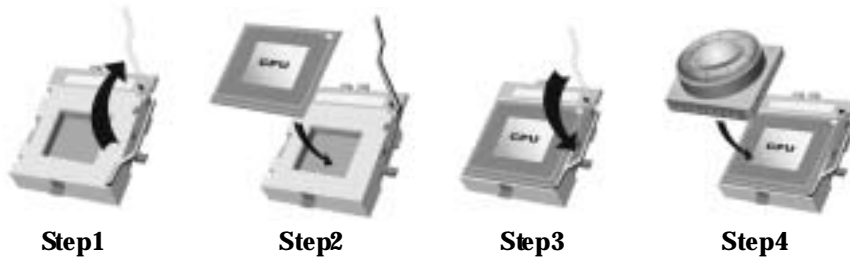

### CPU Fan Header: JCFAN1

 <b>JCFAN1</b>	Pin No.	Assignment
	1	Ground
	2	+12V
	3	FAN rpm rate Sense

### System Fan Header: JSFAN1

 <b>JSFAN1</b>	Pin No.	Assignment
	1	Ground
	2	+12V
	3	FAN rpm rate Sense



---

---

## DDR DIMM Modules: DIMM1/ DIMM2

DRAM Access Time: 2.5/ Unbuffered DDR 200/266/333/400 MHz Type required.

DRAM Type: 64MB/ 128MB/ 256MB/ 512MB/ 1GB DIMM Module (184 pin)

### Total Memory Size with Unbuffered DIMMs

DIMM Socket Location	DDR Module	Total Memory Size (MB)
DIMMB1	64MB/ 128MB/ 256MB/ 512MB/ 1GB * 1	Max is 2 GB
DIMMB2	64MB/ 128MB/ 256MB/ 512MB/ 1GB * 1	

\*\*\*Only for reference\*\*\*

### Installing DDR Module

1. Unlock a DIMM slot by pressing the retaining clips outward. Align the DIMM to the slot in the way the notch of the DIMM matches the break of the slot.
2. Insert the DIMM firmly and vertically into the slot until the retaining chip snap back in place and the DIMM is properly seated.



## Jumpers, Headers, Connectors & Slots

### Floppy Disk Connector: FDD1

The motherboard provides a standard floppy disk connector that supports 360K, 720K, 1.2M, 1.44M and 2.88M floppy disk types. This connector supports the provided floppy drive ribbon cables.

### Hard Disk Connectors: IDE1/ IDE2

The motherboard has a 32-bit Enhanced PCI IDE Controller that provides PIO Mode 0-4, Bus Master, and Ultra DMA 33/ 66/ 100/ 133 functionality. It has two HDD connectors IDE1 (primary) and IDE2 (secondary).

The IDE connectors can connect a master and a slave drive, so you can connect up to four hard disk drives. The first hard drive should always be connected to IDE1.

### Peripheral Component Interconnect Slots: PCI 1-3

This motherboard is equipped with 3 standard PCI slots. PCI stands for Peripheral Component Interconnect, and it is a bus standard for expansion cards. This PCI slot is designated as 32 bits.

---

---

### Accelerated Graphics Port Slot: AGPI

 
Your monitor will attach directly to that video card. This motherboard supports video cards for PCI slots, but it is also equipped with an Accelerated Graphics Port (AGP). An AGP card will take advantage of AGP technology for improved video efficiency and performance, especially with 3D graphics.

### Communication Network Riser Slot: CNR1


The CNR specification is an open Industry Standard Architecture, and it defines a hardware scalable riser card interface, which supports modem only.

### Serial ATA Connector: JSATA1/ JSATA2


The motherboard has a PCI to SATA Controller with 2 channels SATA interface, it satisfies the SATA 1.0 spec and with transfer rate at 1.5Gb/s.

 JSATA1/ JSATA2	<table border="1"><thead><tr><th>Pin</th><th>Assignment</th><th>Pin</th><th>Assignment</th></tr></thead><tbody><tr><td>1</td><td>Ground</td><td>2</td><td>TX+</td></tr><tr><td>3</td><td>TX-</td><td>4</td><td>Ground</td></tr><tr><td>5</td><td>RX-</td><td>6</td><td>RX+</td></tr><tr><td>7</td><td>Ground</td><td></td><td></td></tr></tbody></table>	Pin	Assignment	Pin	Assignment	1	Ground	2	TX+	3	TX-	4	Ground	5	RX-	6	RX+	7	Ground		
Pin	Assignment	Pin	Assignment																		
1	Ground	2	TX+																		
3	TX-	4	Ground																		
5	RX-	6	RX+																		
7	Ground																				


### Front USB Header: JUSB3/ JUSB4

  JUSB3/4	<table border="1"><thead><tr><th>Pin</th><th>Assignment</th><th>Pin</th><th>Assignment</th></tr></thead><tbody><tr><td>1</td><td>+5V(f used)</td><td>2</td><td>+5V(fused)</td></tr><tr><td>3</td><td>USBP4-</td><td>4</td><td>USBP5-</td></tr><tr><td>5</td><td>USBP4+</td><td>6</td><td>USBP5+</td></tr><tr><td>7</td><td>Ground</td><td>8</td><td>Ground</td></tr><tr><td>9</td><td>KEY</td><td>10</td><td>NA</td></tr></tbody></table>	Pin	Assignment	Pin	Assignment	1	+5V(f used)	2	+5V(fused)	3	USBP4-	4	USBP5-	5	USBP4+	6	USBP5+	7	Ground	8	Ground	9	KEY	10	NA
Pin	Assignment	Pin	Assignment																						
1	+5V(f used)	2	+5V(fused)																						
3	USBP4-	4	USBP5-																						
5	USBP4+	6	USBP5+																						
7	Ground	8	Ground																						
9	KEY	10	NA																						


### Wake On LAN Header: JWOL1

 JWOL1	<table border="1"><thead><tr><th>Pin</th><th>Assignment</th></tr></thead><tbody><tr><td>1</td><td>+5V Standby</td></tr><tr><td>2</td><td>Ground</td></tr><tr><td>3</td><td>Wake up</td></tr></tbody></table>	Pin	Assignment	1	+5V Standby	2	Ground	3	Wake up
Pin	Assignment								
1	+5V Standby								
2	Ground								
3	Wake up								


### Case Open Connector: JC1


 JC1	<table border="1"><thead><tr><th>Pin</th><th>Assignment</th></tr></thead><tbody><tr><td>1</td><td>Case Open Signal</td></tr><tr><td>2</td><td>Ground</td></tr></tbody></table>	Pin	Assignment	1	Case Open Signal	2	Ground
Pin	Assignment						
1	Case Open Signal						
2	Ground						

### Front Panel Connector: JPANEL1

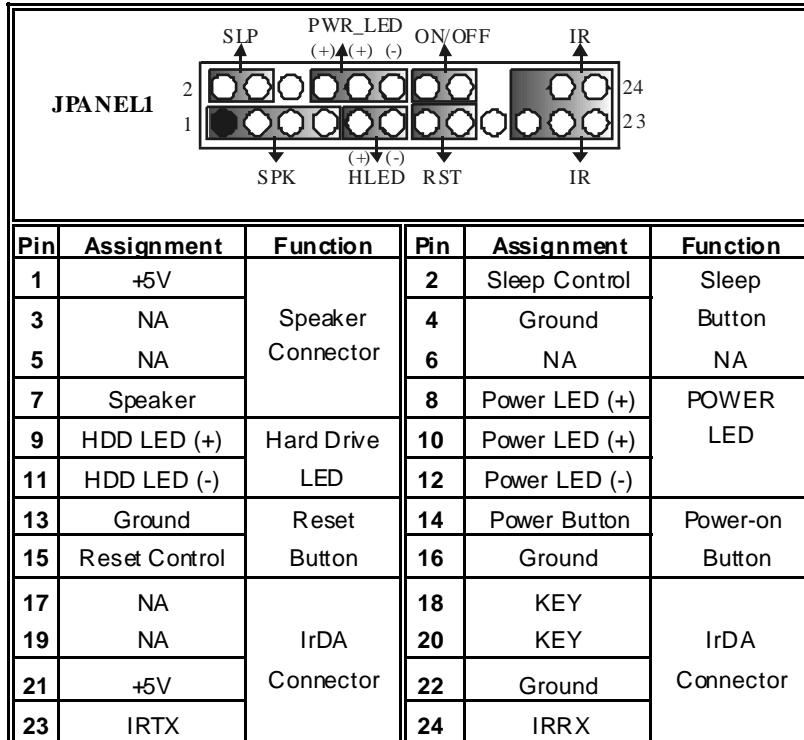

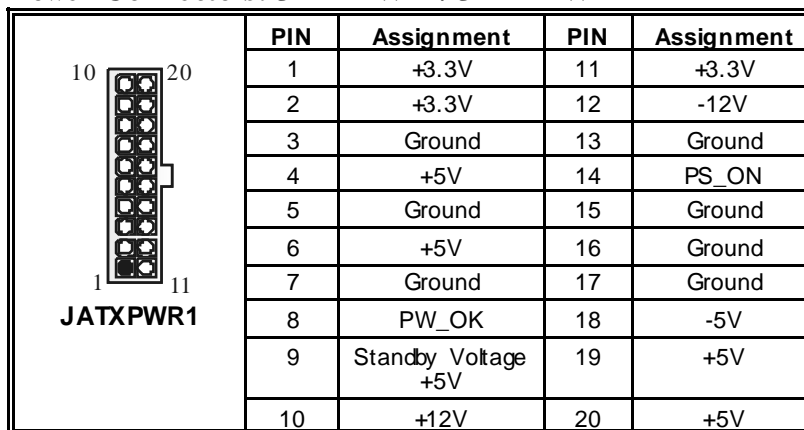

### Power Connectors: JATXPWR1/ JATXPWR2





 <b>JATXPWR2</b>	<b>PIN</b>	<b>Assignment</b>	<b>PIN</b>	<b>Assignment</b>
	1	+12V	3	Ground
	2	+12V	4	Ground

**Power Source Selection for Keyboard and Mouse: JKBV1**

<b>JKBV1</b>	<b>Assignment</b>	<b>Description</b>
 Pin 1-2 close	+5V	+5V for key board and mouse
 Pin 2-3 close	+5V Standby Voltage	PS/2 Mouse and PS/2 Key board are powered with +5V standby voltage



*Note: In order to support this function "Power-on the system via keyboard and mouse, "JKBV1" jumper cap should be placed on pin 2-3.*

**Power Source Selection for USB: JUSBV1/ JUSBV2/ JUSBV3**

<b>JUSBV1/JUSBV2/ JUSBV3</b>	<b>Assignment</b>	<b>Description</b>
 Pin 1-2 close	+5V	JUSBV1: 5V for USB located at the JUSB1 connector port JUSBV2: 5V for USB located at the JUSBLAN1 port JUSBV3: 5V for USB located at the JUSB3/4 ports
 Pin 2-3 close	+5V Standby Voltage	JUSBV1: JUSB1 port powered with standby voltage of 5V JUSBV2: JUSBLAN1 port powered with standby voltage of 5V JUSBV3: JUSB3/4 ports powered with standby voltage of 5V

*Note: In order to support this function "Power-on the system via USB device", "JUSBV1/JUSBV2/JUSBV3" jumper cap should be placed on pin 2-3 respectively.*

### Clear CMOS Jumper: JCMOS1

JCMOS1	Assignment
 <p>Pin 1-2 Close</p>	Normal Operation (default)
 <p>Pin 2-3 Close</p>	Clear CMOS Data




The following procedures are for resetting the BIOS password. It is important to follow these instructions closely.

 
#### ※ Clear CMOS Procedures:

1. Remove AC power line.
2. Set the jumper to "Pin 2-3 close".
3. Wait for five seconds.
4. Set the jumper to "Pin 1-2 close".
5. Power on AC.
6. Reset your desired password or clear the CMOS data.


### CD-ROM Audio-In Header: JCDIN1/(JCDIN2=>for versions below 1.2)

 <p>JCDIN1/ 2</p>	<b>Pin</b>	<b>Assignment</b>
	1	Left Channel Input
	2	Ground
	3	Ground
	4	Right Channel Input


### Front Panel Audio Header: JAUDIO1

			
Pin	Assignment	Pin	Assignment
1	Mic In/ Center	2	Ground
3	Mic Power/ Bass	4	Audio Power
5	Right Line Out/ Right Speaker Out	6	Right Line Out/ Right Speaker Out
7	Reserved	8	Key
9	Left Line Out/ Left Speaker Out	10	Left Line Out/ Left Speaker Out
11	Right Line In/ Right Rear Speaker	12	Right Line In/ Right Rear Speaker
13	Left Line In/ Left Rear Speaker	14	Left Line In/ Left Rear Speaker


### Digital Audio Connector: JSPDIF\_OUT1

 		Pin	Assignment
JSPDIF_OUT1		1	+5V
		2	SPDIF_OUT
		3	Ground

### Digital Audio Connector: JSPDIF\_IN1 (for versions above 1.3 only)



		Pin	Assignment
JSPDIF_IN1		1	+5V
		2	SPDIF_IN
		3	Ground

### Game Port Header: JGAME1

			
Pin	Assignment	Pin	Assignment
1	+5V	2	+5V

3	Joy stick B Buton 1	4	Joy stick AButton 1
5	Joy stick B Coordinate X	6	Joy stick A Coordinate X
7	MDI Output	8	Ground
9	Joy stick B Coordinate Y	10	Ground
11	Joy stick B Buton 2	12	Joy stick A Coordinate Y
13	MDI Input	14	Joy stick AButton 2
15	NA	16	+5V

### Back Panel Connectors

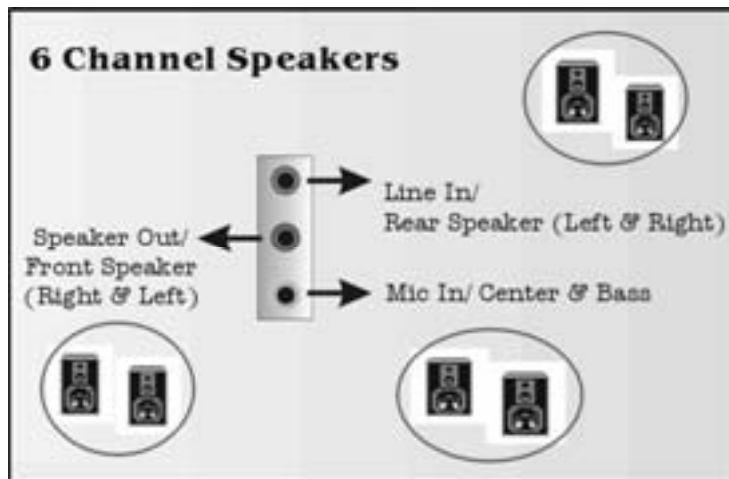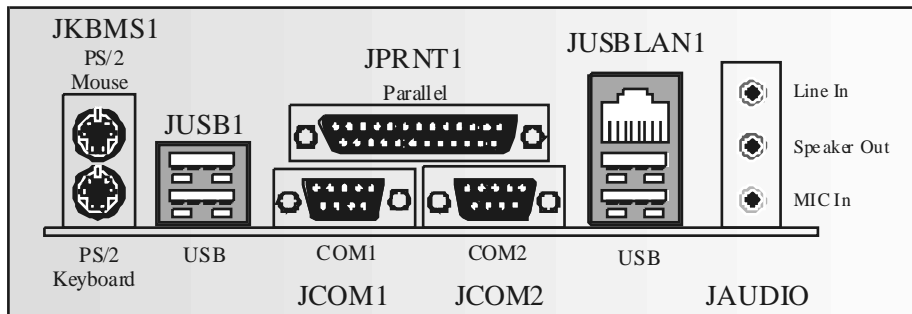

---

---

## Français

### Caractéristique de P4VTC

#### A. Matériel

##### Processeur

- Socket 478.
- Supporte processeur Intel® Pentium® 4.
- Supporte processeur Intel® Pentium® 478 Prescott. (seulement pour version au-dessus de 1.3)
- Supporte la technologie Hyper-Threading.
- FSB 400/ 533/ 800 MHz.

##### Jeu des Puces

- North Bridge: VIA PT800.
- South Bridge: VIA VT8237.

##### Mémoire principale

- Prise en charge de deux périphériques 2 DDR.
- Prise en charge des périphériques DDR 200/266/333/400 MHz.
- Taille maximale de la mémoire : 2Go.

##### Super E/S

- Puce: ITE IT8705.
- Interface de Comptage de Broche Faible.
- Offre la fonctionnalité Super E/S héritée la plus couramment utilisée.
- Initiatives de Contrôle d'Environnement,
  - Moniteur H/W
  - Fonction "Smart Guardian" de ITE

##### Slots

- Trois slots de maîtrise de bus PCI 32 bits.
- Un slot CNR.
- Un slot compatible AGP 4X/ 8X.

##### IDE intégré

- Supporte quatre lecteurs de disque IDE.
- Supporte PIO Mode 4 et UltraDMA 33/66/100/ 133 Bus Master Mode.

##### Serial ATA

- Puce: intégré dans VT8237.
- Supporte RAID 0, 1.
- Supporte 2 ports Serial ATA (SATA).
  - Conforme avec des spécifications de SATA 1.0.
  - Vitesse de transfert jusqu'à 1.5 Gb/s.



---

---

#### **LAN**

- Puce: VIA VT6103.
- Supporte le fonctionnement en auto-négociation 10 Mb/s et 100 Mb/s.
- Capacité Half/ Full duplex.

#### **Codec Son AC'97 intégré (seulement pour version au-dessous de 1.2)**

- Puce: CMI9739A.
- Conforme aux spécifications AC'97.
- Supporte 6 canaux.

#### **Codec Son AC'97 intégré (seulement pour version au-dessus de 1.3)**

- Puce: CMI9761A.
- Conforme aux spécifications Intel® AC'97 Rev 2.3.
- Répond aux exigences de Microsoft® PC2001.
- Supporte 6 canaux.
- Supporte le microphone stéréo.
- Gestion d'alimentation avancée et capacités d'économie d'énergie.

#### **Périphériques intégré**

##### ***a. Côté arrière***

- 2 ports série.
- 1 port parallèle. (mode SPP/EPP/ECP)
- 1 port audio en position verticale.
- 1 port LAN.
- 1 souris PS/2.
- 1 clavier PS/2.
- 4 ports USB2.0.

##### ***b. Côté frontal***

- 1 port disquette prenant en charge 2 FDD avec 360K, 720K, 1.2M, 1.44M et 2.88 Mo.
- 4 ports USB2.0.
- 1 connecteur front audio.
- 2 connecteurs Serial ATA.

#### **Dimensions**

- Facteur de Forme Micro ATX 24.5 X 22.5cm (Larg X L)

## **B. BIOS & Software**

#### **BIOS**

- Award legal Bios.
- APM1.2.
- ACPI.
- Fonction USB.

#### **Logiciel**

- Supporte Warpspeed™, 9th Touch™, FLASHER™, WinFlasher™.
- Offrant la meilleure performance pour Windows 98 SE, Windows 2000, Windows Me, Windows XP, UNIX series, etc.

---

---

## WarpSpeeder



### Introduction

[ WarpSpeeder™ ], a new powerful control utility, features three user friendly functions including Overclock Manager, Overvoltage Manager, and Hardware Monitor.

With the Overclock Manager, users can easily adjust the frequency they prefer or they can get the best CPU performance with just one click. The Overvoltage Manager, on the other hand, helps to power up CPU core voltage and Memory voltage. The cool Hardware Monitor smartly indicates the temperatures, voltage and CPU fan speed as well as the chipset information. Also, in the About panel, you can get detail descriptions about BIOS model and chipsets. In addition, the frequency status of CPU, memory, AGP and PCI along with the CPU speed are synchronically shown on our main panel.

Moreover, to protect users' computer systems if the setting is not appropriate when testing and results in system fail or hang, [ WarpSpeeder™ ] technology assures the system stability by automatically rebooting the computer and then restart to a speed that is either the original system speed or a suitable one.

### System Requirement

OS Support: Windows 98 SE, Windows Me, Windows 2000, Windows XP

DirectX: DirectX 8.1 or above. (The Windows XP operating system includes DirectX 8.1. If you use Windows XP, you do not need to install DirectX 8.1.)

---

---

## Installation

1. Execute the setup execution file, and then the following dialog will pop up. Please click "Next" button and follow the default procedure to install.



2. When you see the following dialog in setup procedure, it means setup is completed. If the "Launch the WarpSpeeder Tray Utility" checkbox is checked, the Tray Icon utility and [WarpSpeeder™] utility will be automatically and immediately launched after you click "Finish" button.



## Usage

*The following figures are just only for reference, the screen printed in this user manual will change according to your motherboard on hand.*

[WarpSpeeder™] includes 1 tray icon and 5 panels:

1. Tray Icon:

Whenever the Tray Icon utility is launched, it will display a little tray icon on the right side of Windows Taskbar.



---

---

This utility is responsible for conveniently invoking [WarpSpeeder™] Utility. You can use the mouse by clicking the left button in order to invoke [WarpSpeeder™] directly from the little tray icon or you can right-click the little tray icon to pop up a popup menu as following figure. The "Launch Utility" item in the popup menu has the same function as mouse left-click on tray icon and "Exit" item will close Tray Icon utility if selected.



## 2. Main Panel

If you click the tray icon, [WarpSpeeder™] utility will be invoked. Please refer to the following figure; the utility's first window you will see is Main Panel.


Main Panel contains features as follows:

- a. Display the CPU Speed, CPU external clock, Memory clock, AGP clock, and PCI clock information.
- b. Contains About, Voltage, Overclock, and Hardware Monitor Buttons for invoking respective panels.
- c. With a user-friendly Status Animation, it can represent 3 overclock percentage stages:

Duck walking => overclock percentage from 100% ~ 110 %

Duck running => overclock percentage from 110% ~ 120%


Duck burning => overclock percentage from 120% ~ above

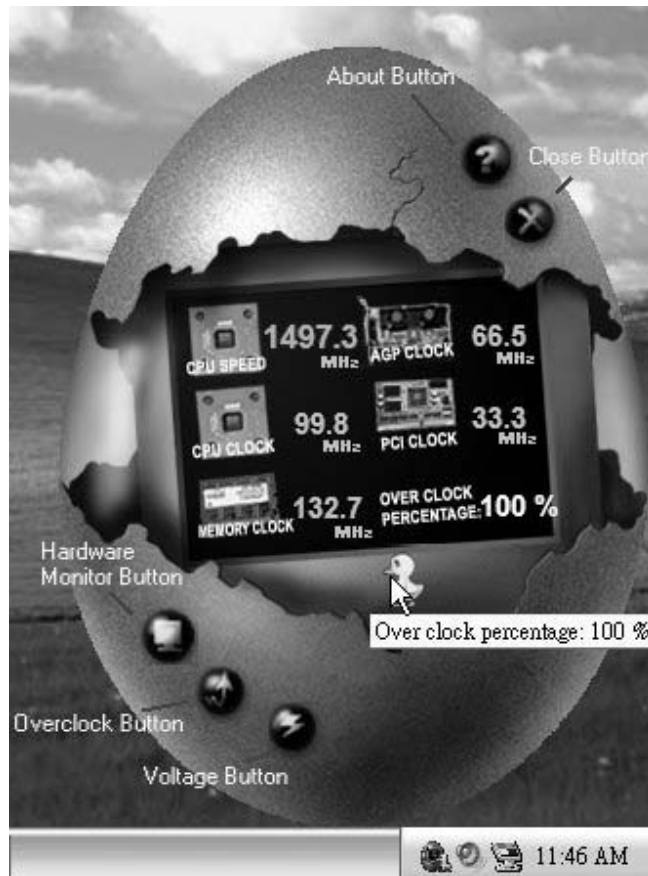

### 3. Voltage Panel

Click the Voltage button in Main Panel, the button will be highlighted and the Voltage Panel will slide out to up as the following figure.

In this panel, you can decide to increase CPU core voltage and Memory voltage or not. The default setting is "No". If you want to get the best performance of overclocking, we recommend you click the option "Yes".

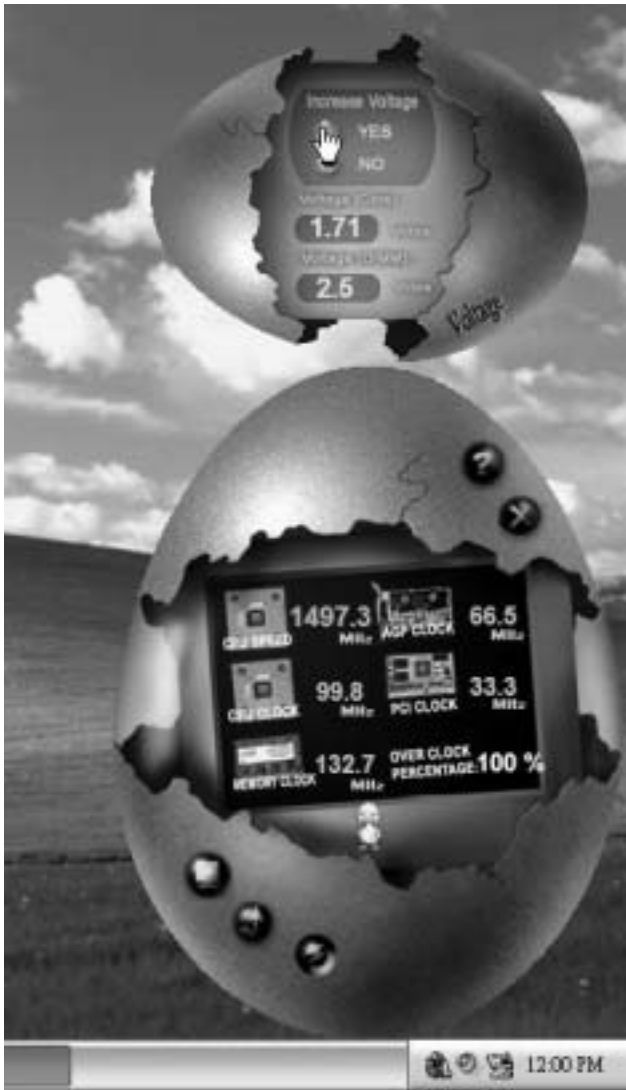

4. Overclock Panel

Click the Overclock button in Main Panel, the button will be highlighted and the Overclock Panel will slide out to left as the following figure.






Overclock Panel contains these features:

- a. “-3MHz button”, “-1MHz button”, “+1MHz button”, and “+3MHz button”: provide user the ability to do real-time overclock adjustment.

*Warning: Manually overlock is potentially dangerous, especially when the overcbocking percentage is over 110 %. We strongly recommend you verify every speed you overclock by click the Verify button. Or, you can just click Auto overlock button and let [ WarpSpeeder™ ] automatically gets the best result for you.*

- b. “Recovery Dialog button”: Pop up the following dialog. Let user select a restoring way if system need to do a fail-safe reboot.



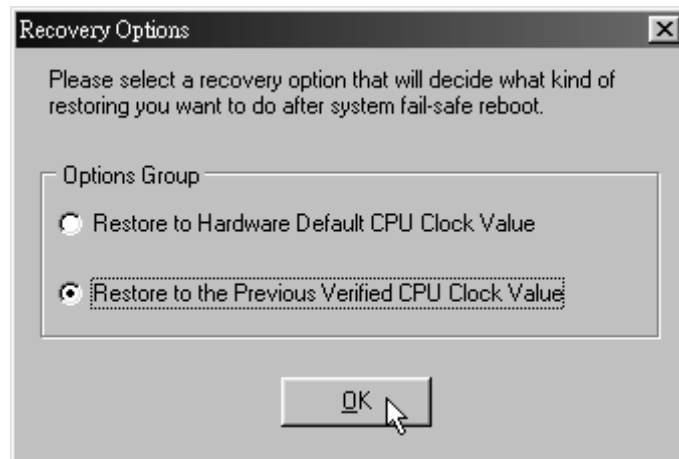

- c. “Auto-overclock button”: User can click this button and [ WarpSpeeder™ ] will set the best and stable performance and frequency automatically. [ WarpSpeeder™ ] utility will execute a series of testing until system fail. Then system will do fail-safe reboot by using Watchdog function. After reboot, the [ WarpSpeeder™ ] utility will restore to the hardware default setting or load the verified best and stable frequency according to the Recovery Dialog's setting.
- d. “Verify button”: User can click this button and [ WarpSpeeder™ ] will proceed a testing for current frequency. If the testing is ok, then the current frequency will be saved into system registry. If the testing fail, system will do a fail-safe rebooting. After reboot, the [ WarpSpeeder™ ] utility will restore to the hardware default setting or load the verified best and stable frequency according to the Recovery Dialog's setting.

*Note: Because the testing programs, invoked in Auto-overclock and Verify, include DirectDraw, Direct3D and DirectShow tests, the DirectX 8.1 or newer runtime library is required. And please make sure your display card's color depth is High color (16 bit) or True color (24/32 bit) that is required for Direct3D rendering.*


---

---

## 5. Hardware Monitor Panel

Click the Hardware Monitor button in Main Panel, the button will be highlighted and the Hardware Monitor panel will slide out to left as the following figure.


In this panel, you can get the real-time status information of your system. The information will be refreshed every 1 second.

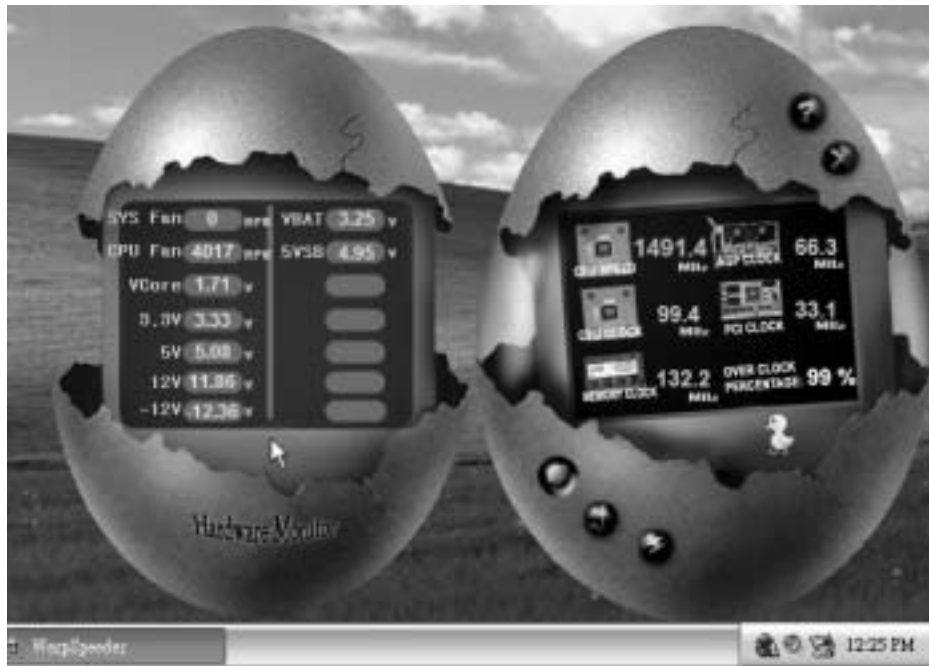

## 6. About Panel

Click the About button in Main Panel, the button will be highlighted and the About Panel will slide out to up as the following figure.

In this panel, you can get model name and detail information in hints of all the chipset that are related to overclocking. You can also get the mainboard's BIOS model and the Version number of [WarpSpeeder™] utility.

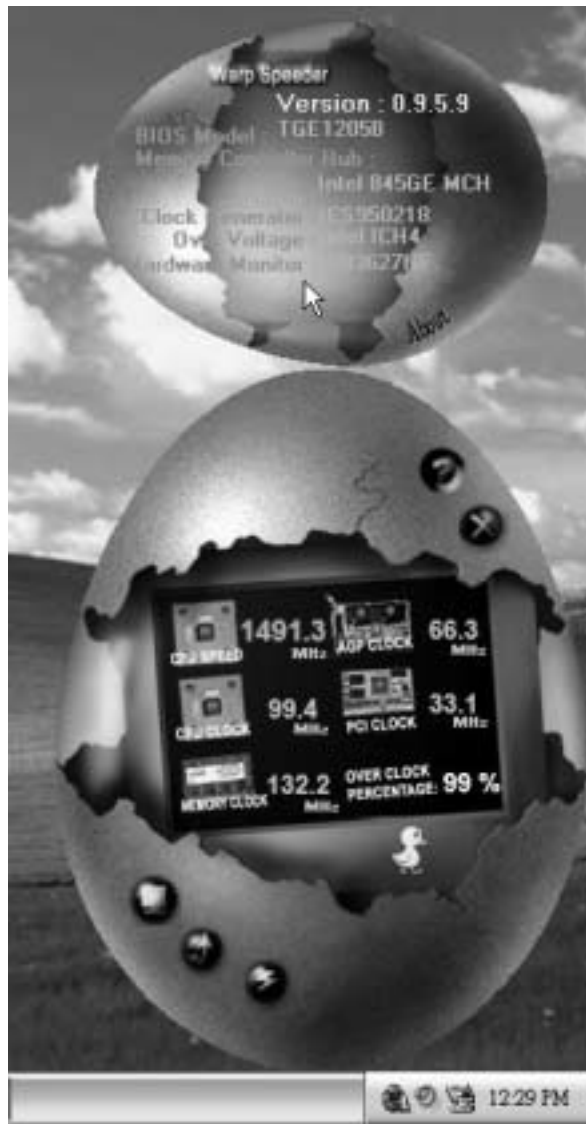

*Note: Because the overclock, overvoltage, and hardware monitor features are controlled by several separate chipset, [ WarpSpeeder™ ] divide these features to separate panels. If one chipset is not on board, the correlative button in Main panel will be disabled, but will not interfere other panels' functions. This property can make [ WarpSpeeder™ ] utility more robust.*

---



---

## Trouble Shooting

PROBABLE	SOLUTION
No power to the system at all. Power light don't illuminate, fan inside power supply does not turn on. Indicator light on keyboard does not turn on.	<ul style="list-style-type: none"> <li>* Make sure power cable is securely plugged in</li> <li>* Replace cable</li> <li>* Contact technical support</li> </ul>
System inoperative. Keyboard lights are on, power indicator lights are lit, hard drive is spinning.	<ul style="list-style-type: none"> <li>* Using even pressure on both ends of the DIMM, press down firmly until the module snaps into place.</li> </ul>
System does not boot from hard disk drive, can be booted from CD-ROM drive.	<ul style="list-style-type: none"> <li>* Check cable running from disk to disk controller board. Make sure both ends are securely plugged in; check the drive type in the standard CMOS setup.</li> <li>* Backing up the hard drive is extremely important. All hard disks are capable of breaking down at any time.</li> </ul>
System only boots from CD-ROM. Hard disk can be read and applications can be used but booting from hard disk is impossible.	<ul style="list-style-type: none"> <li>* Back up data and applications files. Reformat the hard drive. Re-install applications and data using backup disks.</li> </ul>
Screen message says "Invalid Configuration" or "CMOS Failure."	<ul style="list-style-type: none"> <li>* Review system's equipment. Make sure correct information is in setup.</li> </ul>
Cannot boot system after installing second hard drive.	<ul style="list-style-type: none"> <li>* Set master/slave jumpers correctly.</li> <li>* Run SETUP program and select correct drive types. Call drive manufacturers for compatibility with other drives.</li> </ul>

## Dépannage

PROBLÈME	SOLUTION
Pas d'alimentation au système. Les voyants lumineux ne s'allument pas, le ventilateur à l'intérieur du bloc d'alimentation ne se met pas en marche. Le voyant du clavier ne s'allume pas.	<ul style="list-style-type: none"> <li>* Assurez-vous que le câble d'alimentation est bien branché</li> <li>* Remplacez le câble</li> <li>* Contactez le service d'assistance technique.</li> </ul>
Le système ne fonctionne pas. Les voyants du clavier sont allumés, les voyants de l'alimentation aussi, le disque dur tourne.	<ul style="list-style-type: none"> <li>* En exerçant une pression uniforme sur les deux extrémités du DIMM poussez le module vers le bas jusqu'à ce qu'il s'enclenche.</li> </ul>
Le système ne se réinitialise pas du disque dur, réinitialisation possible depuis le lecteur CD-ROM.	<ul style="list-style-type: none"> <li>* Vérifiez le câble du disque à la carte du contrôleur de disque. Assurez-vous que les deux extrémités sont bien branchées ; vérifiez le type de lecteur dans la configuration standard de CMOS.</li> <li>* Il est très important d'effectuer des sauvegardes du disque dur. Les disques durs peuvent tomber en panne à n'importe quel moment.</li> </ul>
Le système ne se réinitialise que depuis le CD-ROM. Le disque dur peut être lu et les applications sont utilisables mais il est impossible d'effectuer de réinitialisation depuis le disque dur.	<ul style="list-style-type: none"> <li>* Effectuez une sauvegarde des fichiers des données et d'application. Reformatez le disque dur. Ré-installez les applications et les données sauvegardées sur les disques de secours.</li> </ul>
Un message s'affiche indiquant que la configuration n'est pas valide ou qu'il y a une panne du CMOS.	<ul style="list-style-type: none"> <li>* Vérifiez l'équipement du système. Assurez-vous que les informations de la configuration sont correctes.</li> </ul>
Impossible de réinitialiser le système après l'installation d'un deuxième disque dur.	<ul style="list-style-type: none"> <li>* Réglez les cavaliers maître/esclave correctement.</li> <li>* Exécutez le programme SETUP et sélectionnez les types de lecteur. Contactez les fabricants pour toute question de compatibilité avec les autres disques.</li> </ul>

---

---

1/02/2004

# ***P4VTC BIOS Setup***

---

<b>BIOS Setup</b> .....	<b>1</b>
1 Main Menu.....	3
2 Standard CMOS Features .....	6
3 Advanced BIOS Features.....	9
4 Advanced Chipset Features.....	12
5 Integrated Peripherals .....	16
6 Power Management Setup .....	20
7 PnP/PCI Configurations .....	25
8 PC Health Status .....	28
9 Frequency Control .....	30

# ***P4VTC BIOS Setup***

---

## **BIOS Setup**

### **Introduction**

This manual discussed Award™ Setup program built into the ROM BIOS. The Setup program allows users to modify the basic system configuration. This special information is then stored in battery-backed RAM so that it retains the Setup information when the power is turned off.

The Award BIOS™ installed in your computer system's ROM (Read Only Memory) is a custom version of an industry standard BIOS. This means that it supports Intel Pentium® 4 processor input/output system. The BIOS provides critical low-level support for standard devices such as disk drives and serial and parallel ports.

Adding important has customized the Award BIOS™, but nonstandard, features such as virus and password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

The rest of this manual is intended to guide you through the process of configuring your system using Setup.

### **Plug and Play Support**

These AWARD BIOS supports the Plug and Play Version 1.0A specification. ESCD (Extended System Configuration Data) write is supported.

### **EPA Green PC Support**

This AWARD BIOS supports Version 1.03 of the EPA Green PC specification.

### **APM Support**

These AWARD BIOS supports Version 1.1&1.2 of the Advanced Power Management (APM) specification. Power management features are implemented via the System Management Interrupt (SMI). Sleep and Suspend power management modes are supported. This AWARD BIOS can manage power to the hard disk drives and video monitors .

### **ACPI Support**

Award ACPI BIOS support Version 1.0 of Advanced Configuration and Power interface specification (ACPI). It provides ASL code for power management and device configuration capabilities as defined in the ACPI specification, developed by Microsoft, Intel and Toshiba.



# P4VTC BIOS Setup

---

## PCI Bus Support

This AWARD BIOS also supports Version 2.1 of the Intel PCI (Peripheral Component Interconnect) local bus specification.

## DRAM Support

DDR DRAM (Double Data Rate Synchronous DRAM) are supported.

## Supported CPUs

This AWARD BIOS supports the Intel Pentium® 4 CPU.

## Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the <PgUp> and <PgDn> keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program by using the keyboard.

Keystroke	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left (menu bar)
Right arrow	Move to the item on the right (menu bar)
Move Enter	Move to the item you desired
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+ Key	Increase the numeric value or make changes
- Key	Decrease the numeric value or make changes
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu – Exit Current page and return to Main Menu
F1 key	General help on Setup navigation keys
F5 key	Load previous values from CMOS
F7 key	Load the optimized defaults
F10 key	Save all the CMOS changes and exit



# P4VTC BIOS Setup

---

## Integrated Peripherals

This submenu allows you to configure certain IDE hard drive options and Programmed Input/ Output features.

## Power Management Setup

This submenu allows you to configure the power management features.

## PnP/PCI Configurations

This submenu allows you to configure certain “Plug and Play” and PCI options.

## PC Health Status


This submenu allows you to monitor the hardware of your system.

## Frequency Control

This submenu allows you to change CPU Vcore Voltage and CPU/PCI clock. **(However, this function is strongly recommended not to use. Not properly change the voltage and clock may cause CPU or M/B damage!)**

## Load Optimized Defaults

This selection allows you to reload the BIOS when the system is having problems particularly with the boot sequence. These configurations are factory settings optimized for this system. A confirmation message will be displayed before defaults are set.



Load Optimized Defaults (Y/N)? N

## Set Supervisor Password

Setting the supervisor password will prohibit everyone except the supervisor from making changes using the CMOS Setup Utility. You will be prompted with to enter a password.



Enter Password:

## Set User Password

If the Supervisor Password is not set, then the User Password will function in the same way as the Supervisor Password. If the Supervisor Password is set and the User Password is set, the “User” will only be able to view configurations but will not be able to change them.



Enter Password:

# ***P4VTC BIOS Setup***

---

## **Save & Exit Setup**

Save all configuration changes to CMOS(memory) and exit setup. Confirmation message will be displayed before proceeding

```
SAVE to CMOS and EXIT (Y/N)? Y
```

## **Exit Without Saving**

Abandon all changes made during the current session and exit setup. Confirmation message will be displayed before proceeding

```
Quit Without Saving (Y/N)? N
```

## **Upgrade BIOS**

This submenu allows you to upgrade bios.


```
BIOS UPDATE UTILITY (Y/N)? N
```

# P4VTC BIOS Setup

## 2 Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

■ **Figure 2. Standard CMOS Setup**

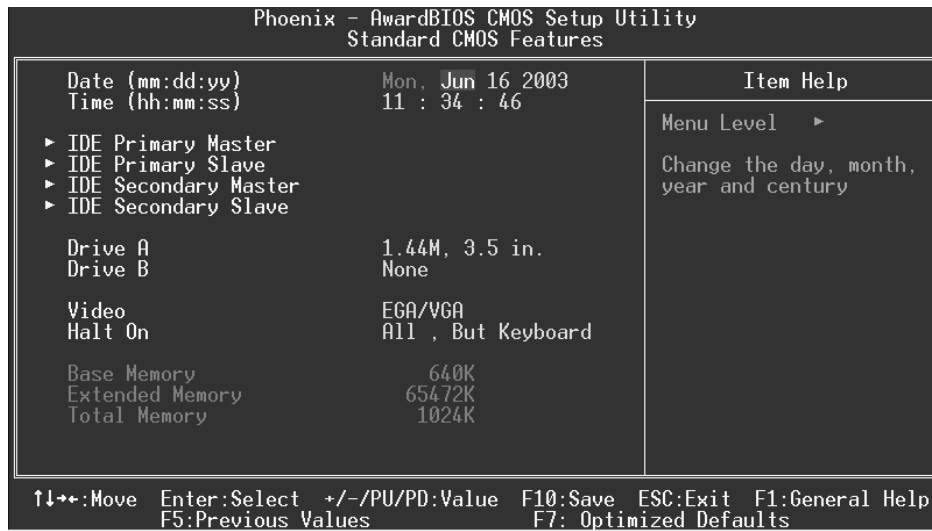

# P4VTC BIOS Setup

---

## Main Menu Selections

This table shows the selections that you can make on the Main Menu.

Item	Options	Description
Date	mm : dd : yy	Set the system date. Note that the 'Day' automatically changes when you set the date.
Time	hh : mm : ss	Set the system internal clock.
IDE Primary Master	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options
IDE Primary Slave	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.
IDE Secondary Master	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.
IDE Secondary Slave	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.
Drive A Drive B	360K, 5.25 in 1.2M, 5.25 in 720K, 3.5 in 1.44M, 3.5 in 2.88M, 3.5 in None	Select the type of floppy disk drive installed in your system.
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device.

## ***P4VTC BIOS Setup***


---

<b>Item</b>	<b>Options</b>	<b>Description</b>
Halt On	All Errors No Errors All, but Keyboard All, but Diskette All, but Disk/ Key	Select the situation in which you want the BIOS to stop the POST process and notify you.
Base Memory	N/A	Displays the amount of conventional memory detected during boot up.
Extended Memory	N/A	Displays the amount of extended memory detected during boot up.
Total Memory	N/A	Displays the total memory available in the system.

# P4VTC BIOS Setup

## 3 Advanced BIOS Features

■ Figure 3. Advanced BIOS Setup

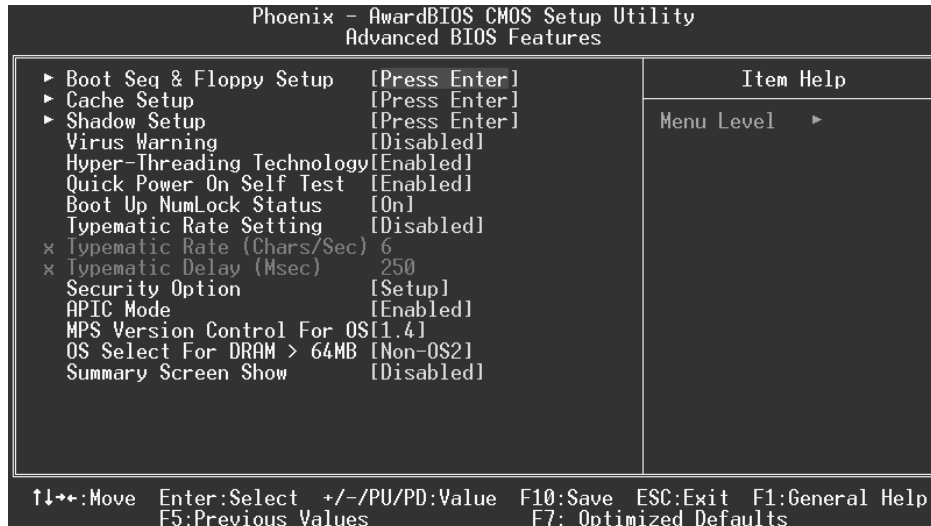

### Boot Seq and Floppy Setup

#### **First /Second/Third/ Boot Other Device**

These BIOS attempts to load the operating system from the devices in the sequence selected in these items.

**The Choices:** Floppy, LS120, HDD-0, SCSI, CDROM, HDD-1, HDD-2, HDD-3, ZIP100, LAN, Enabled, Disabled.

#### **Swap Floppy Drive**

For systems with two floppy drives, this option allows you to swap logical drive assignments.

**The Choices:** Enabled, **Disabled** (default).

#### **Boot Up Floppy Seek**

Enabling this option will test the floppy drives to determine if they have 40 or 80 tracks. Disabling this option reduces the time it takes to boot-up.

**The Choices:** Enabled, **Disabled** (default).

### Cache Setup

#### **CPU L1 & L2 Cache**

Depending on the CPU/chipset in use, you may be able to increase memory access time with this option.



# ***P4VTC BIOS Setup***

---

**Enabled** (default)      Enable cache.  
**Disabled**                Disable cache.

## **CPU L2 Cache ECC Checking**

This item allows you to enable/disable CPU L2 Cache ECC Checking.

**The Choices:** **Enabled** (default), **Disabled**.

## **Shadow Setup**

### **Video BIOS Shadow**

Determines whether video BIOS will be copied to RAM for faster execution.

**Enabled** (default)      Optional ROM is enabled.  
**Disabled**                Optional ROM is disabled.

## **Virus Warning**

This option allows you to choose the VIRUS Warning feature that is used to protect the IDE Hard Disk boot sector. If this function is enabled and an attempt is made to write to the boot sector, BIOS will display a warning message on the screen and sound an alarm beep.

**Disabled** (default)      Virus protection is disabled.  
**Enabled**                    Virus protection is activated.

## **Hyper-Threading Technology**

This option allows you to choose “Enabled” for Windows XP and Linux 2.4.x (OS optimized for Hyper-Threading Technology). “Disabled” for other OS (OS not optimized for Hyper-Threading Technology).

## **Quick Power On Self Test**

Enabling this option will cause an abridged version of the Power On Self-Test (POST) to execute after you power up the computer.

**Disabled**                Normal POST.  
**Enabled** (default)      Enable quick POST.

## **Boot Up NumLock Status**

Selects the NumLock. State after power on.

**On** (default)            Numpad is number keys.  
**Off**                      Numpad is arrow keys.

## **Typematic Rate Setting**

When a key is held down, the keystroke will repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be configured.

**The Choices:** **Disabled** (default), **Enabled**.

## **Typematic Rate (Chars/Sec)**

Sets the rate at which a keystroke is repeated when you hold the key down.

# ***P4VTC BIOS Setup***

---

**The Choices:** 6 (default), 8, 10, 12, 15, 20, 24, 30.

## **Typematic Delay (Msec)**

Sets the delay time after the key is held down before it begins to repeat the keystroke.

**The Choices:** 250 (default), 500, 750, 1000.

## **Security Option**

This option will enable only individuals with passwords to bring the system online and/or to use the CMOS Setup Utility.

**System:** A password is required for the system to boot and is also required to access the Setup Utility.

**Setup (default):** A password is required to access the Setup Utility only.

*This will only apply if passwords are set from the Setup main menu.*

## **APIC Mode**

Selecting Enabled enables ACPI device mode reporting from the BIOS to the operating system.

**The Choices:** Enabled (default), Disabled.

## **MPS Version Control For OS**

The BIOS supports version 1.1 and 1.4 of the Intel multiprocessor specification.

Select version supported by the operation system running on this computer.

**The Choices:** 1.4 (default), 1.1.

## **OS Select For DRAM > 64MB**

A choice other than Non-OS2 is only used for OS2 systems with memory exceeding 64MB.

**The Choices:** Non-OS2 (default), OS2.

## **Summary Screen Show**

This item allows you to enable/disable the summary screen. Summary screen means system configuration and PCI device listing.


**The Choices:** Enabled, Disabled (default).

# P4VTC BIOS Setup

## 4 Advanced Chipset Features

This submenu allows you to configure the specific features of the chipset installed on your system. This chipset manage bus speeds and access to system memory resources, such as DRAM. It also coordinates communications with the PCI bus. The default settings that came with your system have been optimized and therefore should not be changed unless you are suspicious that the settings have been changed incorrectly.

### ■ Figure 4. Advanced Chipset Setup

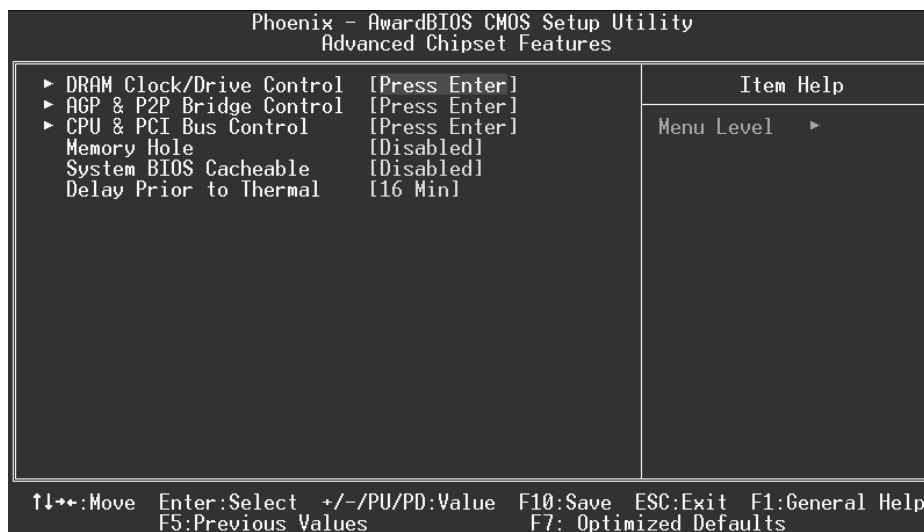

### DRAM Clock/ Drive Control

To control the Clock. If you highlight the literal "Press Enter" next to the "DRAM Clock" label and then press the enter key, it will take you to a submenu with the following options:

#### **DRAM Clock**

This item determines DRAM clock following 100MHz, 133MHz or By SPD.

**The Choices:** 100MHz, 133MHz, **By SPD** (default).

#### **DRAM Timing**

This item determines DRAM clock/ timing follow SPD or not.

**The Choices:** **Auto By SPD** (default), Manual.

#### **DRAM CAS Latency**

When DRAM is installed, the number of clock cycles of CAS latency depends on the DRAM timing.

**The Choices:** **2.5** (default), 2.

# ***P4VTC BIOS Setup***

---

## **Bank Interleave**

This item allows you to enable or disable the bank interleave feature.

**The Choices:** Disabled (default).

## **Precharge to Active (Trp)**

This item allows you to specify the delay from precharge command to activate command.

**The Choices:** 2T, 3T, 4T (default), 5T.

## **Active to Precharge (Tras)**

This item allows you to specify the minimum bank active time.

**The Choices:** 6T, 7T, 8T, 9T (default).

## **Active to CMD (Tred)**

Use this item to specify the delay from the activation of a bank to the time that a read or write command is accepted.

**The Choices:** 2T, 3T, 4T, 5T (default).

## **DRAM Command Rate**

This item controls clock cycle that must occur between the last valid write operation and the next command.

**The Choices:** 1T Command, 2T Command (default).

## **DRAM Burst Len**

**The Choices:** 4 (default), 8.

## **Write Recovery Time**

**The Choices:** 3T, 2T (default).

## **tWTR for DDR400 Only**

This option allows you to choose tWTR for DDR400.

**The Choices:** 1T, 3T (default).

## **AGP & P2P Bridge Control**

If you highlight the literal "Press Enter" next to the "AGP & P2P Bridge Control" label and then press the enter key, it will take you a submenu with the following options:

### **AGP Aperture Size**

Select the size of the Accelerated Graphics Port (AGP) aperture. The aperture is a portion of the PCI memory address range dedicated for graphics memory address space. Host cycles that hit the aperture range are forwarded to the AGP without any translation.

**The Choices:** 64M, 256M, 128M (default), 32M, 16M, 8M, 4M.

### **AGP Mode**

This item allows you to select the AGP Mode.

**The Choices:** 4X (default), 2X, 1X.

# ***P4VTC BIOS Setup***

---

## **AGP Driving Control**

By choosing "Auto" the system BIOS will the AGP output Buffer Drive strength P Ctrl by AGP Card. By choosing "Manual", it allows user to set AGP output Buffer Drive strength P Ctrl by manual.

**The Choices:** Auto (default), Manual.

## **AGP Driving Value**

While AGP driving control item set to "Manual", it allows user to set AGP driving.

**The Choices:** DA (default).

## **AGP Fast Write**

**The Choices:** Enabled, Disabled (default).

## **AGP Master 1 WS Write**

When Enabled, writes to the AGP (Accelerated Graphics Port) are executed with one wait states.

**The Choices:** Disabled (default), Enabled.

## **AGP Master 1 WS Read**

When Enabled, read to the AGP (Accelerated Graphics Port) are executed with one wait states.

**The Choices:** Disabled (default), Enabled.

## **AGP 3.0 Calibration cycle**

This item allows you to enable or disable AGP 3.0 Calibration cycle.

**The Choices:** Disabled (default), Enabled.

## **CPU & PCI Bus Control**

If you highlight the literal "Press Enter" next to the "CPU & PCI Bus Control" label and then press the enter key, it will take you a submenu with the following options:

### **PCI Master 0 WS Write**

When Enabled, writes to the PCI bus are executed with zero-wait states.

**The Choices:** Enabled (default), Disabled.

### **VLink 8X Support**

**The Choices:** Disabled, Enabled (Default).

## **Memory Hole At 15M-16M**

You can reserve this area of system memory for ISA adapter ROM. When this area is reserved it cannot be cached. The user information of peripherals that need to use this area of system memory usually2 discussed their memory requirements.

**The Choices:** Disabled (default), Enabled.

# ***P4VTC BIOS Setup***

---

## **System BIOS Cacheable**

Selecting the “Enabled” option allows caching of the system BIOS ROM at F0000h-FFFFFh which can improve system performance. However, any programs writing to this area of memory will cause conflicts and result in system errors.

**The Choices:** Enabled, **Disabled** (default).

## **Delay Prior to Thermal**


Set this item to enable the CPU Thermal function to engage after the specified time.

**The Choices:** **16Min** (default), 4Min, 8Min, 32Min.

# P4VTC BIOS Setup

## 5 Integrated Peripherals

### ■ Figure 5. Integrated Peripherals

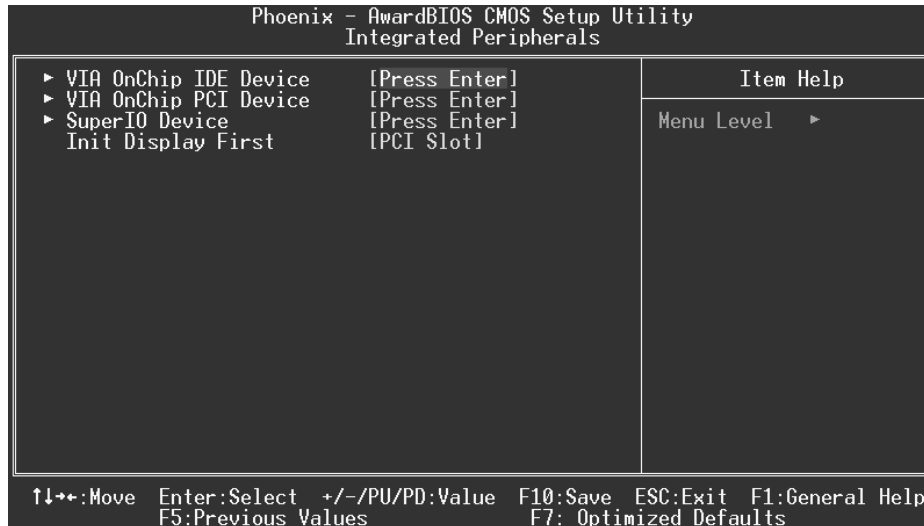

### VIA OnChip IDE Device

If you highlight the literal “Press Enter” next to the “VIA OnChip IDE Device” label and then press the enter key, it will take you a submenu with the following options:

#### **IDE DMA Transfer Access**

**The Choices:** Enabled (default), Disabled.

#### **OnChip IDE Channel 0/1**

The motherboard chipset contains a PCI IDE interface with support for two IDE channels. Select “Enabled” to activate the first and/or second IDE interface. Select “Disabled” to deactivate an interface if you are going to install a primary and/or secondary add-in IDE interface.

**The Choices:** Enabled (default), Disabled.

#### **IDE Prefetch Mode**

The “onboard” IDE drive interfaces supports IDE prefetching for faster drive access. If the interface does not support prefetching. If you install a primary and/or secondary add-in IDE interface, set this option to “Disabled”.

**The Choices:** Enabled (default), Disabled.

# **P4VTC BIOS Setup**

---

## **Primary / Secondary /Master / Slave PIO**

The IDE PIO (Programmed Input / Output) fields let you set a PIO mode (0-4) for each of the IDE devices that the onboard IDE interface supports. Modes 0 to 4 will increased performance progressively. In Auto mode, the system automatically determines the best mode for each device.

**The Choices:** Auto (default), Mode0, Mode1, Mode2, Mode3, Mode4.

## **Primary / Secondary /Master / Slave UDMA**

Ultra DMA/100 functionality can be implemented if it is supported by the IDE hard drives in your system. As well, your operating environment requires a DMA driver (Windows 95 OSR2 or a third party IDE bus master driver). If your hard drive and your system software both support Ultra DMA/100, select Auto to enable BIOS support.

**The Choices:** Auto (default), Disabled.

## **IDE HDD Block Mode**

Block mode is also called block transfer, multiple commands, or multiple sector read / write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read / write per sector where the drive can support.

**The Choices:** Enabled (default), Disabled.

## **VIA OnChip PCI Device**

If you highlight the literal "Press Enter" next to the "VIA OnChip PCI Device" label and then press the enter key, it will take you a submenu with the following options:

### **VIA-3058 AC97 Audio**

This option allows you to control the onboard AC97 audio.

**The Choices:** Auto (default), Disabled.

### **VIA-3068 MC97 Modem**

This option allows you to control the onboard MC97 modem.

**The Choices:** Auto (default), Disabled.

### **VIA-3043 OnChip LAN**

This option allows you to control the onboard LAN.

**The Choices:** Enabled (default), Disabled.

### **Onboard LAN Boot ROM**

This item allows you to enable or disable Onboard LAN Boot ROM.

**The Choices:** Disabled (default), Enabled.

### **Onchip USB Controller**

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have USB peripherals.



# P4VTC BIOS Setup

---

**The Choices:** Enabled (default), Disabled

## **Onchip EHCI Controller**

This item allows you to enable or disable the onchip EHCI controller.

**The Choices:** Enabled (default), Disabled.

## **USB Device Function**

This item allows you to enable or disabled the USB device function.

**The Choices:** Disabled (default), Enabled.

## **USB Keyboard/Mouse Support**

This item allows you to enable or disable the USB Keyboard/ Mouse Legacy Support.

Enabled Enable USB Keyboard/Mouse Support.

**Disabled** (default) Disable USB Keyboard/Mouse Support.

## **Super IO Device**

Press Enter to configure the Super I/O Device.

### **Onboard FDC Controller**

Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If install and FDC or the system has no floppy drive, select Disabled in this field.

**The Choices:** Enabled (default), Disabled.

### **Onboard Serial Port 1**

Select an address and corresponding interrupt for the first and second serial ports.

**The Choices:** 3F8/IRQ4 (default), Disabled, Auto, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3.

### **Onboard Serial Port 2**

Select an address and corresponding interrupt for the first and second serial ports

**The Choices:** 2F8/IRQ3 (default), Disabled, Auto, 3F8/IRQ4 , 3E8/IRQ4, 2E8/IRQ3.

### **UART Mode Select**

This item allows you to determine which Infrared (IR) function of onboard I/O chip.

**The Choices:** Normal(default), ASKIR, IrDA, SCR .

### **UR2 Duplex Mode**

Select the value required by the IR device connected to the IR port. Full-duplex mode permits simultaneous two-direction transmission. Half-duplex mode permits transmission in one direction only at a time.

**The Choices:** Half (default), Full.

# ***P4VTC BIOS Setup***

---

## **Onboard Parallel Port**

This item allows you to determine access onboard parallel port controller with which I/O Address.

**The Choices:** 378/IRQ7 (default), 278/IRQ5, 3BC/IRQ7, Disabled.

## **Parallel Port Mode**

The default value is SPP.

### **The Choices:**

SPP (Default)	Using Parallel Port as Standard Printer Port.
EPP	Using Parallel Port as Enhanced Parallel Port.
ECP	Using Parallel Port as Extended Capabilities Port.
ECP+EPP	Using Parallel Port as ECP & EPP mode.

## **ECP Mode Use DMA**

Select a DMA Channel for the port.

**The Choices:** 3 (default), 1.

## **Game Port Address**

Game Port I/O Address.

**The Choices:** 201 (default), 209, Disabled.

## **Midi Port Address**

Midi Port Base I/O Address.

**The Choices:** 330 (default), 300, Disabled.

## **Midi Port IRQ**

This determines the IRQ in which the Midi Port can use.

**The Choices:** 10 (default), 5.

## **Init Display First**

With systems that have multiple video cards, this option determines whether the primary display uses a PCI Slot or an AGP Slot.


**The Choices:** PCI Slot (default), AGP.

# P4VTC BIOS Setup

## 6 Power Management Setup

The Power Management Setup Menu allows you to configure your system to utilize energy conservation and power up/power down features.

### ■ Figure 6. Power Management Setup

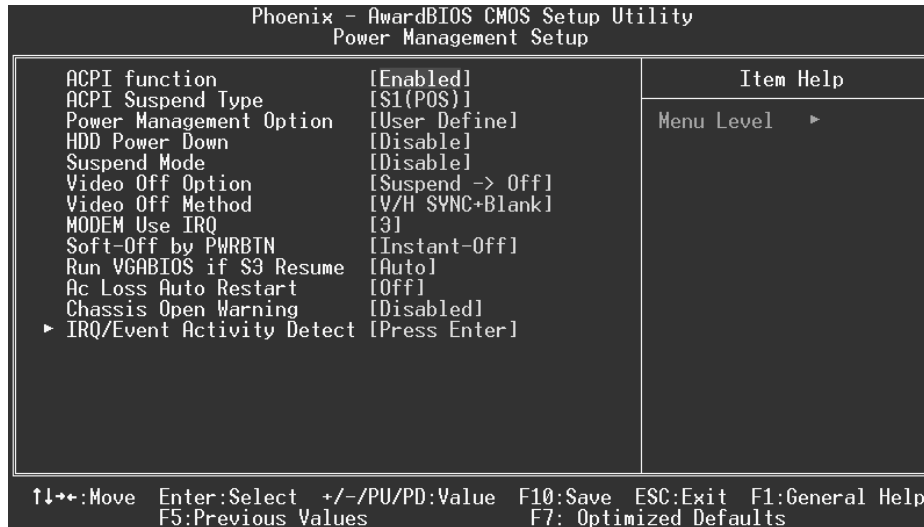

### ACPI Function

This item displays the status of the Advanced Configuration and Power Management (ACPI).

**The Choices:** Enabled (default), Disabled.

### ACPI Suspend Type

The item allows you to select the suspend type under the ACPI operating system.

**The Choices:** S1 (POS) (default) Power on Suspend  
S3 (STR) Suspend to RAM  
S1 & S3 POS+STR

### Power Management

This category allows you to select the type (or degree) of power saving and is directly related to the following modes:

- 1.HDD Power Down.
- 2.Doze Mode.
- 3.Suspend Mode.

# ***P4VTC BIOS Setup***

---

There are four options of Power Management, three of which have fixed mode settings

## **Min. Saving**

Minimum power management.

Doze Mode = 1 hr.

Standby Mode = 1 hr

Suspend Mode = 1 hr.

HDD Power Down = 15 min

## **Max Saving**

Maximum power management only available for sl CPU's.

Doze Mode = 1 min

Standby Mode = 1 min.

Suspend Mode = 1 min.

HDD Power Down = 1 min.

## **User Defined (default)**

Allows you to set each mode individually.

When not disabled, each of the ranges are from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min. and disable.

## **HDD Power Down**

When enabled and after the set time of system inactivity , the hard disk drive will be powered down while all other devices remain active.

**The Choices: Disabled** (default), 1Min, 2Min, 3Min, 4Min, 5Min, 6Min, 7Min, 8Min, 9Min, 10Min, 11Min, 12Min, 13Min, 14Min, 15Min.

## **Suspend Mode**

When enabled and after the set time of system inactivity, all devices except the CPU will be shut off.

**The Choices: Disabled** (default), 1Min, 2Min, 4Min, 8Min, 12Min, 20Min, 30Min, 40Min, 1Hour.

## **Video Off Option**

This field determines when to activate the video off feature for monitor power management.

**The Choices: Suspend**→**Off** (default), Always on.

## **Video Off Method**

This option determines the manner in which the monitor is goes blank.

**V/H SYNC+Blank** (default)

This selection will cause the system to turn off the vertical and horizontal

# ***P4VTC BIOS Setup***

---

synchronization ports and write blanks to the video buffer.

## **Blank Screen**

This option only writes blanks to the video buffer.

## **DPMS**

Initial display power management signaling.

## **MODEM Use IRQ**

This determines the IRQ, which can be applied in MODEM use.

**The Choices:** 3 (default) / 4 / 5 / 7 / 9 / 10 / 11 / NA

## **Soft-Off by PWR-BTTN**

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state when the system has “hung.”

**The Choices:** Delay 4 Sec, **Instant-Off** (default).

## **Run VGABIOS if S3 Resume**

Choosing Enabled will make BIOS run VGA BIOS to initialize the VGA card when system wakes up from S3 state . The system time is shortened if you disable the function , but system will need AGP driver to initialize the card . So , if the AGP driver of the VGA card does not support the initialization feature , the display may work abnormally or not function after S3 .

**The Choices:**Auto (default), Yes, No.

## **Ac Loss Auto Restart**

This field determines the action the system will automatically take when power is restored to a system that had lost power previously without any subsequent manual intervention. There are 3 sources that provide current to the CMOS area that retains these Power-On instructions; the motherboard battery (3V), the Power Supply (5VSB), and the Power Supply (3.3V). While AC is not supplying power, the motherboard uses the motherboard battery (3V). If AC power is supplied and the Power Supply is not turned on, 5VSB from the Power Supply is used. When the Power Supply is eventually turned on 3.3V from the Power Supply will be used.

There are 3 options: “Former-Sts”, “On”, “Off”.

**“Off”** (default) Means always set CMOS to the “Off” status when AC power is lost.

**“On”** Means always set CMOS to the “On” status when AC power is lost

**“Former-Sts”** Means to maintain the last status of the CMOS when AC power is lost.

For example: If set to “Former-Sts” and AC power is lost when system is live, then after AC power is restored, the system will automatically power on. If AC power is lost when system is not live, system will remain powered off.

# P4VTC BIOS Setup

---

## Chassis Open Warning

This item allows you to enable or disable the chassis open warning beep sound.

**The Choices:** Disabled (default), Disabled.

## IRQ/Event Activity Detect

If you highlight the literal "Press Enter" next to the "IRQ/Event Activity Detect" label and then press the enter key, it will take you a submenu with the following options:

### **PS2KB Wakeup Select**

When select Password, please press Enter key to change password with a maximum of 8 characters.

**The Choices:** Hot Key (default).

### **PS2KB Wakeup from S3/ S4/ S5**

This item allows you to wake up from S3/ S4/ S5 with PS2 keyboard.

**The Choices:** Disabled (default), Ctrl+F1, Ctrl+F2, Ctrl+F3, Ctrl+F4, Ctrl+F5, Ctrl+F6, Ctrl+F7, Ctrl+F8, Ctrl+F9, Ctrl+F10, Ctrl+F11, Ctrl+F12, Power, Wake, Any Key.

### **Power Button Lock**

This item allows you to enable or disable Power Button Lock.

**The Choices:** Enabled (default), Disabled.

### **PS2MS Wakeup from S3/ S4/ S5**

This item allows you to wake up from S3/ S4/ S5 with PS2 keyboard.

**The Choices:** Disabled (default), Enabled.

### **VGA**

When set to **On**, any event occurring at a VGA Port will awaken a system which has been powered down.

**The Choices:** Off (default), On.

### **LPT & COM**

When this option is set to **On**, any event occurring at a COM(serial)/LPT (printer) port will awaken a system which has been powered down.

**The Choices:** LPT/COM (default), COM, LPT, NONE.

### **HDD & FDD**

When this option is set to **On**, any event occurring on a hard drive or a floppy drive will awaken a system which has been powered down.

**The Choices:** On (default), Off.

### **PCI Master**

When set to **On**, you need a LAN add-on card which supports the power function. It should also support the wake-up on LAN jump.

**The Choices:** Off (default), On.

# P4VTC BIOS Setup

---

## PowerOn by PCI Card

When you select Enabled, a PME signal from PCI card returns the system to Full ON state.

**The Choices:** Disabled (default), Enabled.

## Modem Ring Resume

**The Choices:** Disabled (Default), Enabled.

## RTC Alarm Resume

When "Enabled", you can set the date and time at which the RTC (real-time clock) alarm awakens the system from Suspend mode.

**The Choices:** Enabled, Disabled (default).

## Date (of Month)

You can choose which month the system will boot up. This field is only configurable when "RTC Resume" is set to "Enabled".

## Resume Time (hh:mm:ss)

You can choose the hour, minute and second the system will boot up. This field is only configurable when "RTC Resume" is set to "Enabled".

## IRQs Activity Monitoring

**Press Enter** to access another sub menu used to configure the different wake up events (i.e. wake on LPT & COMM activity).


Primary INTR	On
IRQ3 (COM2)	Disabled
IRQ4 (COM1)	Enabled
IRQ5 (LPT2)	Enabled
IRQ6 (Floppy Disk)	Enabled
IRQ7 (LPT1)	Enabled
IRQ8 (RTC Alarm)	Disabled
IRQ9 (IRQ2 Redir)	Disabled
IRQ10 (Reserved)	Disabled
IRQ11 (Reserved)	Disabled
IRQ12 (PS/2 Mouse)	Enabled
IRQ13 (Coprocessor)	Enabled
IRQ14 (Hard Disk)	Enabled
IRQ15 (Reserved)	Disabled

# P4VTC BIOS Setup

## 7 PnP/PCI Configurations

This section describes configuring the PCI bus system. PCI, or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed of the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

### ■ Figure 7. PnP/PCI Configurations

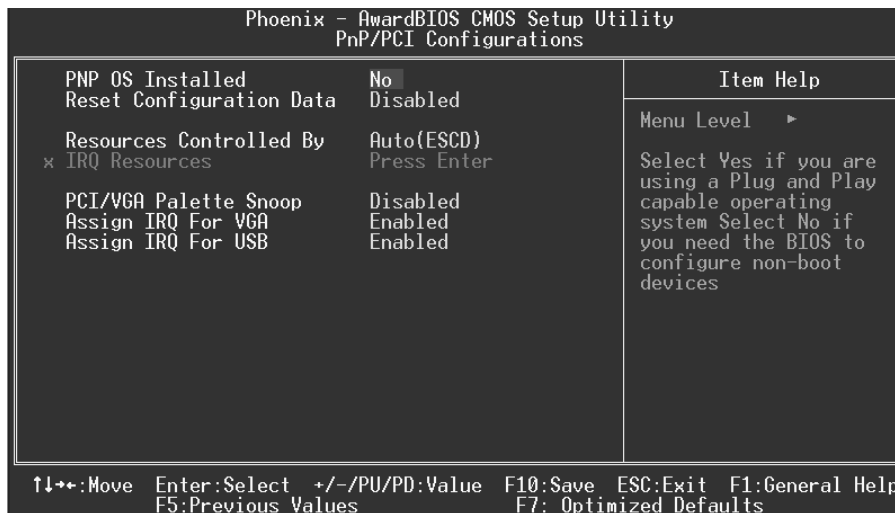

#### PNP OS Installed

When set to YES, BIOS will only initialize the PnP cards used for the boot sequence (VGA, IDE, SCSI). The rest of the cards will be initialized by the PnP operating system like Window™ 95. When set to NO, BIOS will initialize all the PnP cards. For non-PnP operating systems (DOS, Netware™), this option must set to NO.

**The Choices:** No (default), Yes.

#### Reset Configuration Data

The system BIOS supports the PnP feature which requires the system to record which resources are assigned and protects resources from conflict. Every peripheral device has a node, which is called ESCD. This node records which resources are assigned to it. The system needs to record and update ESCD to the memory locations. These locations (4K) are reserved in the system BIOS. If the Disabled (default) option is chosen, the system's ESCD will update only when the new configuration varies from the last one. If the Enabled option is chosen, the system is forced to update ESCDs and then is automatically set to the "Disabled" mode.



# P4VTC BIOS Setup

---

The above settings will be shown on the screen only if “Manual” is chosen for the resources controlled by function.

Legacy is the term, which signifies that a resource is assigned to the ISA Bus and provides non-PnP ISA add-on cards. PCI / ISA PnP signifies that a resource is assigned to the PCI Bus or provides for ISA PnP add-on cards and peripherals.

**The Choices:** Disabled (default), Enabled.

## Resources Controlled By

By Choosing “Auto(ESCD)” (default), the system BIOS will detect the system resources and automatically assign the relative IRQ and DMA channel for each peripheral. By Choosing “Manual”, the user will need to assign IRQ & DMA for add-on cards. Be sure that there are no IRQ/DMA and I/O port conflicts.

## IRQ Resources

This submenu will allow you to assign each system interrupt a type, depending on the type of device using the interrupt. When you press the “Press Enter” tag, you will be directed to a submenu that will allow you to configure the system interrupts. This is only configurable when “Resources Controlled By” is set to “Manual”.

IRQ-3	assigned to	PCI Device
IRQ-4	assigned to	PCI Device
IRQ-5	assigned to	PCI Device
IRQ-7	assigned to	PCI Device
IRQ-9	assigned to	PCI Device
IRQ-10	assigned to	PCI Device
IRQ-11	assigned to	PCI Device
IRQ-12	assigned to	PCI Device
IRQ-14	assigned to	PCI Device
IRQ-15	assigned to	PCI Device

## PCI / VGA Palette Snoop

Choose Disabled or Enabled. Some graphic controllers which are not VGA compatible take the output from a VGA controller and map it to their display as a way to provide boot information and VGA compatibility.

However, the color information coming from the VGA controller is drawn from the palette table inside the VGA controller to generate the proper colors, and the graphic controller needs to know what is in the palette of the VGA controller. To do this, the non-VGA graphic controller watches for the Write access to the VGA palette and registers the snoop data. In PCI based systems, where the VGA controller is on the PCI bus and a non-VGA graphic controller is on an ISA bus, the Write Access to the palette will not show up on the ISA bus if the PCI VGA controller responds to the Write.

In this case, the PCI VGA controller should not respond to the Write, it should only snoop the data and permit the access to be forwarded to the ISA bus. The non-VGA ISA graphic

## ***P4VTC BIOS Setup***

---

controller can then snoop the data on the ISA bus. Unless you have the above situation, you should disable this option.

<b>Disabled</b> (default)	Disables the function.
Enabled	Enables the function.

### **Assign IRQ For VGA**

This item allows the users to choose which IRQ to assign for the VGA.

**The Choices:** **Enabled** (default), Disabled.

### **Assign IRQ For USB**


This item allows the users to choose which IRQ to assign for the USB.

**The Choices:** **Enabled** (default), Disabled.

# P4VTC BIOS Setup

## 8 PC Health Status

■ Figure 8. PC Health Status

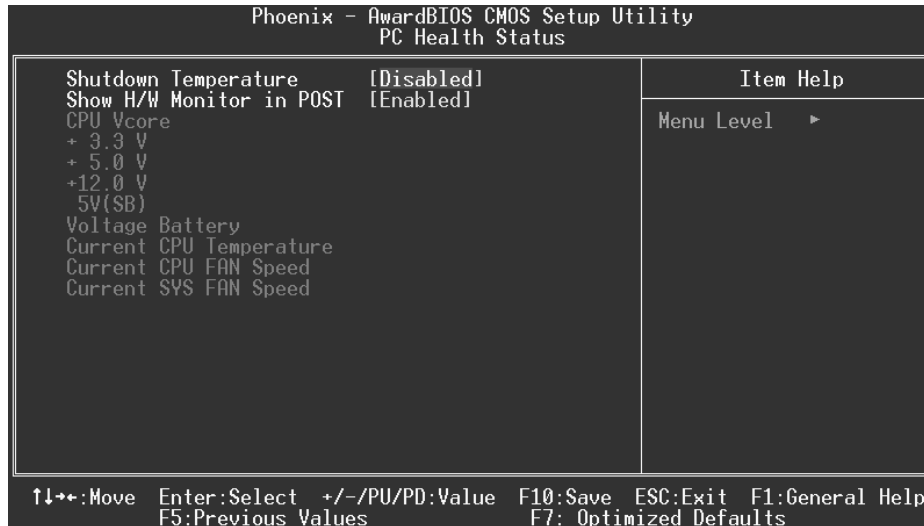

### Shutdown Temperature

This item allows you to set the shutdown temperature of the CPU in order not to be damaged by the overheated temperature. When this function is enabled, the system will automatically shutdown if the CPU temperature reaches the shutdown temperature. This function only works under Windows 98 ACPI mode.

**The Choices:** Disabled (default), 60°C/140°F, 65°C/149°F, 70°C/158°F, 75°C/167°F.

### Show H/W Monitor in POST

If your computer contains a monitoring system, it will show PC health status during POST stage. The item offers several delay times to select the one you want.

**The Choices:** Enabled (default), Disabled.

### CPU Vcore/ +3.3V/ +5.0V/ +12V/ 5V(SB)/ Voltage Battery

Detect the system's voltage status automatically.

### Current CPU Temperature

Show you the current CPU temperature.

# ***P4VTC BIOS Setup***

---

## **Current CPU FAN Speed**

This field displays the current CPUFAN speed.


## **Current SYS FAN Speed**

This field displays the current speed SYSTEM fan.

# P4VTC BIOS Setup

## 9 Frequency Control

■ Figure 9. Frequency Control

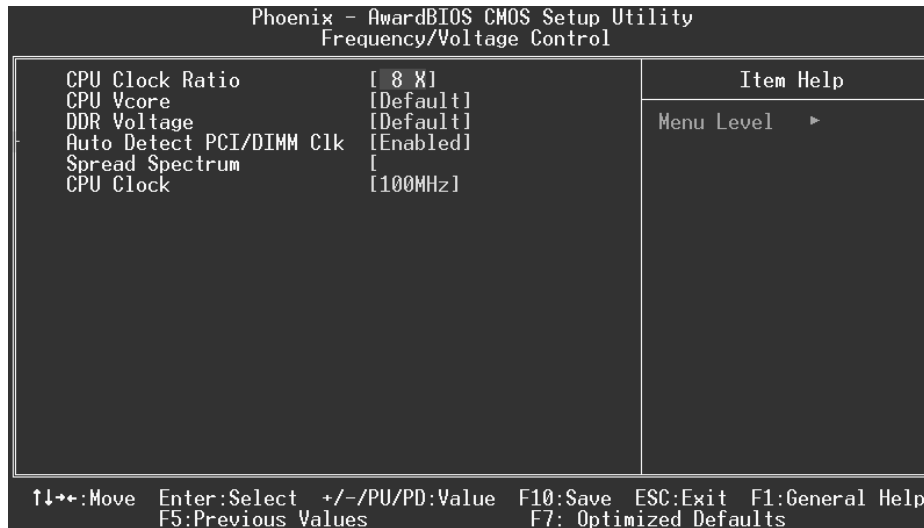

### CPU Clock Ratio

**The Choices:** 8 X (default), 9X, 10X, 11X, 12X, 13X, 14 X, 15X, 16X, 17X, 18X, 19X, 20 X, 21 X, 22 X, 23 X.

### CPU Vcore

This item allows you to select CPU Voltage Regulator.

**The Choices:** Default (default), +3.4%.

### DDR Voltage

This item allows you to select DDR Voltage Regulator.

**The Choices:** Default (default), +5.1V, +3.4%V, +1.7%V.

### Auto Detect PCI/ DIMM Clk

This item allows you to enable / disable auto Detect PCI Clock.

**The Choices:** Enabled (default), Disabled.

### Spread Spectrum

This item allows you to enable/disable the Spread Spectrum function.

## ***P4VTC BIOS Setup***

---

The Choices: Enabled (default), Disabled.

### **CPU Clock**

This item allows you to select CPU Host Clock.

The Choices: 100MHz (Min) (default) ~ 132MHz (Max).

*If unfortunately, the system's frequency that you are selected is not functioning, there are two methods of booting-up the system.*

*Method 1: Clear the CMOS data by setting the JCMOS1 ((2-3 closed)) as "ON" status. All the CMOS data will be loaded as defaults setting.*

*Method 2: Press the <Insert> key and Power button simultaneously, after that keep-on pressing the <Insert> key until the power-on screen showed. This action will boot-up the system according to FSB of the processor.*