

SUPER P54CT-PCI

CPU	75	90	100	120	133
JP8	ON	ON	OFF	ON	OFF
JP9	ON	OFF	ON	OFF	ON
JP10	OFF	ON	OFF	ON	OFF
JP33	OFF	OFF	OFF	ON	ON