

Choice of core voltage and type of power supply (single / double)

JP \ voltage, V	2.5	2.8	2.9
JP14	1-2	2-3	OFF
Single (p54) / double (p55) voltage			
JP18	1-2 / 2-3		

Bus frequency selection

JP \ frequency, MHz	50	55	60	66
JP4	ON	OFF	ON	OFF
JP5	ON	ON	OFF	OFF

Selecting a processor multiplier

Jp \ multiplier	1.5x (3.5)	2x (6x)	3x	2.5x
JP19	1-2	1-2	2-3	2-3
JP20	1-2	2-3	1-2	2-3